


allen + roth®

welcoming • sophisticated • inspiring

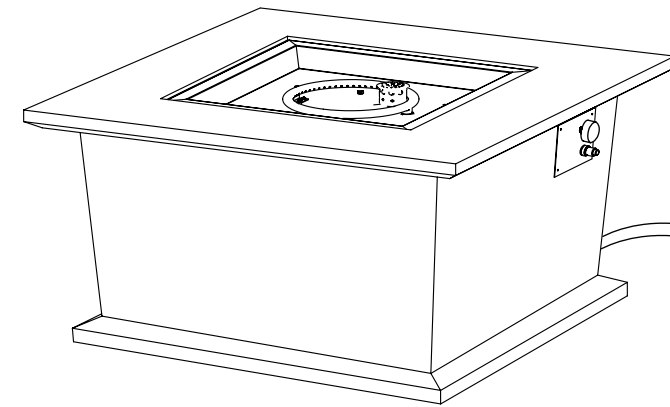

**! DANGER**  
If you smell gas:  
1. Shut off gas to the appliance.  
2. Extinguish any open flame.  
3. If odor continues, keep away from the appliance and immediately call your gas supplier or fire department.

**! WARNING**  
Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. An LP-cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.

**! WARNING**  
For outdoor use only.



Design certified under ANS  
Z21.97 - CSA 2.41-(2012)  
Requirements for Outdoor Gas  
Fireplaces

<b>! DANGER</b>	<b>CARBON MONOXIDE HAZARD</b> This appliance can produce carbon monoxide which has no odor. Using it in an enclosed space can kill you. Never use this appliance in an enclosed space such as a camper, tent, car or home.

allen + roth® is a registered trademark of LF, LLC. All Rights Reserved.

ITEM #0574302

## GAS FIRE TABLE

MODEL #67544

Français p. 10

Español p. 19

ATTACH YOUR RECEIPT HERE

Serial Number \_\_\_\_\_ Purchase Date \_\_\_\_\_



Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 1-866-439-9800, 8 a.m. – 8 p.m., EST, Monday - Friday

## SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product. Failure to follow the dangers, warnings and cautions contained in this owners manual may result in a fire or explosion causing damage to property, serious bodily injury or death.

### WARNING

- The installation of this product must conform with local codes or, in the absence of local codes, with either the National Fuel Gas Code, ANSI Z223.1/NFPA 54, OR CAN/CGA-B149.1, National Gas and Propane Installation Code.
- FOR OUTDOOR USE ONLY! This appliance shall be used only outdoors in a well-ventilated space and shall not be used in a building, garage, or any other enclosed area.
- USE PROPANE GAS ONLY!
- Use only with a propane gas tank (sold separately). Do not attach to a remote gas supply.
- Propane gas is not natural gas. Only use propane gas for this fire table.
- The conversion or attempted use of natural gas in a propane unit or propane gas in a natural gas unit is dangerous and not recommended. Doing so will void your warranty.
- Never use charcoal or any other solid fuel in the fire table.
- During ignition procedure, you should never get your face close to the burner as an unnoticed flame may light up and cause injury.
- LP GAS WARNING: Do not exceed 1/4 in. depth of lava rocks directly above burner holes. Applying too much media may result in unburned gas pooling in fire table. Ventilation is required to allow fresh air into enclosure and for any residual gas to escape.
- If you see, smell or hear the hiss of escaping gas from the propane gas tank: 1. Disconnect propane gas tank. 2. Do not attempt to correct the problem yourself. 3. Get to your gas supplier and/or the fire department for help.
- Do not operate the fire table if there is a gas leak present.
- Never use a flame to check for gas leaks.
- The max. inlet supply pressure: max. gas supply 11 inch w.c. (2.74kPa).
- The gas pressure regulator provided with the fire table must be used.
- Use LP propane gas tanks only with these required measurements: 12 in. (diameter) x 18 in. (tall) with 20 lb. capacity maximum.
- Propane tank used must include a collar to protect the propane gas tank valve.
- Never fill the propane gas tank beyond 80% full.
- Propane gas tank supply system must be arranged for vapor withdrawal.
- Do not use a propane gas tank with a damaged valve and any other worn out parts. A dented or rusty propane gas tank may be hazardous and should be checked by your gas supplier prior to use.
- Do not burn any other materials than are supplied with and intended for use in this fire table.
- Lava rocks could hit somebody's face or eyes during initial start of this unit, so please keep away from the fire table for the first 20 minutes after it has been ignited.
- Do not operate fire table unless it is completely assembled and all parts are in place.
- Pay attention when operating the fire table. It is hot when in use and should never be left unattended. Do not move it while in operation.
- Do not use this fire table for cooking.
- Do not put any other fireplace cover or anything flammable on, beneath or around the fire table.
- Users should be alerted to the hazards of high surface temperatures and keep a safe distance to avoid burning or clothing ignition.
- Do not sit on the fire table. Do not rest feet or hands on the fire table.

## SAFETY INFORMATION

- Never lean over the open fire table or place hands or fingers on the upper portion of an operational unit.
- Keep any electrical supply cords and the fuel supply hose away from any heated surfaces.
- Combustible materials should never be within 72 inches of the top, 48 inches of the back or sides of the fire table.
- This fire table must be attended at all times!
- Should the fire go out while burning, turn the gas valve off. Follow the instructions and wait five minutes before attempting to relight.
- Do not use this fire table if any part has been under water.
- Do not pour water into fire table.
- Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.
- Do not light or use gas unit if lava rocks are wet. Ensure lava rocks are completely dry before igniting as intense heat could cause the rocks to crack or pop.
- Do not attempt to disconnect the gas regulator or any gas fittings while your fire table is in operation.
- Do not handle fire table until it is shut off and completely cooled.
- The propane gas tank must be disconnected when fire table is not in use.
- Do not store a spare or disconnected propane gas tank under or near this fire table, or in the vicinity of any other appliance.
- If the fire table is stored indoors, detach and leave propane gas tank outdoors.
- Remove the battery when not using the fire table for an extended length of time.
- Clean the battery contacts and also those of the device prior to battery installation.
- Do not enlarge valve orifices or burner ports when cleaning the valve or burner.
- Do not use this fire table on vehicles or boats. Always operate the appliance on flat ground outdoors.
- Remove the PVC cover from the fire table before operating the appliance.
- Do not lay the PVC cover over the fire table until it is turned off and completely cooled down.
- After a period of storage and/or non-use, the propane fire table should be checked for gas leaks and burner obstructions before use.
- The propane fire table should never be used by children. Children must be supervised when they are anywhere near the appliance.
- Please keep gas tank a minimum of 5 feet away from fire table when lit.
- The maximum gas supply pressure is 250psi.
- Clothing or other flammable materials should not be hung from the appliance, or placed on or near the appliance.
- Any guard or other protective device removed for servicing the appliance must be replaced prior to operating the appliance.
- All installation and repair should be done by a qualified service person. This appliance should be inspected annually. More frequent cleaning may be required as necessary. It is imperative that the control compartment, burners and circulating air passageways of the appliance be kept clean.
- Inspect the burner before each use of this fire table. If there is evidence of damage, the burner must be replaced prior to use of this fire table.
- Inspect the hose before each use of this fire table. If the hose shows signs of cracks, abrasion, cuts or damage, do not use this fire table. Fix the hose as required before using appliance.
- Remove the hose out of pathways where it may be tripped over or subject to accidental damage.
- Children and adults should be alerted to the hazards of high surfact temperatures and should stay

## OPERATING INSTRUCTIONS

Perform leak test in a well-ventilated area outside and where no source of spark can occur. Connect propane gas tank to regulator. Turn the on/off valve at the unit to the 'OFF' position to pressurize the control system. Use a soapy water solution to check all the connections leaks before attempting to light the appliance. If a leak is found or you smell gas, disconnect cylinder and turn valve off and do not use the appliance until repairs can be made.

Before each use, inspect the hose. Replace hose if there are any signs of cutting, wear or abrasion. Please keep propane gas tank a minimum of 5 feet away from fire table when lit. Observe flame height when lit. Flame height should be a yellow/blue color between 2 to 10 inches high.

### To Light

1. Turn the cylinder valve on the gas tank counterclockwise to open the gas supply.
2. Press and hold the electric ignitor (J).
3. Push and turn the control knob (I) counterclockwise to the "low" position.
4. Keep pushing the control knob (I) to light the burner.
5. After ignition, release the electric ignitor (J).
6. Continue to push and hold the control knob for 45 seconds.
7. If ignition does not immediately take place in seconds, push and turn the control knob (I) clockwise to "off". Wait 5 minutes, then repeat the lighting procedure as above.

### To Extinguish

1. Push and turn the control knob (I) clockwise to the "OFF" position.
2. Turn the cylinder valve on the gas tank to close the gas supply and disconnect the propane cylinder.

## CARE AND MAINTENANCE

- Disconnect propane gas tank from appliance before performing any maintenance.
- Store the fire table in a cool dry place away from direct sunlight.
- The propane gas tank must be disconnected and removed from the fire table before the appliance can be stored indoors.
- Make sure both the gas and the fire table are turned off before changing battery. Please refer to the process of installing the battery.
- Use manufacturer approved or supplied replacement parts and accessories only. Otherwise this may void the warranty of this product and result in a hazardous condition.
- Keep the fire table free and clear from combustible materials.
- Visually inspect burner from obstructions. Keep fire table free and clear from debris.
- After the burner and lava rocks are completely cooled down, use a soft brush to get rid of the mild stains, loose dirt and soil. Wipe with a soft cloth.
- Cover fire table with PVC cover (G) when not in use.
- Battery Replacement: Use AAA alkaline batteries.

## WARRANTY

The manufacturer's warranty will be voided by, and manufacturer disclaims any responsibility for, the following actions:

- Modification of the fire table and/or components including the gas valve assembly.
- Use of any component part not manufactured or approved by manufacturer.
- Use and installation other than as instructed in this manual.

## REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at 1-866-439-9800, 8 a.m. - 8 p.m., EST, Monday - Friday.

PART	DESCRIPTION	PART #
I	Control Knob	K0011R

