



MODEL: F5-0010


FAUCET INSTALLATION GUIDE

BEFORE YOU BEGIN


- 1) Shut off water supply.
- 2) Carefully inspect waste and supply tubing for signs of damage.
- 3) Replace waste or supply tubing if necessary

A) FAUCET INSTALLATION

- 1) Set the faucet in place, insert the inlet shanks through the sink holes and press down.
- 2) Assemble the washers and locknuts on the inlet shanks, then tighten the lock nut with wrench. Do not over tighten.
- 3) Set the sprayer holder in place, insert the shank through sink hole.
- 4) Assemble the washer and locknut on the shank, then tighten the lock nut with wrench. Do not over tighten.

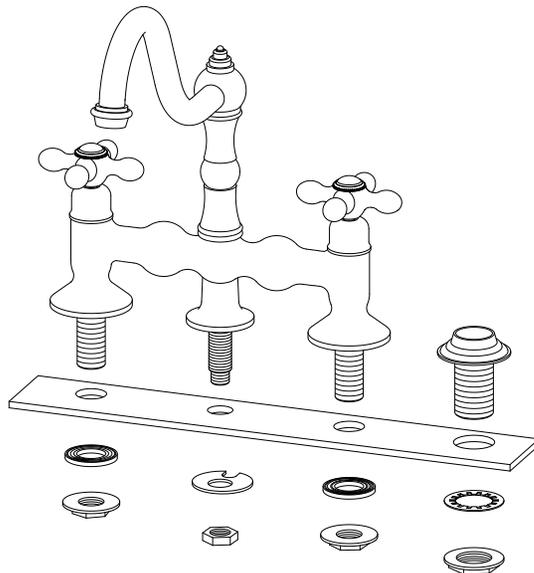


TOOLS AND MATERIALS

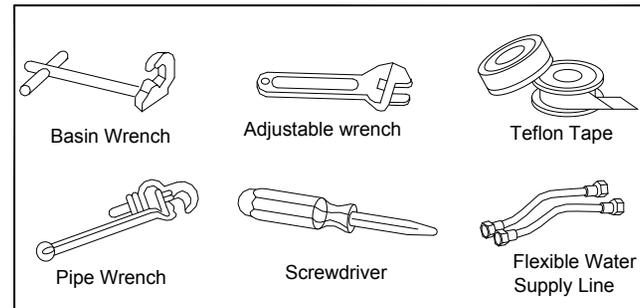

B) SPRAYER INSTALLATION

- 1) Hand tighten the sprayer with hose together.
- 2) Insert the hose through the sprayer holder under to sink.
- 3) Connect the hose to faucet inlet and tighten with wrench. Do not over tighten.

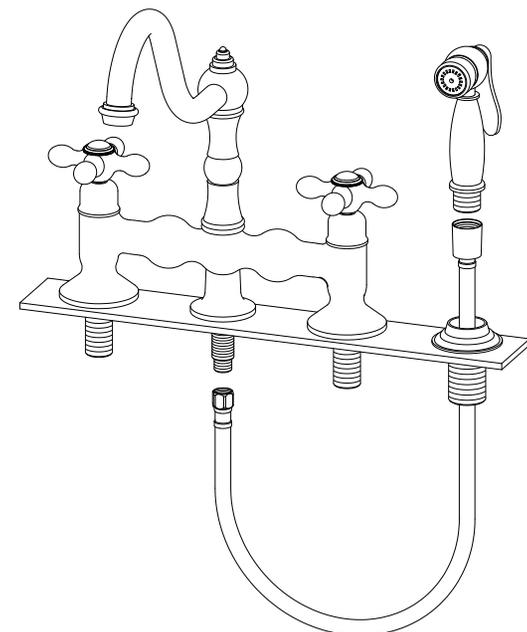




MODEL: F5-0010

C) SUPPLY CONNECTION

- 1) Connect hoses (not included) to angle stops.
- 2) Tighten all connections.
- 3) Flush out water for two minutes before connect hose to faucet shank

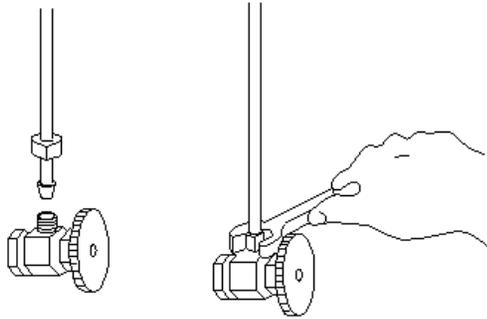

D) FINAL INSPECTION

- 1) Ensure all connections are tightened properly.
- 2) Turn on main water supply.
- 3) Turn on and off cold and hot water respectively.
- 4) Turn on both hot and cold water and turn off. Check for leaks.
- 5) Remove the aerator cap and aerator. Check for debris. Clean if necessary .
- 6) Reinstall aerator.

