
# PRORUN.


#### **INSTALLING THE TRIMMER HEAD**

 Remove the Nut and Retainer from the Threaded Gear Shaft. See Figure 7

# **NOTE** Save the Retainer and Nut. They are required for the mounting of a brushcutter blade (not included).

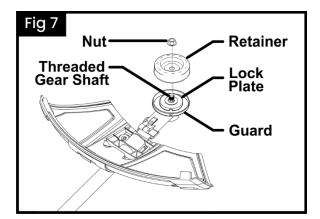

- 2. Fit the Lock Plate on the Threaded Gear Shaft.
- 3. Rotate the Lock Plate and Threaded Gear Shaft until the hole on the Lock Plate aligns with the corresponding hole on the Guard.
- 4. Insert a locking pin or small screwdriver through the two holes to lock the Threated Gear Shaft from rotating.
- 5. Screw on and tighten securely the Trimmer Head in a counterclockwise rotation. See Figure 8
- 6. Remove the locking pin or small screwdriver.

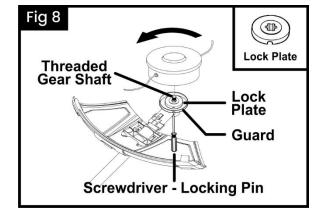

NOTE To disassemble the Trimmer Head, follow the preceding instructions in reverse order.

### INSTALLING THE BUSHCUTTER BLADE (NOT INCLUDED)

**NOTE** The PSST217 Attachment can be equipped with a approved brushcutter blade (not included). Contact PRORUN Customer Service for additional details.

NOTE If required, remove the Trimmer Head by following the preceding instructions in reverse order.

# PSST217 STRAIGHT SHAFT STRING TRIMMER

- 1. Fit the Lock Plate on the Threaded Gear Shaft.
- 2. Rotate the Lock Plate and Threaded Gear Shaft until the hole on the Lock Plate aligns with the corresponding hole on the Guard.
- 3. Insert a locking pin or small screwdriver through the two holes to lock the Threated Gear Shaft from rotating. See Figure 8
- 4. Place the Brushcuttter Blade onto the Lock Plate and center. See Figure 9

**A CAUTION!** Only place the Brushcutter Blade with the Rotation Arrows facing up and pointing in the direction of the Threaded Gear Shaft's rotation (counterclockwise).

- 5. Place the Retainer and Nut onto the Threaded Gear Shaft and tighten securely. Nut attached with a counterclockwise rotation.
- 6. Remove the locking pin or small screwdriver.

## Fig 9 Nut R **Retainer-**Rotation Blade-Arrows $\bigcirc$ Threaded Gear Shaft

#### A CAUTION! Always remove the Guard Extension when using a Brushcutter Blade.

7. Remove the retaining screw and Guard Extension from the Guard before using a Brushcutter Blade. See Figure 10

