 


DECORATIVE BUILD IN ELECTRIC FIREPLACE

OWNER'S MANUAL

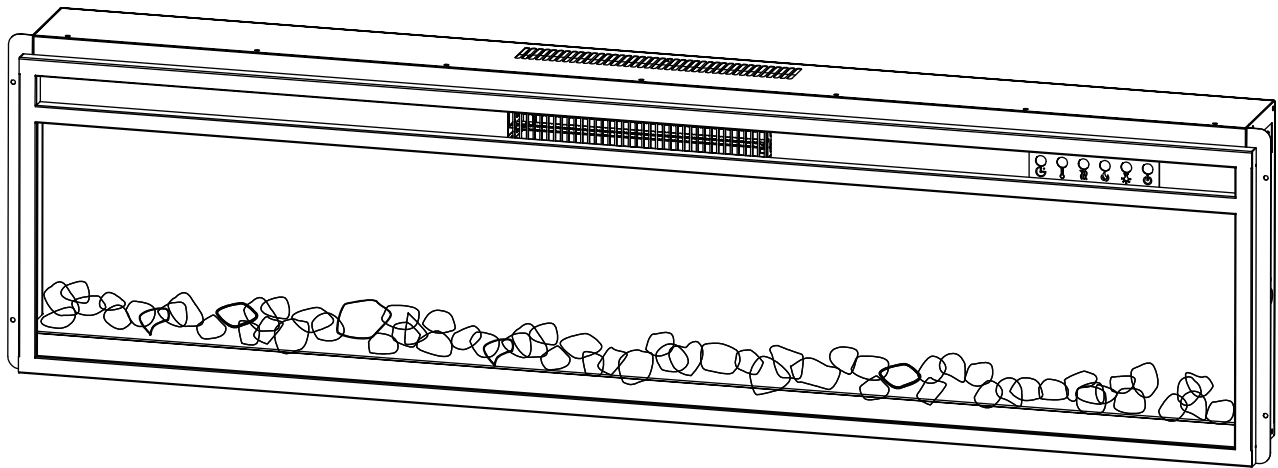

CONSUMER SAFETY INFORMATION

- Read this manual before installing and operating this appliance
- Failure to follow these instructions may result in electric shock, fire property, or personal injury
- Do not store or use gasoline or other flammable liquids in vicinity of this appliance.

IMPORTANT SAFETY INFORMATION!



WARNING



- **Read all instructions before using this heater!**
- This heater is hot **when in use**. To avoid burns, **DO NOT** let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep **combustible materials**, such as furniture, pillows, bedding, papers, clothes, and curtains at least **3 feet (0.9m)** from the front of the heater, and **keep them away from the sides and rear**.
- **Extreme caution** is necessary when any heater is used by or near children or invalids and whenever the heater is left **operating and unattended**.
- **DO NOT** operate any heater with a **damaged cord or plug** or after the **heater malfunctions**, has been **dropped** or **damaged in any manner**. Discard heater, or return to authorized service facility for examination and /or repair.
- **DO NOT** run power cord under carpeting. **DO NOT** cover power cord with throw rugs, runners, or similar coverings. **DO NOT** route power cord under furniture or appliances. Arrange power cord away from **traffic area**, and where it will not be tripped over.

 


WARNING



- **Connect to properly grounded outlets ONLY.**
- **DO NOT** insert or allow foreign objects to **enter any ventilation or exhaust openings**, as this may cause **electric shock** or **fire**, or **damage the heater**.
- To prevent a possible fire, **DO NOT** block air intakes or exhaust in any manner. Doing so could cause a fire. **DO NOT** use on soft surfaces, like a bed, where openings may become blocked.
- A heater has **hot and arcing or sparking parts inside**. **DO NOT** use it in areas where **gasoline, paint, or flammable liquids** are used or stored.
- **Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.**
- **ALWAYS** plug heaters directly into a wall outlet/receptacle. **Never use with an extension cord or relocatable power tap (outlet/power strip).**
- **DO NOT** place the heater near a bed because objects such as pillows or blankets can fall off the bed and be ignited by the heater.
- **NEVER** use this heater in **bathrooms, laundry rooms**, or any other location where the heater could fall into a **bathtub or pool, become damp or come in contact with water**.
- **AVOID FIRE!** Regularly inspect all air vents to make sure they are free from dust, lint, or other Blockage. **Unplug the unit** and clean with a **vacuum ONLY**. **DO NOT** rinse or get wet.

- **ALWAYS** mount to wall bracket before use. DO NOT set on the floor, or other surface, to use.
- **NEVER** use a wall mount bracket from another manufacturer.
- This product is **not intended** to be a **primary heat source**. It is for **supplemental heat only**.
- **INDOOR use only! NEVER** use this heater **outdoors!** Doing so may result in **electric shock!**
- **Risk of electric shock! DO NOT OPEN!** No user-serviceable parts inside!
- **ALWAYS** turn this heater off before unplugging it from the outlet.
- **ALWAYS disconnect** this unit from the **power** supply **before** performing any assembly or cleaning, or before relocating the electric fireplace.
- **NEVER** leave this heater unattended. **ALWAYS** unplug this heater when not in use.
- **ALWAYS** store this heater in a dry location. **NEVER** use the fireplace if it has become wet.
- **NEVER** plug this heater into an outlet that is **old, cracked,** or has any **loose wires or connections**. Plugging this heater into a faulty outlet could result in **electric arcing** within the outlet that could cause the **outlet to overheat or catch fire**.
- **ALWAYS** check your heater cord and plug connections with **each use!**
 - i) **MAKE SURE** the plug fits tight in the outlet! Faulty wall outlet connections or loose plugs can cause the outlet to overheat.
 - ii) **Heaters draw more current** than small appliances. **Overheating** may occur even if it has not occurred with the use of other appliances.
 - iii) During use **check frequently** to see if the **plug outlet or face plate is HOT!**
 - iv) If the outlet or face plate is **HOT, discontinue use immediately** and have a qualified electrician inspect and/or replace the faulty outlets.
- The power cord supplied with the heater has a plug with two flat blades (live and neutral) and one round pin (ground). If a 3-slot receptacle is not available, an adapter **MUST** be used. The adapter **MUST** be **properly grounded** to the outlet box (see figure at right). (Note: Adapter NOT INCLUDED.)
- **SAVE THESE INSTRUCTIONS!**

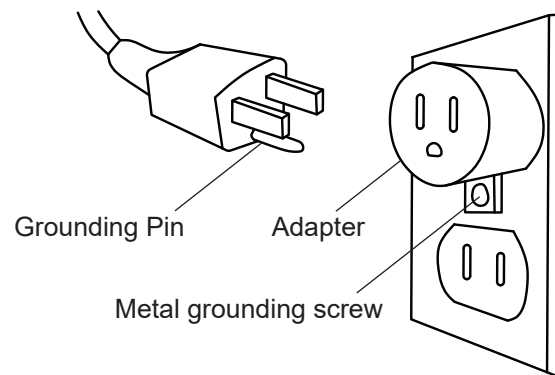

PREPARATION

 
 
 


This product includes a **GLASS panel!** Always use **extreme caution** when handling **glass**. Failure to do so could result in **personal injury or property damage**.

Remove all parts and hardware from the carton and place them on a clean, soft, dry surface. Parts and assembly steps are grounded for wall-hanging or recessing use. Check the parts list to make sure nothing is missing. Dispose of packaging materials properly. Please recycle whenever

possible. You will need the following tools (not included): Phillips screwdriver; stud finder; level; tape measure; electric drill; 1/4" wood drill bit, hammer.

PARTS & HARDWARE

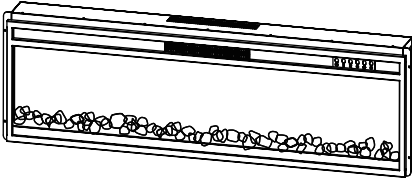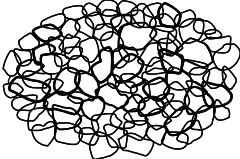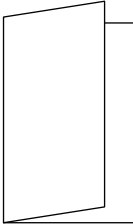
No.	Parts	Qty.
A	 Electric Fireplace	1
B	 M4x8mm Screws	4
C	 Crystal Stone	1PK
D	 Instruction	1




ALWAYS KEEP THESE PARTS OUT OF REACH OF CHILDREN.LEAVE NO PLACE
 WHERE CHILDREN CAN FIND THEM.FAILURE TO DO SO COULD CAUSE A CHOKING HAZARD.



 
ENSURE the fireplace is unplugged before assembly, installation, cleaning or relocating. Failure to do so could result in electric shock, fire, or personal injury.

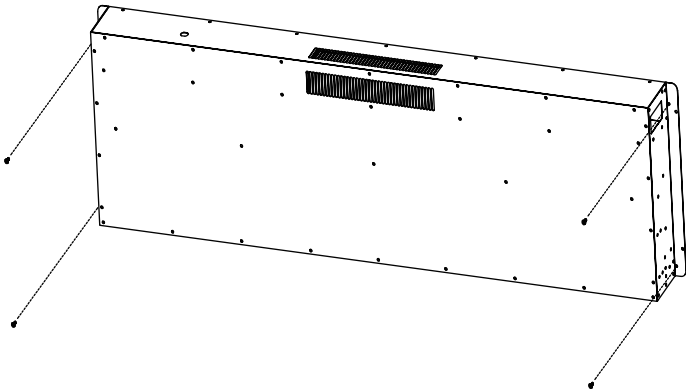

 
A. Remove the 4 screws that are in the back.

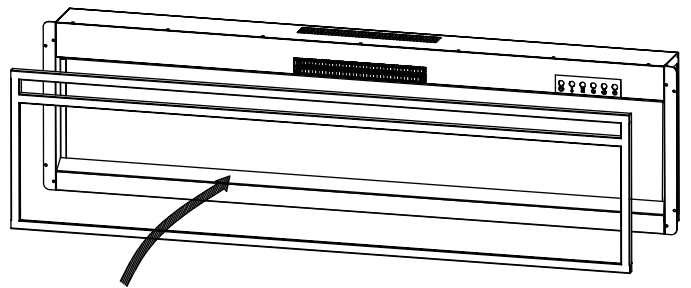

 B. Carefully take down the frame of the fireplace.
Put the crystal stones in there.

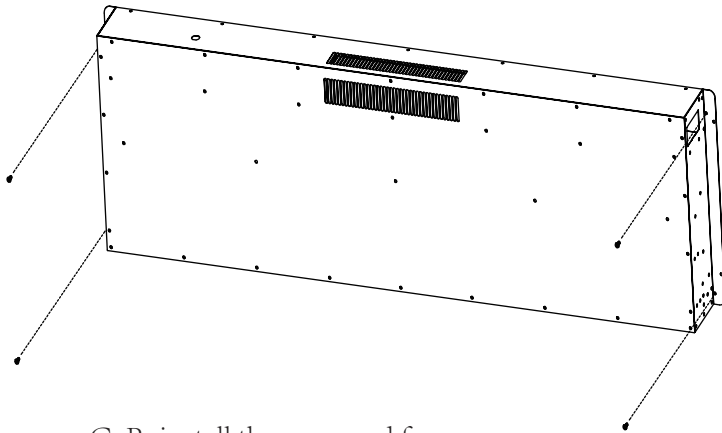

 C. Reinstall the removed frame.

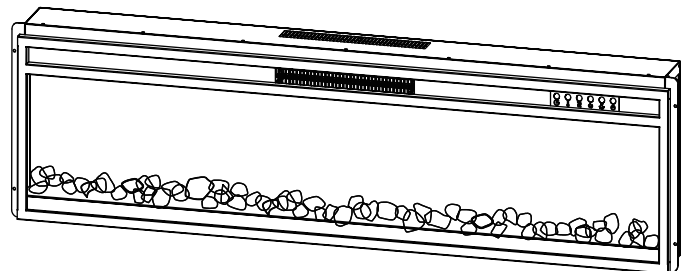

D. Installation complete.

 
WARNING

TURN OFF THE APPLIANCE COMPLETELY AND LET COOL BEFORE SERVICING. ONLY A QUALIFIED SERVICE PERSON SHOULD SERVICE AND REPAIR THIS ELECTRIC APPLIANCE.



Read and understand this entire owner's manual, including all safety information before plugging in or using this product. Failure to do so could result in electric shock, fire, serious injury, or death.

OPERATING INSTRUCTIONS

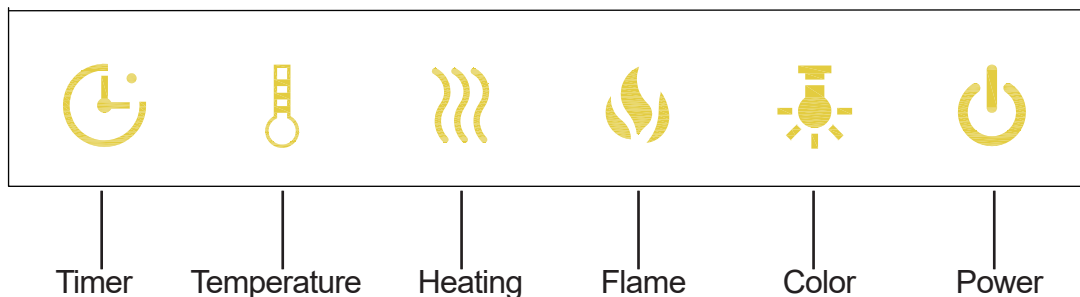

Control panel Operation

Timer: Setting range from 1 hours to 8 hours. Press button until desired setting is reached. 0H, 1H, 2H, 3H....8H will be showed on the display.

Temperature: Setting range from 62° F to 82° F

Heating: Press this button, LL, low heating, about 750W;
Press this button, HH, high heating, about 1500W;
Press this button, OF, turn off the heating.

Flame: Press once, flame brightness effect gets changing. Total 5 different brightness.

Color : Press once, flame color effect gets changing. Total 12 changeable colors.

Power: Enable control panel functions turn on flame effect ; Disable control panel functions turn off flame effect.



NEVER dispose of batteries in **fire**. Failure to observe this precaution **may result in an explosion**. Dispose of batteries at your local hazardous material processing center.



Master Button (on the right side of the fireplace)

Turn on this master button, unit be connected to the electric supply. You can listen “di” sound. Unit is ready to work.
Turn off this master button, electric supply will be shut off, unit ‘s any function cant be used.

Operation

BUTTON	FUNCTION	ACTION&INDICATION
1 POWER	ON: Enables control panel functions Turn on flame effect. OFF: Disables control panel functions Turn off flame effect.	1. Press once. Indicator light turns on. Power turns on. All functions enabled. 2. Press again, turn off the power.
2 COLOR	COLOR button: Makes the color flame effect changing. Total 12 different color , Display will be showed C1,C2,C3..... C9,10....12.	1. Press once. Flame color effect gets changing. 2. Press again until desired setting is reached.
3 FLAME	NOTE: Flame effect stays on until power button is turned off. Flame effect must be on for heater to turn on. Total 5 different brightness, L1,L2,L3..L5	1. Press once. Flame brightness effect gets changing. 2. Press again. Until desired setting is reached. L5 is brightest. and L1 is darkest.
4 HEATING	HEATER button: Turn heater on and off. NOTE: To prevent overheating, the heater fan will blow out cool air for 2 minutes after the heater turn off. OF, LL, HH will be showed on the display.	1. Press this button , LL , low heating, about 750W. 2. Press this button, HH, high heating, about 1500W. 3, Press this button, OF , turn off the heating.
5 TEMPERATURE	TEMPERATURE button: Changes the temperature setting. Setting ranges from 62°F to 82°F. 62,63,64....82 will show on the display.	Once the desired temperature is reached, the heater will stop heating the room. Heat will automatically turn back on when room temperature falls below the set temperature.
6 TIMER	TIMER button: Control timer settings to turn off fireplace at selected time. Settings range from 1 hours to 8 hours. 0H,1H,2H,3H...8H will be showed on the display.	Press button until desired setting is reached. LED display show setting. When time reaches your setting, the whole product is power off. 0H turn off the timer.

NOTICE

When the heater is first turned on, a slight odor may be present. This is normal and should not occur again unless the heater is not used for a long period of time.

NOTICE

To improve operation, aim the remote control at the front of the fireplace. DO NOT press the buttons too quickly. Give the unit time to respond to each command.

Temperature Limiting Control

This heater is equipped with a Temperature Limiting Control. Should the heater reach an unsafe temperature, the heater will automatically turn OFF. To reset:

1. Unplug the power cord from the outlet.
2. Wait for about 15S to 1 minute, plug the power cord back into the outlet. Heating will rework.
3. Inspect the fireplace to make sure no vents are blocked, or clogged with dust or lint. If they are, use a vacuum to clean the vent areas.
4. If the problem continues, have your outlet and wiring inspected by a professional.

FLAME button: Makes flame effect dimmer and brighter

CARE AND MAINTENANCE

Cleaning



ALWAYS turn the heater **OFF** and **unplug the power cord from the outlet** before cleaning, performing maintenance, or moving this fireplace. Failure to do so could result in **electric shock, fire, or personal injury**.



NEVER immerse in water or spray with water. Doing so could result in electric shock, fire, or personal injury.

Metal:

- Buff using a soft cloth, slightly dampened with a citrus oil-based product.
- **DO NOT** use brass polish or household cleaners as these products will damage the metal trim.

Glass:

- Use a good quality glass cleaner and dry thoroughly with a paper towel or lint-free cloth.
- **NEVER** use abrasive cleansers, liquid sprays, or any cleaner that could scratch the surface.

Vents:

- Use a vacuum or duster to remove dust and dirt from the heater and vent areas.
- Clean the exterior of the fireplace with a slightly damp cloth or duster.

Maintenance



Risk of electric shock! DO NOT OPEN! No user-serviceable parts inside!



ALWAYS turn the heater **OFF** and **unplug the power cord from the outlet** before cleaning, performing maintenance, or moving this fireplace. Failure to do so could result in **electric shock, fire, or personal injury**.

Electrical and Moving Parts:

- The fan motors are lubricated at the factory and will not require lubrication.
- Electrical components are integrated in the fireplace and are not serviceable by the consumer.

Storage:

 
- Store heater in a clean dry place when not in use.



WARNING! No other servicing should be performed by the consumer. Do not attempt to service the unit yourself.

TV STAND

Assembly Instructions - Please keep for future reference

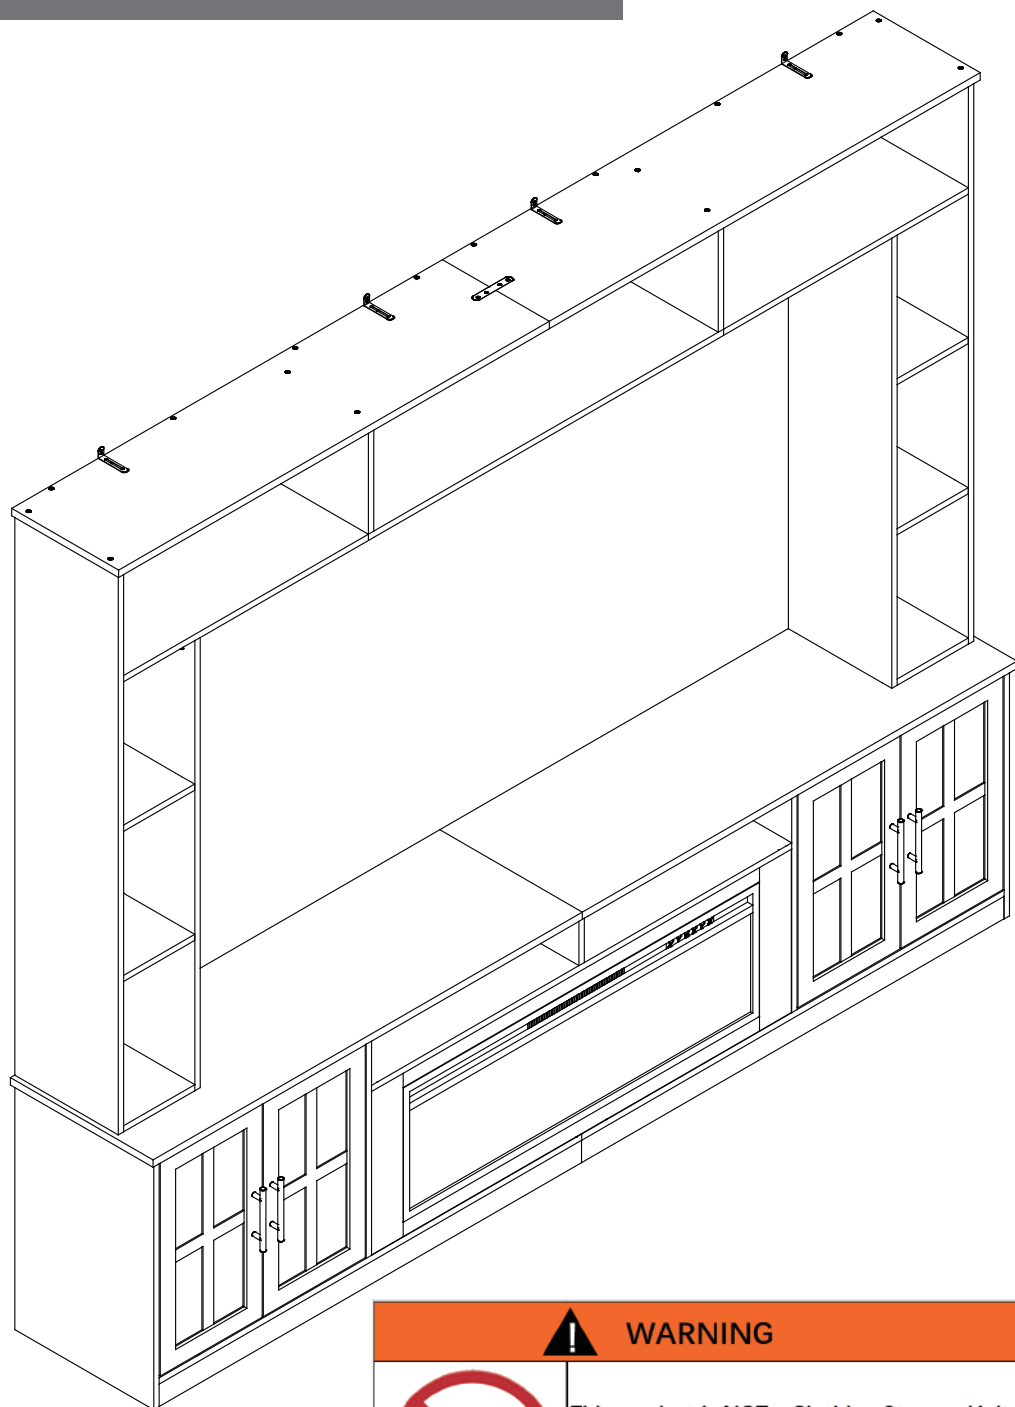

Dimensions

Width- 95.5inch

Depth-15.7inch

Height-78.75inch

WARNING	
	This product is NOT a Clothing Storage Unit (CSU). DO NOT use it for clothing storage. Improper use may cause furniture tipover.

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING
In order to help prevent overturning –
please follow these instructions

To help prevent product toppling over please follow the below steps:-

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Components - Fittings


Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required



N724P462905

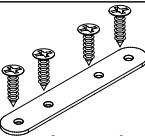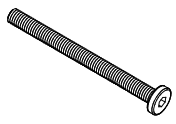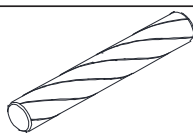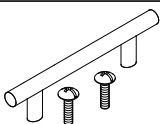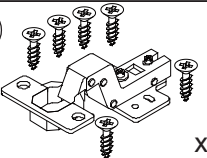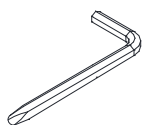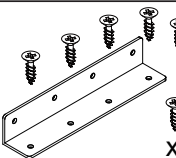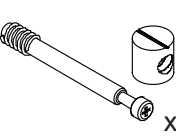(A)  Cam Bolt x 78+2	(B)  6*30mm Dowel x 88+2	(C)  Cam lock x 90+2	(D)  5*16mm Screw x 10+1
(E)  x 8	(F)  Iron pipe fitting x 1	(G)  4*12mm Screw x 8+1	(H)  3.5*12mm Iron sheet x 2
(I)  4*40mm Screw x 58+2	(J)  6*50mm Screw x 4	(K)  x 2set	(L)  6*40mm Dowel x 6+1
(M)  Laminate support x 8+1	(N)  Handle x 4set	(O)  x 4set	(P)  x 8set
(Q)  4set	(R)  Perfect fit x 42	(S)  3.5*14mm Iron sheet x 5	(T)  Allen key x 1
(U)  x 28set	(V)  x 2set	(W)  x 12set	(X)  Foot pad x 12
(Y)  x 2			

 Tools required Not Included



Phillips screwdriver
(medium & large)

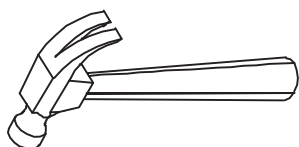  


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1

 
DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

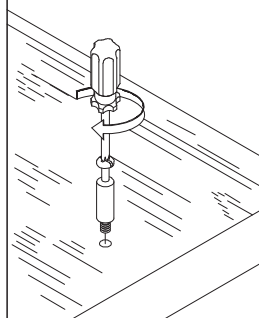

Step 2

Push the male camlock into the entry hole.

 2

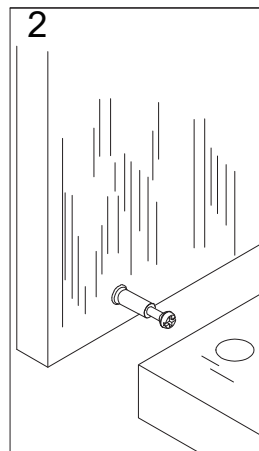


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

 3

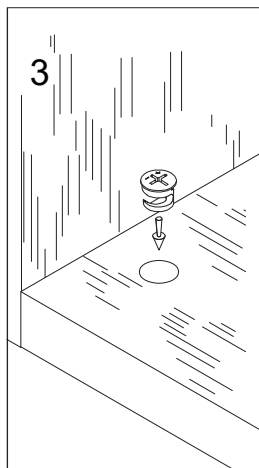


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

 4

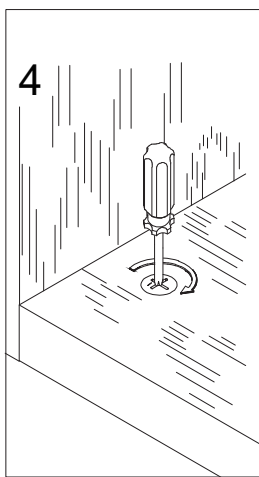

















Assembly Instructions

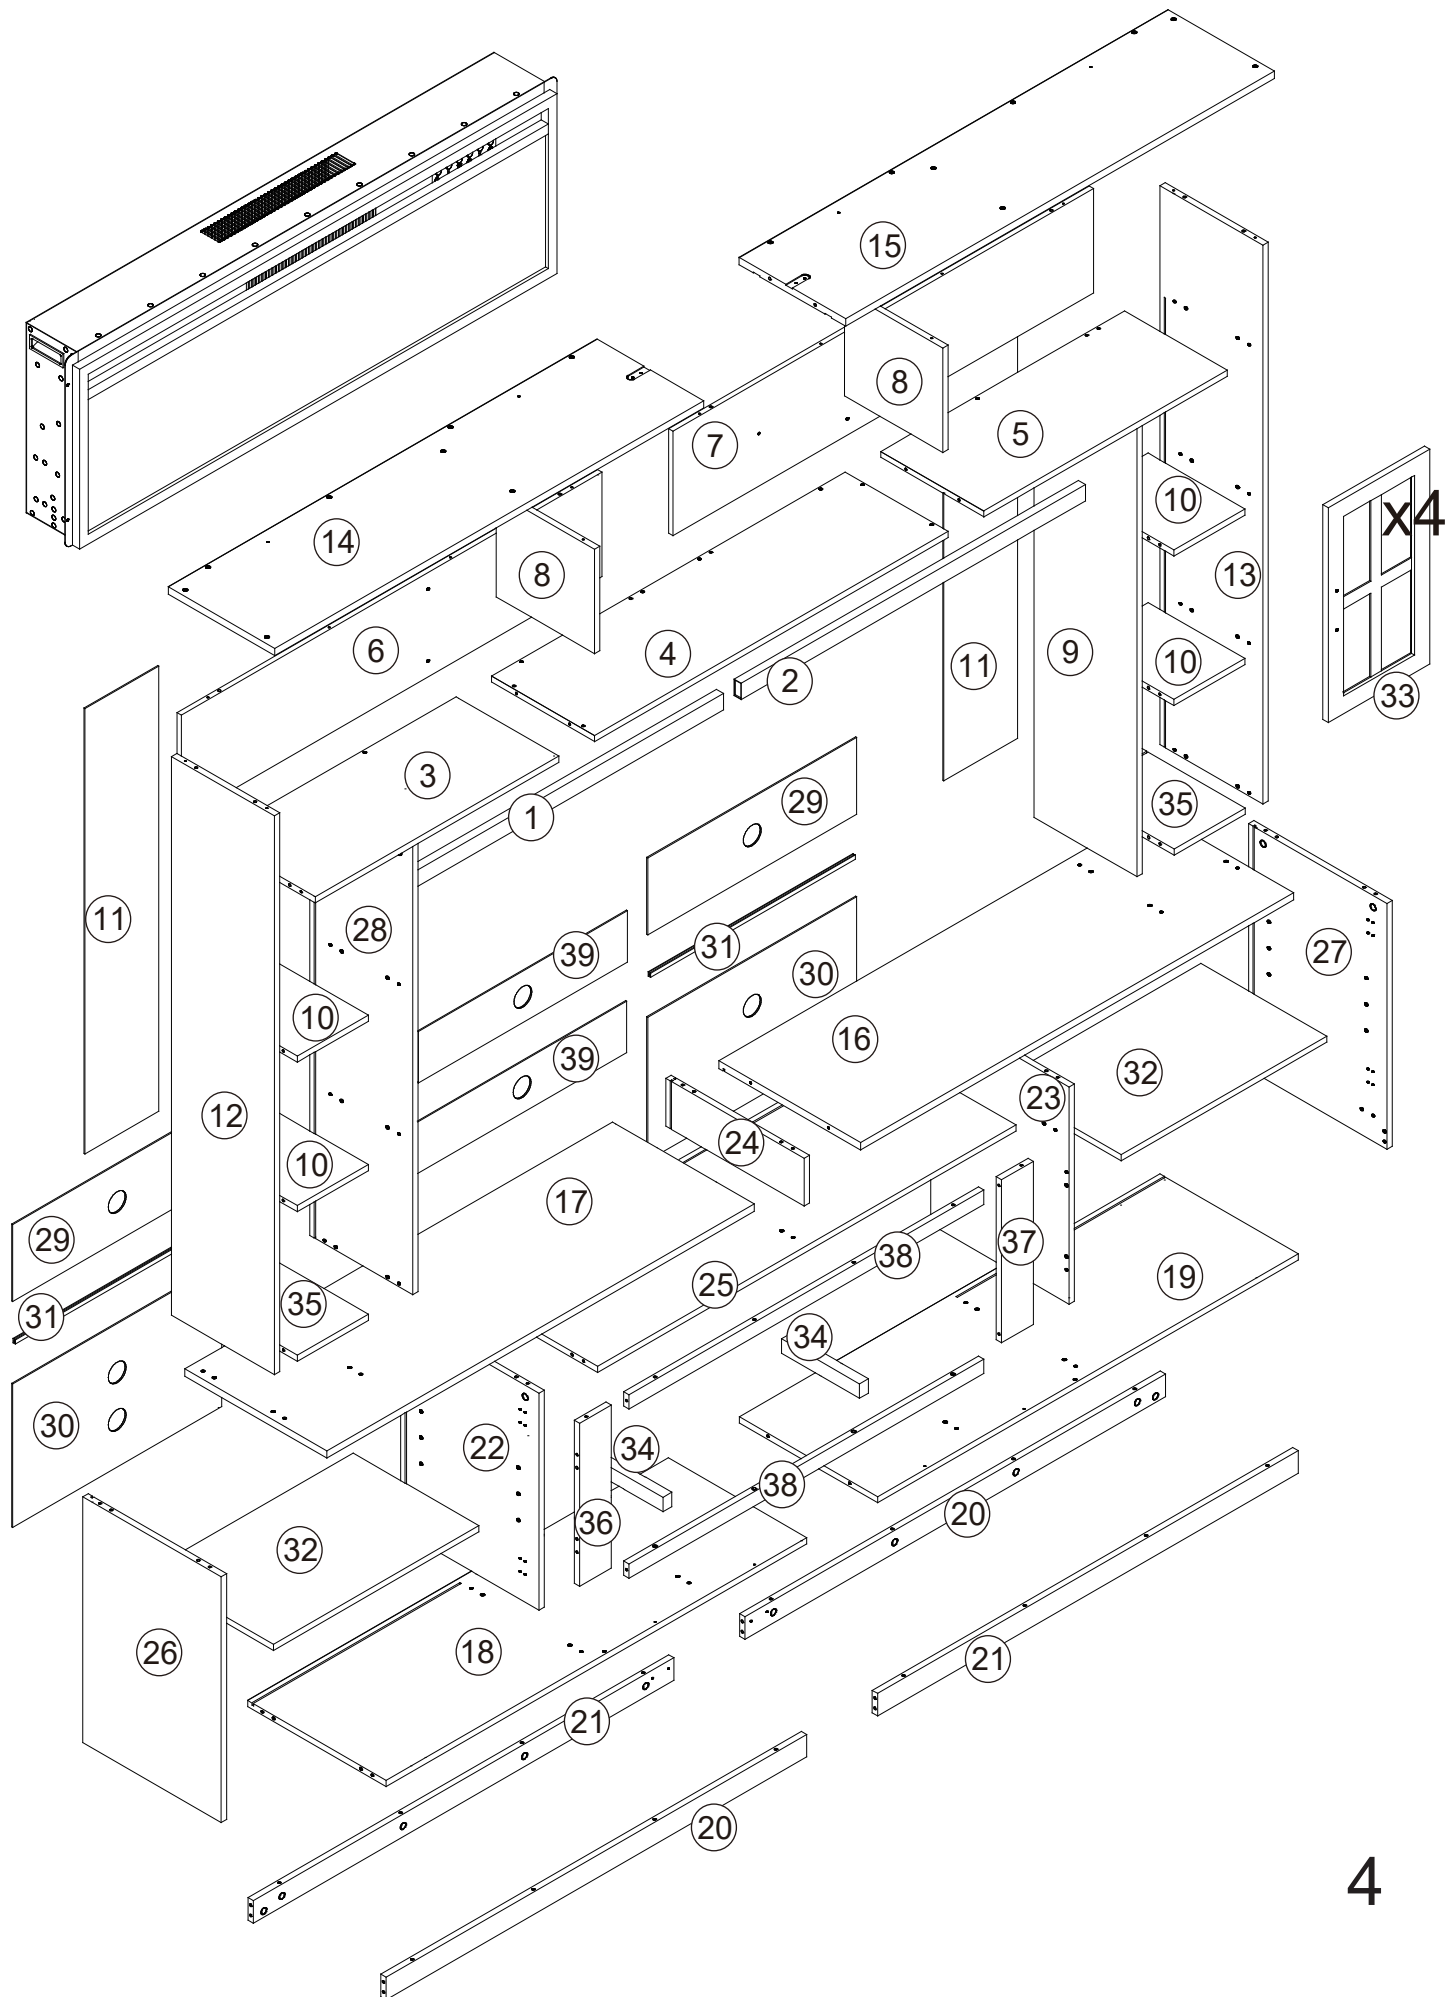 

PART LIST

This product comes in 3 box.






 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
Box 1: N724P462905

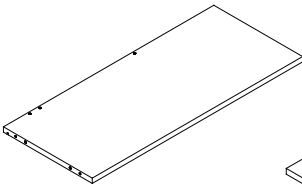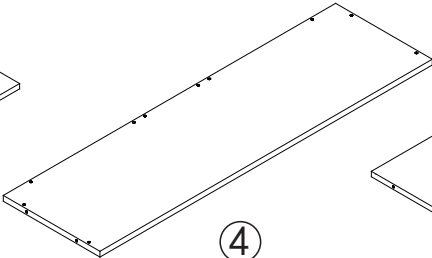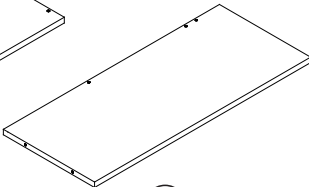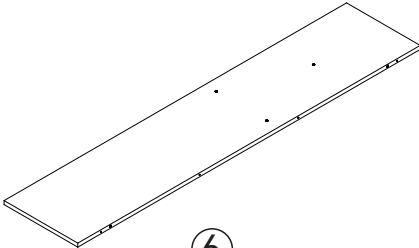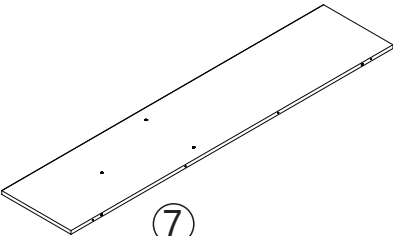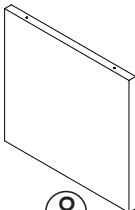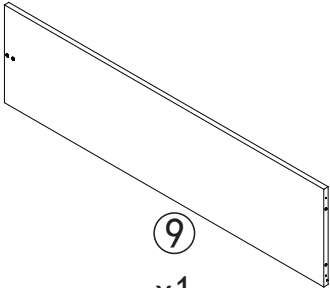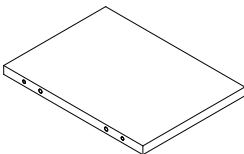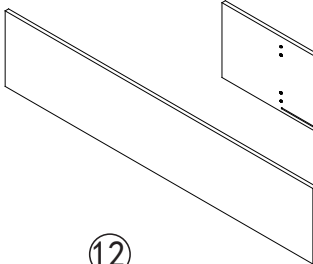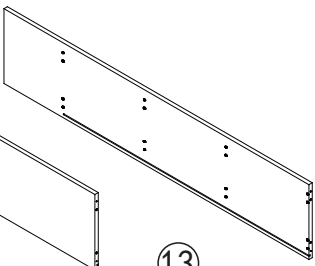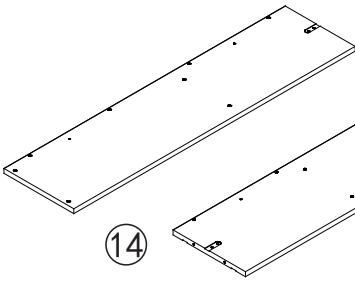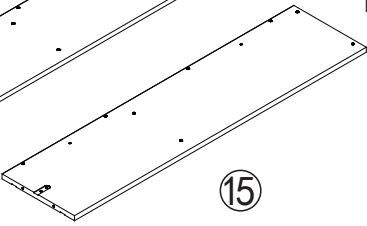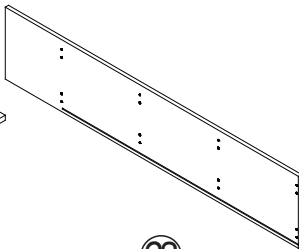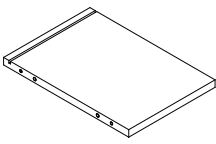			
③ x1 687x290x15mm	④ x1 997x290x15mm	⑤ x1 687x290x15mm	⑥ x1 1185.5x255x12mm
			
⑦ x1 1185.5x255x12mm	⑧ x2 277x255x15mm	⑨ x1 1094x290x15mm	⑩ x4 273x200x15mm
			
⑫ x1 1364x290x15mm	⑬ x1 1364x290x15mm	⑭ x1 1209x300x18mm	⑮ x1 1209x300x18mm
			
⑲ x1 1094x290x15mm	⑳ x4 524x286x15mm	㉑ x2 290x200x15mm	Hardware kit x1


PART LIST

This product comes in 3 box.

                     Box 2: N724P462906

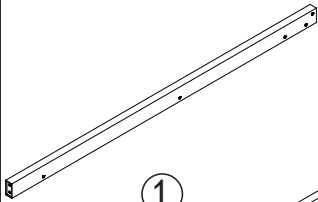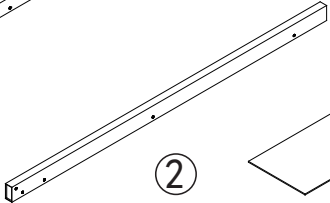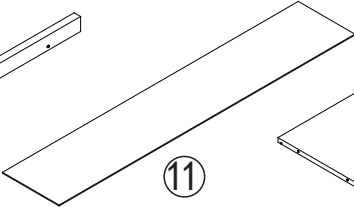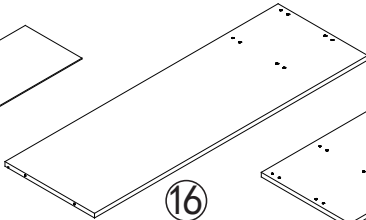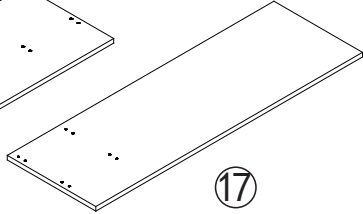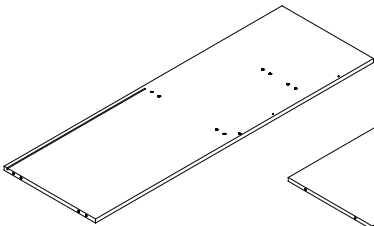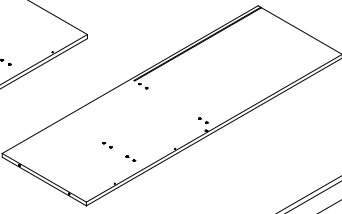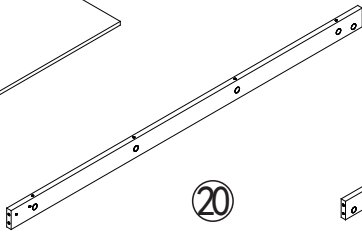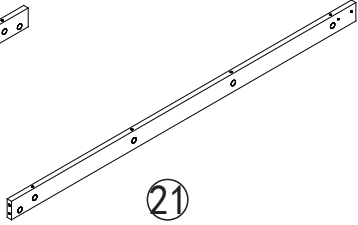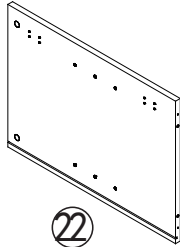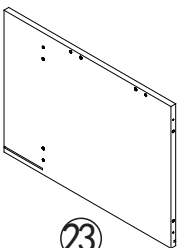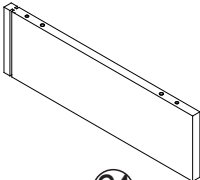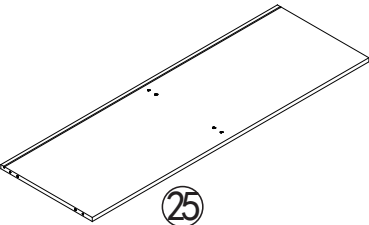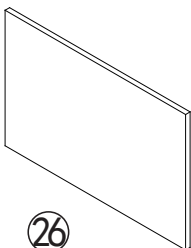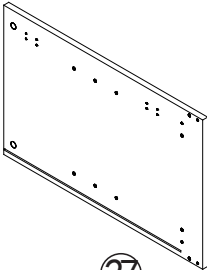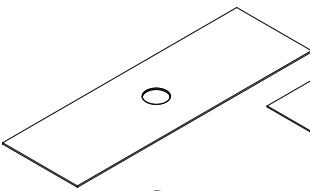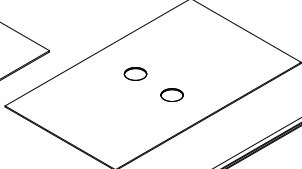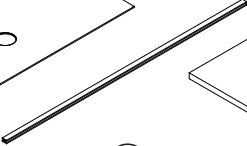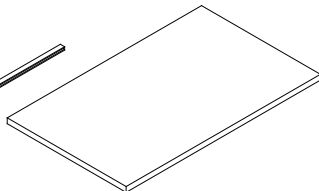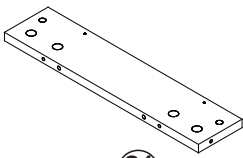
				
① x1 970.5x40x20mm	② x1 970.5x40x20mm	⑪ x2 1087x208x3mm	⑯ x1 1220x400x18mm	⑰ x1 1205x400x18mm
				
⑱ x1 1185.5x390x15mm	⑲ x1 1185.5x390x15mm	⑳ x2 1185.5x55x15mm	㉑ x2 1185.5x55x15mm	㉒ x1 530x390x15mm
				
㉓ x1 530x390x15mm	㉔ x1 390x117x15mm	㉕ x1 1179x390x15mm	㉖ x1 600x390x15mm	㉗ x1 600x390x15mm
				
㉙ x2 589x188x3mm	㉚ x2 589x350x3mm	㉛ x2 577mm	㉜ x2 579x350x15mm	㉝ x2 220x35x25mm
				
				㉞ x1 398x89.5x15mm

 PART LIST

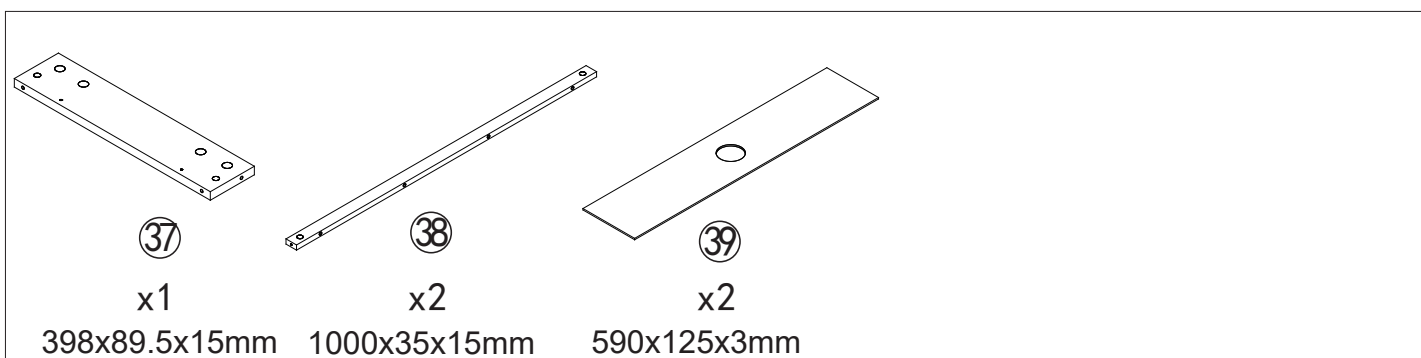


This product comes in 3 box.

 Box 3: N724P464314

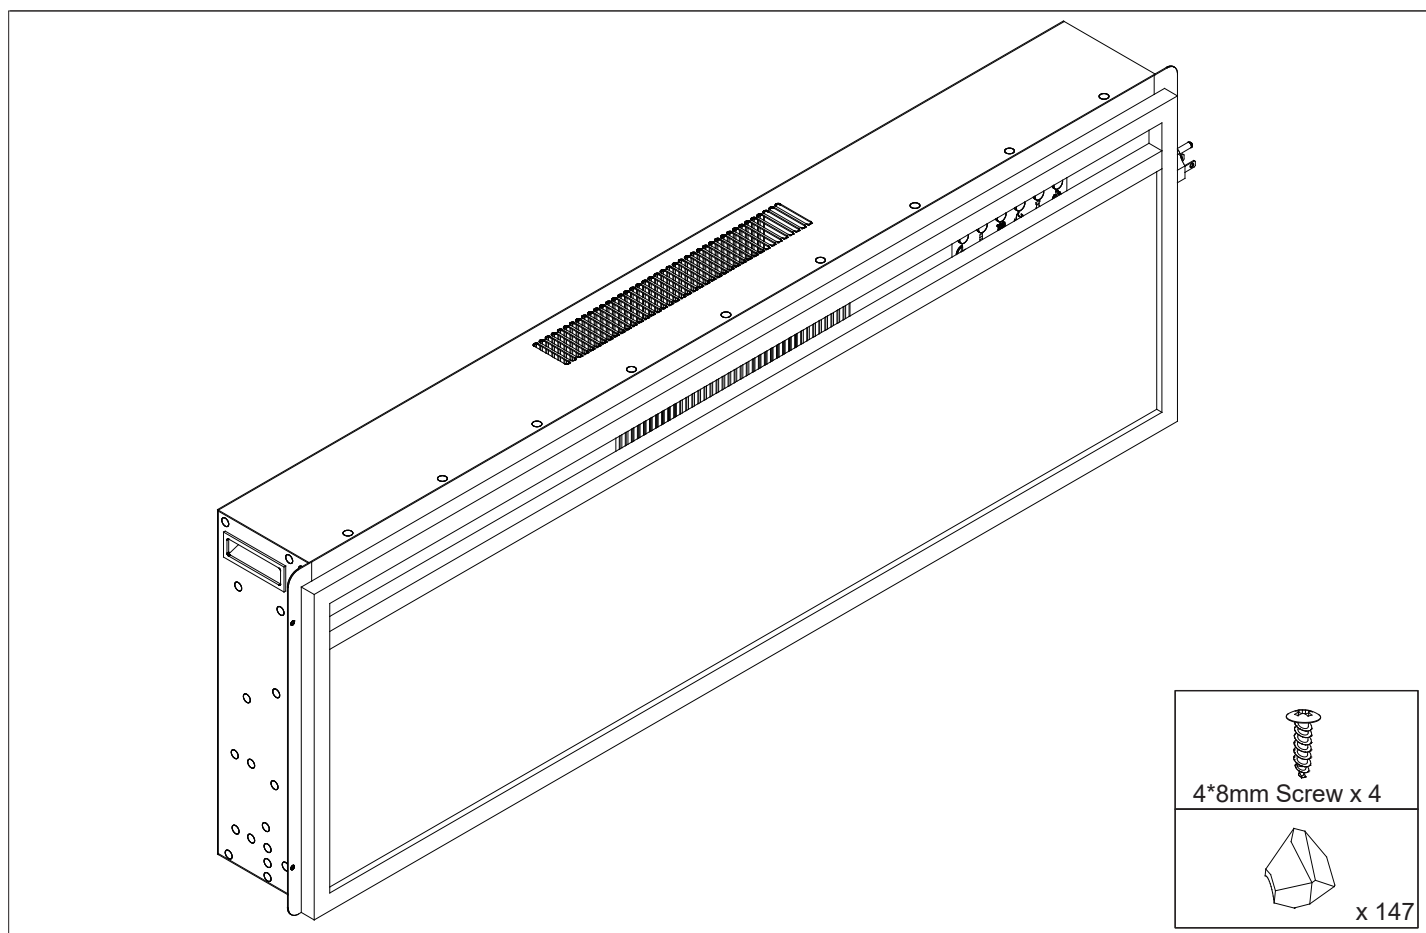


Assembly Instructions

 Step 1

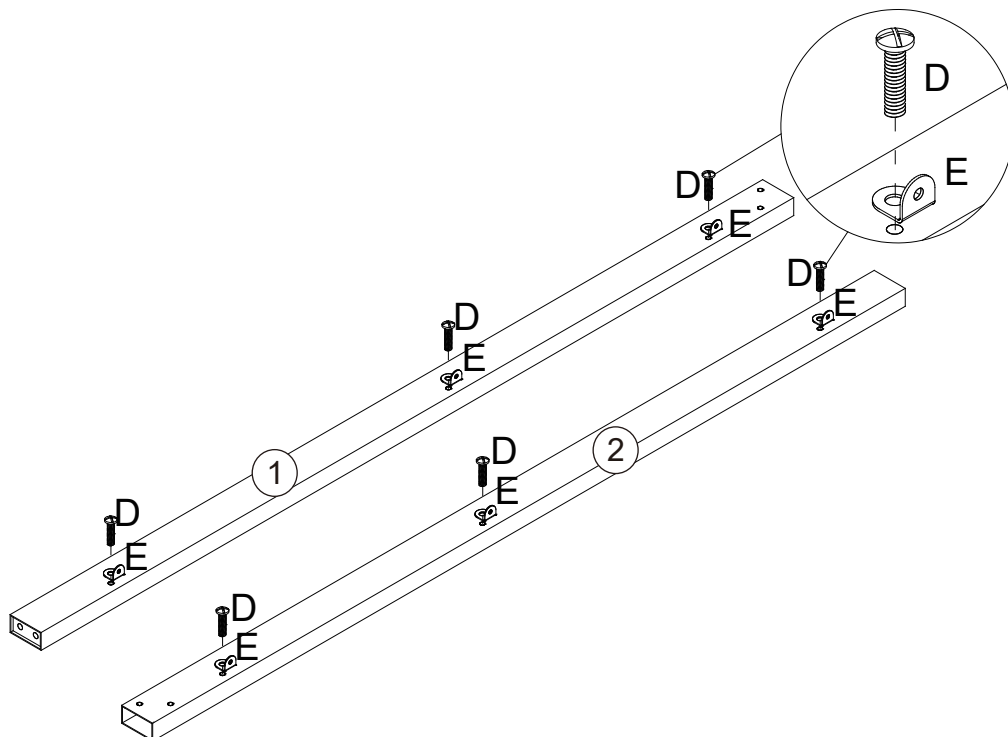


(D)

 

5*16mm Screw x 6

 
(E)




x 6

Step 2

 
(F)



Iron pipe fitting x 1

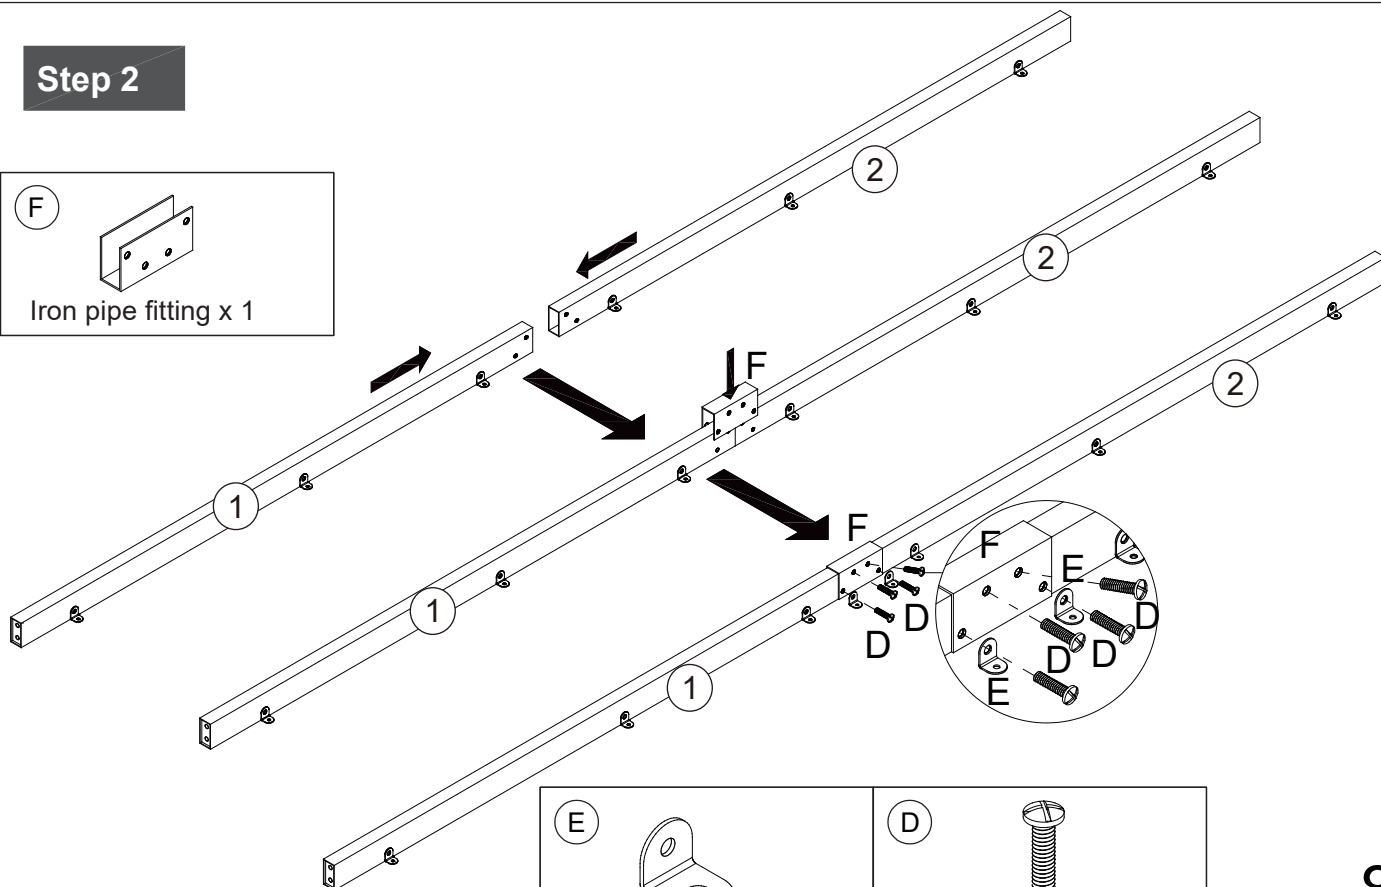 

(E)

 

x 2

 
 
(D)





5*16mm Screw x 4

Assembly Instructions

Step 3

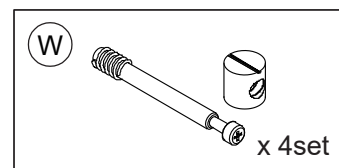
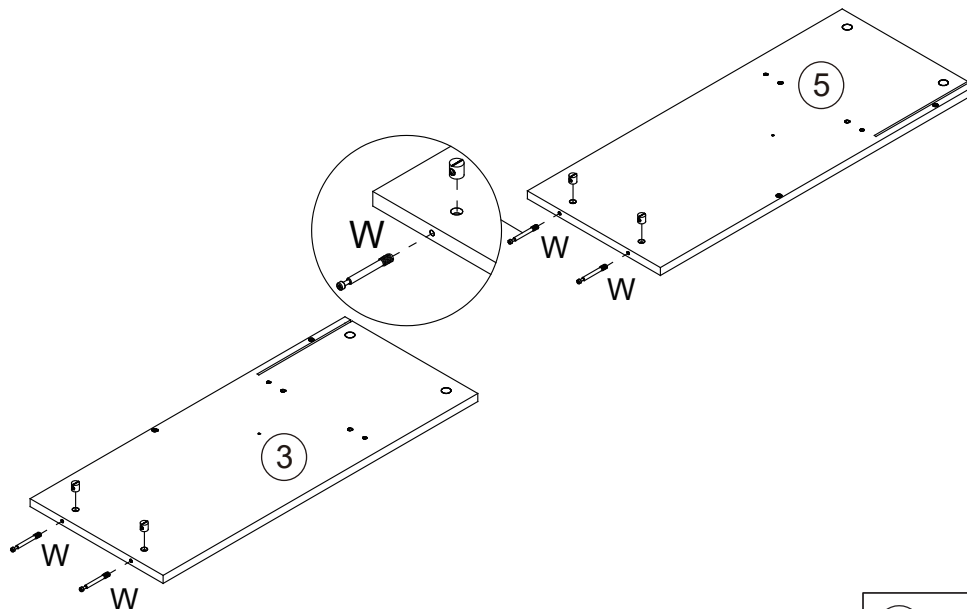


  Step 4

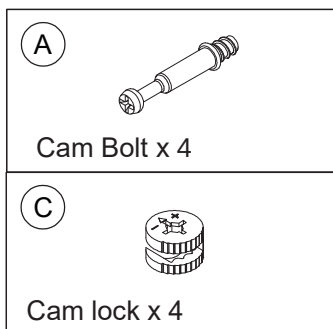
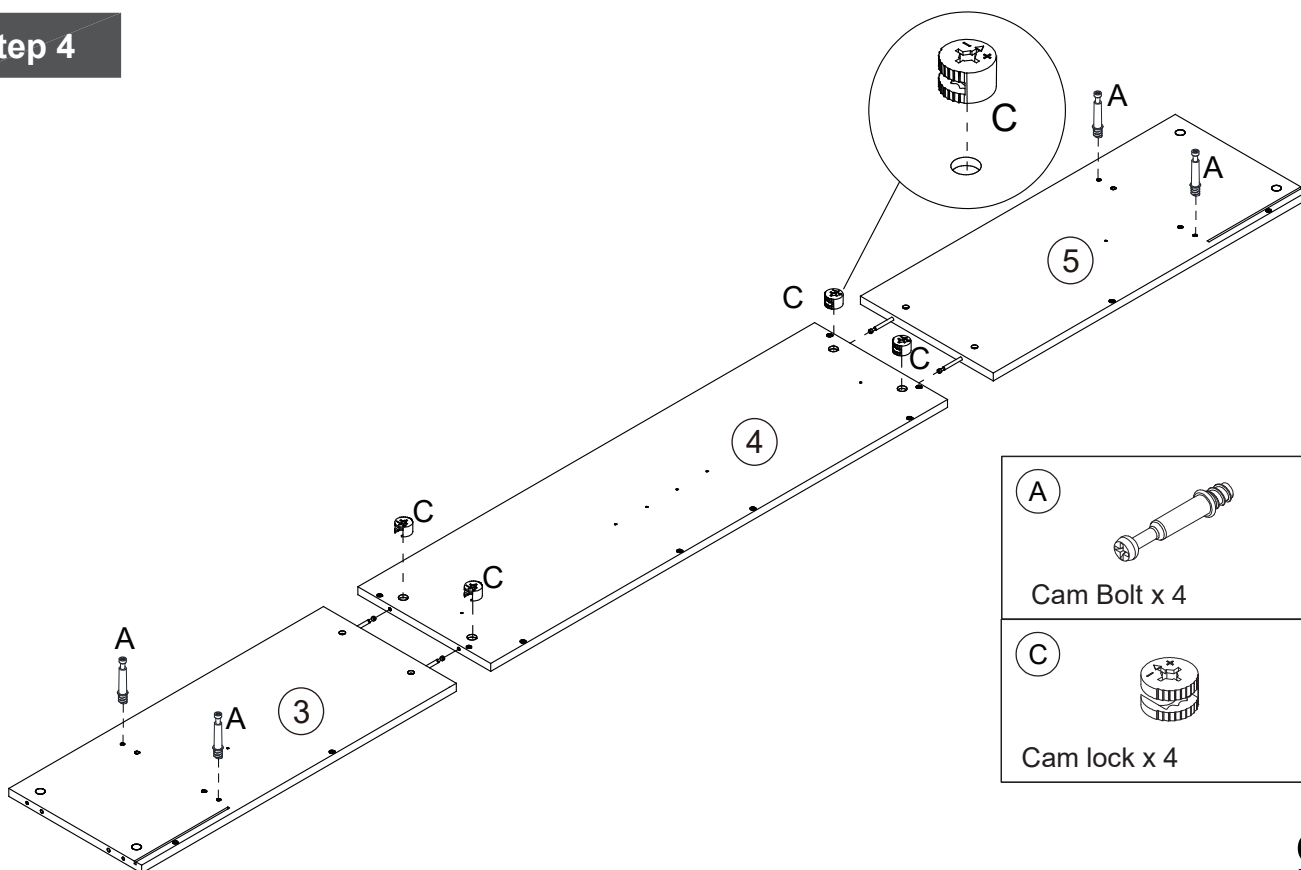


Assembly Instructions

  Step 5

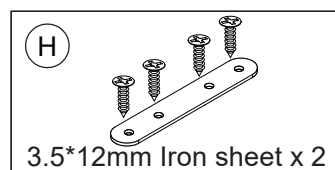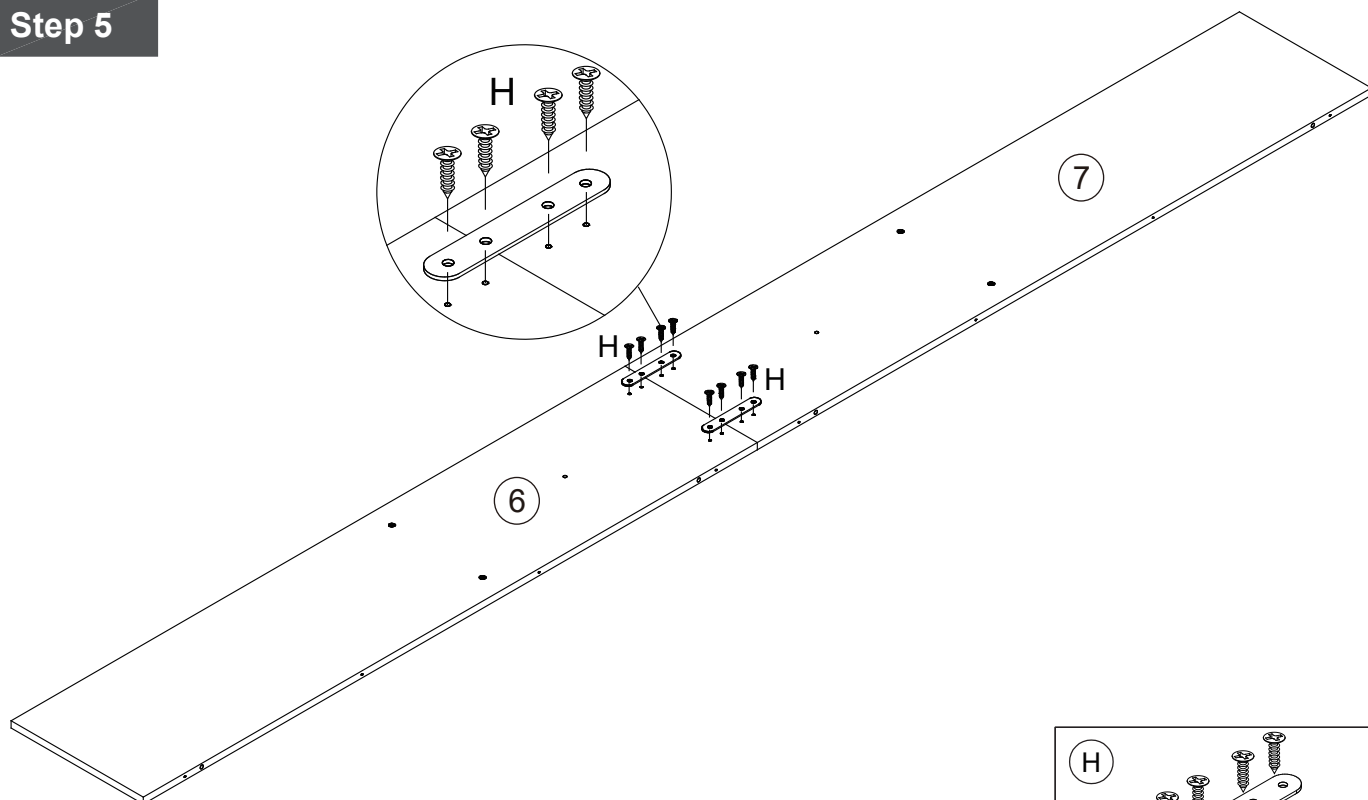


  Step 6

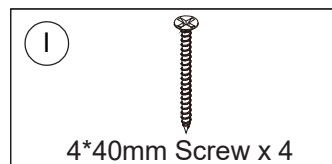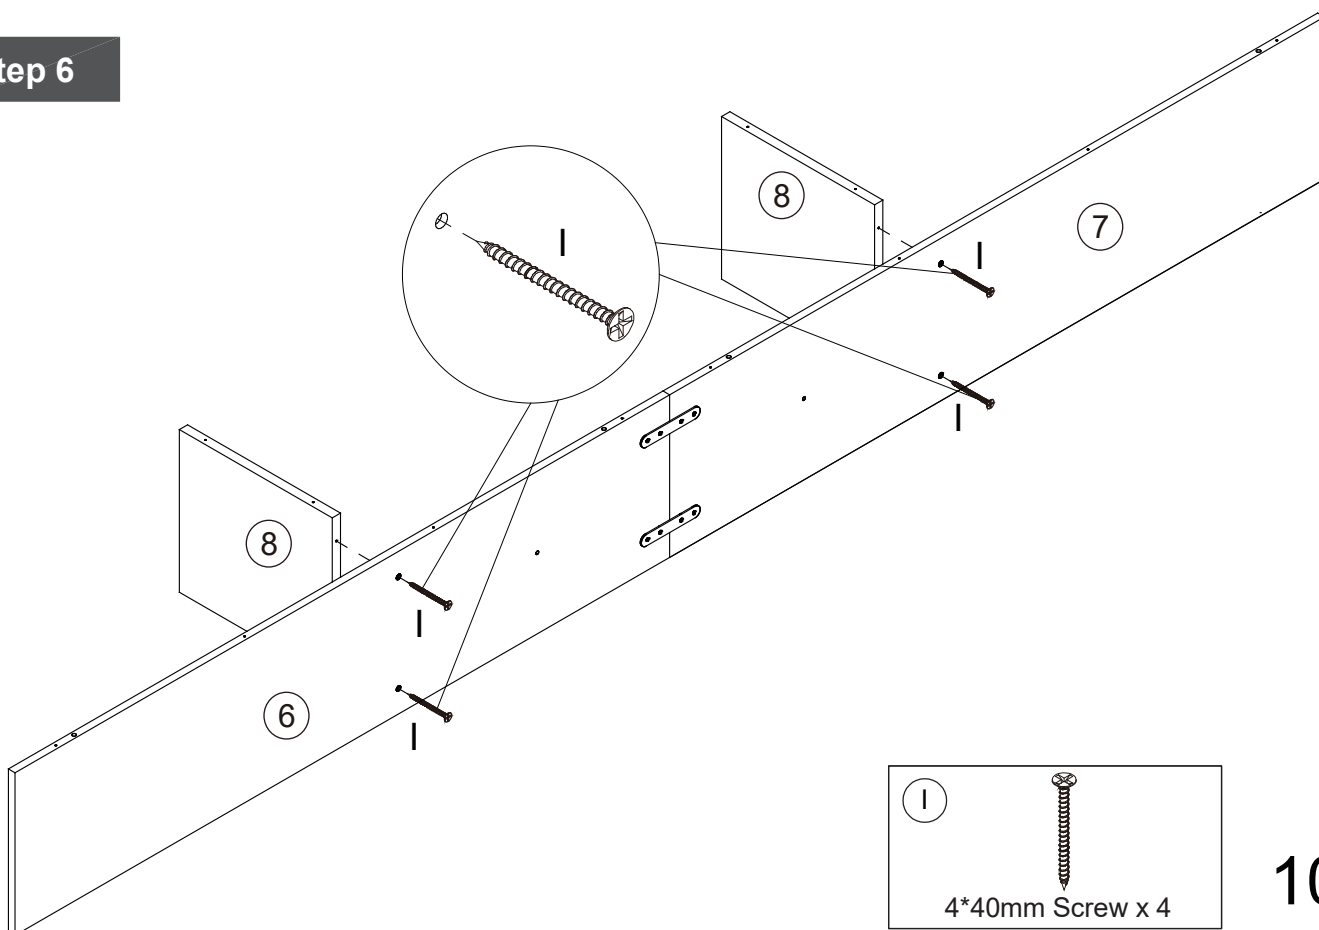


Assembly Instructions

 Step 7

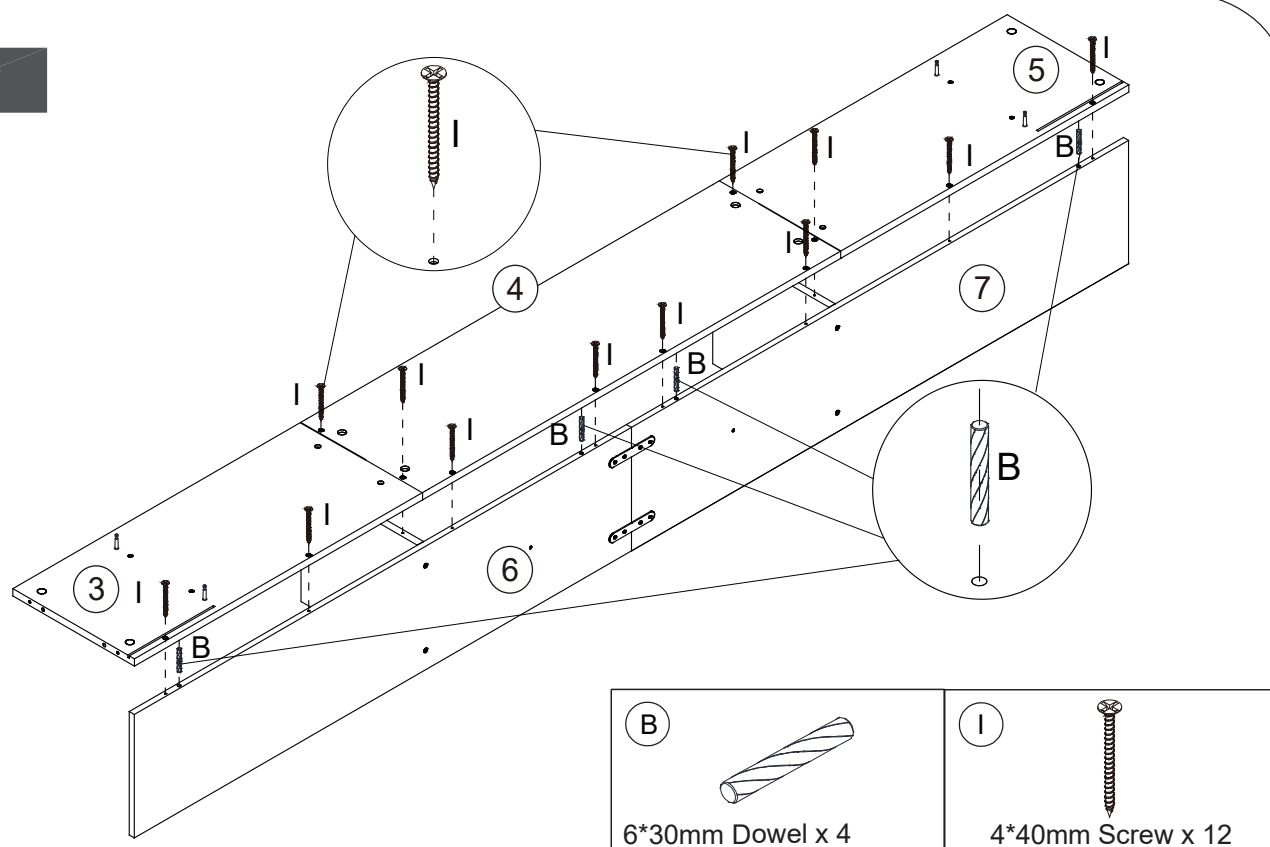


 Step 8

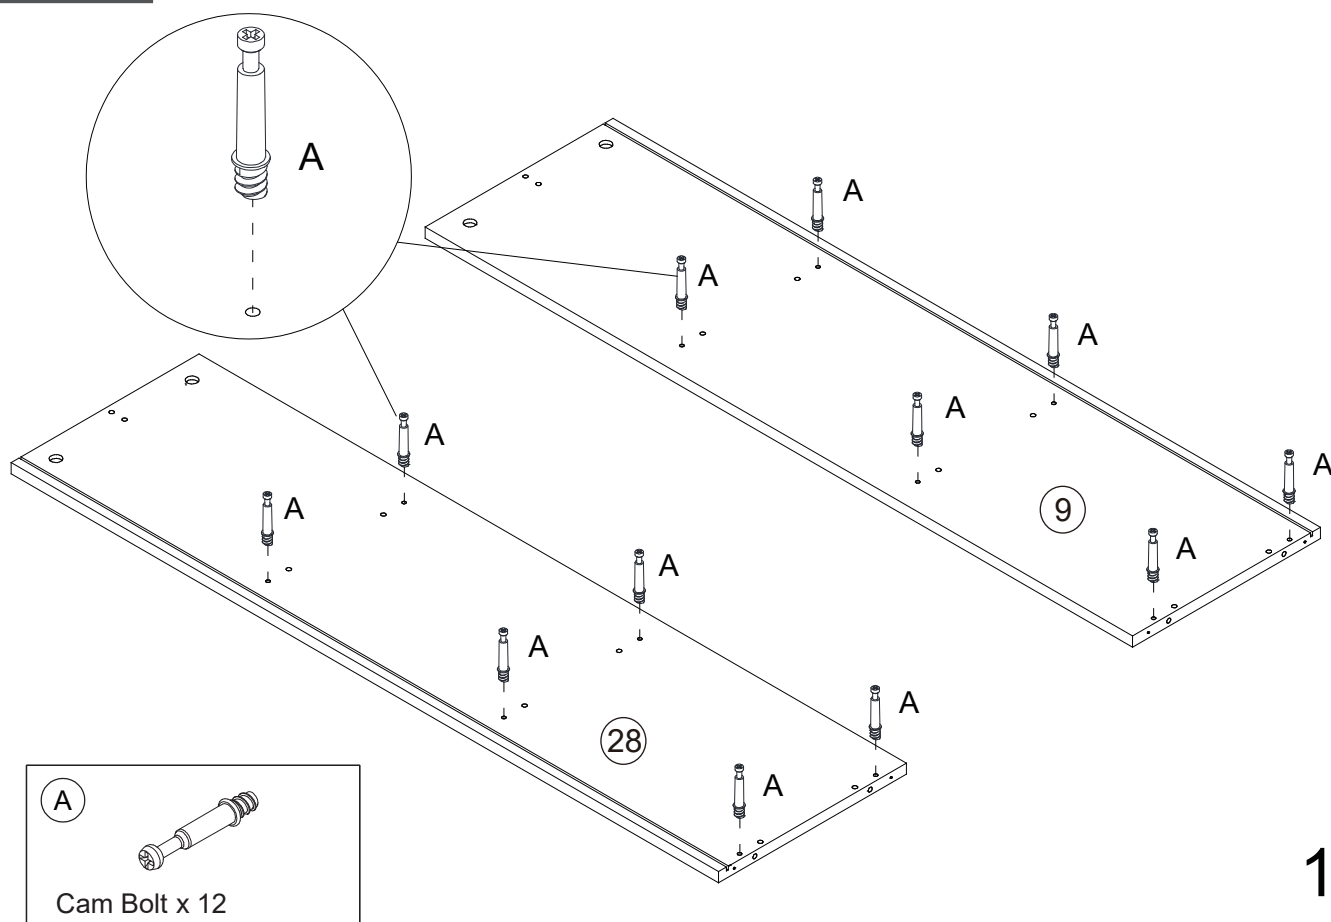


Assembly Instructions

 Step 9

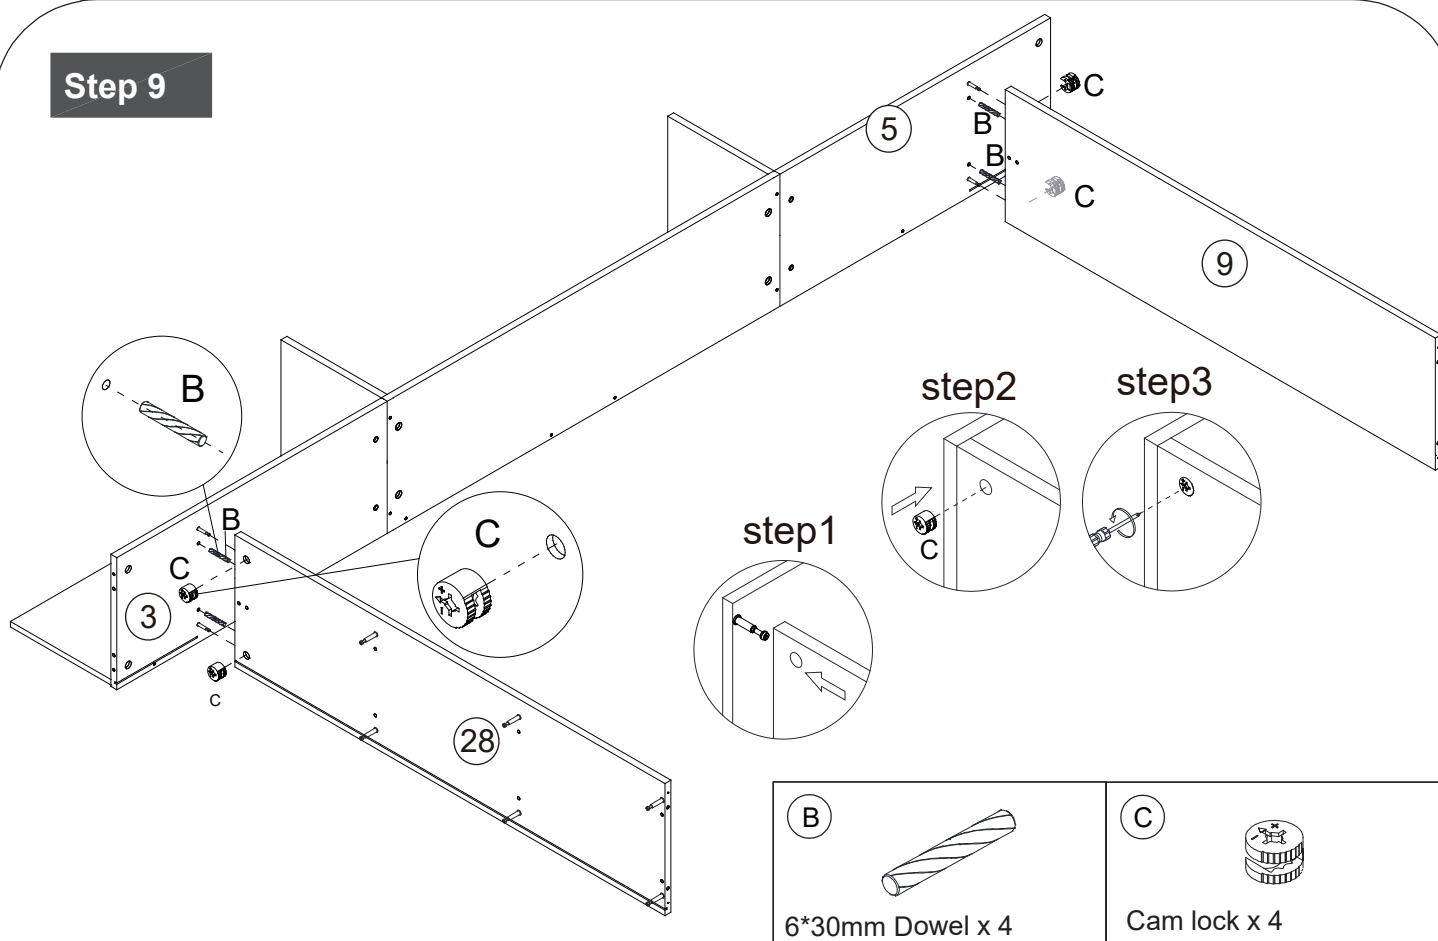


 Step 10

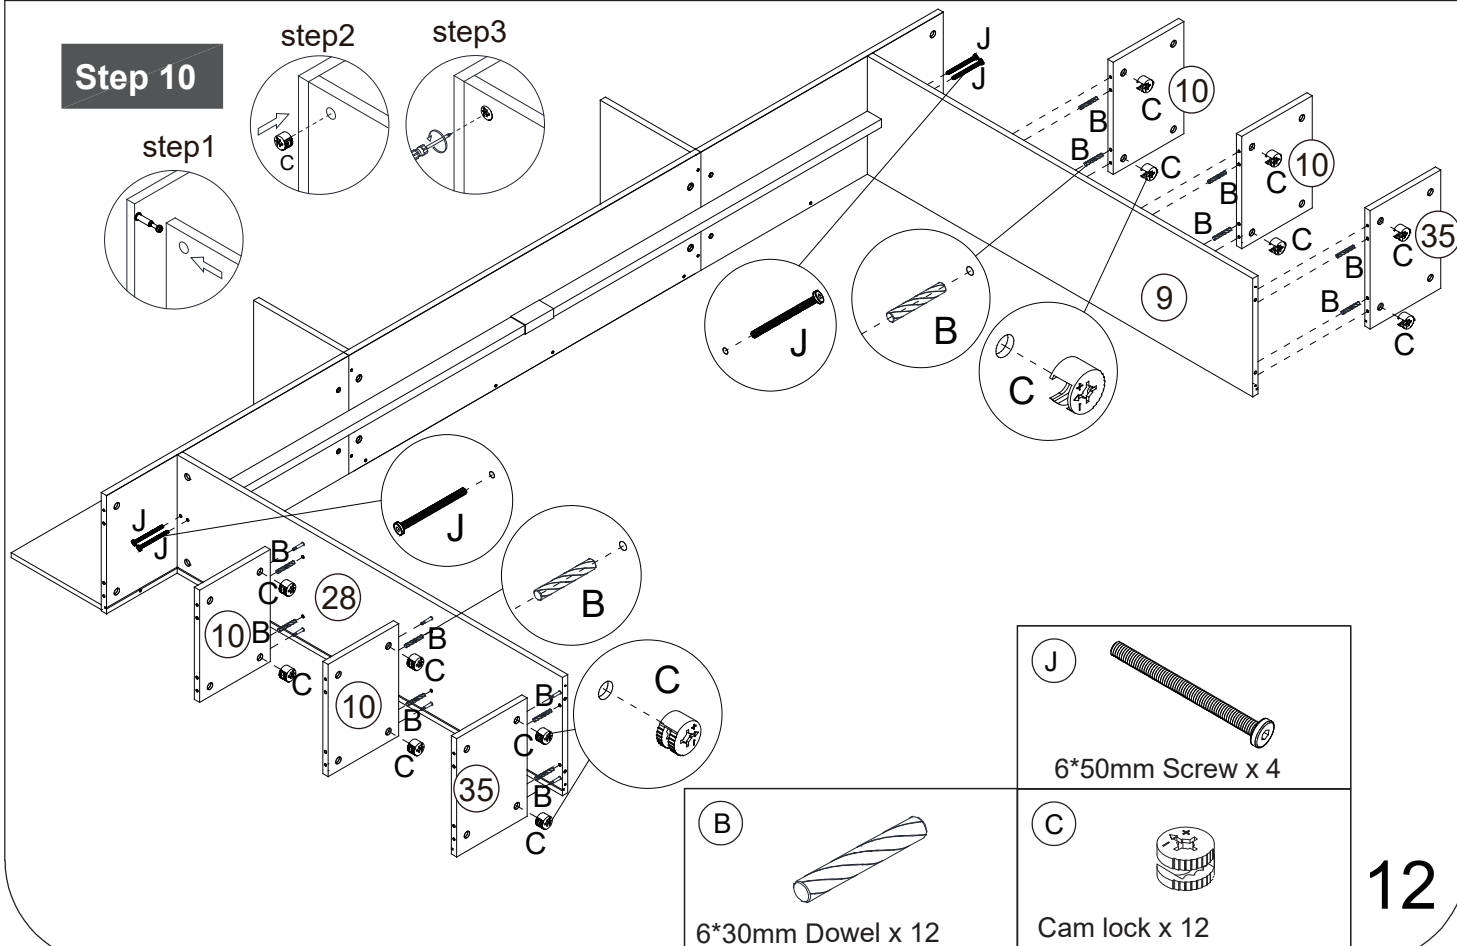


Assembly Instructions

 Step 11

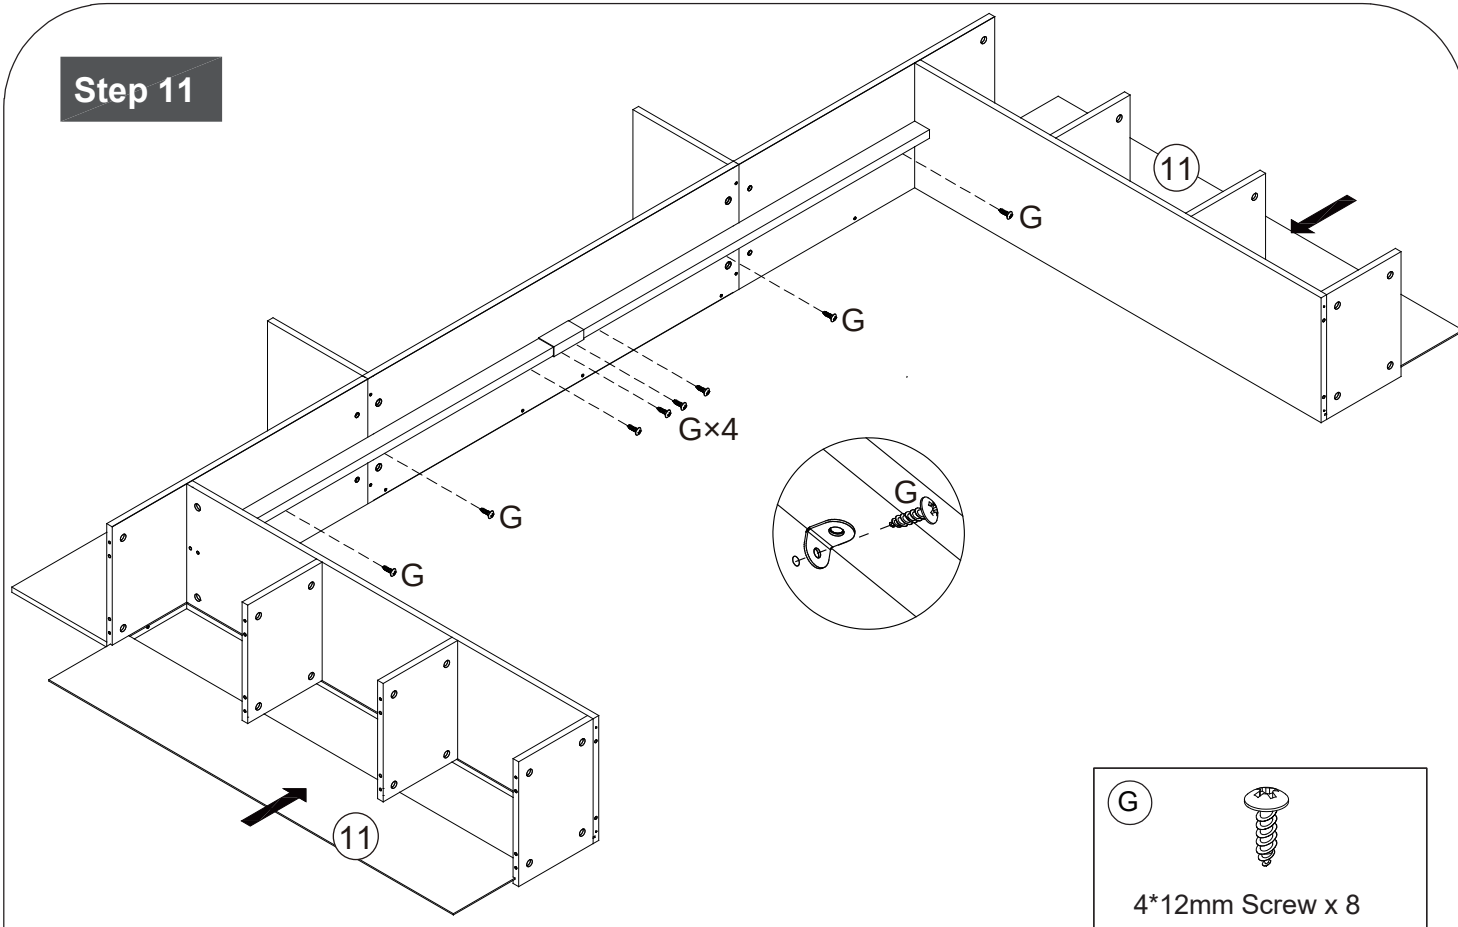

 Step 12

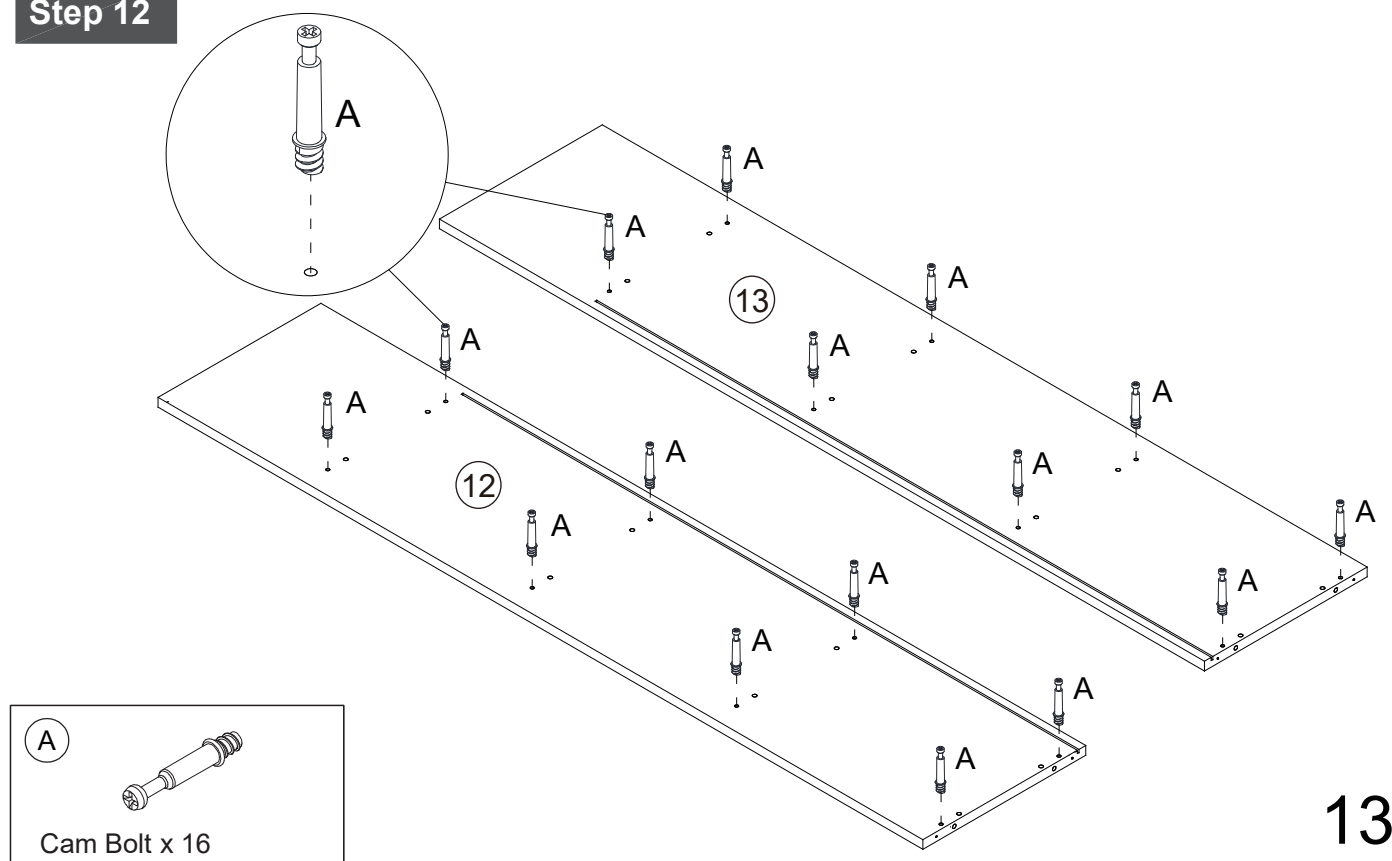


Assembly Instructions

Step 13


step1

step2

 step3


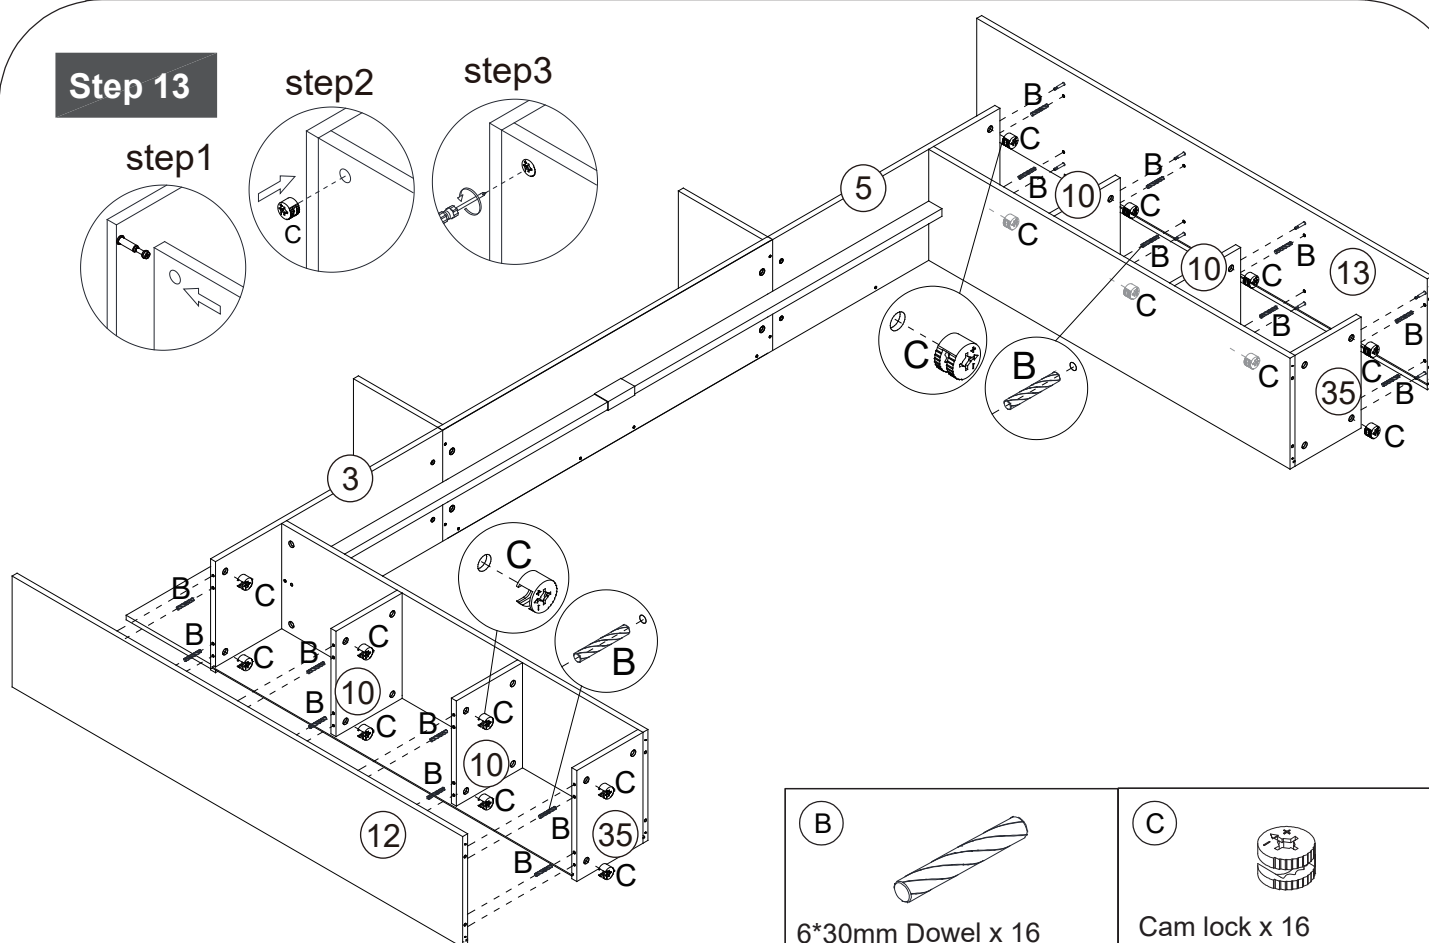


 Step 14


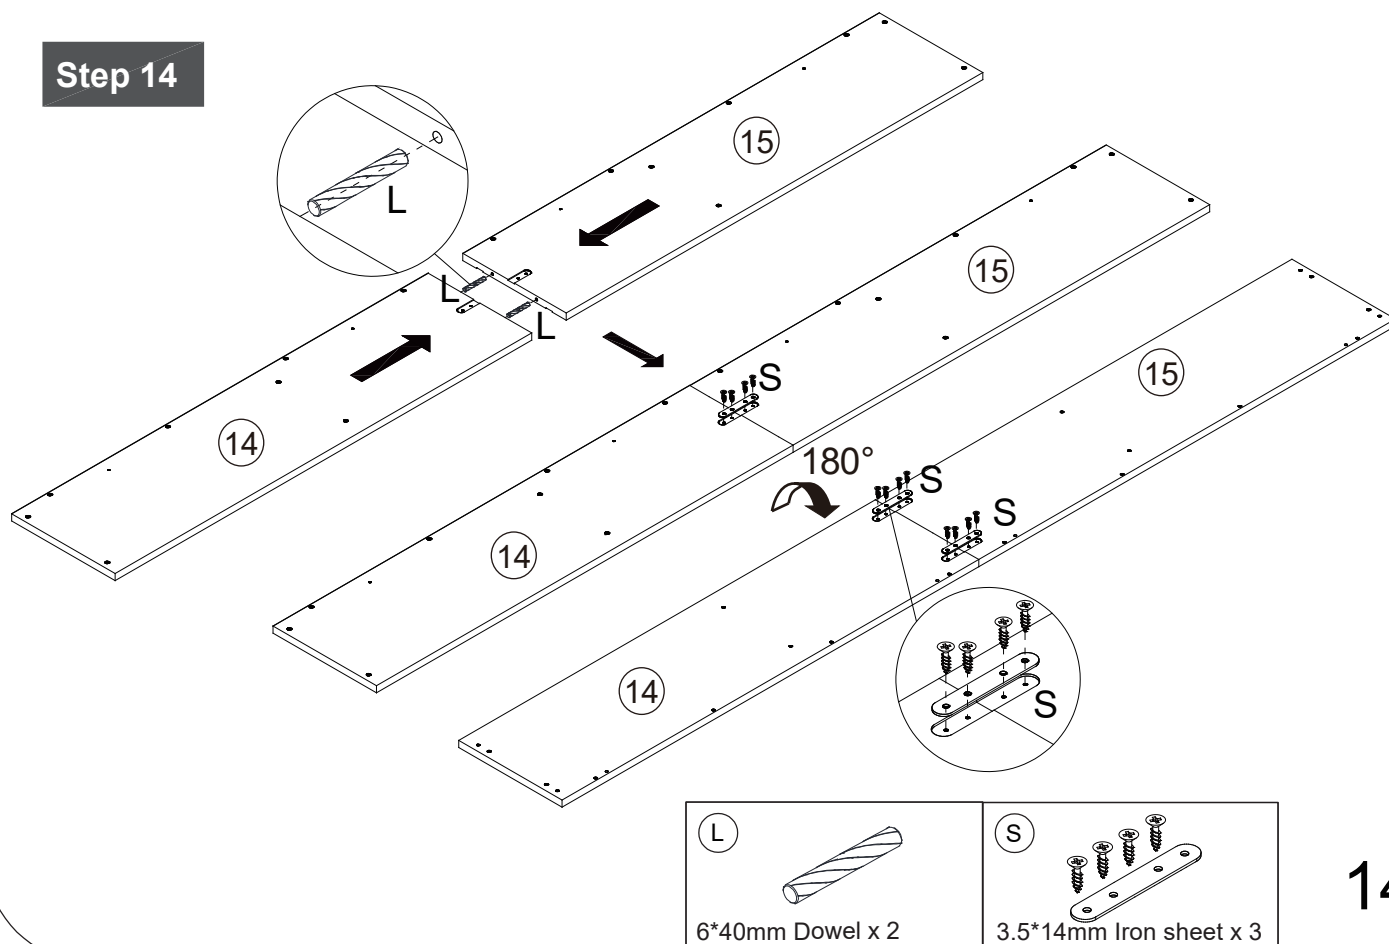


Assembly Instructions

  Step 15

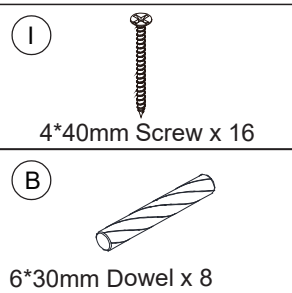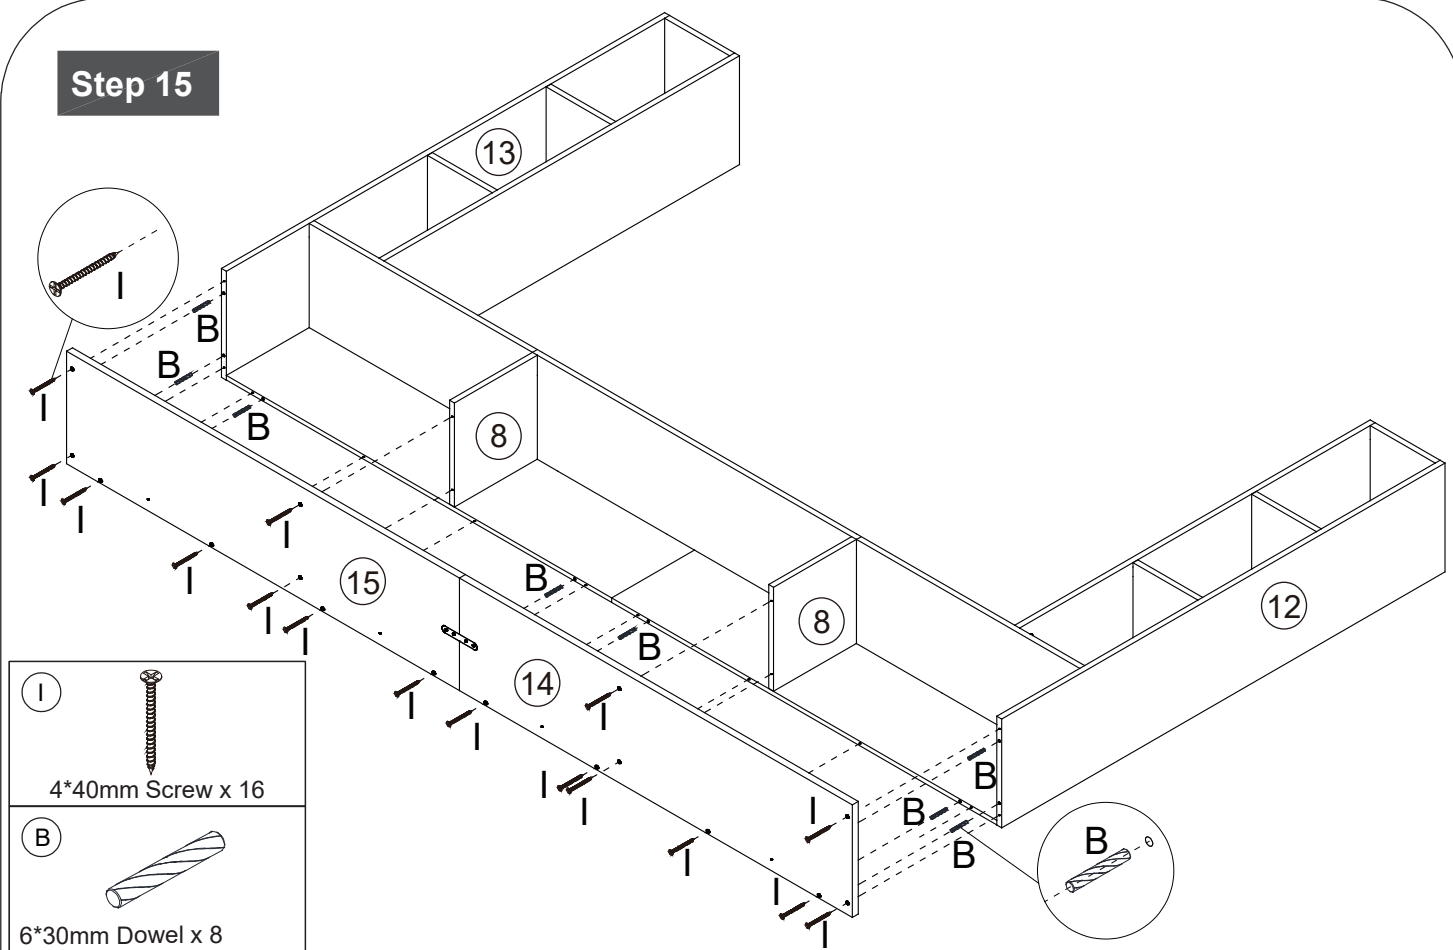


  Step 16

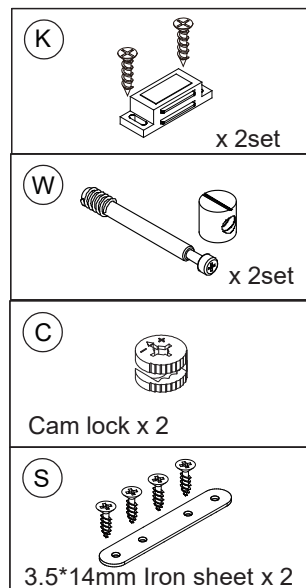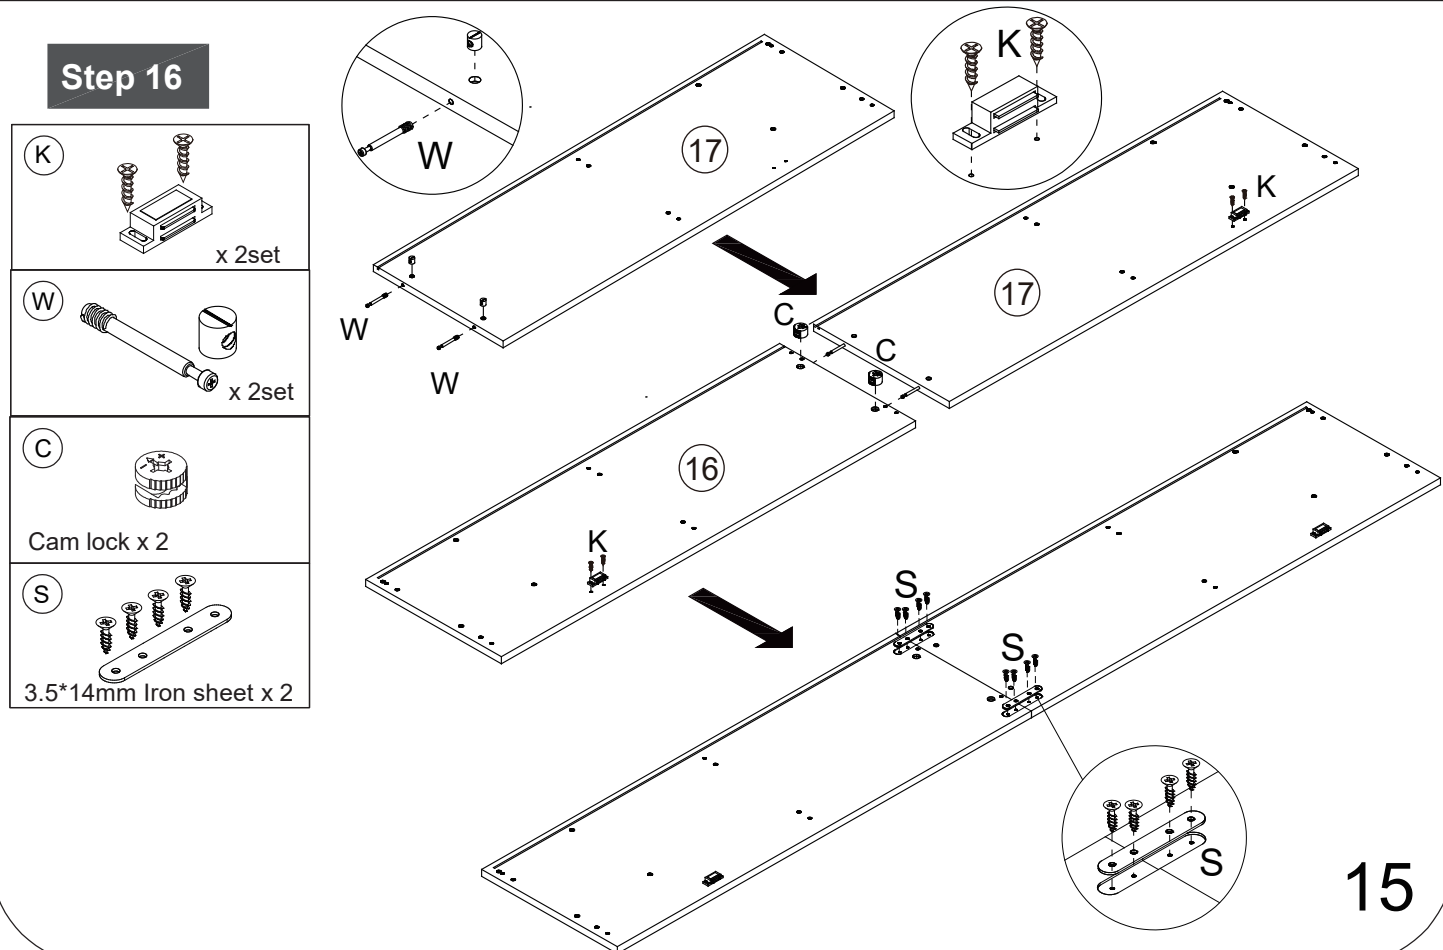


Assembly Instructions

 Step 17



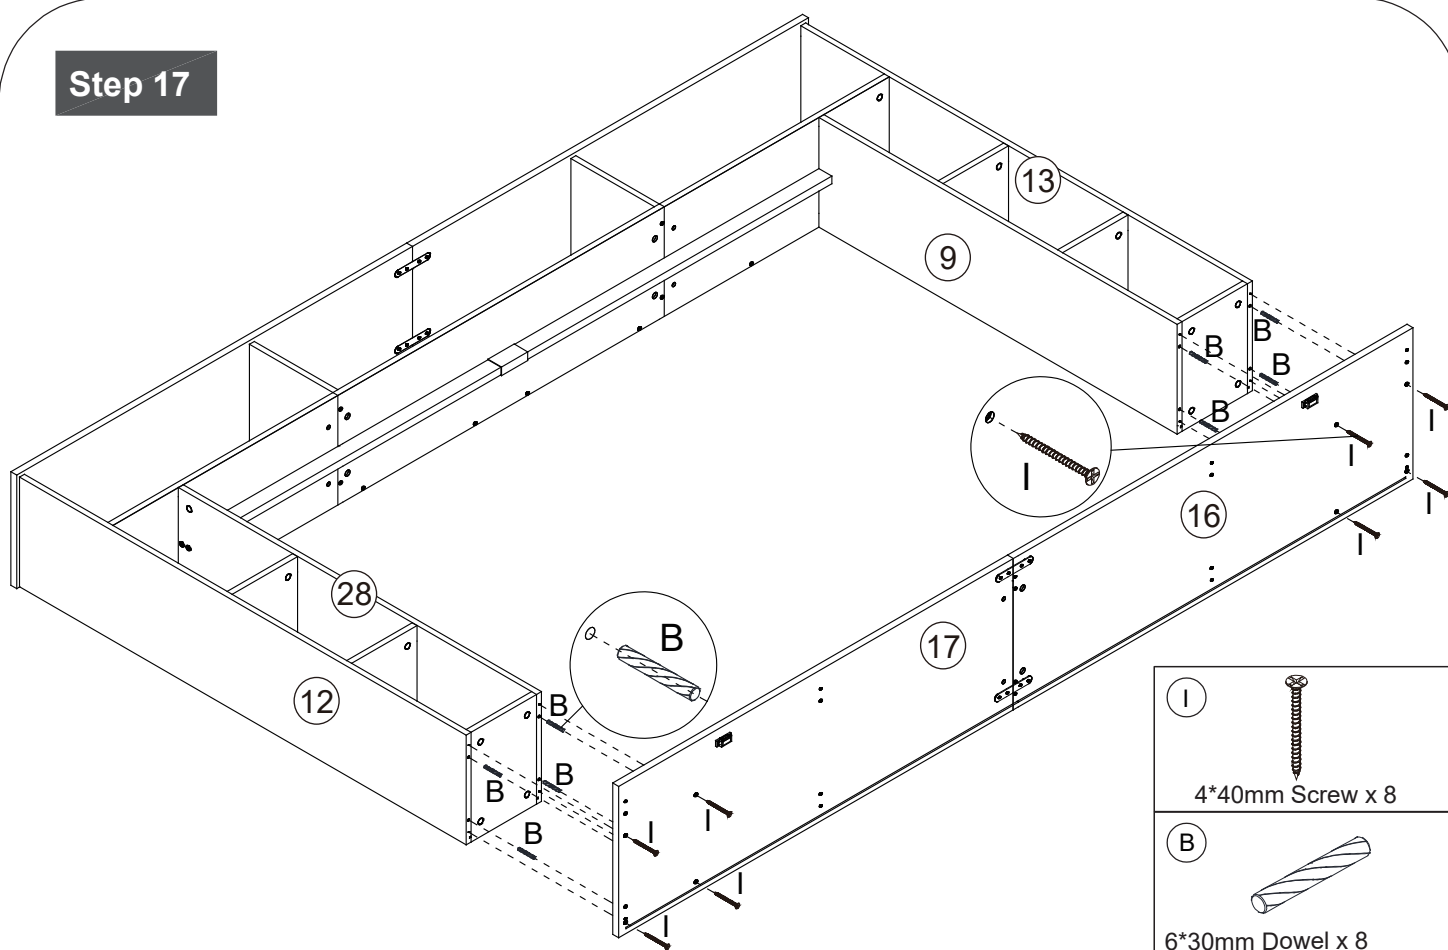


 Step 18


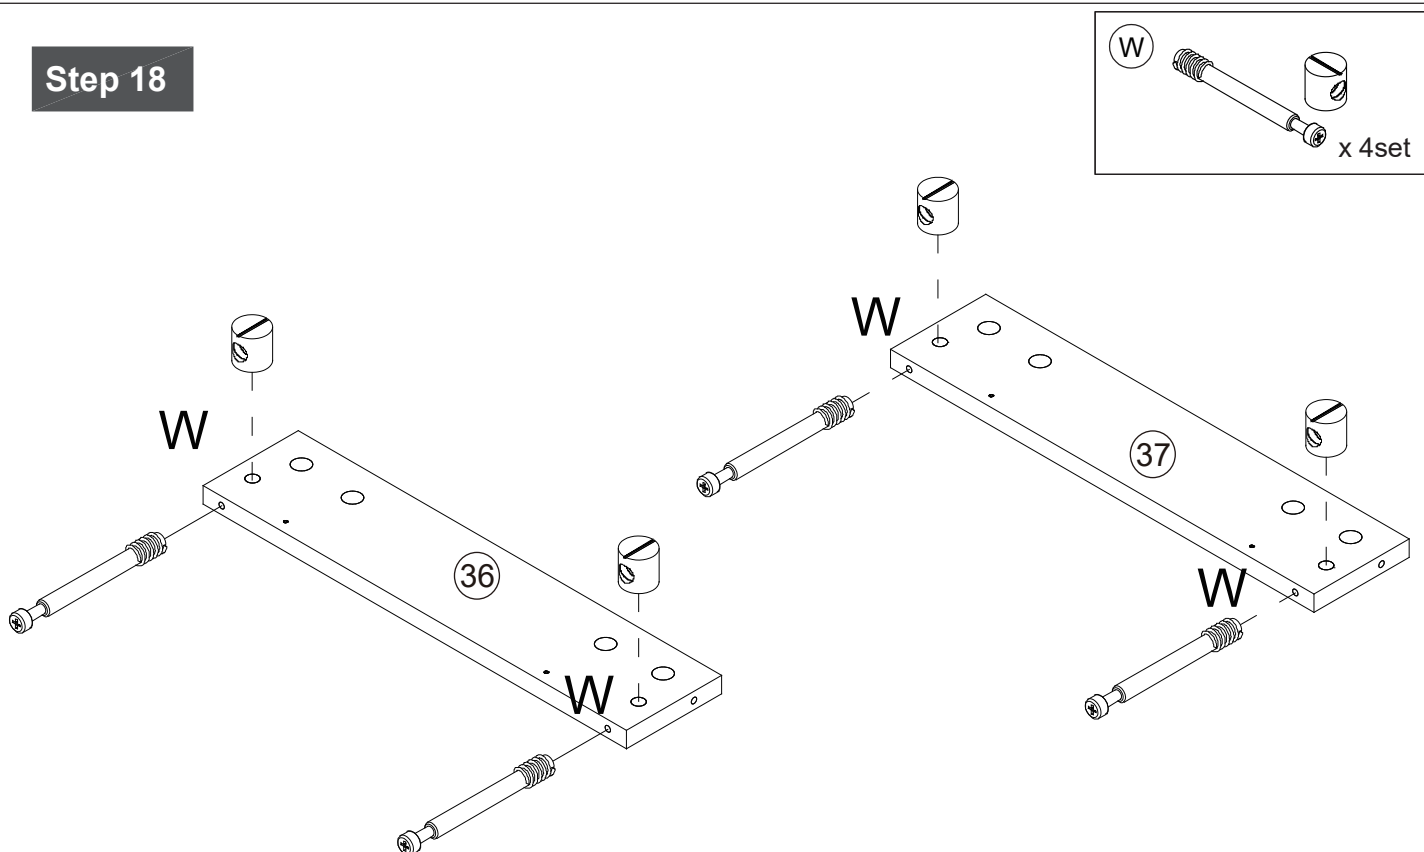


Assembly Instructions

   Step 19

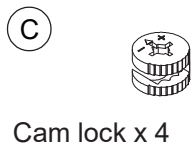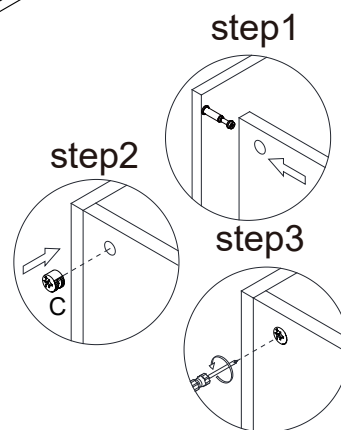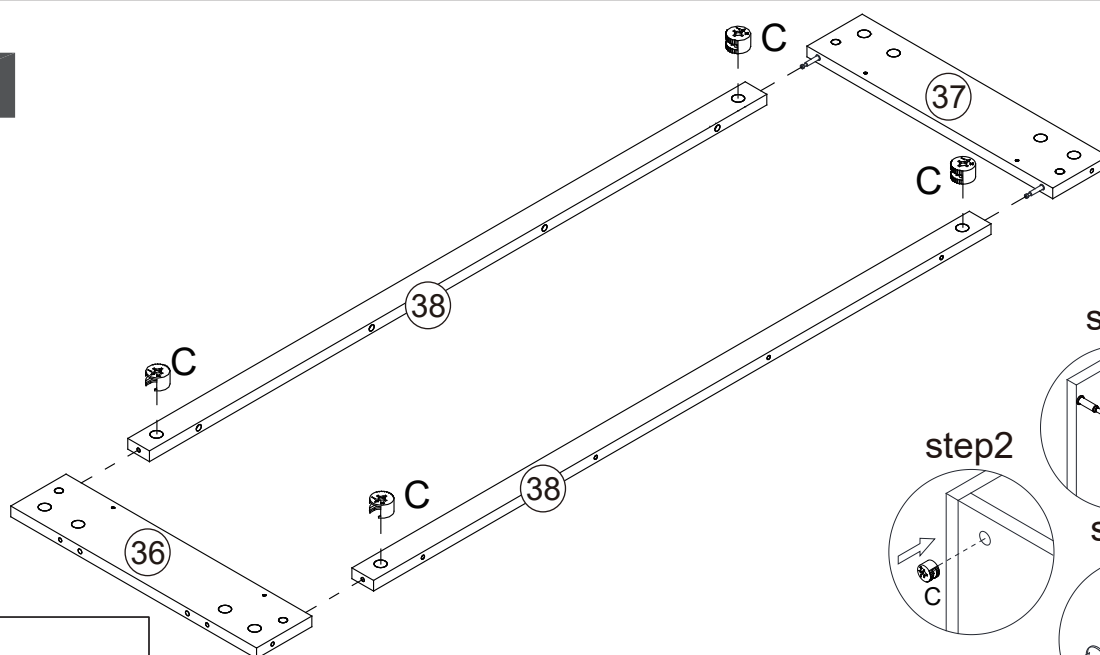


  Step 20

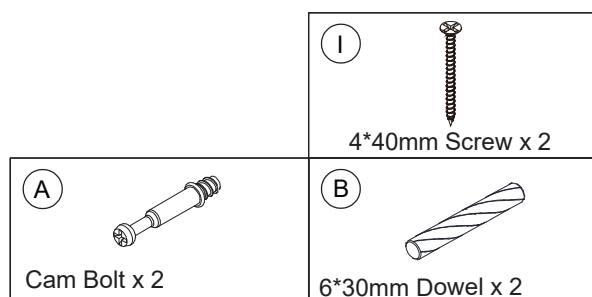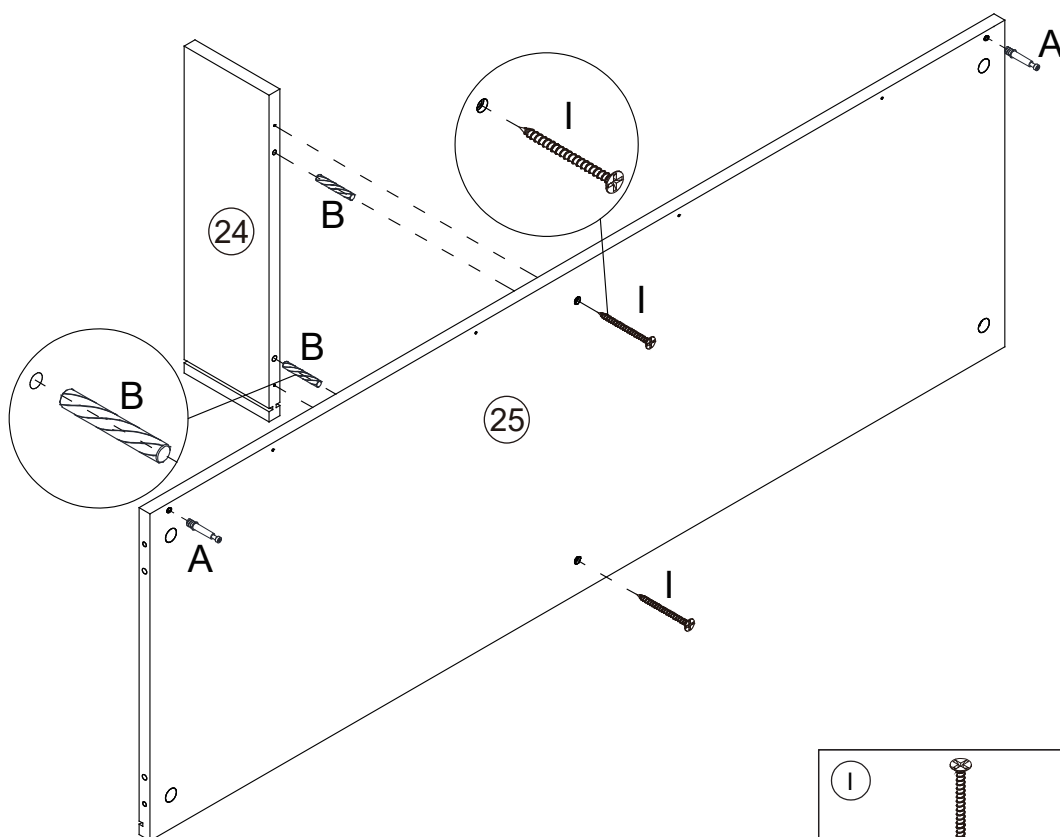


Assembly Instructions

 Step 21

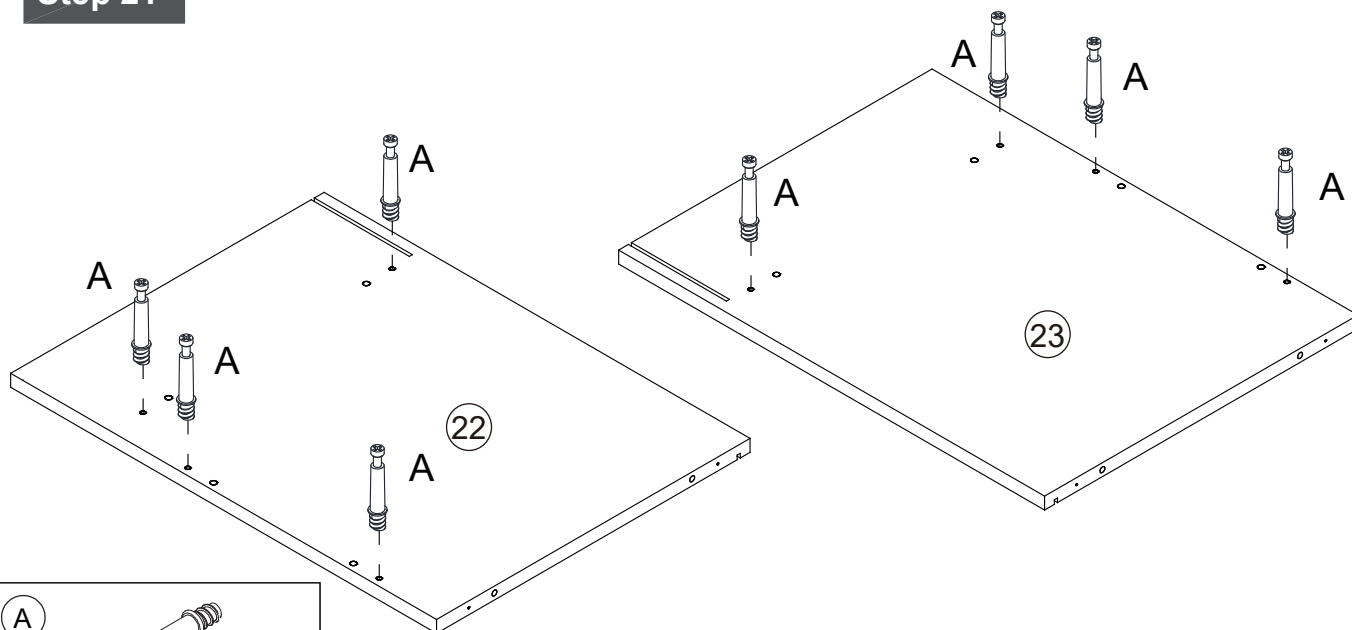


A

 

Cam Bolt x 8

 Step 22

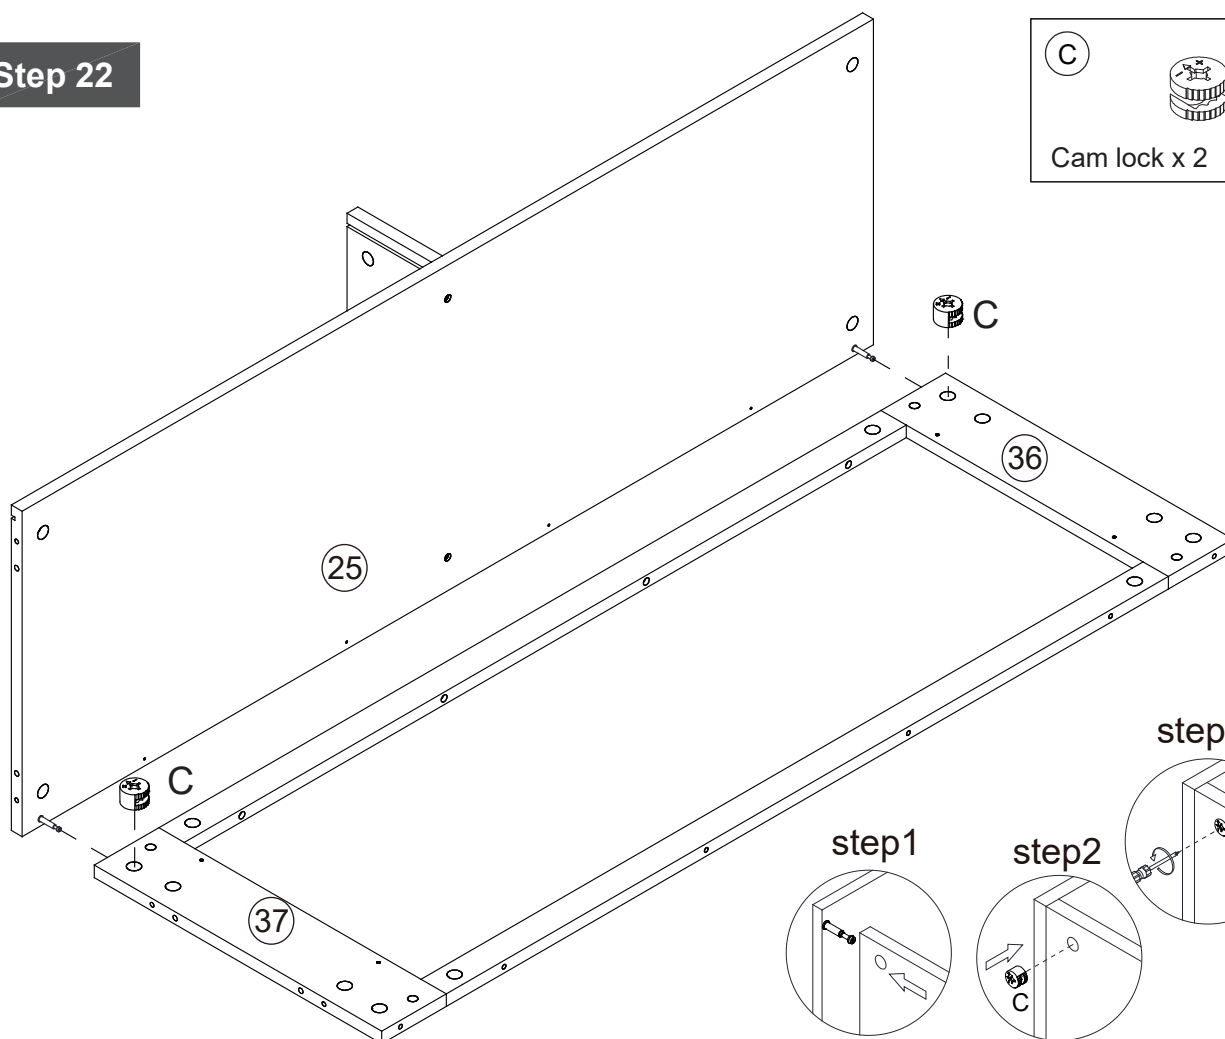

C



Cam lock x 2

step1

step2

step3

Assembly Instructions

Step 23

(B)

 


6*30mm Dowel x 8

(C)




Cam lock x 8


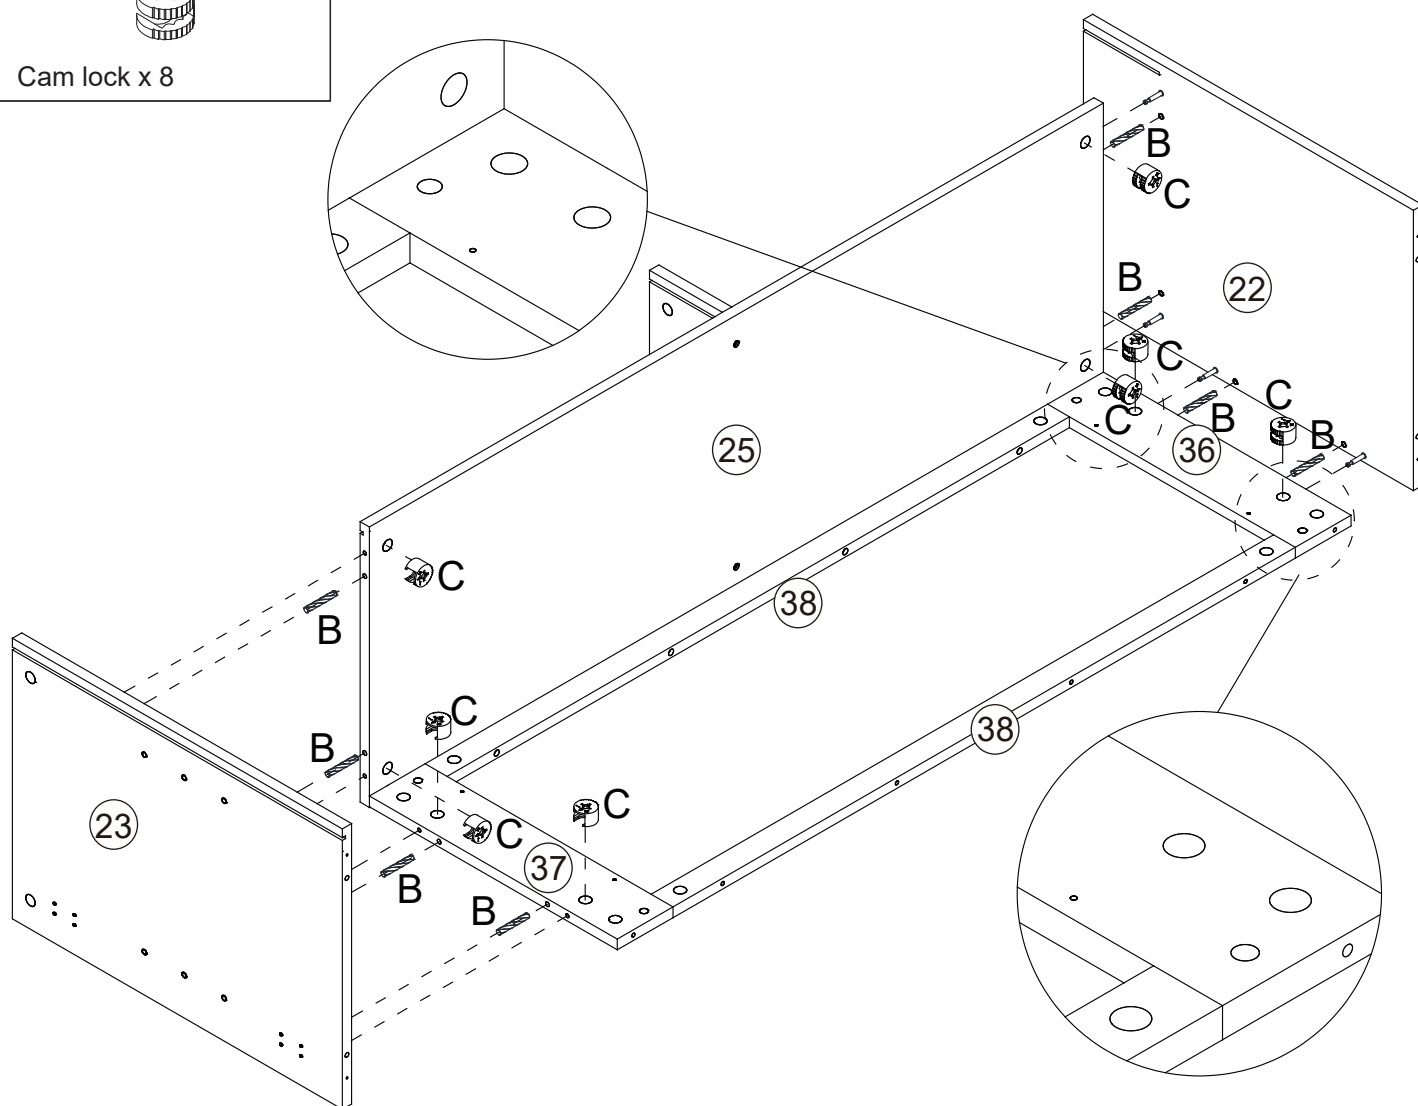


Assembly Instructions

 Step 24

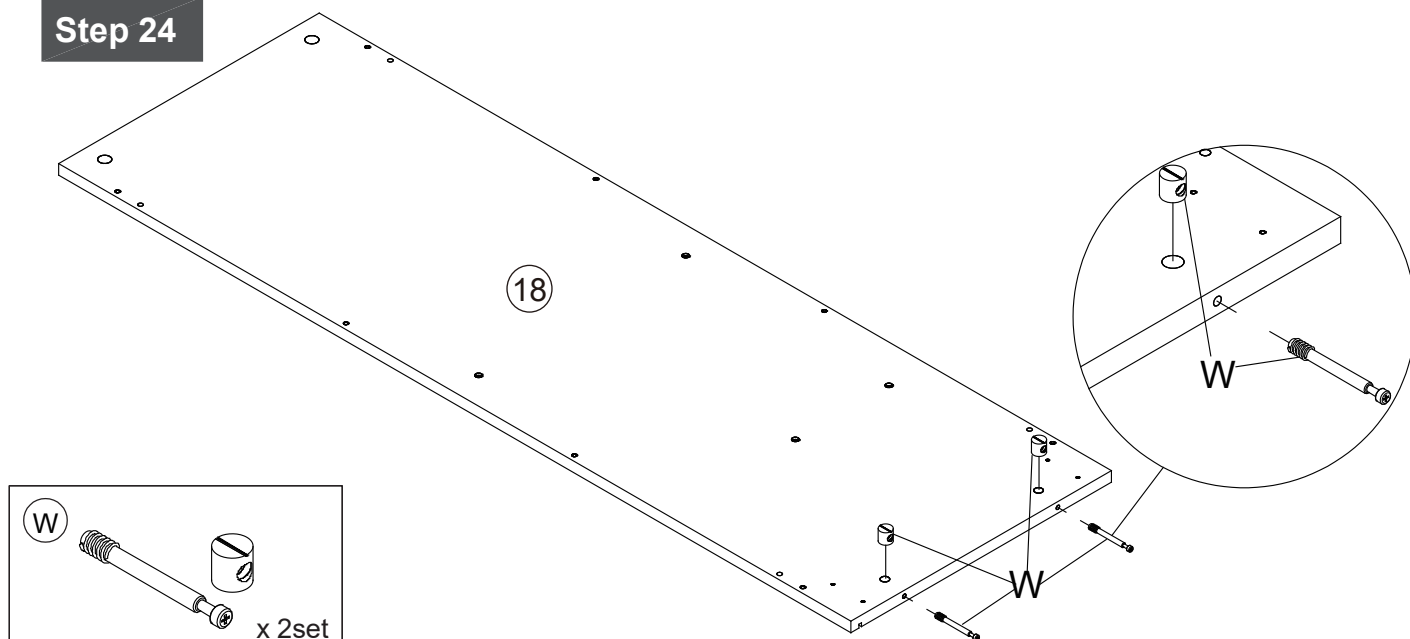


  Step 25

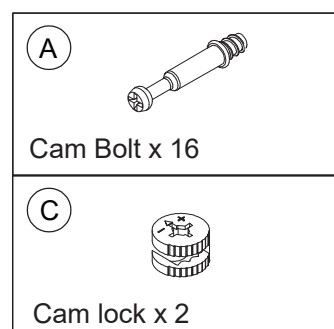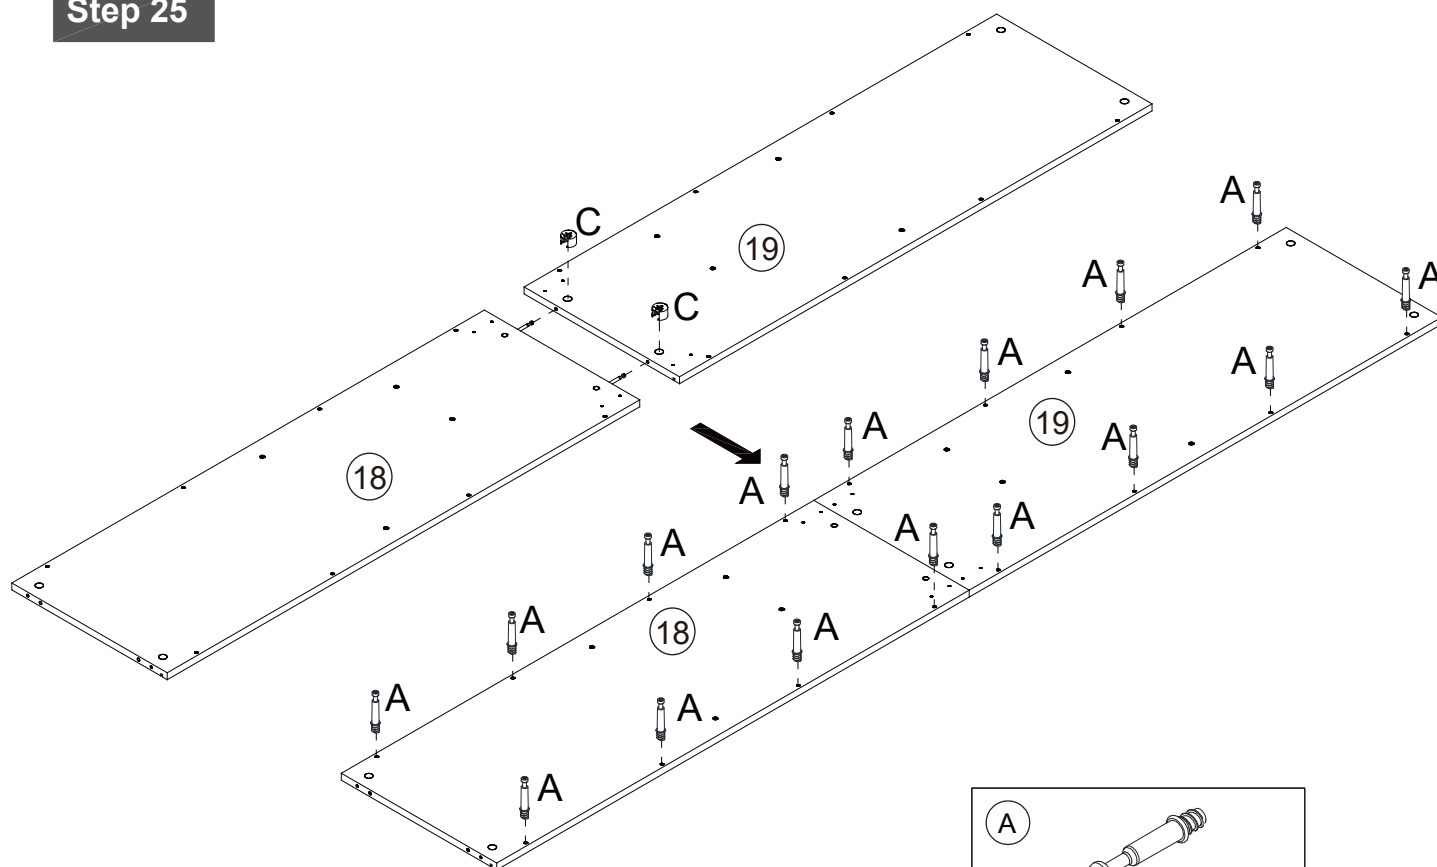


Assembly Instructions

 Step 26

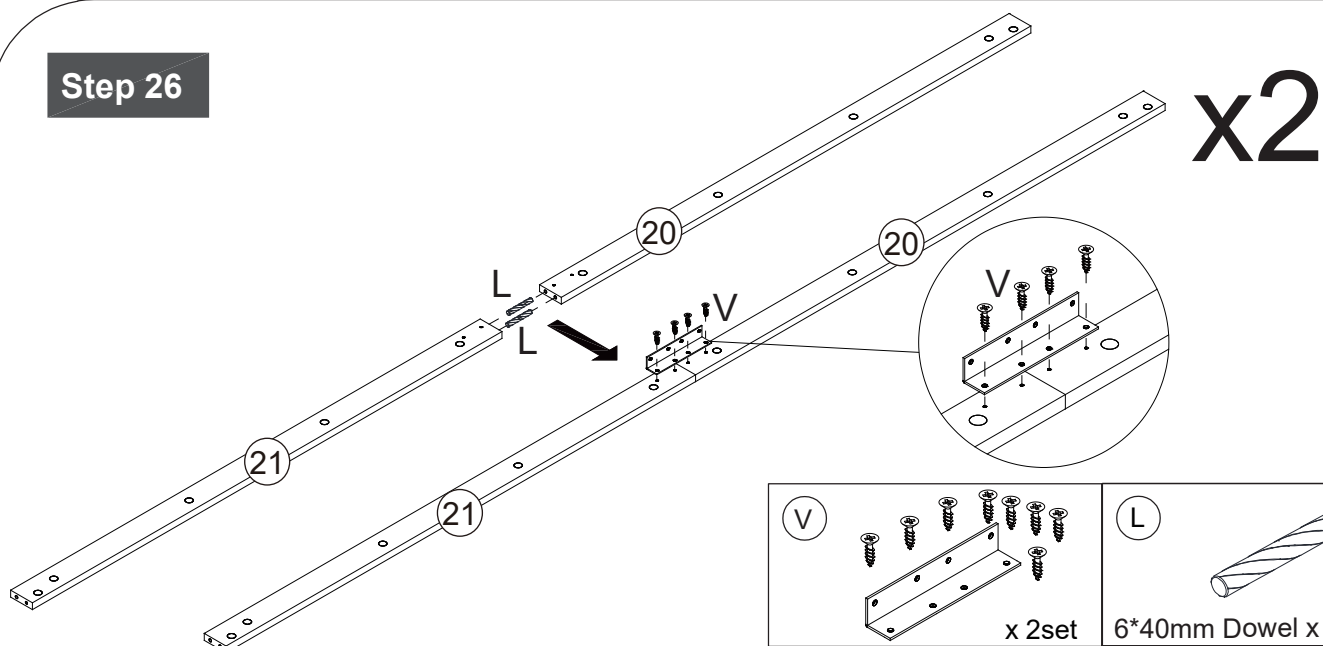


 Step 27

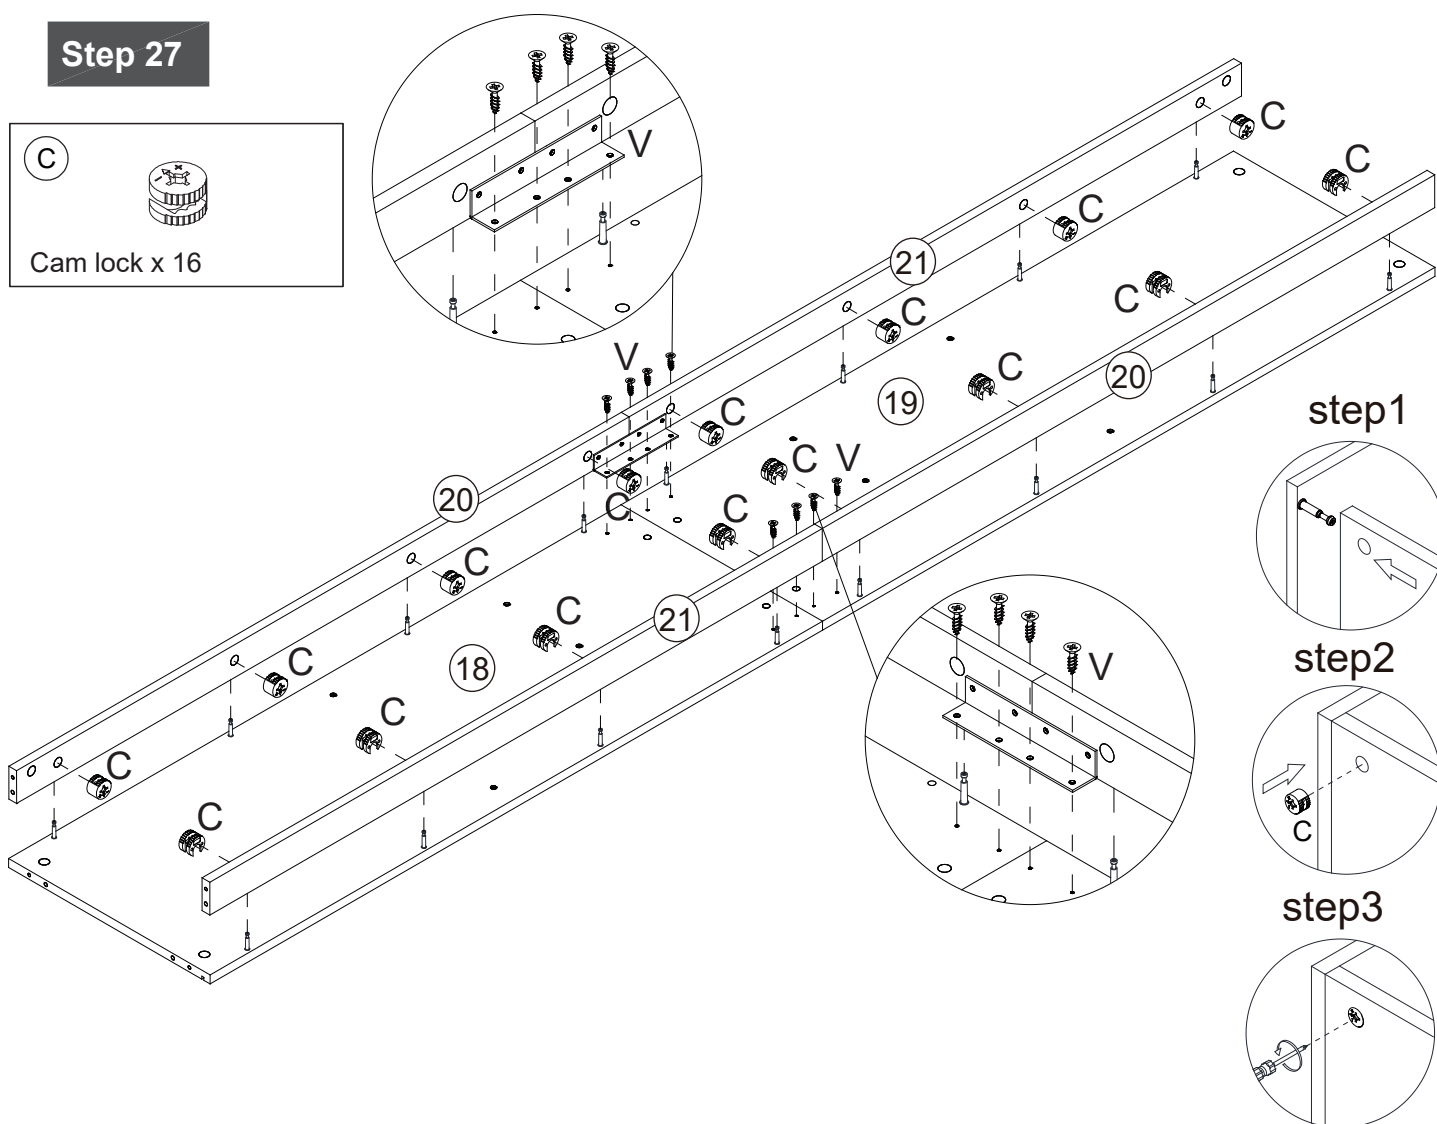


Assembly Instructions

 Step 28


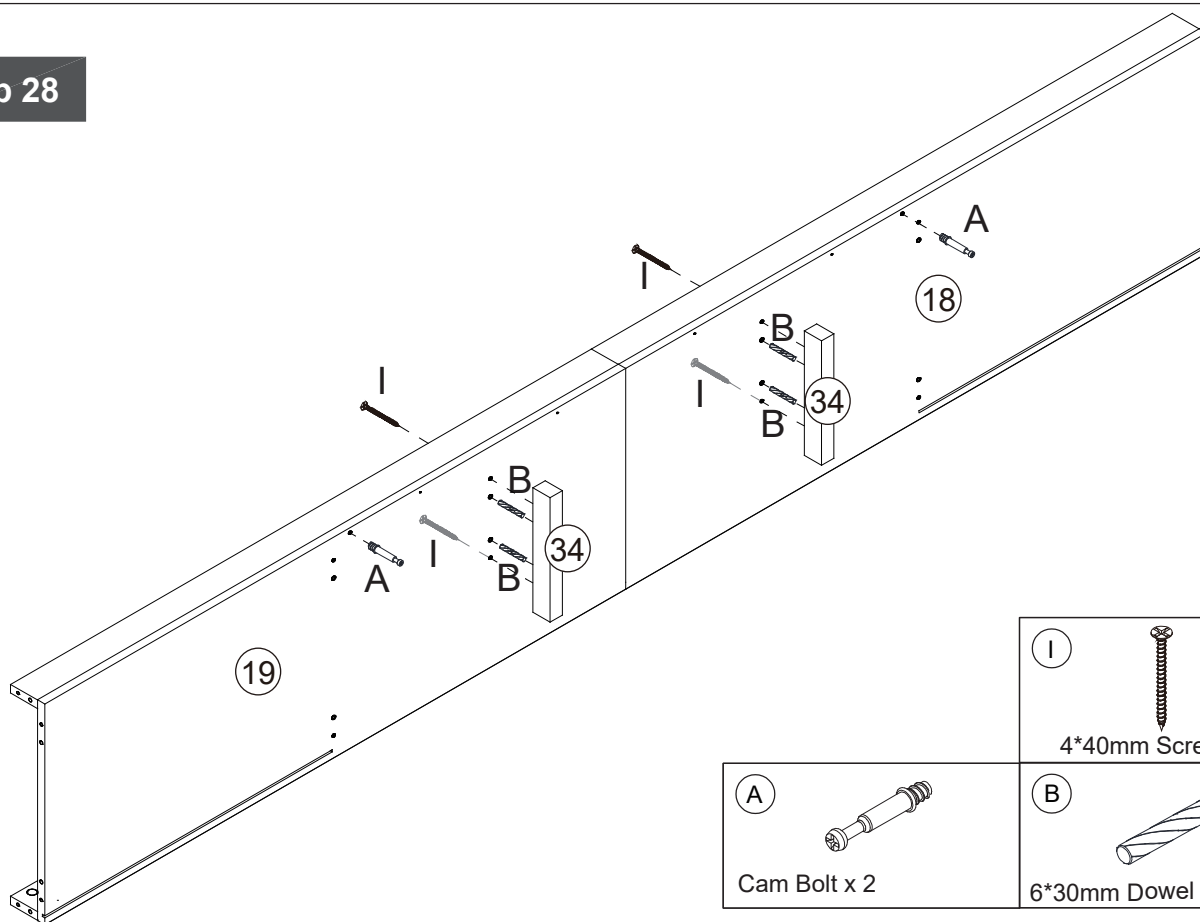


 Step 29


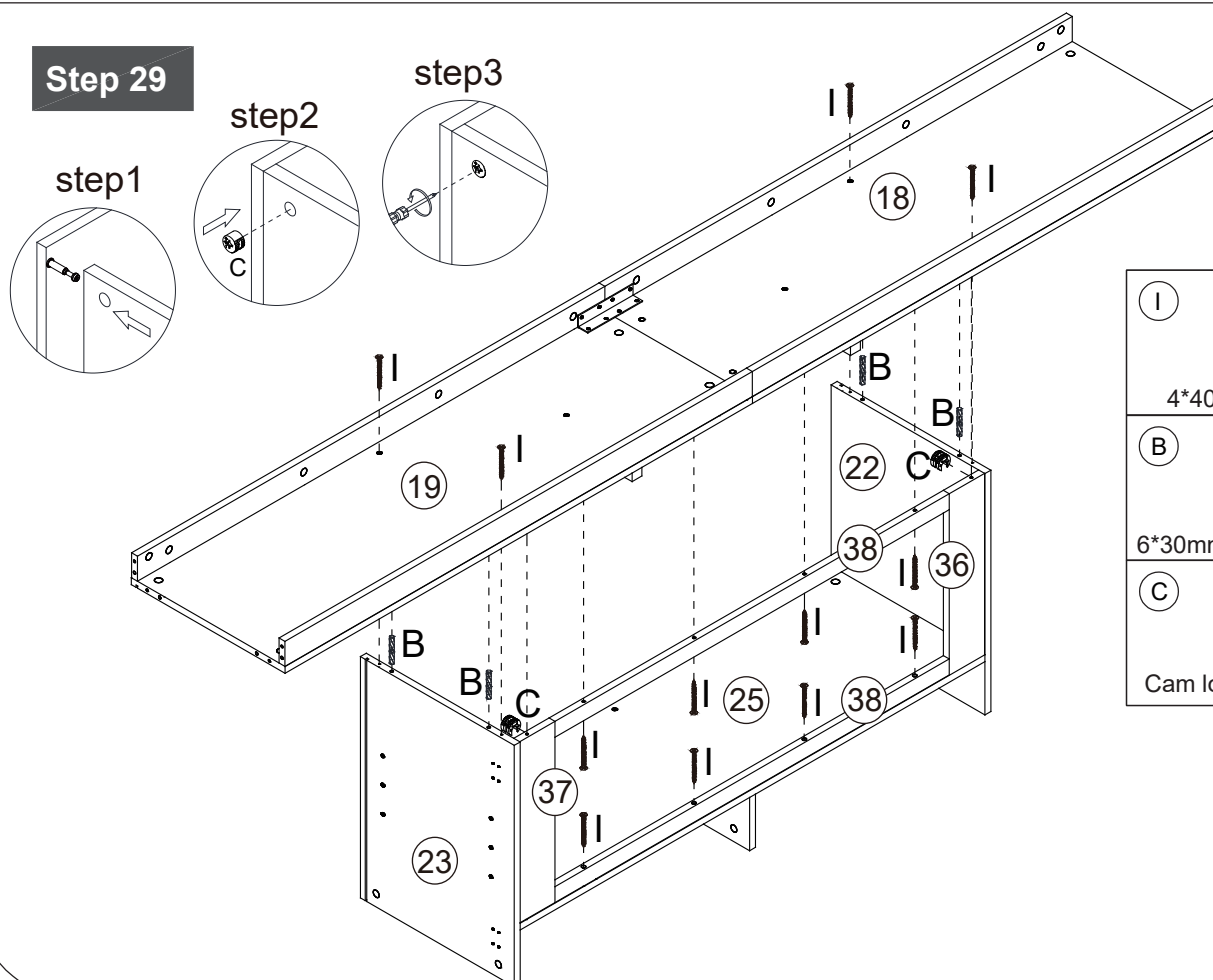


Assembly Instructions

  Step 30

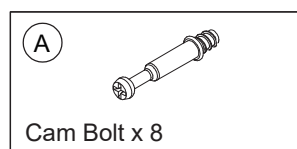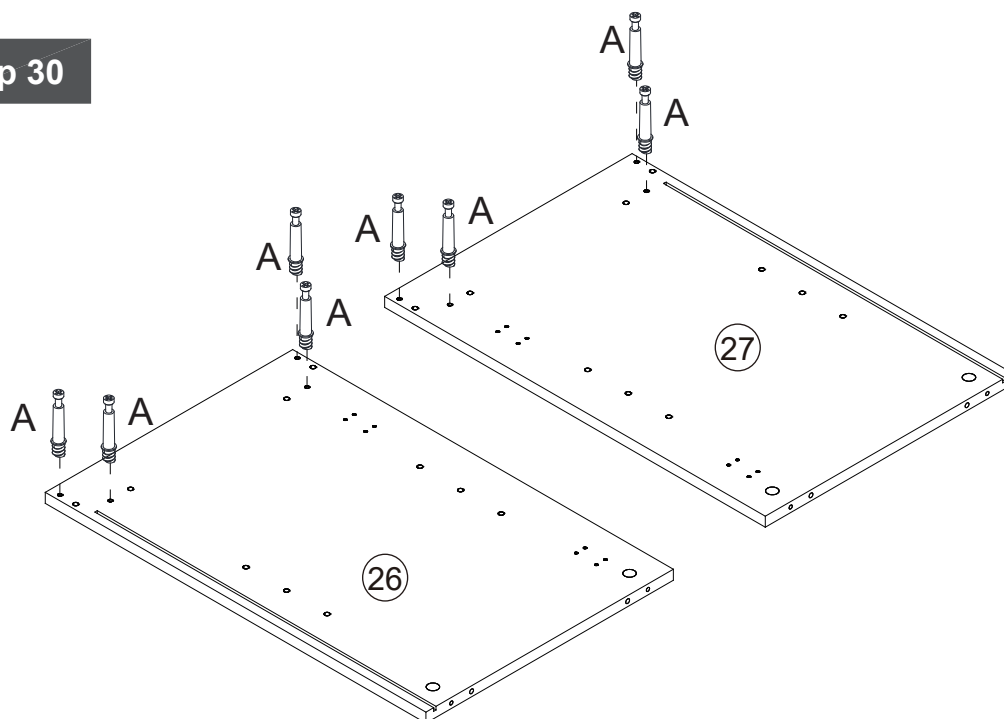


  Step 31

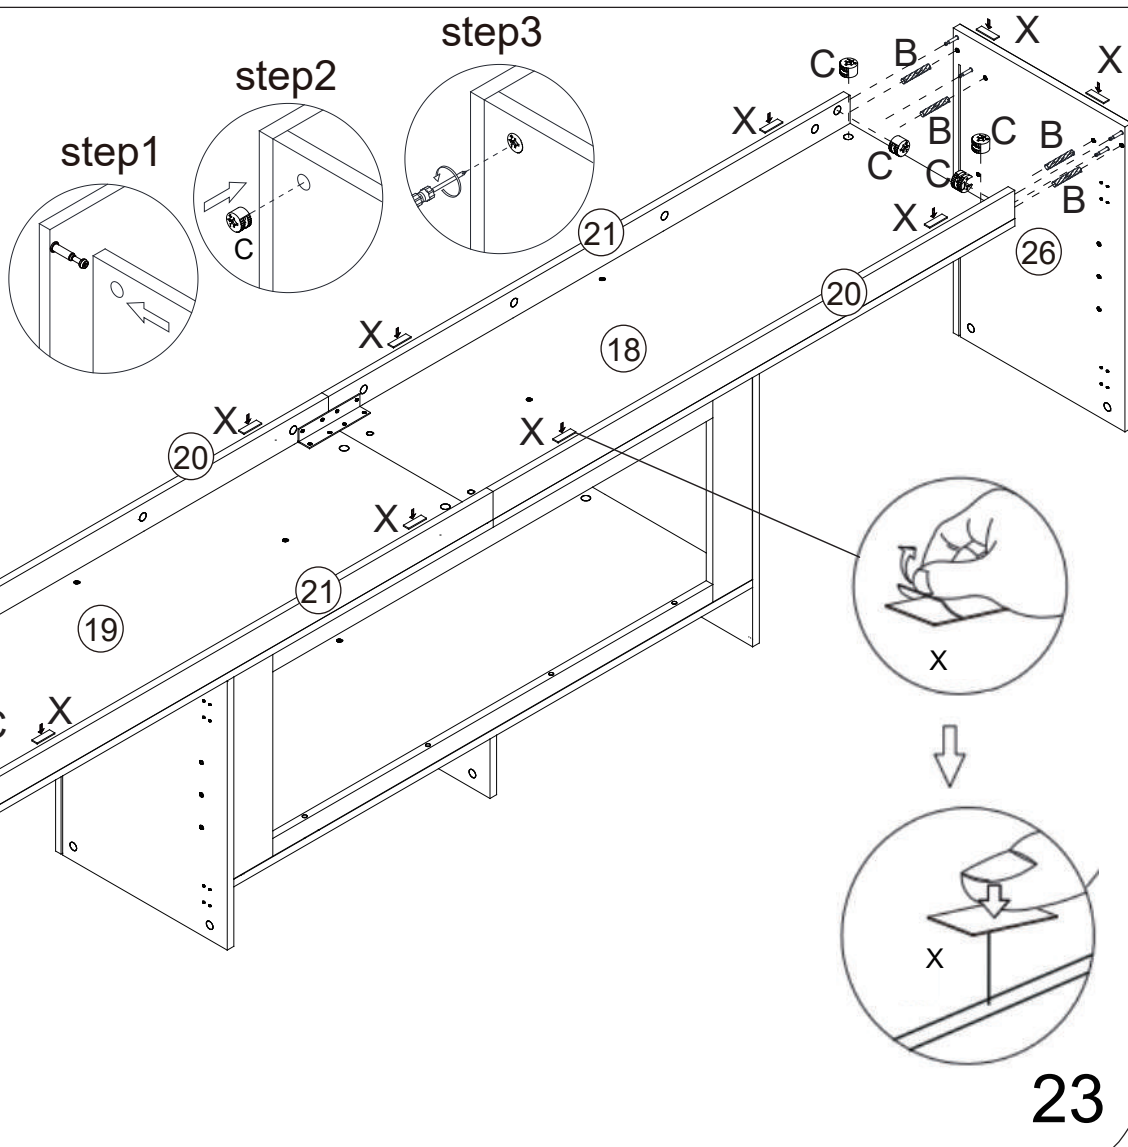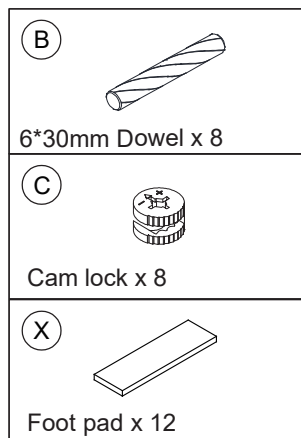


Assembly Instructions

 
Step 32

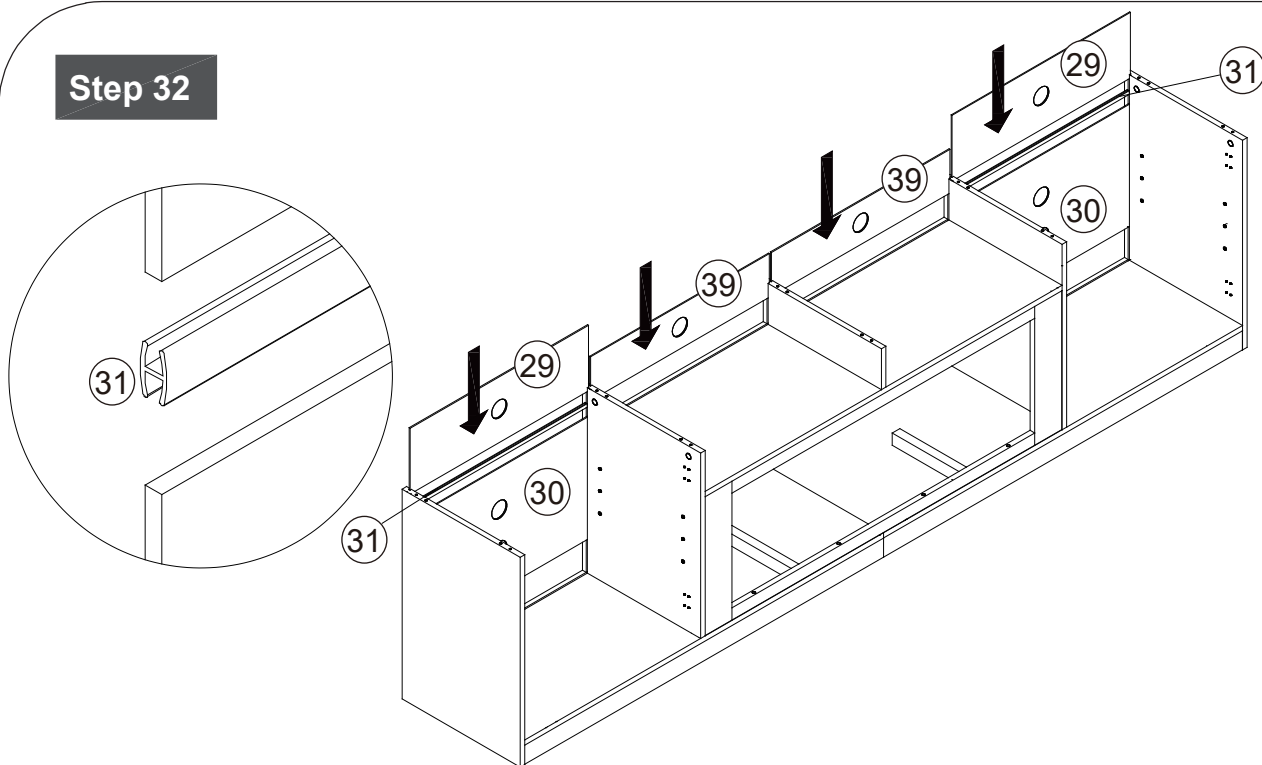

 Step 33

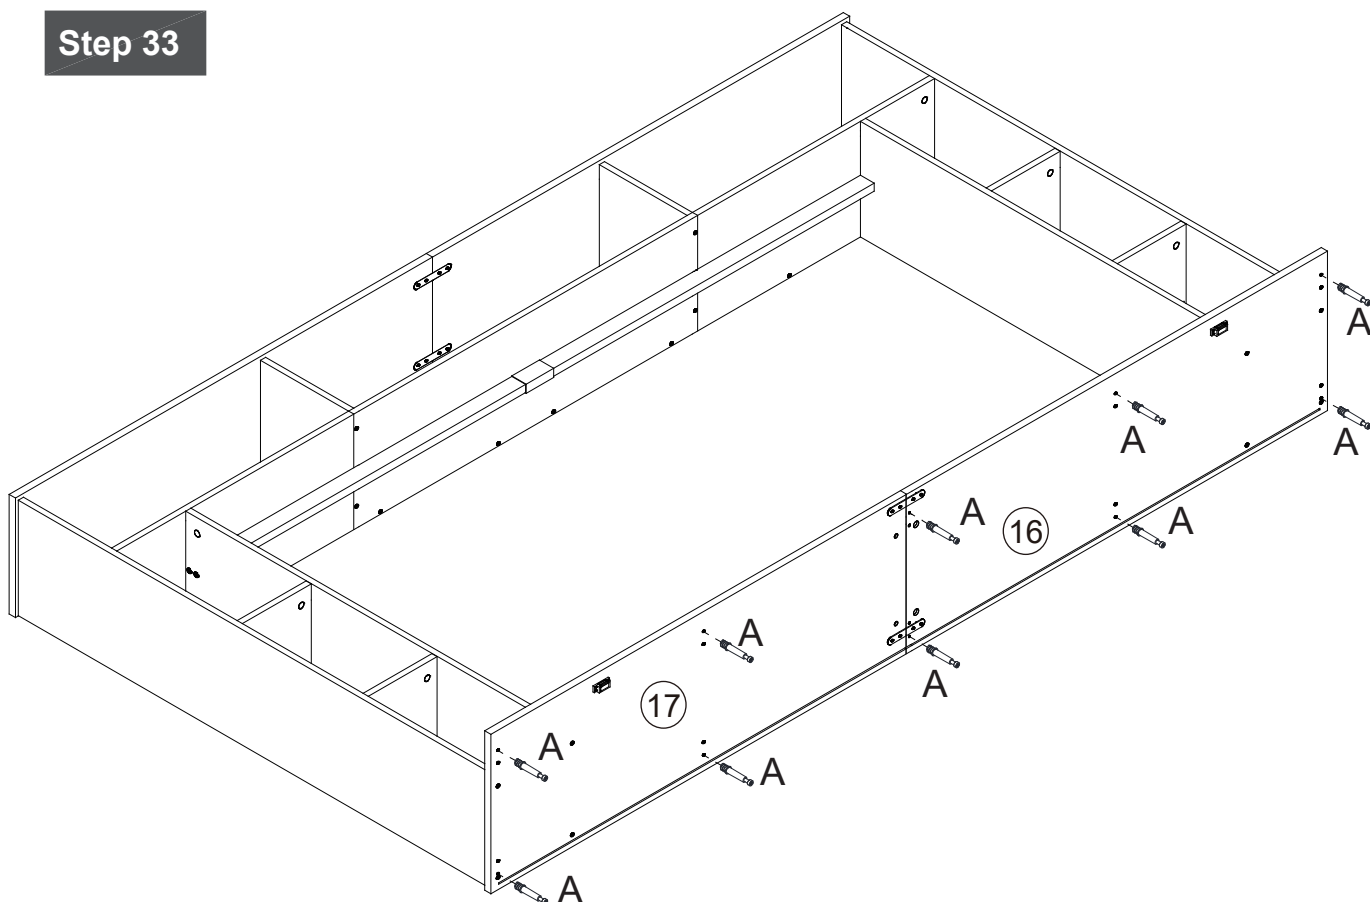





A

 

Cam Bolt x 10



Assembly Instructions

    Step 34

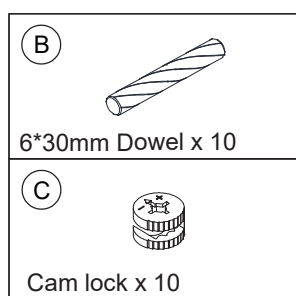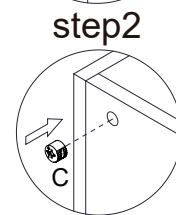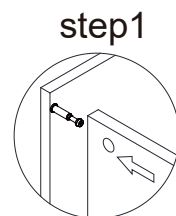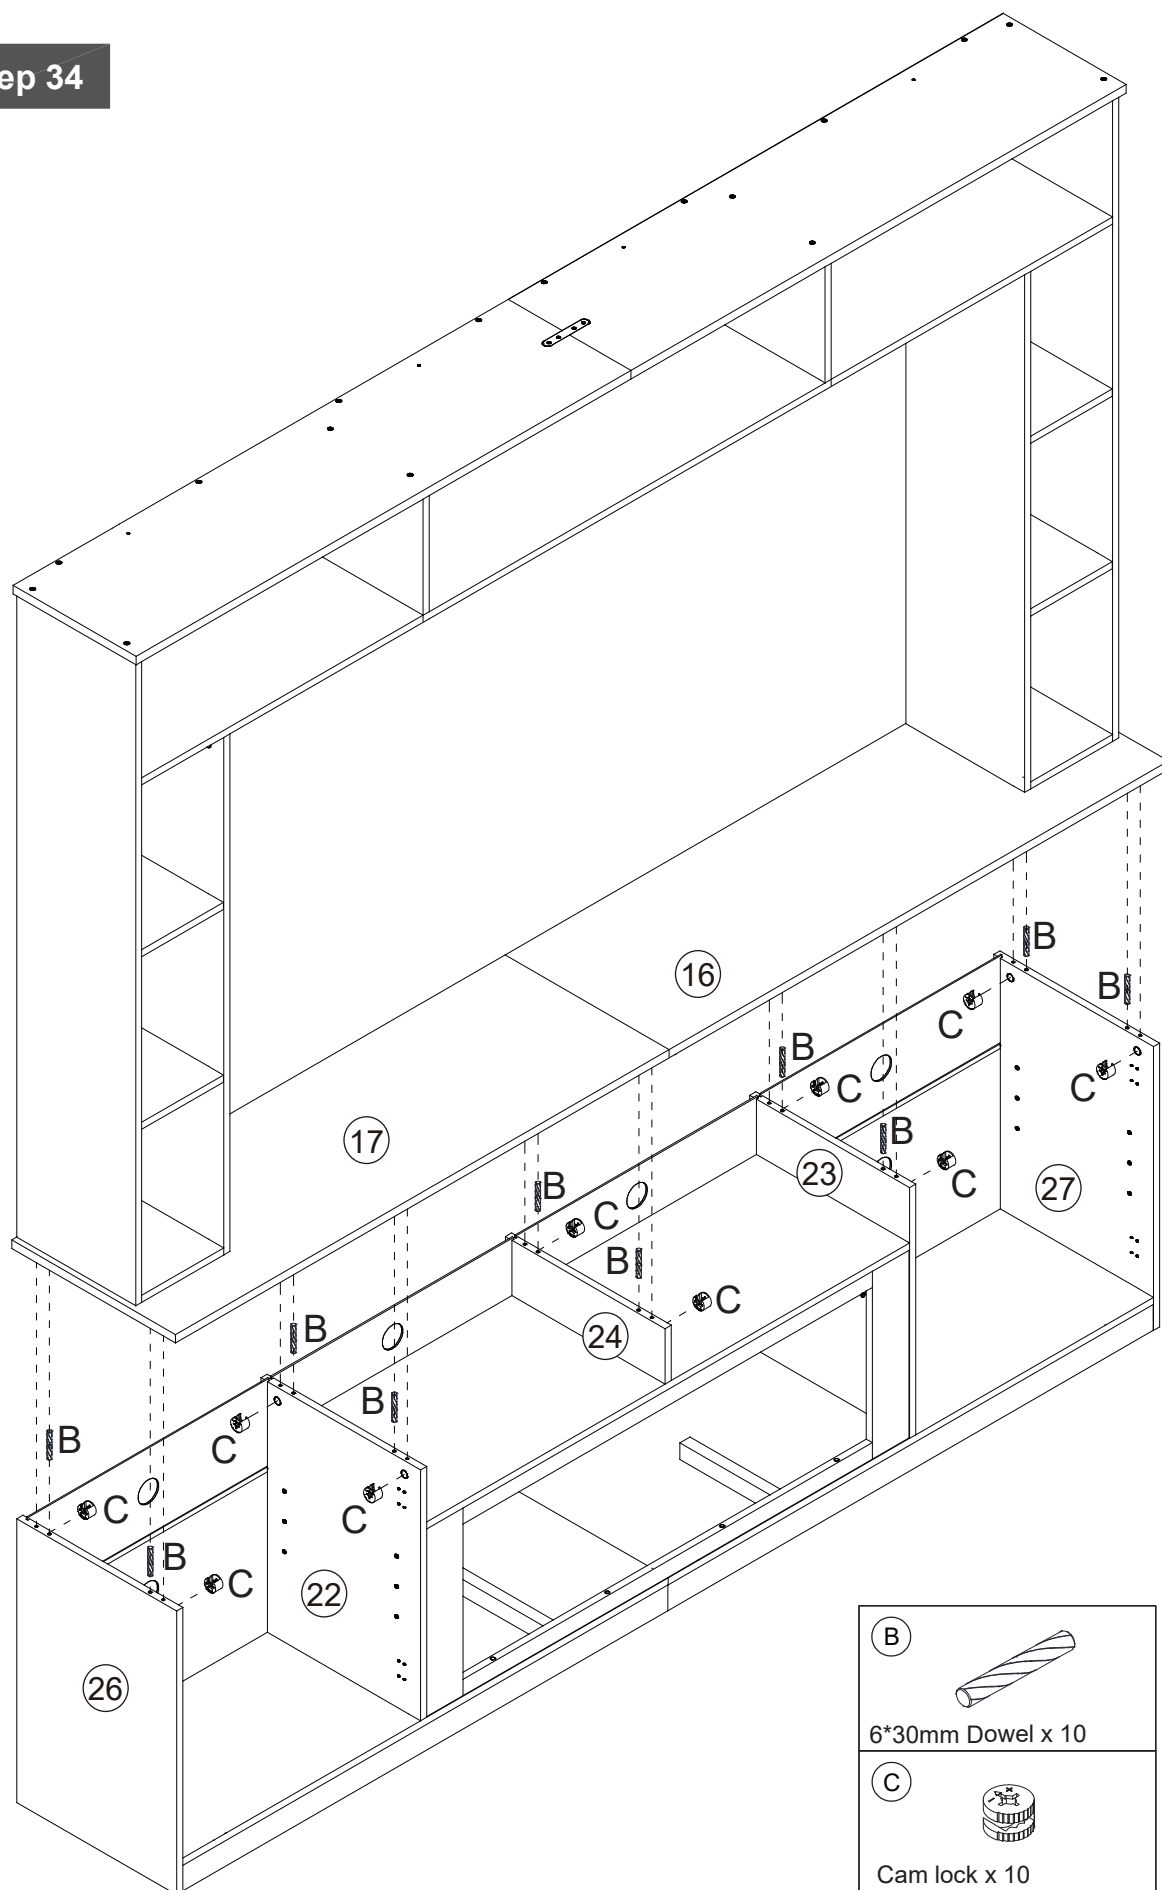


Assembly Instructions

  Step 35

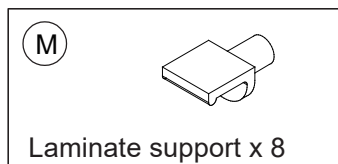
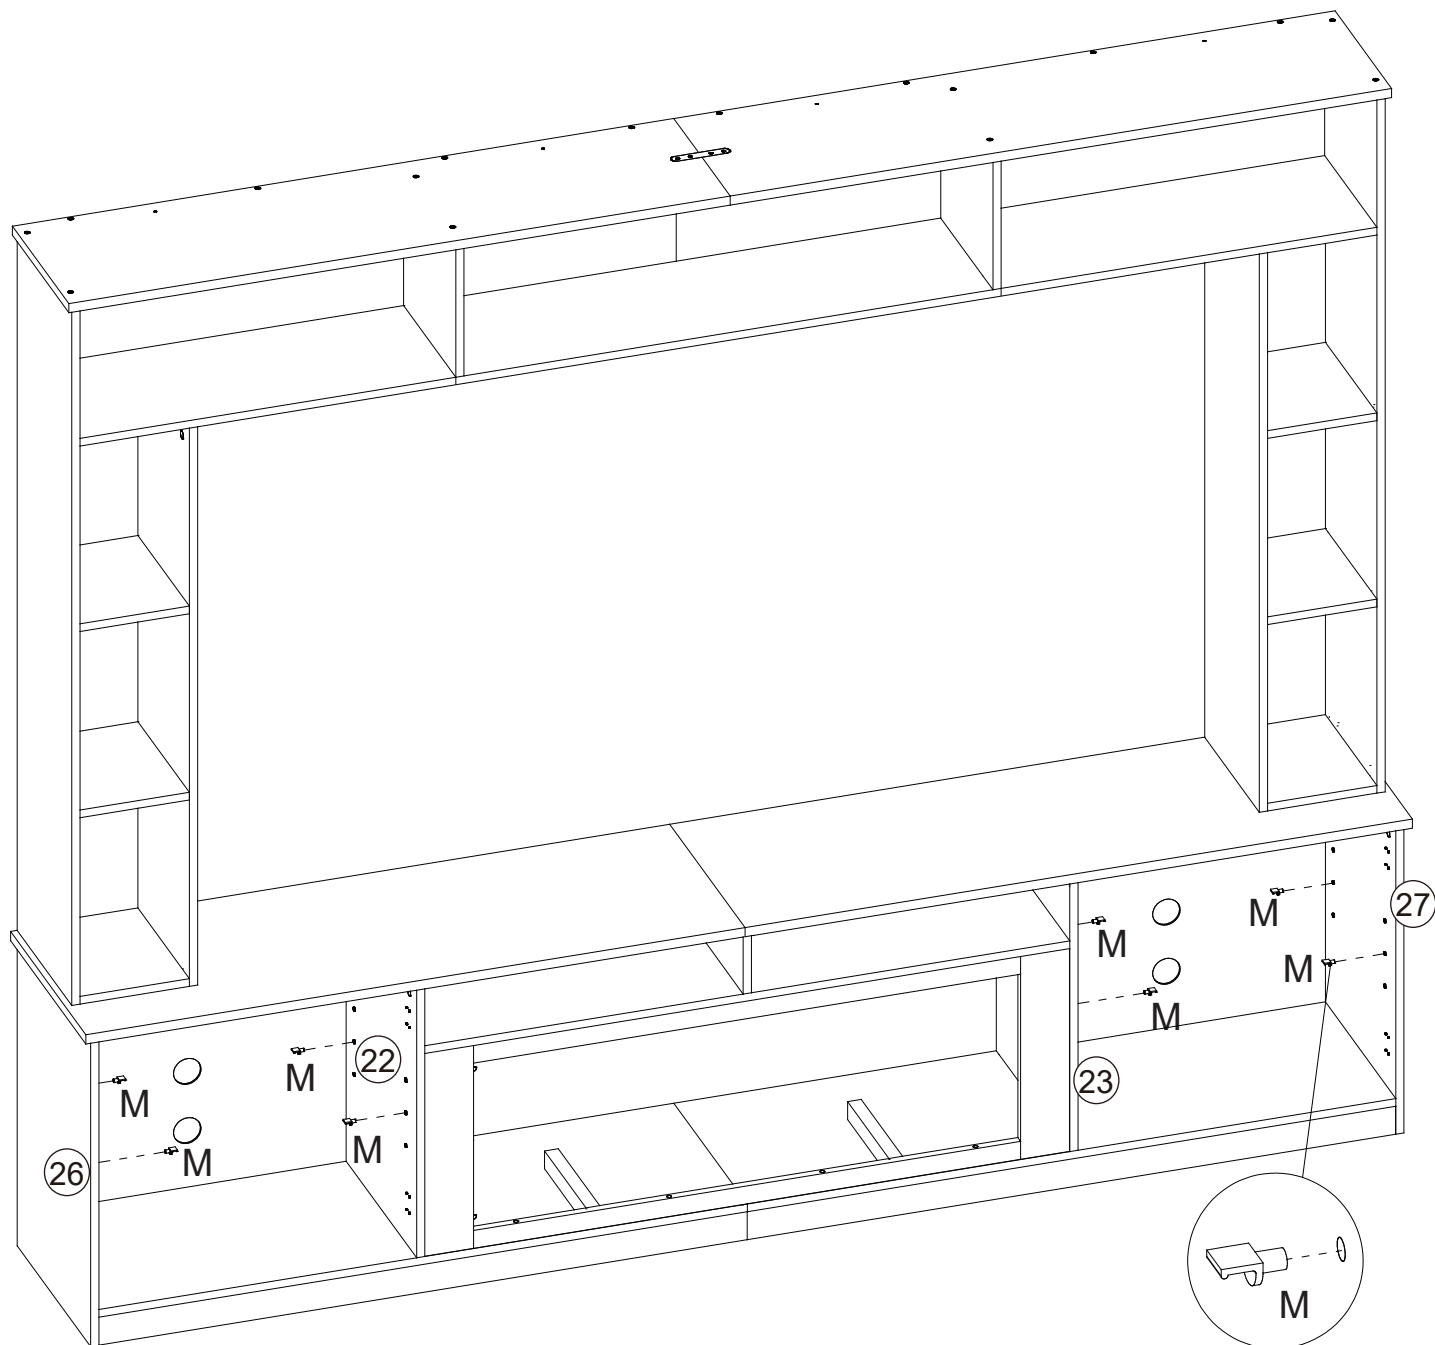


Assembly Instructions

 Step 36

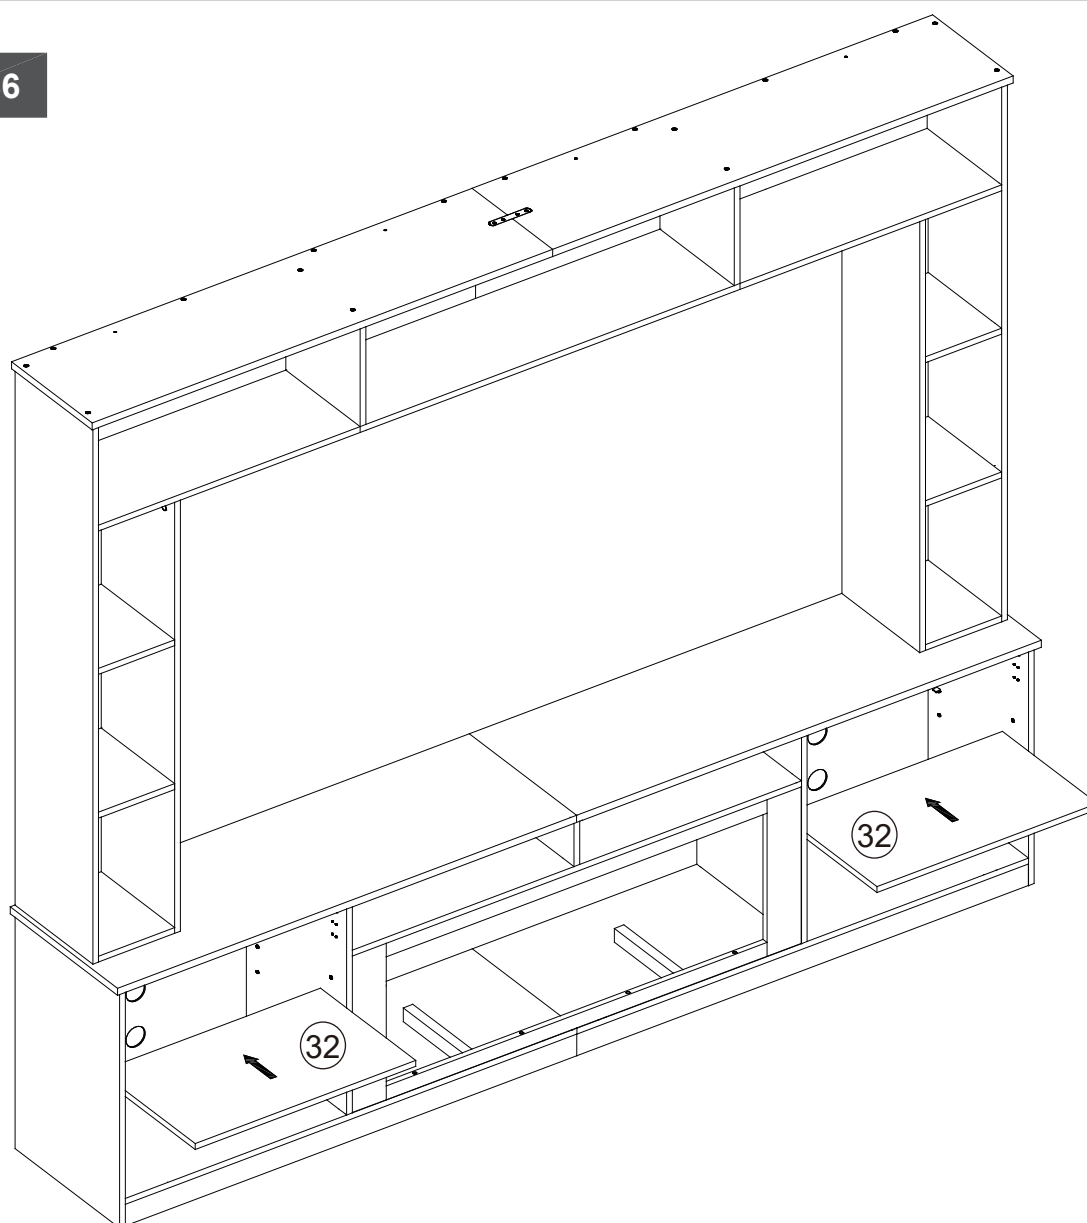

  Step 37

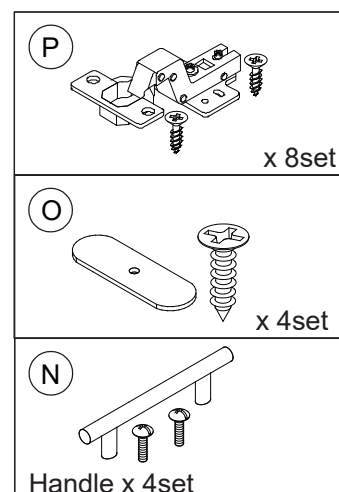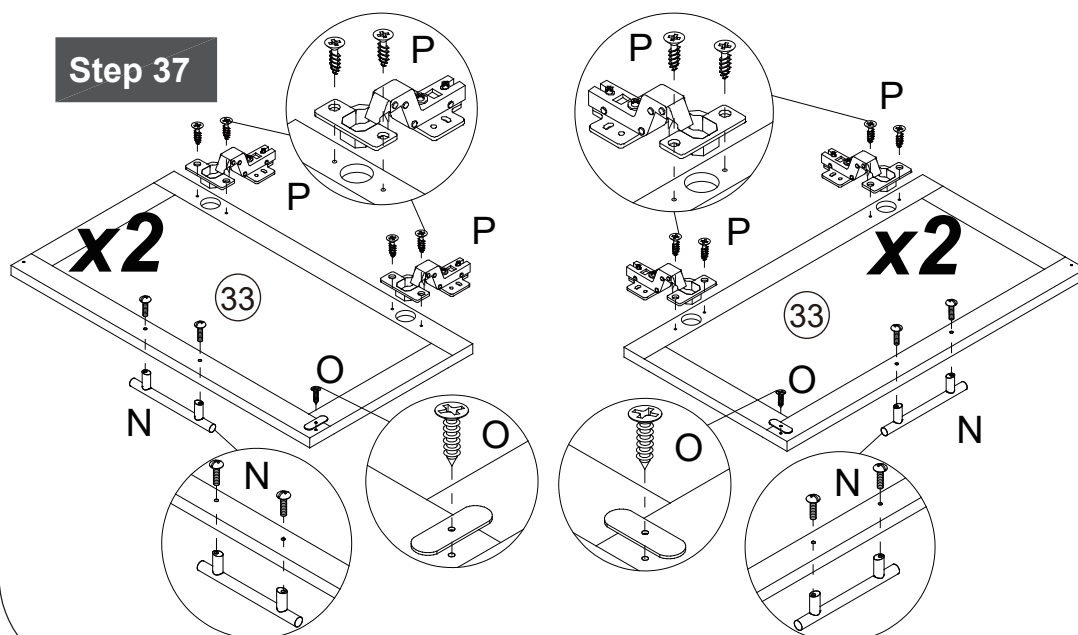


Assembly Instructions

Step 38


P



 
x 32set

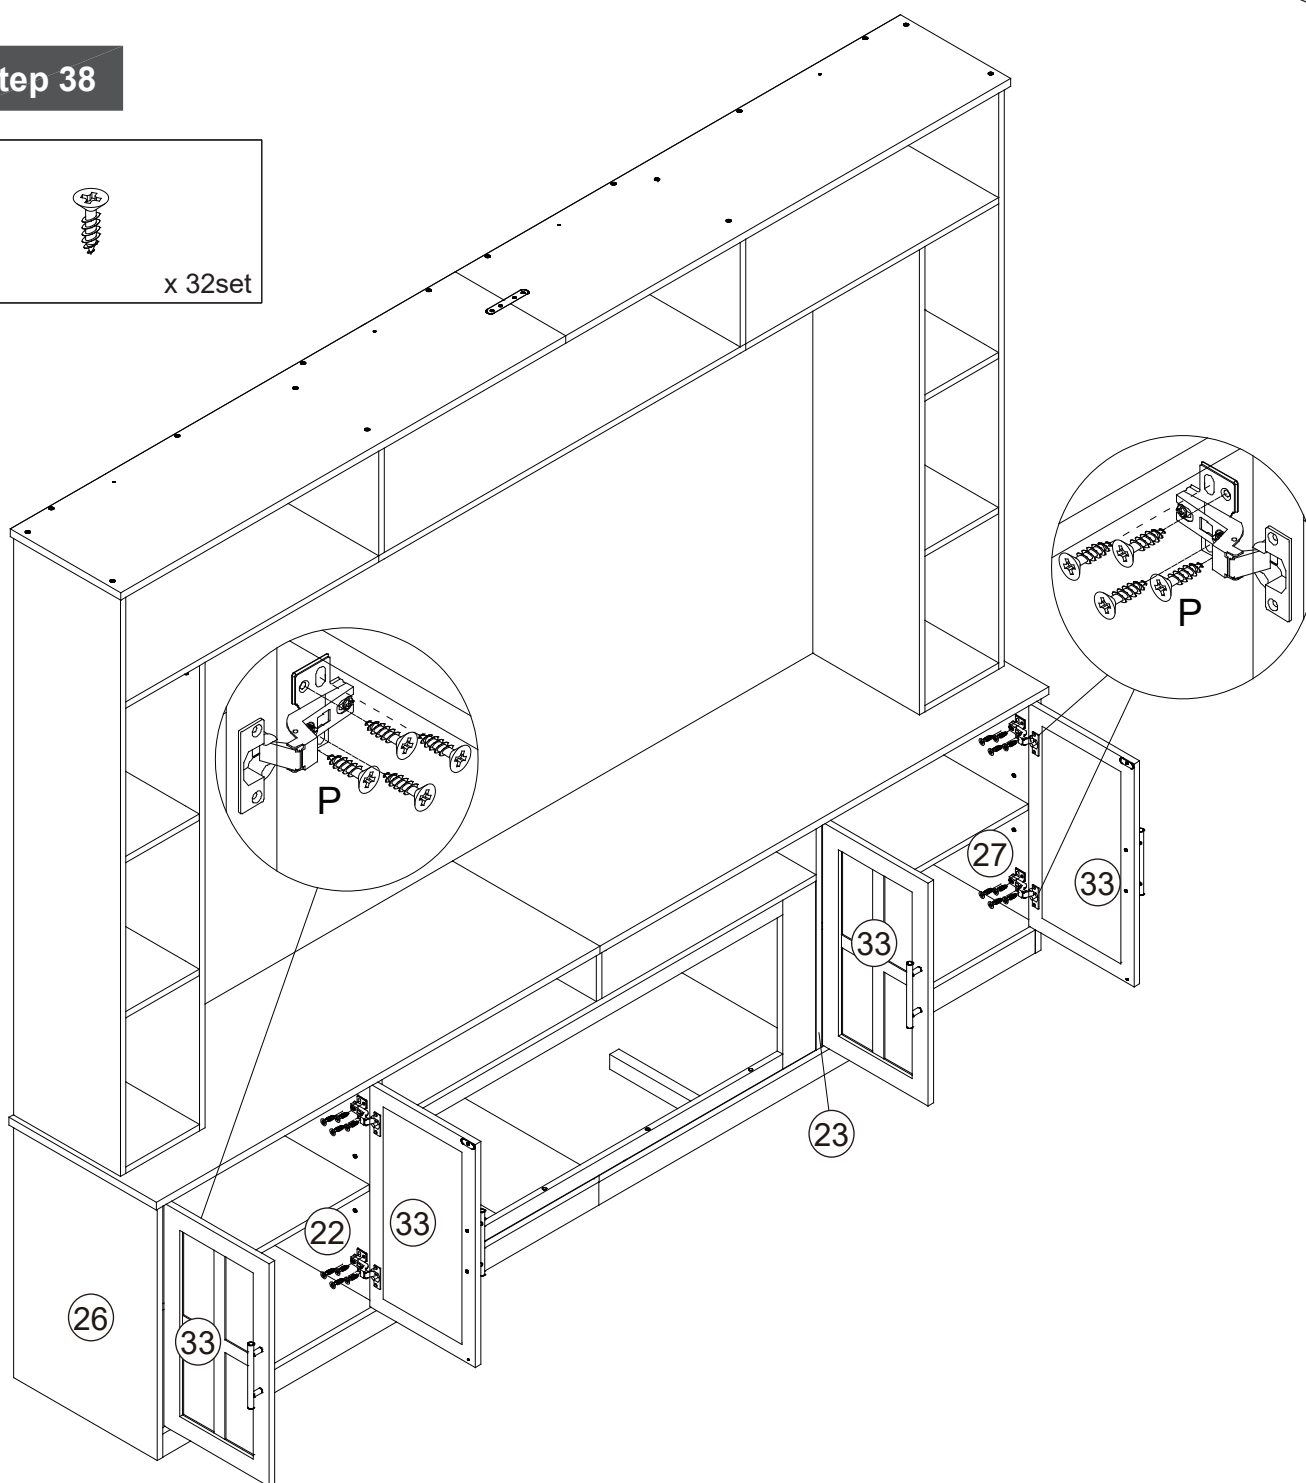

 
If the door can't close, please adjust the hinges as below.

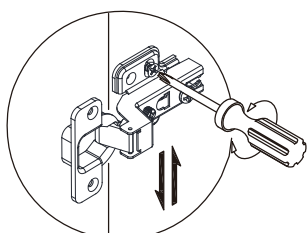

 This is used to adjust the door panel in the up and down direction.

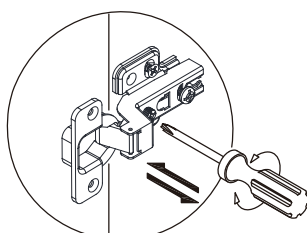

 This is used to adjust the door panel in the left and right direction.

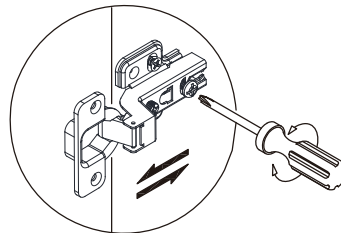


This is used to adjust the door panel in the front and rear.

Assembly Instructions


Step 39

 Please follow the instructions to remove the screws that lock the cover plate of the fireplace. Put the screws aside and don't lose them. Then open the cover plate.

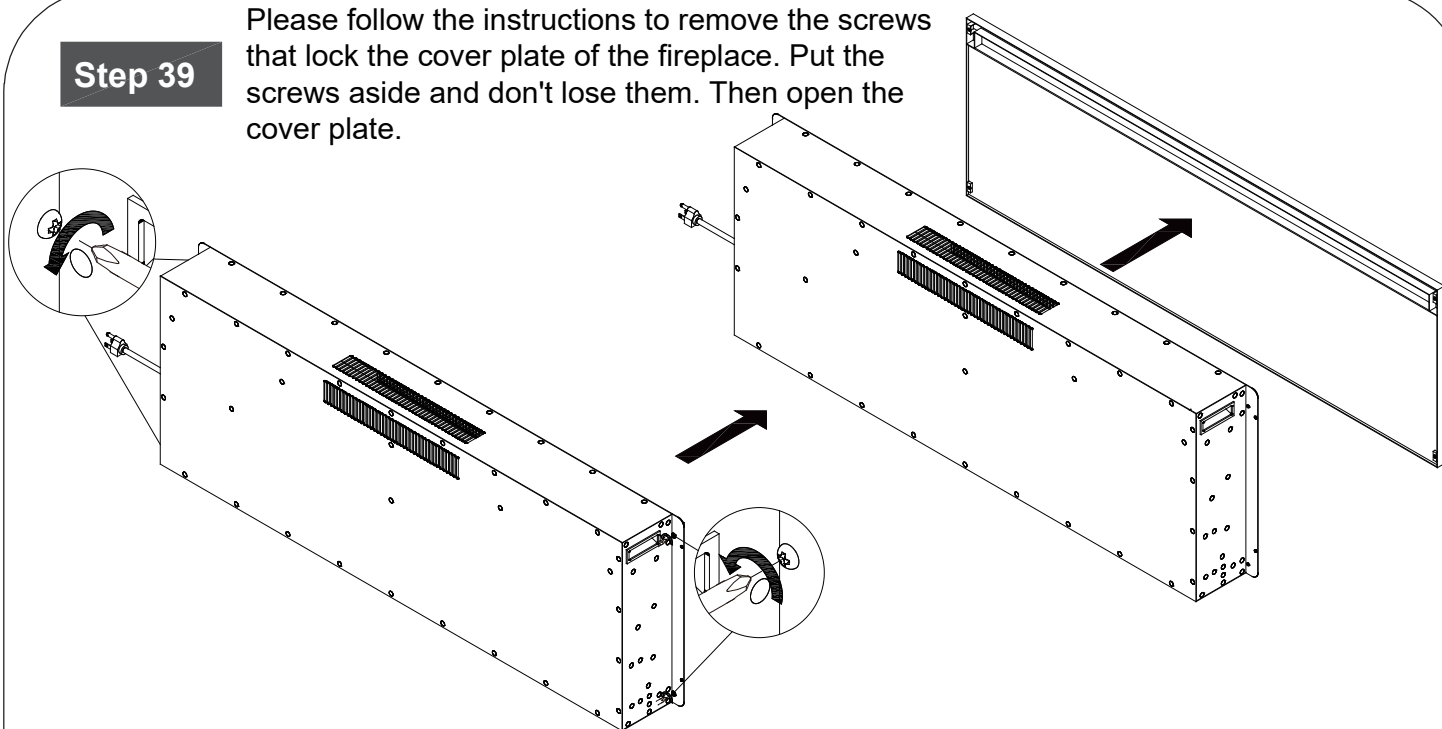

Step 40

 Unpack the crystals contained in the bag that came in the same box as the fireplace, pour them into the groove of the fireplace, then reattach the cover plate. Put back the removed screws and tighten them one by one.

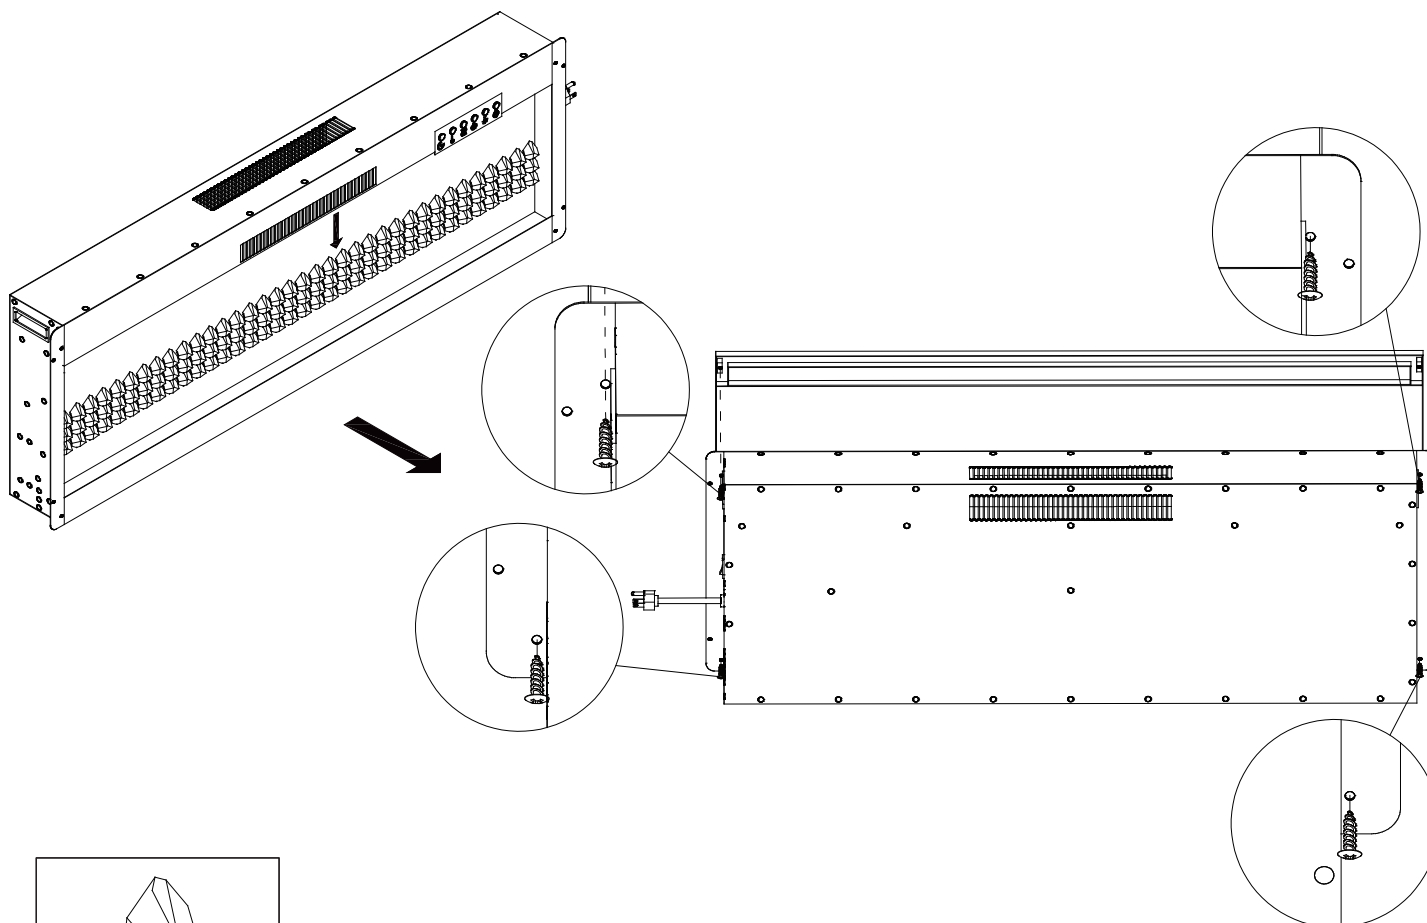


x 147

Assembly Instructions


Step 41

 Put the fireplace into the cabinet as shown in the diagram, align it with the holes on the cabinet and tighten the accompanying screws of the fireplace one by one. Then plug in the power cord and turn on the switch next to the fireplace's power cord.

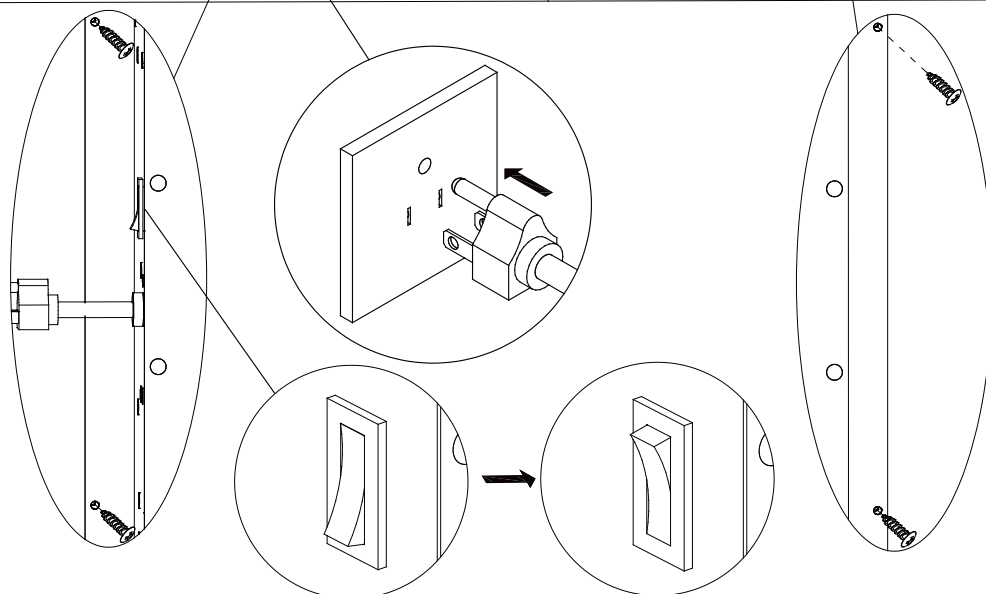




Assembly Instructions

 Step 42

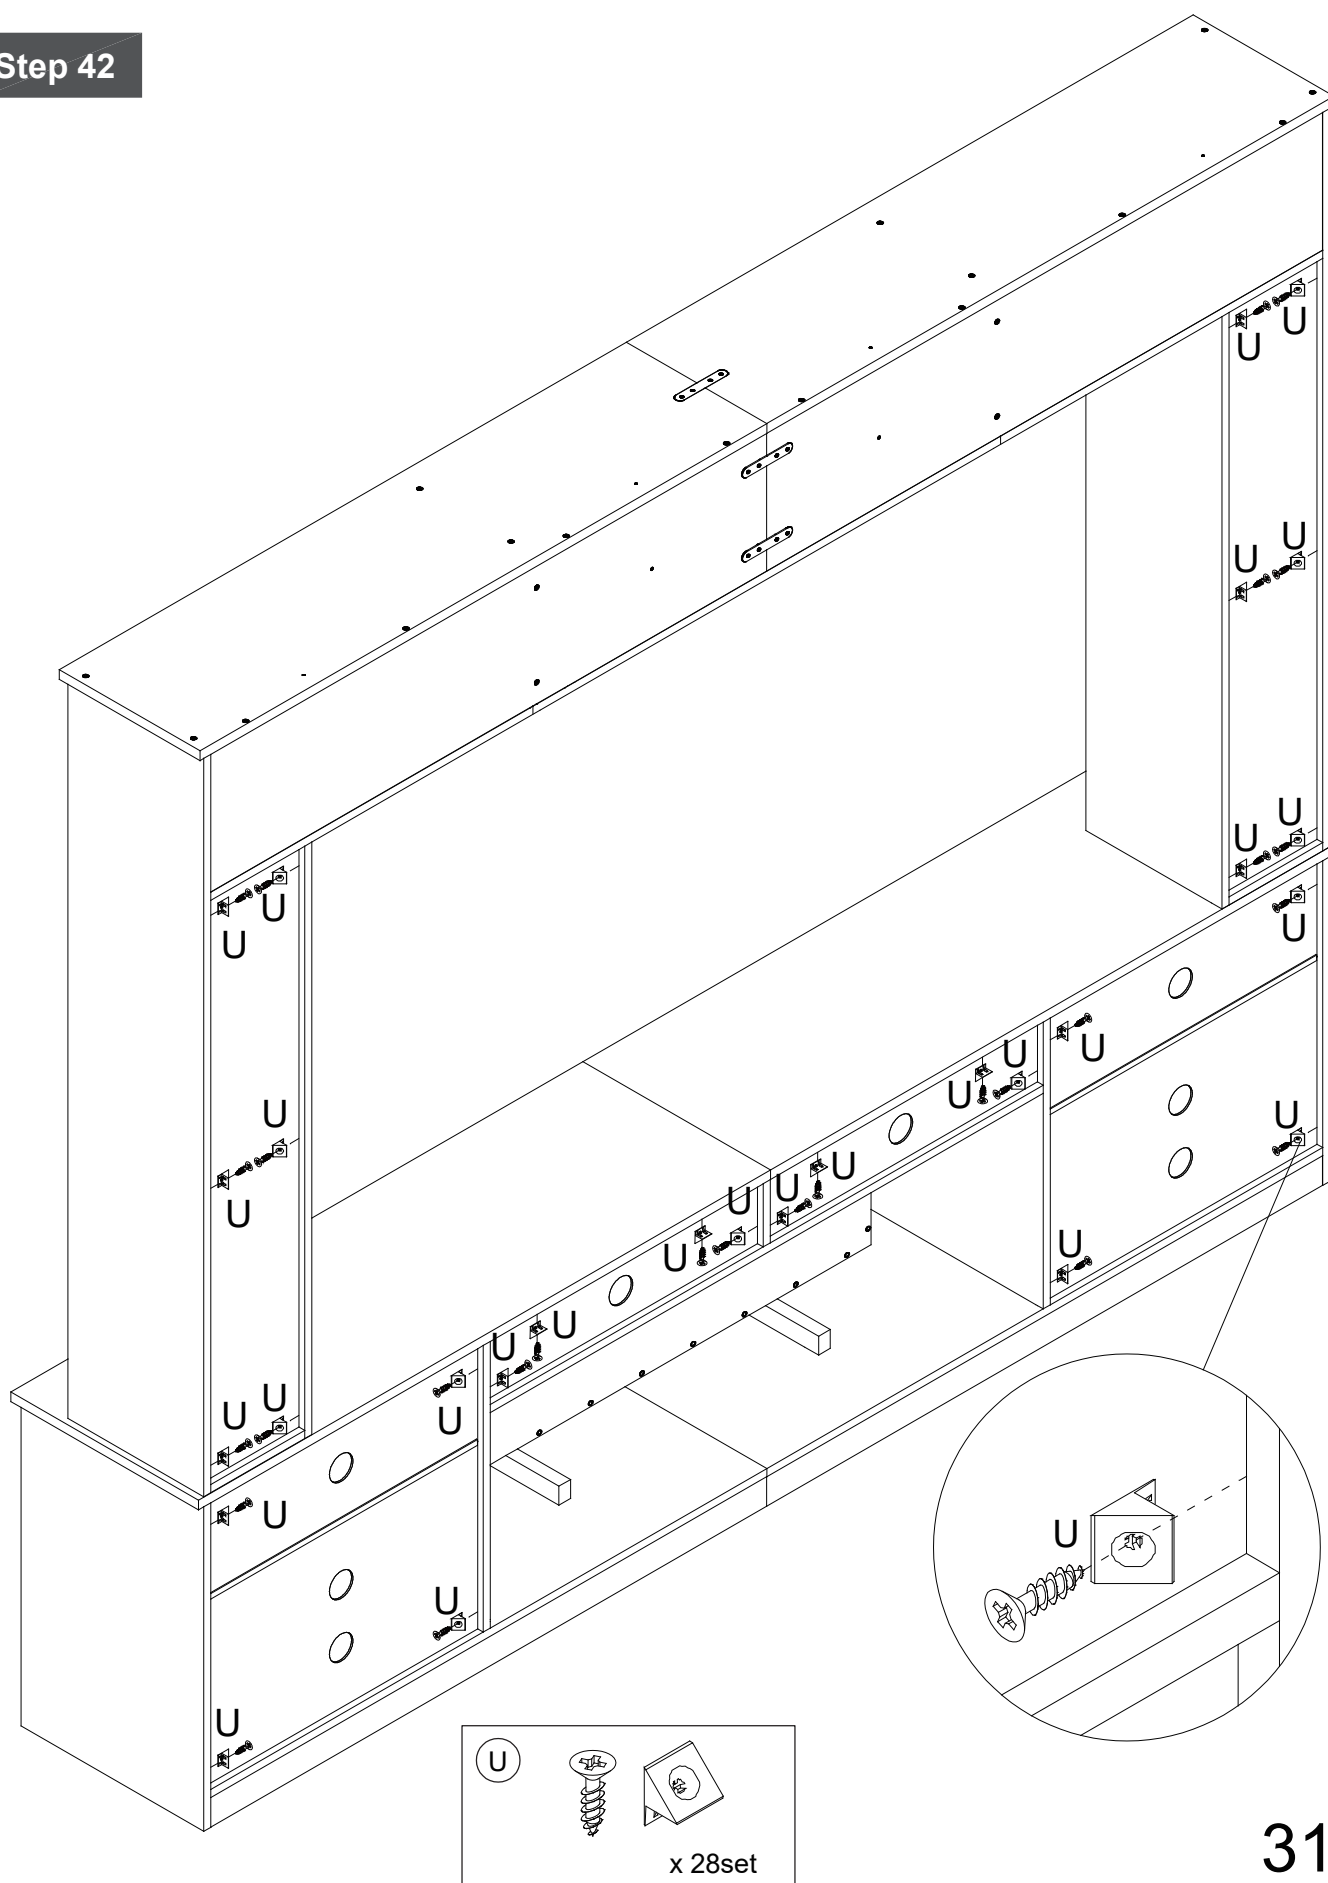







Assembly Instructions

   Step 43

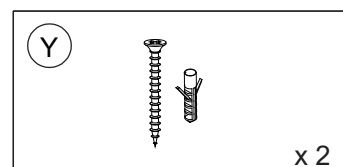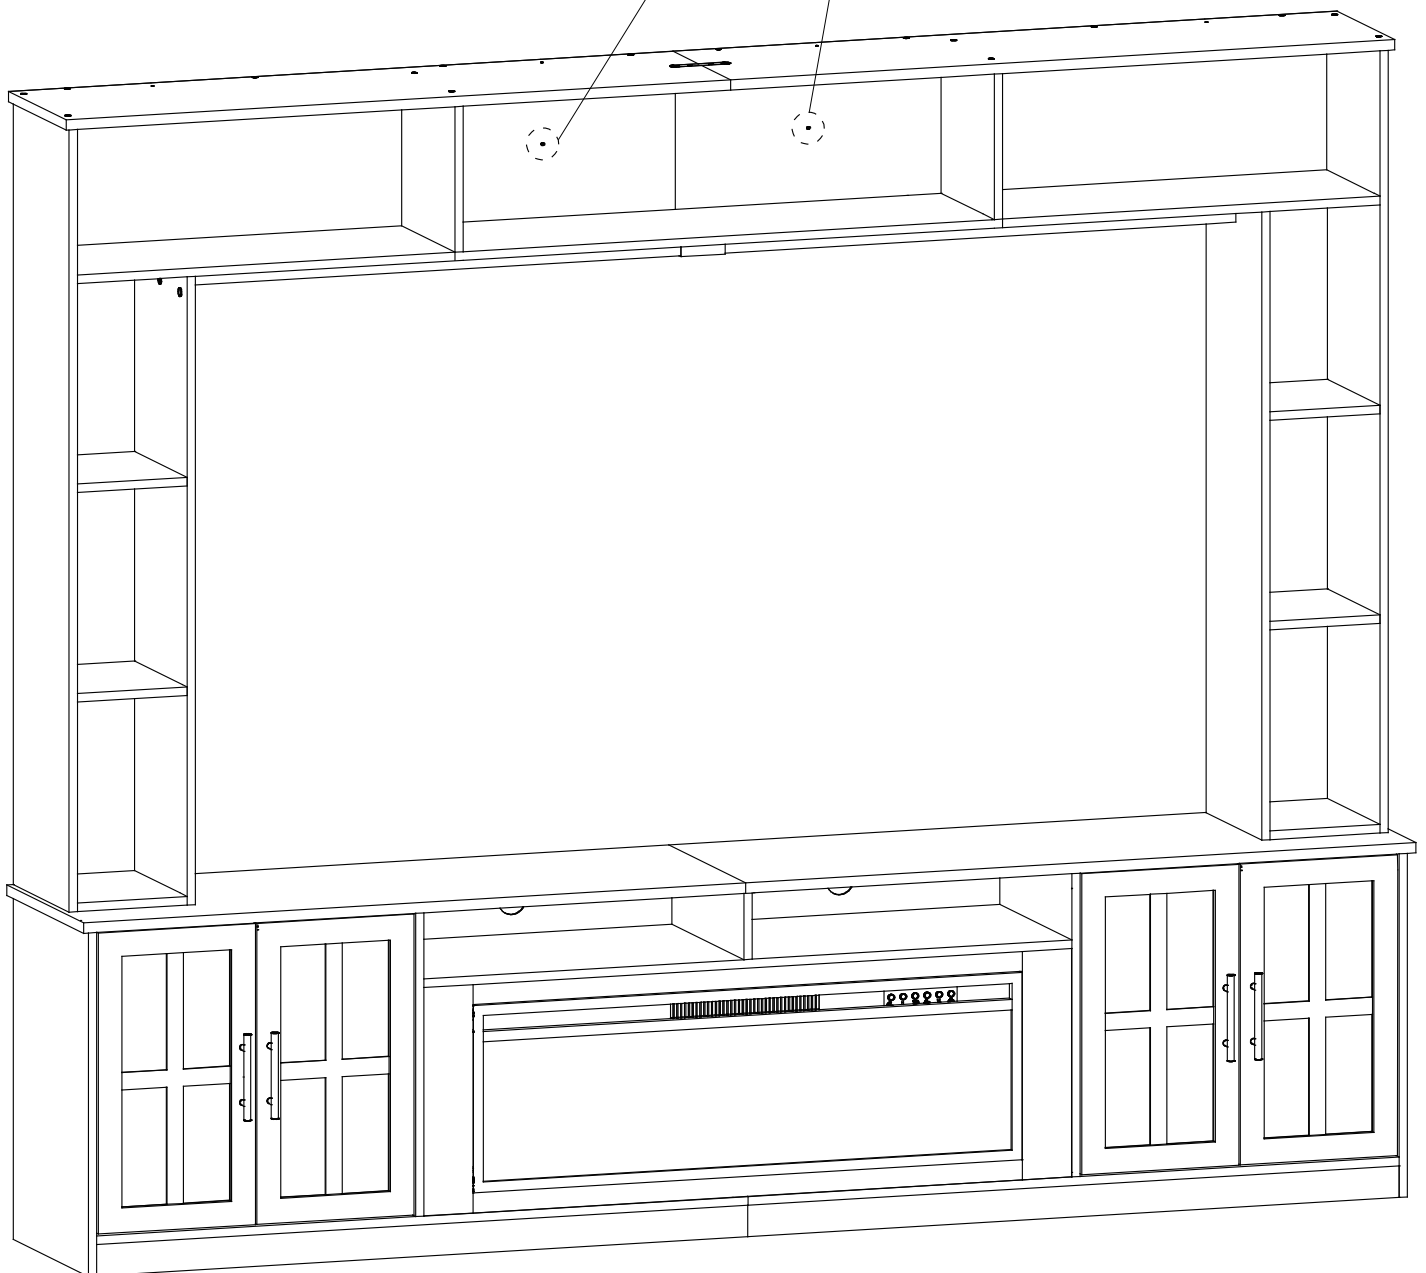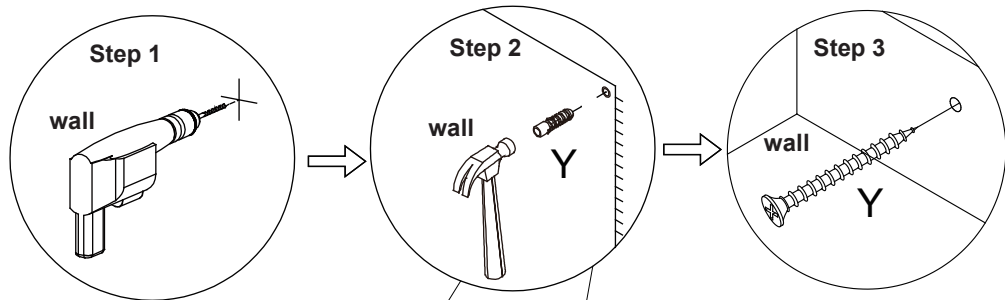

Assembly Instructions

      Step 44

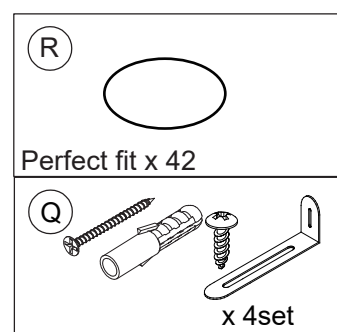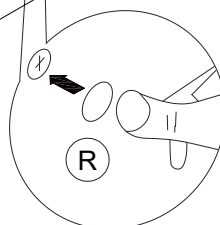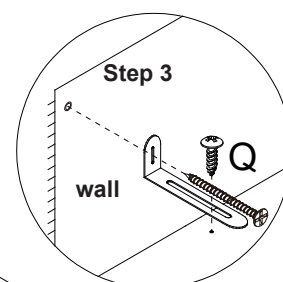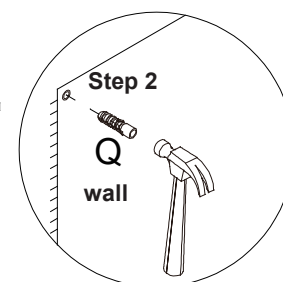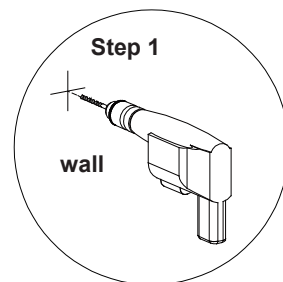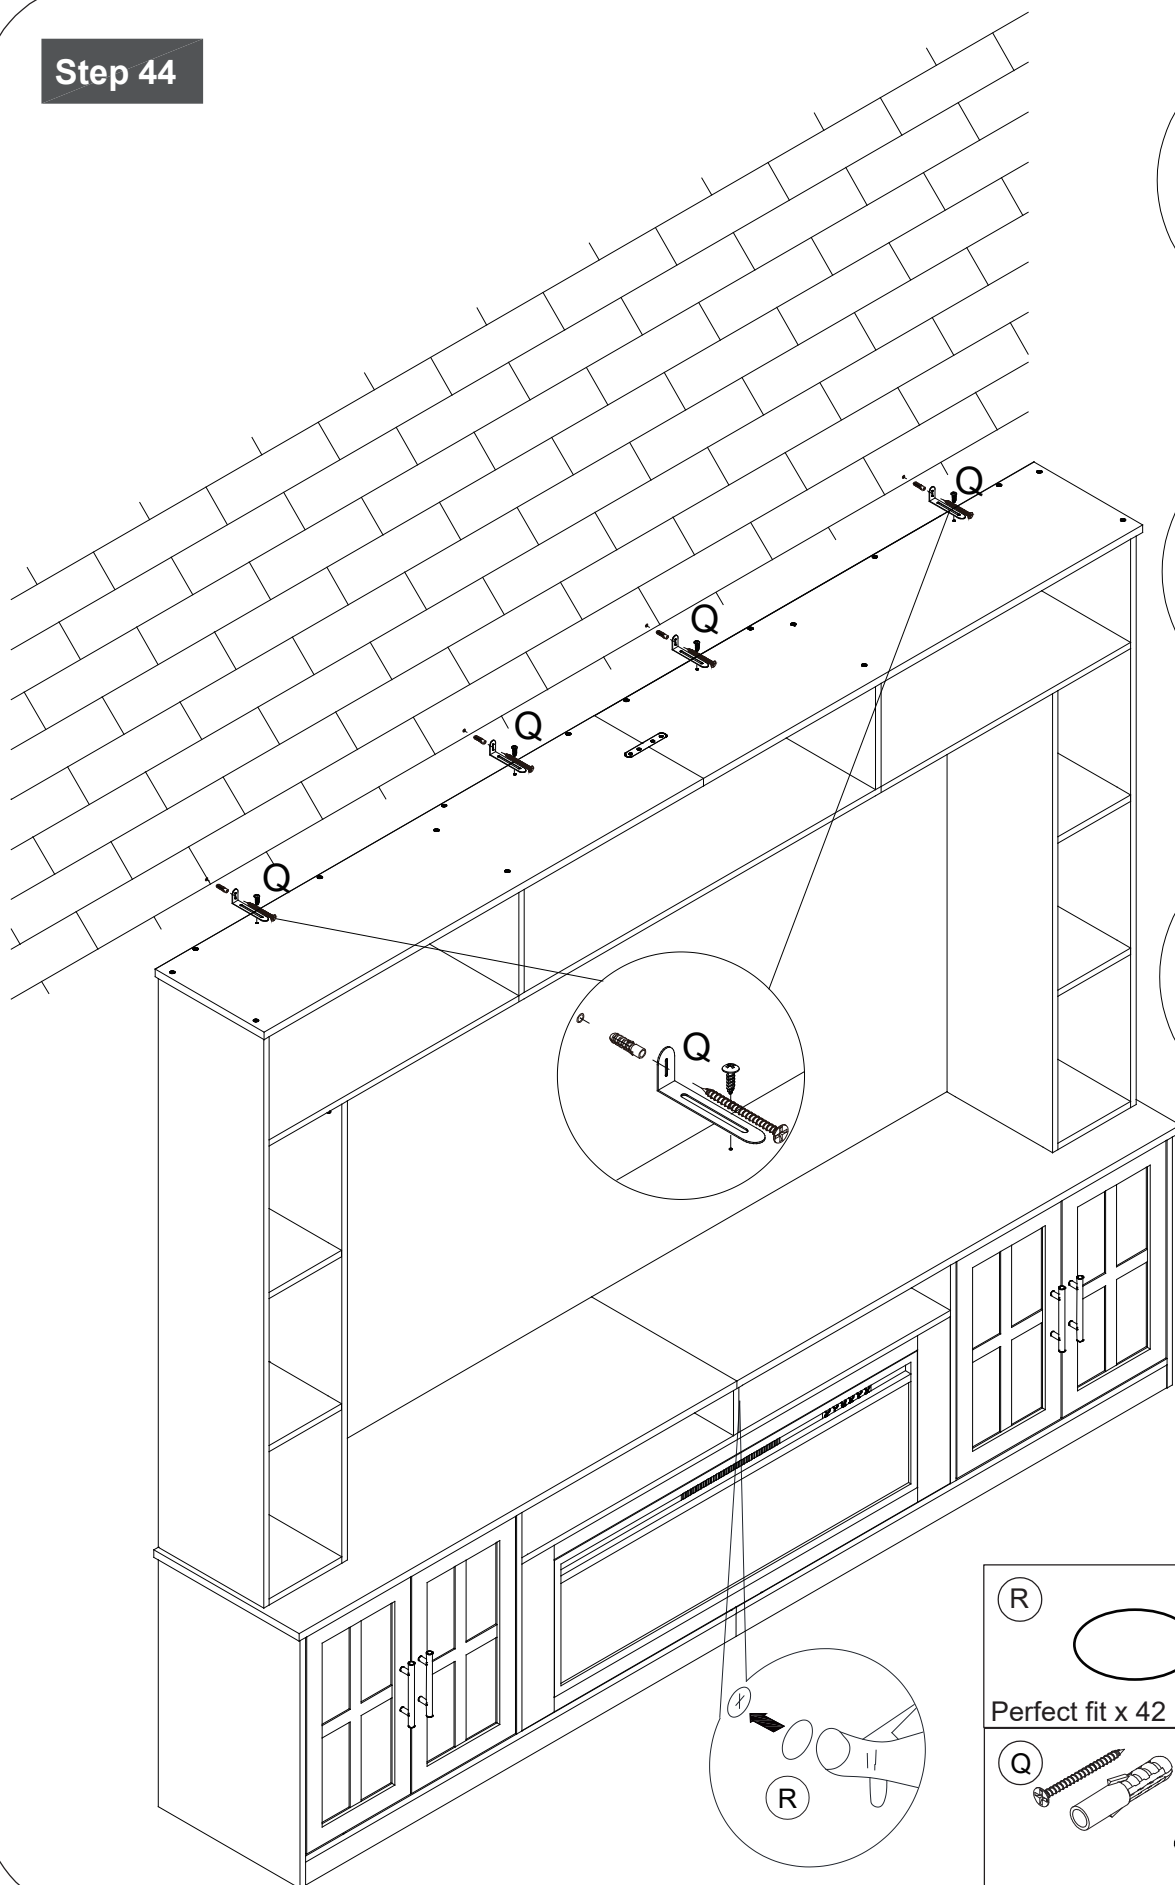

Assembly Instructions

Step 45

