

NOTICE

*Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

*This item may require periodic tightening.

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.


Part List

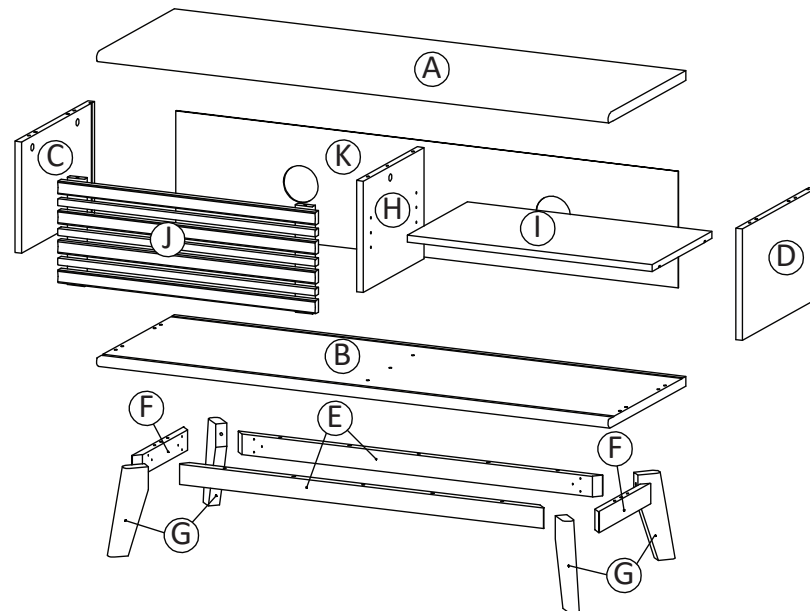

 **SAFAVIEH**
FURNITURE

Model# MED9600

Product Dimensions: 46"Wx15"Dx19"H

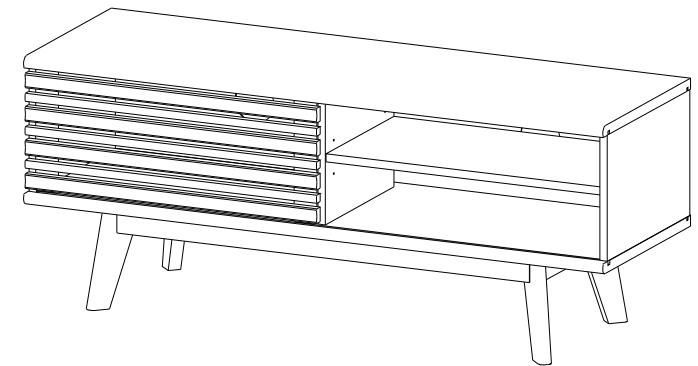

 




 

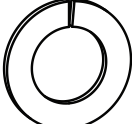
 



 





 
WARNING

This product is intended for use with a
FLAT SCREEN TV ONLY
Maximum Screen Size: 50 inches
Weight Limit: 63.8 lbs
Shelf Load Limit: 22 lbs
Drawer Load Limit: - lbs
Use with heavier televisions may result
in instability causing tip over resulting in
death or Serious injury.

WARNING

Death or serious injury may occur
when children climb on audio
and/or video equipment furniture.
A remote control or toys placed on
the furnishing may encourage a
child to climb on the furnishing and
as a result the furnishing may tip
over on the child.

Hardware List

HW1x5  \varnothing 6 x 35 mm	HW2x5  \varnothing 15 mm	HW3x18  \varnothing 8 x 30 mm	HW4x5  M 7 x 50 mm	HW5x1  L 4
HW6x24  M 4 x 16 mm	HW7x4  25 x 25 mm	HW8x4  	HW9x4  	HW10x6  9 x 14 x 10 mm
HW11x6  M 3.5 x 15.5 mm	HW12x4  \varnothing 5 x 15 mm	HW13x2  	HW14x2  	HW15x10  M 6.4 x 53 mm
HW16x2  \varnothing 8 mm	HW17x5  \varnothing 15 mm	HW18x1  	HW BC410x4  	


Part List & HW For Multi-Box Items

Piece	Description	Qty	Carton Call
A	Top Board	1	1 of 1
B	Bottom Board	1	1 of 1
C	Side Board Left	1	1 of 1
D	Side Board Right	1	1 of 1
E	Support Leg 1	2	1 of 1
F	Support Leg 2	2	1 of 1
G	Leg	4	1 of 1
H	Center Board	1	1 of 1
I	Adjustable Shelf	1	1 of 1
J	Frame Door	1	1 of 1
K	Back Board	1	1 of 1


Piece	Description	Qty	Carton Call
HW1	Cambolt	5	1 of 1
HW2	CamLock	5	1 of 1
HW3	Dowel	18	1 of 1
HW4	Screw M 7 x 50 mm	5	1 of 1
HW5	Allen Key	1	1 of 1
HW6	Screw M 4 x 16 mm	24	1 of 1
HW7	Floor Protector	4	1 of 1
HW8	Spring Washer	4	1 of 1
HW9	Nut	4	1 of 1
HW10	Wedge	6	1 of 1
HW 11	Screw M 3.5 x 15.5 mm	6	1 of 1
HW12	Shelf Pin	4	1 of 1
HW13	Pin Sliding Top	2	1 of 1
HW14	Pin Sliding Bottom	2	1 of 1
HW15	Screw M 6.4 x 53 mm	10	1 of 1
HW16	Bumper	2	1 of 1
HW17	Screw Cap	5	1 of 1
HW18	Wrench	1	1 of 1
HW BC410	Corner Brace	4	1 of 1

PREPARATION


Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 60 minutes.

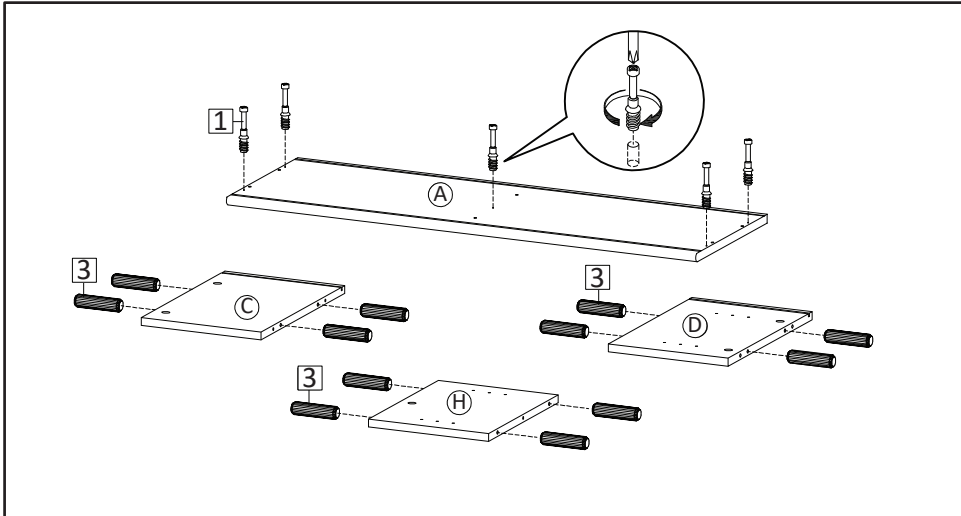


STEP1: Insert Cambolt (HW1) into Top Board (A)
Insert Dowel (HW3) into Center Board (H),
Side Board Left (C) and Side Board Right (D)

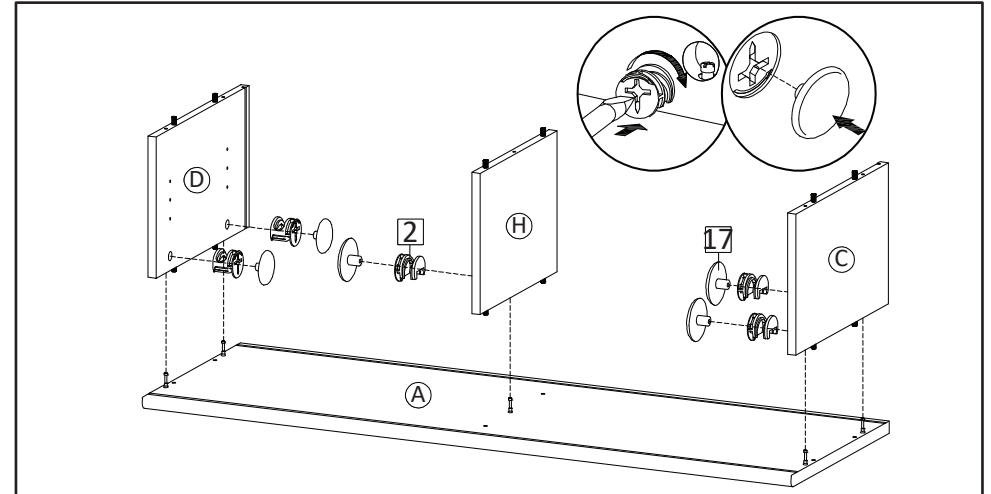


STEP2: Attach Side Board Left (C) , Side Board Right (D),
Center Board (H) into Top Board (A) .
Insert Camlock (HW2) then tighten using screwdriver.
Put Screw Cover (HW17) over the camlock.

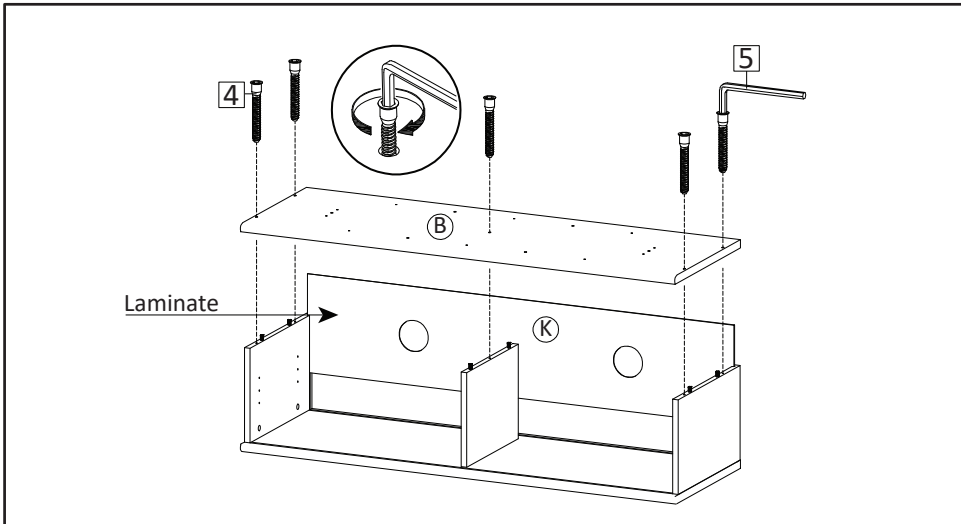


STEP3: Insert Backboard (K) as figure. Put Bottom Board (B)
and secure with Screw M7x50 (HW4),
tighten screws using Allen Key (HW5)

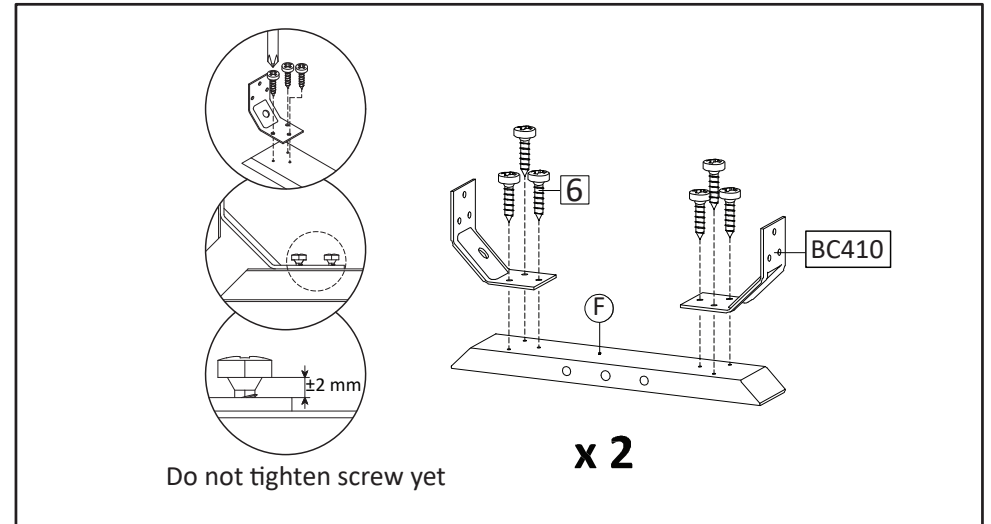


STEP4: Now let's combine the Support Leg. Start with installing
Corner Brace (HW BC410) into Support Leg 2 (F) using
Screw M4x16 (HW6).Do not overtight screw yet, leave around 2mm gap.

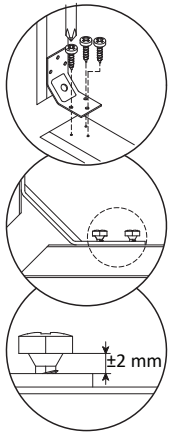


Do not tighten screw yet

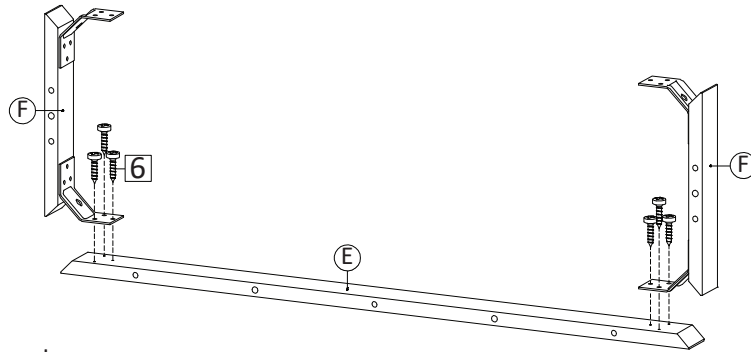


STEP5: Combine components from step 4 with remaining Support Leg 1 (E), using Screw M4x16 (HW6). Do not overtight screw yet, leave around 2mm gap.

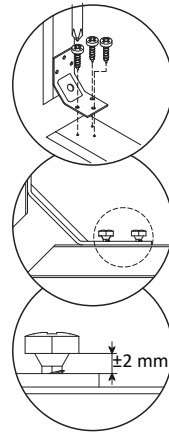


Do not tighten screw yet

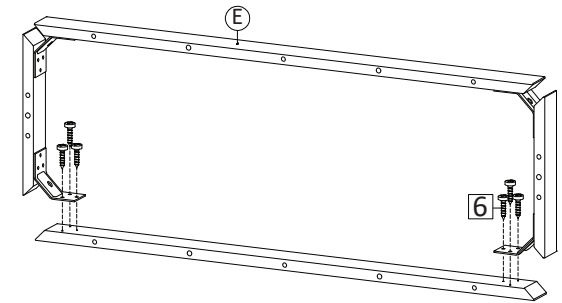


STEP6: Combine the Support Leg 2 from step 5 with Support Leg 1 (E), using Screw M4x16 (HW6). Do not overtight screw yet, leave around 2mm gap.

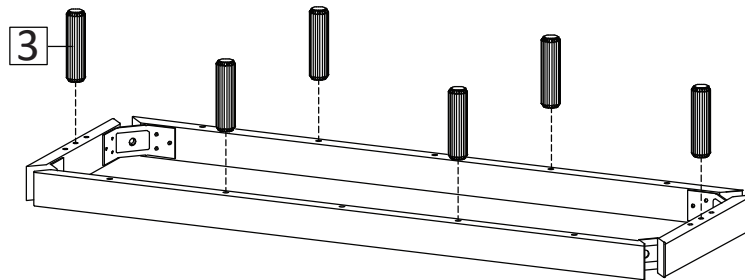


STEP7: Insert Dowel (HW3) into assembled Support Leg.

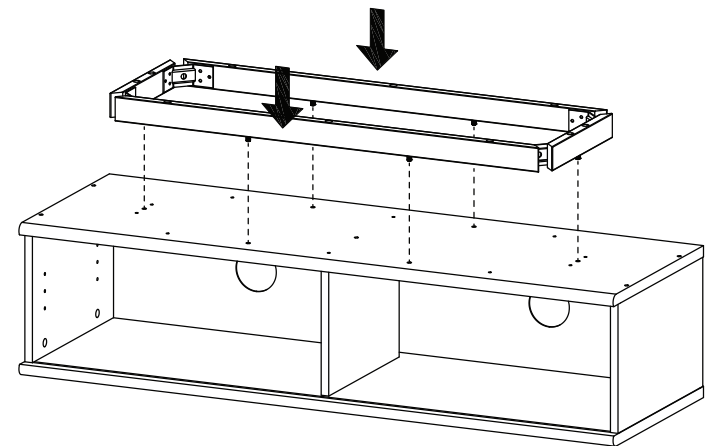


STEP8: Bring the assembled Support Leg and insert into Bottom Board of the cabinet.

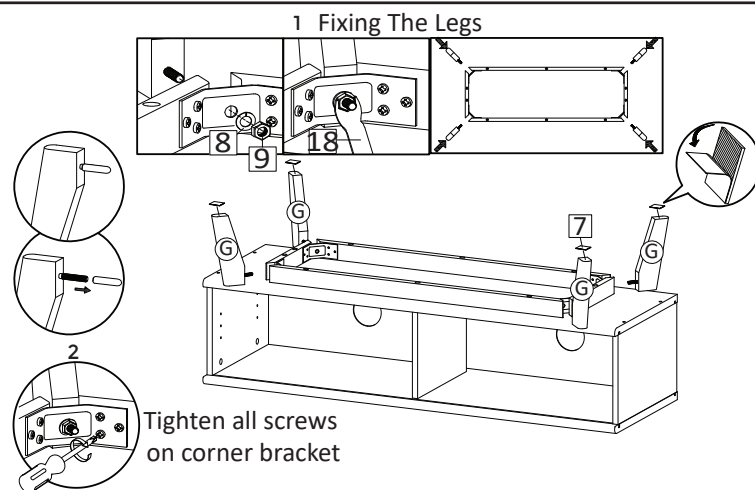


STEP9: Remove plastic cap from Legs. Insert the bolt of the Leg (G) into hole of corner brace as shown in figure. Insert Spring Washer (HW8) first into the hanger bolt of leg, then followed by Nut (HW9), tighten all the nuts using provided Wrench (HW18). Ensure that all legs has been tightened, then continue with tightened all screws on the corner brace.

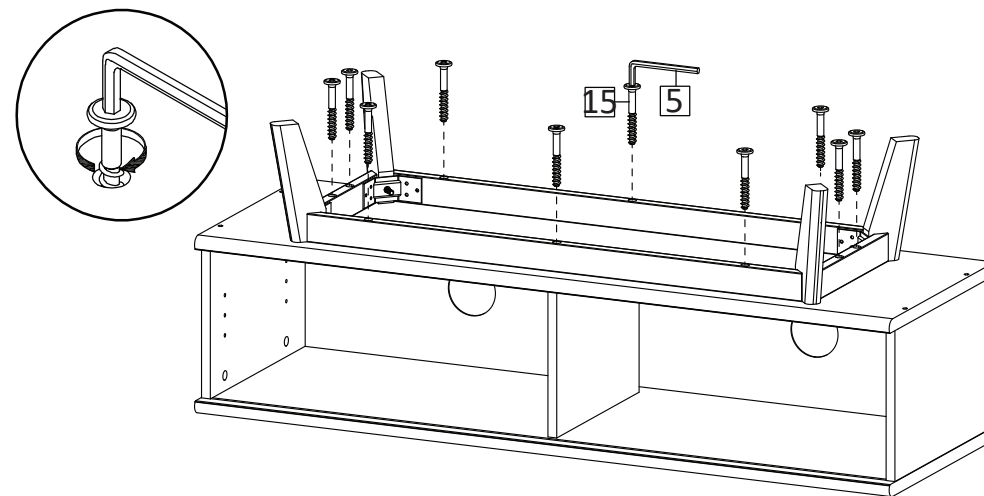


STEP10: Insert Screw M6.4 x 53 (HW15) and tighten using Allen Key (HW5).

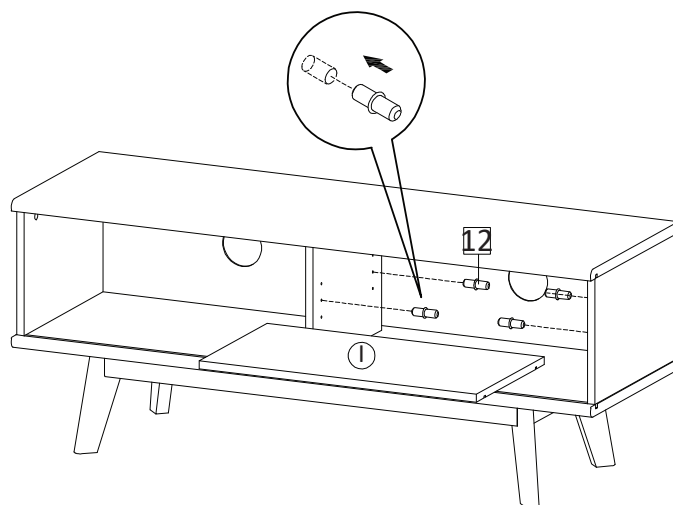


STEP11: After bringing the product upright, insert Shelf Pin (HW12) into Centerboard and right side Board on the desired level. Then place the Adjustable Shelf (I) onto the Shelf Pin.

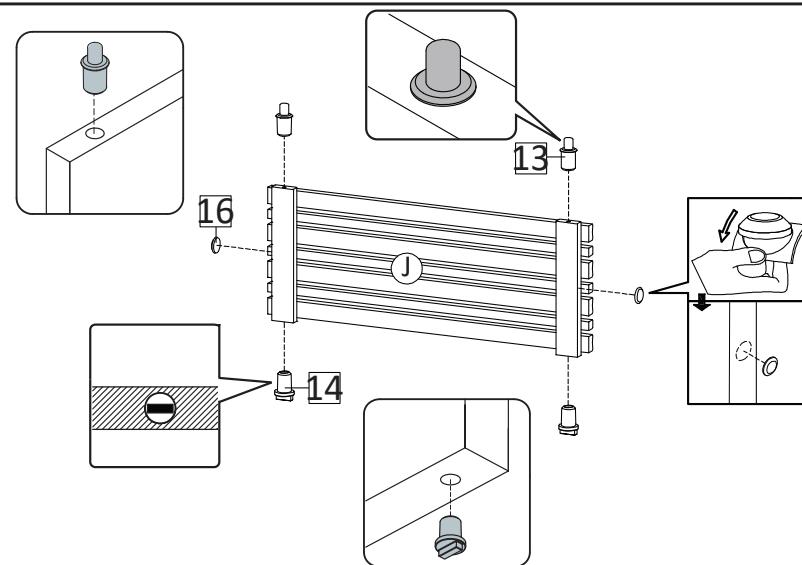

STEP12: Peel the back paper of Bumper (HW16) then place on both frame door, position as shown in the figure. Insert Top Pin Sliding (HW13) and Bottom Pin Sliding (HW14) on both end of frame door as specified position in the figure.

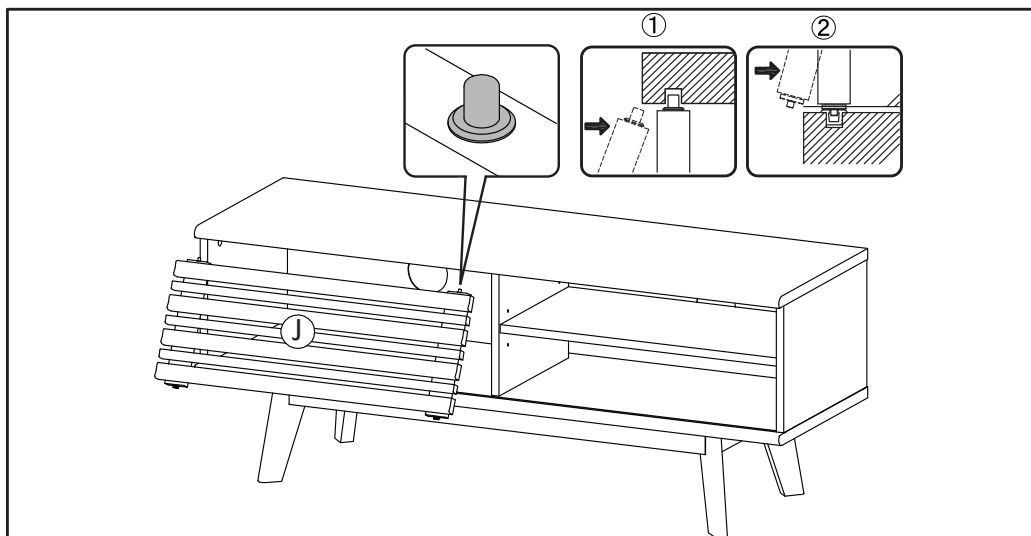

STEP13: Hold the frame door with position of the upper pin shown in facing upward. Put the frame door by inserting it to the upper groove on Top Board (1), then place the lower part aligned into the groove on bottom board (2). Repeat this step for the other door. Slide the doors to right and left ensuring the doors has been placed properly in the provided track.

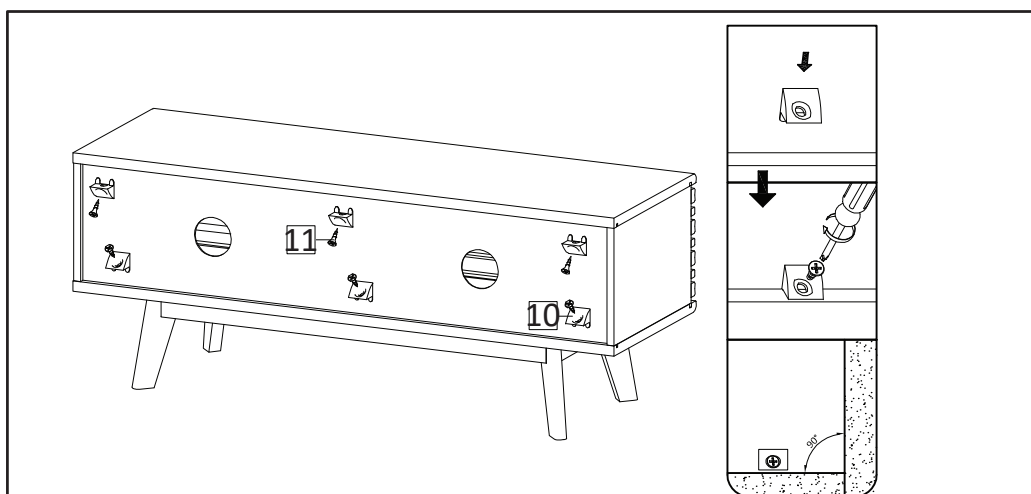






STEP14: Use Wedge (HW10), Screw M 3.5 x15.5 (HW11) to tighten the back of media stand by using screwdriver.

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for your wall type.

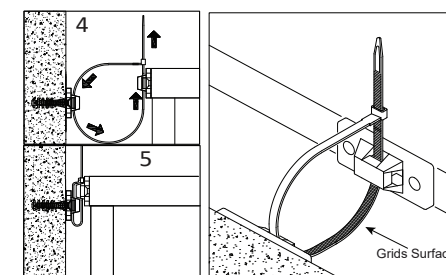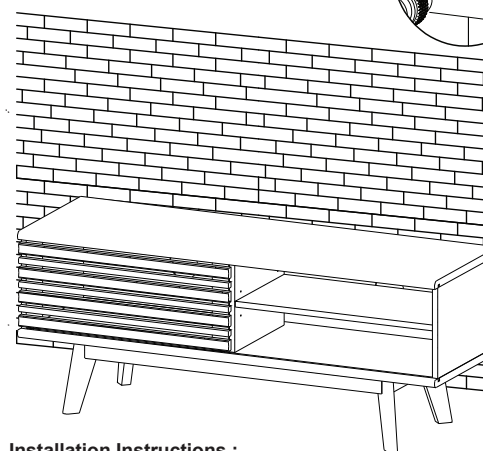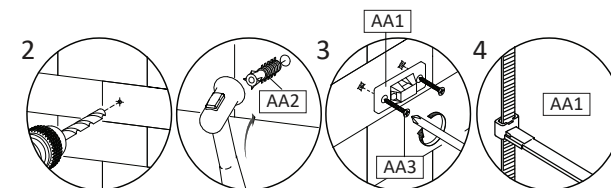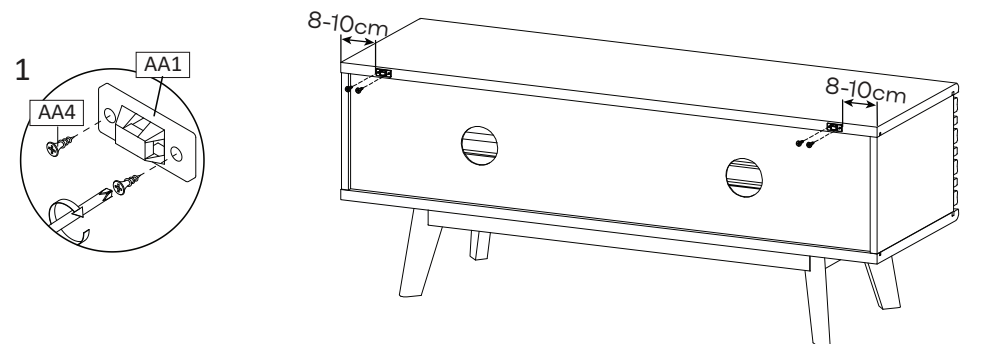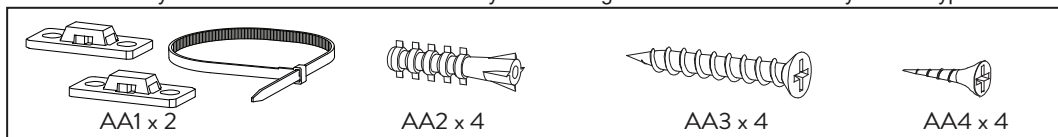

Installation Instructions :

1. Attach bracket (AA1) securely to the back top of the furniture using screw (AA4) provided. Allow 8 - 10 cm from each side.
2. Please make a hole for wall plugs position on the wall and minimum 15 mm below bracket secured to the back of unit attach the wall plugs (AA2).
3. Locate the other bracket (AA1) on the wall over wall plugs (AA2). Place furniture into position so both brackets (AA1) are vertically in the line.
4. Lace the end of the restraints strap through the larger hole in each bracket. Ensure the restraints strap with grids surface facing the inner loops. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Make sure that the strap is securely laced & locked.