## Trouble-Shooting

If you've followed the instructions carefully and your faucet still does not work properly, take these corrective steps.

Problem	Cause	Action
Leaks underneath handle.	Lock nut has come loose.	Tighten the lock nut.
Water will not shut off completely.	Dirty or damaged cartridge.	Remove handle and cartridge to check if ceramic disk is damaged permanently or dirty. Re-install the cartridge or replace the cartridge. Check the rubber o-ring to make sure it is seated properly in the cartridge. If not reposition the o-ring and reseat the cartridge.
Spray head leaks or has an inconsistent water flow pattern.	Spray head is dirty or misfitted, or washer is dirty.	Unscrew the spray head to check washer if it is dirty. If dirty, clean it with a brush and re-install it. Or check the spray head and replace it.

## Lifetime Limited Warranty

The manufacturer warrants that the parts and assemblies of this product will be free from defects in material and workmanship under normal household use for as long as it is owned by the original consumer purchaser.


This warranty covers the original consumer purchaser only and does not include business, commercial or industrial use of this product. This warranty shall not apply to goods which have been subject to accidents, negligence or improper installation. Our responsibility under this warranty is limited only to the replacement of parts and no other costs. Should a malfunction occur within the time covered by this warranty, replacement parts may by obtained from the Customer Service Department. The manufacturer will at its discretion, provide replacement parts for installation by the consumer for any parts that prove defective under normal usage and service with new and like or equivalent parts.

## Have a question? DON'T GO BACK TO THE STORE, WE CAN HELP, just send an email to xmc57@sina.com.

# RBROHANT

Leading the trend of bathing

### **USER MANUAL**

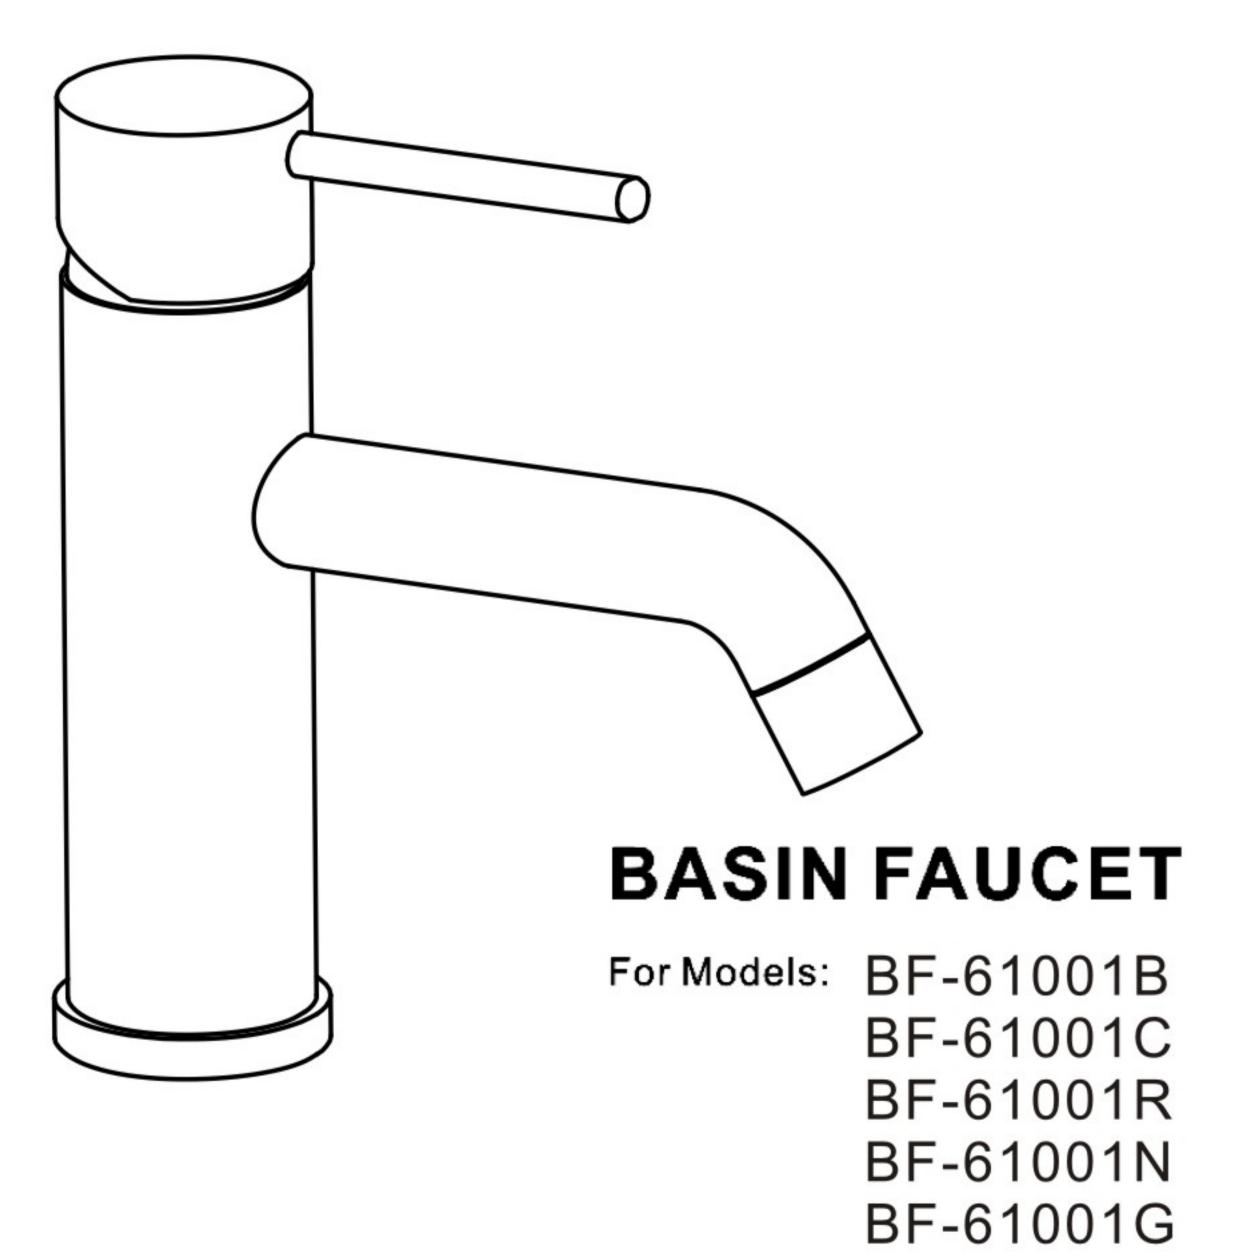







#### **Tools**

- Adjustable Wrench (2)
- Phillips Screwdriver





#### Maintenance

Your new faucet is designed for years of trouble-free performance. Keep it looking new by cleaning it periodically with a soft, damp cloth.

Avoid abrasive cleaners, steel wool and harsh chemicals as these will dull the finish and void your warranty.


#### Safety Tips


- If you use soldering for the installation of the faucet, the seats, cartridges and washers will have to be removed before using flame. Otherwise, the warranty will be void on these parts.
- Protect your eyes with safety glasses when cutting or soldering water supply lines.
- Cover your drain to avoid losing parts.


#### **Important Points**

Prior to beginning installation, turn off the cold and hot water lines and turn on the old faucet to release built-up pressure. When installing your new faucet, turn the connector nuts finger tight, then use a wrench to anchor the fitting and a second wrench to tighten the nut one additional turn. Connections that are too tight can compromise the integrity of the system. Wrap all threaded connections with teflon tape. Always wrap in a clockwise direction.

#### **Need Help**

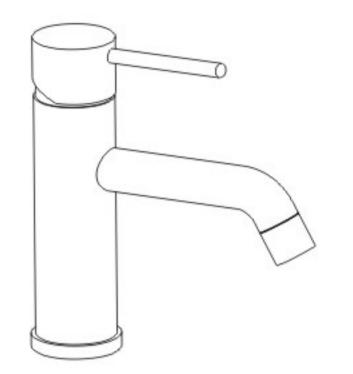

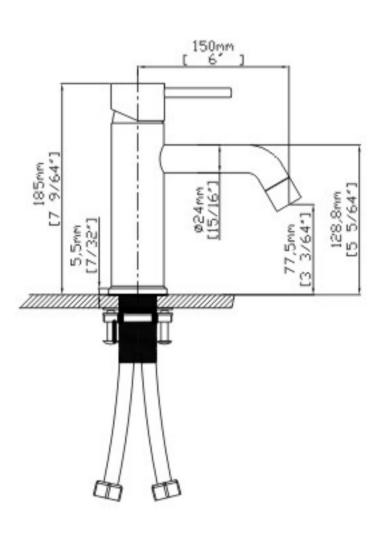

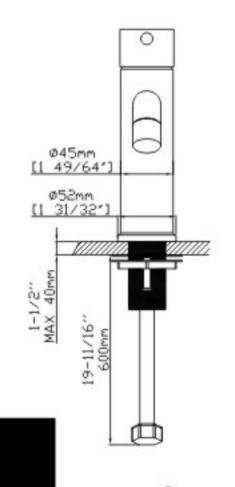

#### Preparation/Assembly


- Shut off the water supplies before installation. Remove the current faucet and clean and dry the sink surface the new faucet will be installed on.
- Unscrew the lock nut and gasket assembly.
   Please Note: Do not remove the customer service tag with the model number and phone number as this will be helpful if you need assistance in the future.
- Apply teflon tape on the threads of the faucet cold & hot water supply tubes in a clockwise direction.
- For Single Hole Installation Place silicone sealant beneath the faucet base and install the faucet through the single faucet hole.
- Attach gasket assembly and lock nut from the bottom.


Please Note: Please assemble in numerical order. Tighten but do not over tighten. Use a phillips screwdriver to tighten the 3-screws on the lock nut. See diagram for visual.


Hint - Easier to do with a second person holding the faucet in place while the first person tightens the faucet.

- 6. Please connect the faucet body with the cold and hot water supply tubes and keep the outer threads side into the body. Keep the hot water tube on the left side and the cold one on the right side, and then tighten.
- Connect the water supply tube of the faucet with the water supply angle valve, tighten the 3/8" nut with the wrench.

Please Note: No need to use teflon tape for angle valve nut, just tighten it with the wrench directly.

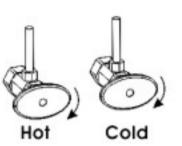

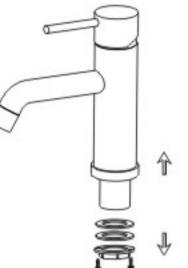

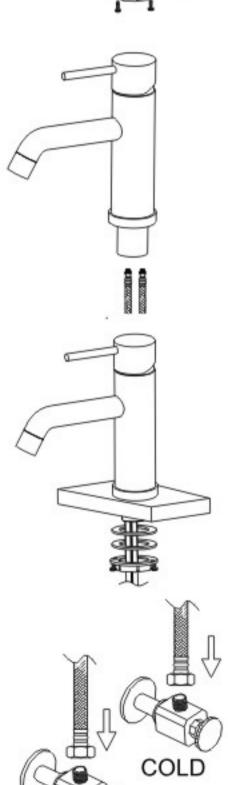

HOT

