



Product Name:	Large Candy Christmas Color Changing Light Yard Decoration
SKU#:	WHHD1637

Thank you for your purchase of our LuxenHome product. This product is manufactured with the highest standards of safety and quality.

1

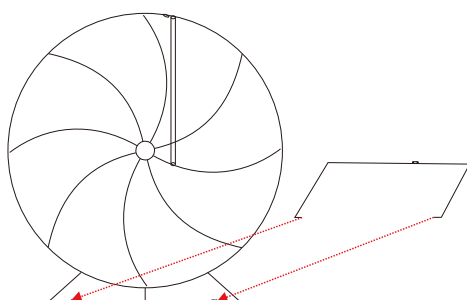


2

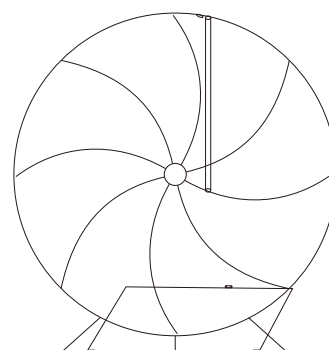

The base wire is inserted into the round tube of the frame.


The base installation is complete.

3

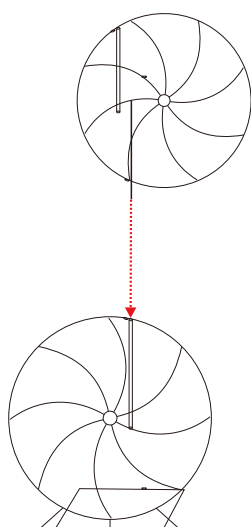


The latch at the bottom of the second ball is inserted into the iron tube at the top of the first ball.

4

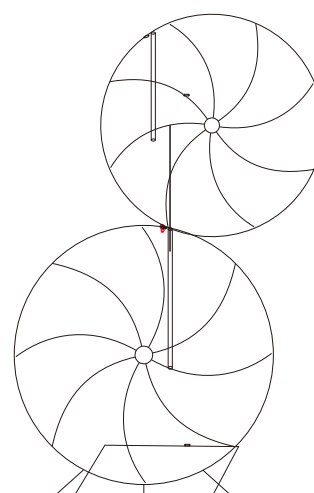


The rings at the junction of the first ball and the second ball are fixed with tie straps.


Product Name:	Large Candy Christmas Color Changing Light Yard Decoration
SKU#:	WHHD1637

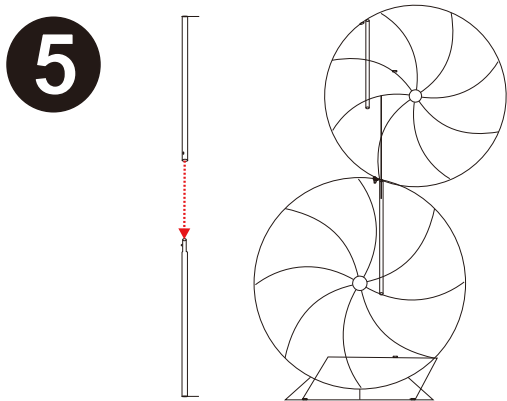


Assemble the support rod and insert the upper part of the iron tube into the lower part of the shrinkage tube.

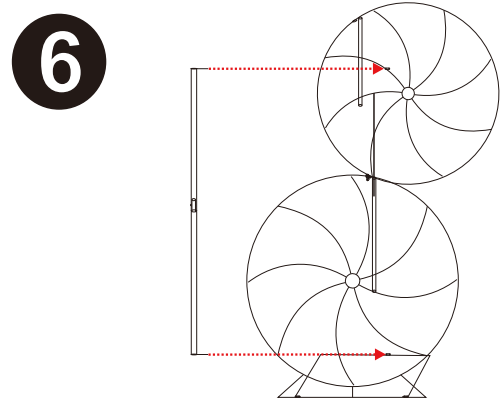

The support rod latch is inserted into the round tube between the first and second ball.

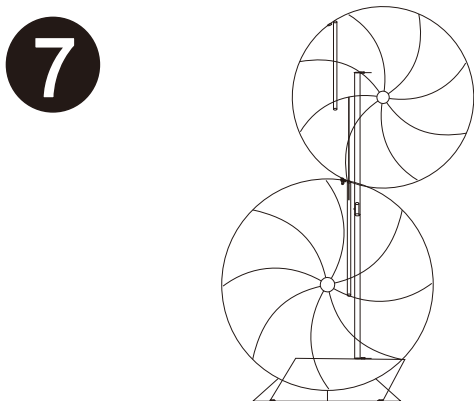


The support rod is installed.

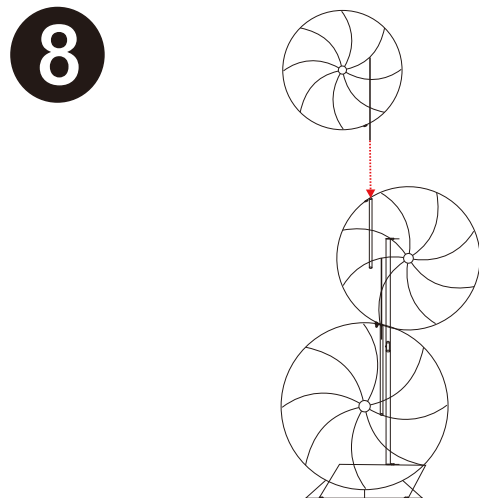

The wire latch at the bottom of the third ball is inserted into the iron tube at the top of the second ball.


Product Name:	Large Candy Christmas Color Changing Light Yard Decoration
SKU#:	<u>WHHD1637</u>

9

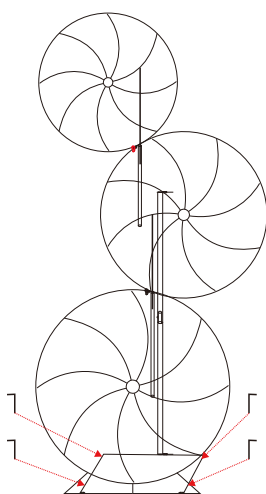

Two rings at the junction of the iron tube on the top of the third ball and the second ball are fixed with tie straps and four ground nails are inserted into the base.

10

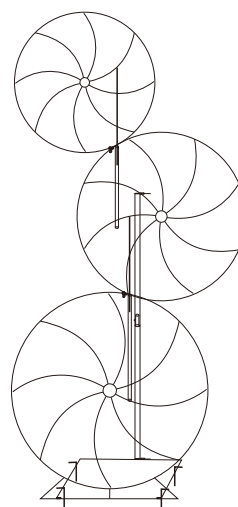

Congratulations, product assembly is complete!