

DESKTOP FAN



<Picture Only For Reference>

INSTRUCTION/OPERATING MANUAL

READ AND FOLLOW ALL INSTRUCTION BEFORE OPERATING FAN

CAUTION

Read and follow all instruction before operating fan. Do not use fan if any part is damage or missing.

WARNING

1. Operating Voltage (120V 60Hz) according to product label shown. others, could damage fan.
2. To reduce the risk of fire or electric shock, do not use this fan with any solid state speed control device.
3. This appliance has a polarized plug which is intended to fit in an outlet only one way. If this does not fit outlet, contact a qualified electrician. Do not attempt to by-pass this procedure.
4. This product is to be used indoors.
5. Unplug from electrical supply source before cleaning.
6. If the power cord is damaged, contact your local service center or a qualified electrician to install an appropriate replacement cord to prevent any injury or damage.
7. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
8. Children should be supervised to ensure that they do not play with the appliance.

RULES FOR SAFE OPERATION

1. Never insert fingers, pencils, or any other object through the guard when fan is running.
2. Disconnect the fan when moving from one location to another.
3. Disconnect the fan when removing grills for cleaning.
4. Be sure fan is on a stable surface when operating to avoid overturning.
5. DO NOT use fan in window. Rain may create electrical hazard.
6. The fan is for home use only.
7. Do not leave the fan running unattended.

HOW TO USE

Speed control

The fan has 3 speed settings (see Fig.1):

- 0 = Device off
- I = Low speed
- II = Medium speed
- III = High speed

Oscillating mode

The fan can operate in oscillating or stationary mode. Press the oscillation button to activate the oscillating mode.

Do not touch the blades with your hands or with any hard object when the fan blade are in motion.

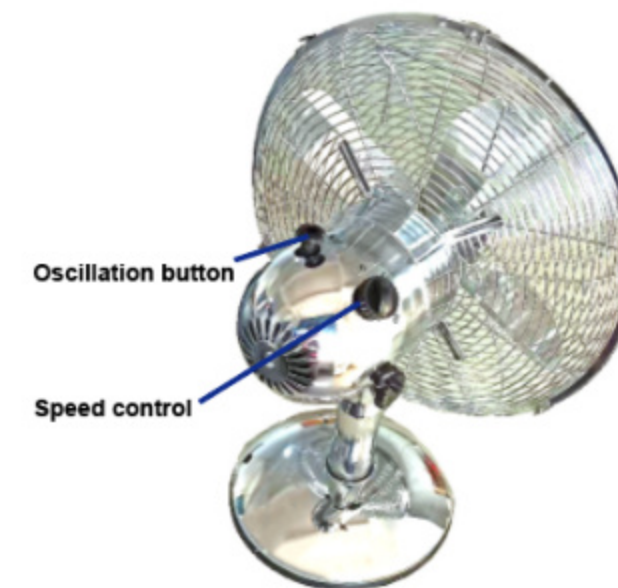


Fig.1.

USER SERVICING INSTRUCTIONS

1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord
2. Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades, (see Fig.2)
3. Remove fuse carefully. Remove the fuse by prying it out carefully, (see Fig.3)
4. Risk of fire. Replace fuse only with 5Amp max, 125 Volt fuse.
5. Close fuse cover. Slide closed the fuse access cover on top of attachment plug, (see Fig.4).
6. Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

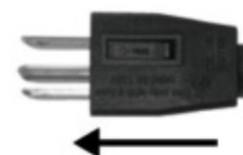


Fig. 2



Fig. 3



Fig. 4

Tips: Do not overexert when replacing the fuse or damage may occur. If it's hard to close the access cover, make sure the fuse is fully inserted.

CLEANING:

1. Be sure to unplug from the electrical supply source before cleaning.
2. Plastic parts should be cleaned with mild soap and damp cloth or sponge. Thoroughly remove soap film with clean water.
3. Be sure not to get water or other liquid into the motor.