

<b>Item #:</b>	WHHD1795
<b>Product Name:</b>	Set of 3 Presents with Red Ribbon Lighted Holiday Decoration

Thank you for purchasing this LuxenHöme product. This product has been manufactured with the highest standards of safety and quality.

### PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.

Unpack all parts from Styrofoam and bubble wrap inside the carton to ensure there are no missing or damaged parts. Do not attempt to assemble or use the product if any parts are missing or damaged.

### CARTON CONTENTS:


Description	Quantity
Small Present, Bow	1 of each
Medium Present, Bow	1 of each
Large Present, Bow	1 of each
Bows	3
Stakes	6

### Before You Start

1. Decide on an appropriate location for your product. Please read the assembly and Instruction procedure carefully.  
Note: This decoration can be displayed outdoors and indoors.
2. Retain the instructions for future use and save the carton for storing your tree.

### Assembly and Instruction Procedure (no tools required for assembly):

1. The bows (large, medium, and small) have a Velcro bottom for attaching them to their respective present's center of the iron frame top.

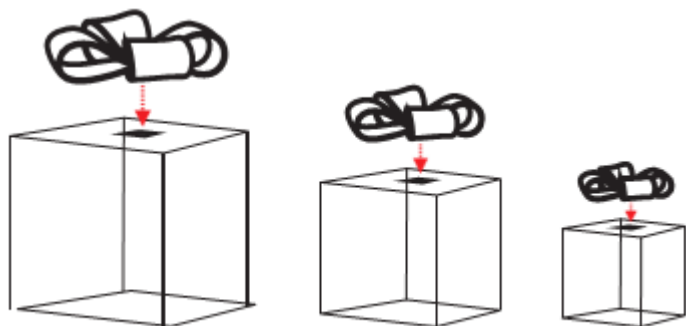

2. When displaying outdoors, use the included ground stakes to secure them to the ground. The stakes are carefully inserted into the bottom of the iron frame.

<b>Item #:</b>	WHHD1795
<b>Product Name:</b>	Set of 3 Presents with Red Ribbon Lighted Holiday Decoration



- The presents' lights are connected and powered by a single plug. Connect the wires for the lights to the plug (twist to tighten the connection).

Plug in the lights and enjoy the lighted decoration!



### Warnings:

- Risk of Fire and Electric Shock – please follow instructions and warnings on lights.
- Keep wires clear of being pinched or cut during assembly or installation. Discard sets with cut or pinched insulation.
- This product is for decoration use only. Not to be used by children as a toy. Keep out of reach of small children.

### Troubleshooting:

- Some bulbs are not lighting or do not come on: Search for any loose plug connections between the presents.
- Note: If this action does not resolve the issue, please contact customer service for assistance.