
ASSEMBLY INSTRUCTIONS 30 INCH BATH VANITY (COMBO)

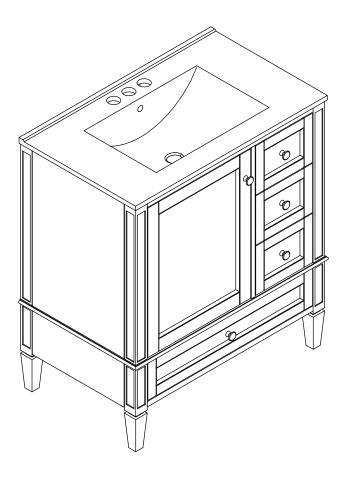

Thank you for purchasing this quality product. Be sure to check all pac material carefully for small parts which may have come loose inside t carton during shipment. Separate, identify and count all parts and hardw Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED



* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!! * Please assemble on a clean soft surface to avoid damage.









IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY VEUILLEZ LIRE LES INSTRUCTIONS AVANT DE COMMENCER L'ASSEMBLAGE

PLEASE DO NOT RETURN TO STORE



Please do not return this product to the retailer!!

We are able to assist you in ANY way

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.


Before Installation


Important – Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


Cam Lock Assembly Instructions

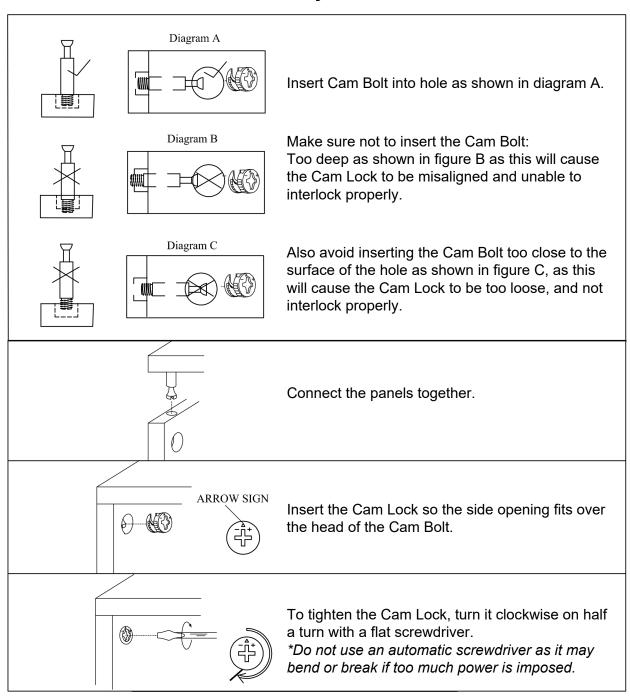

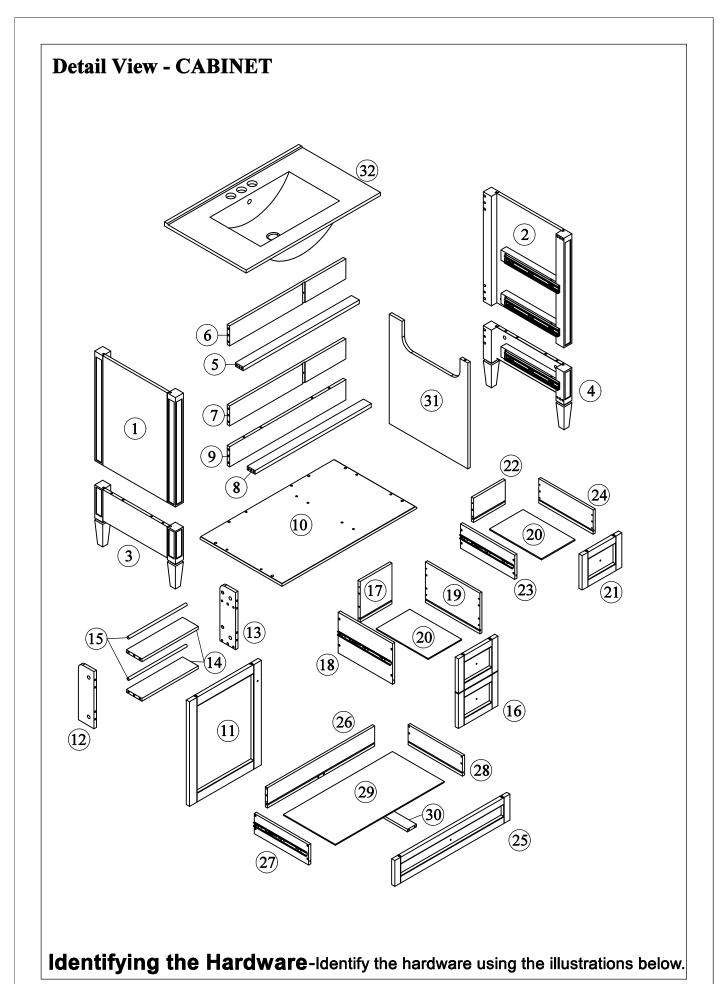


Part List - N710P247499					
1		2			
	Top Side Panel (L) - 1pc		Top Side Panel (R) - 1pc		
3		4			
	Bottom Side Panel (L) - 1pc		Bottom Side Panel (R) - 1pc		
5		6			
	Top Crossbar Front - 1pc		Top Panel Rear - 1pc		
7		8			
	Mid Panel Rear - 1pc		Mid Crossbar Front - 1pc		
9		10			
	Bottom Panel Rear - 1pc		Bottom Frame - 1pc		
11		12	0		
	Cabinet Door - 1pc		Panel Side Door (L) - 1pc		
13		14			
	Panel Side Door (R) - 1pc		Panel Mid Door - 2pcs		
15		16			
	Round Bar Door - 2pcs		Top Drawer Face - 1pc		


Part List - N710P247499

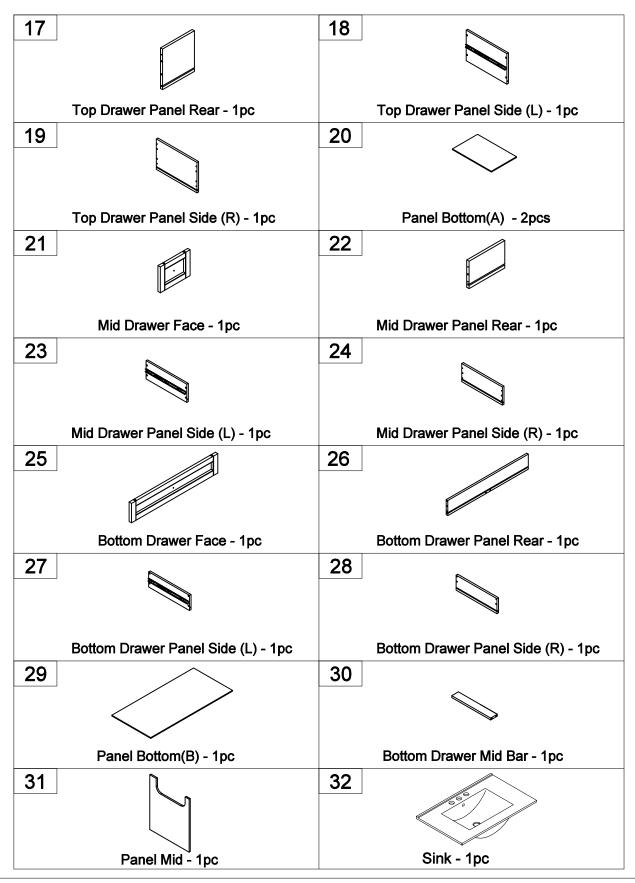



Hardware List - N710P247499


Α	В	С
ø6x35mm	ø14.5x12mm	ø8x30mm
Three in one bolts(39pcs)	Three in one lock(39pcs)	Wood dowel(40pcs)
D	Е	F
Ø/////		€)mmm>
ø6x30mm	ø8xø4x25mm	ø8xø4x25mm
Wood dowel(20pcs)	Round head screw(2pcs)	Round head screw(24pcs)
G	H	
	ø5/32"x20mm	ø5/32"x28mm
Handle(5pcs)	Handle screw(1pc)	Handle screw(1pc)
Ø5/32"x30mm	K	
Handle screw(3pcs)	Damping hinge (2pcs)	Flat head screw(12pcs)
Anti fall hardware(1set)		

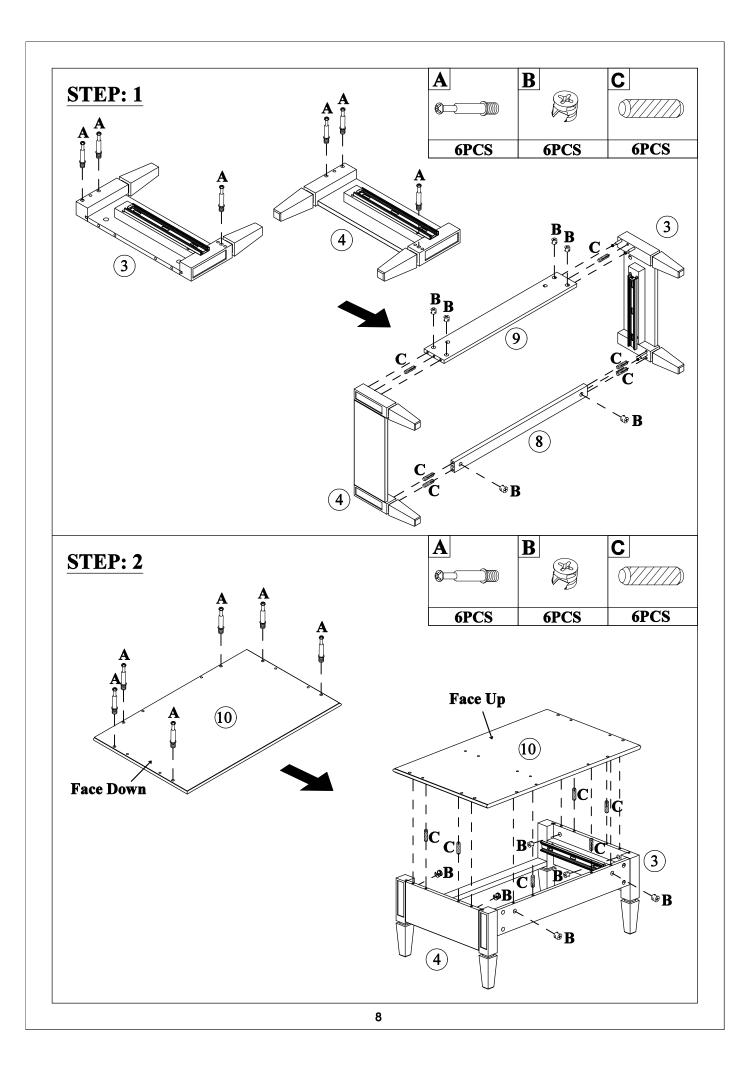


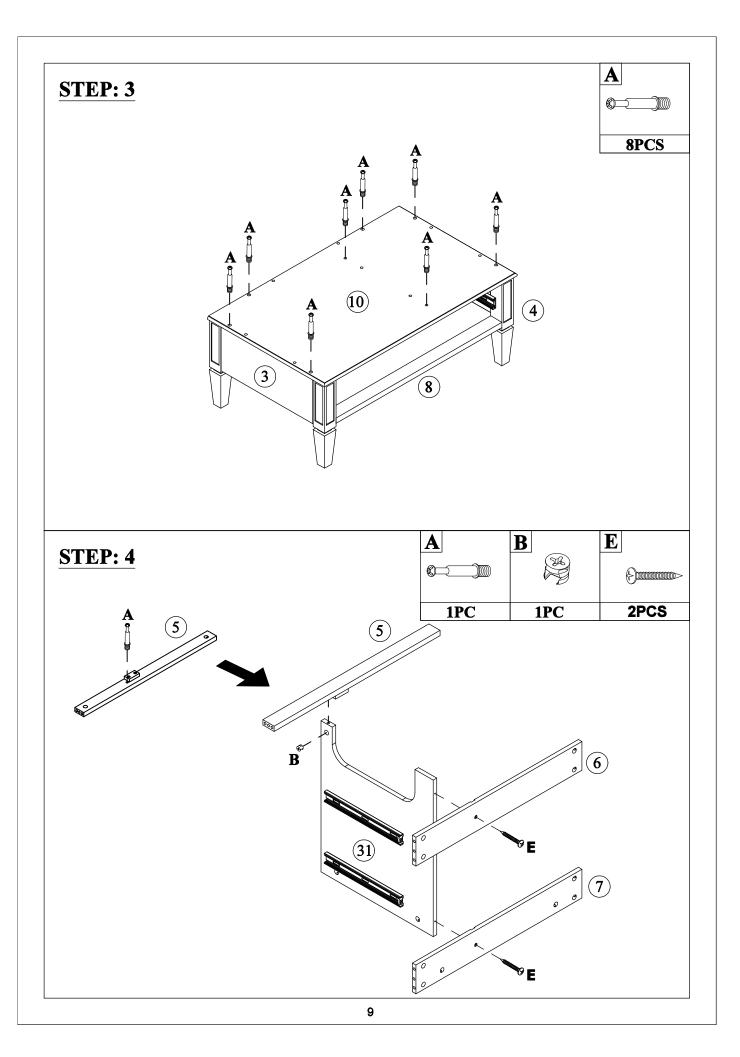


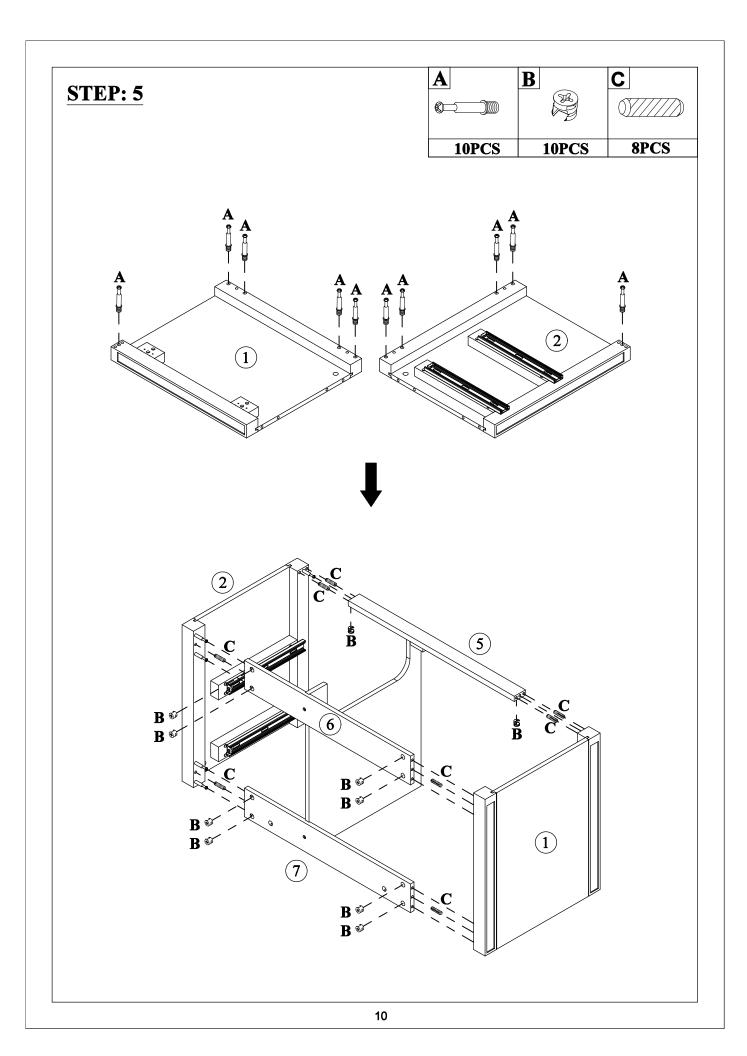


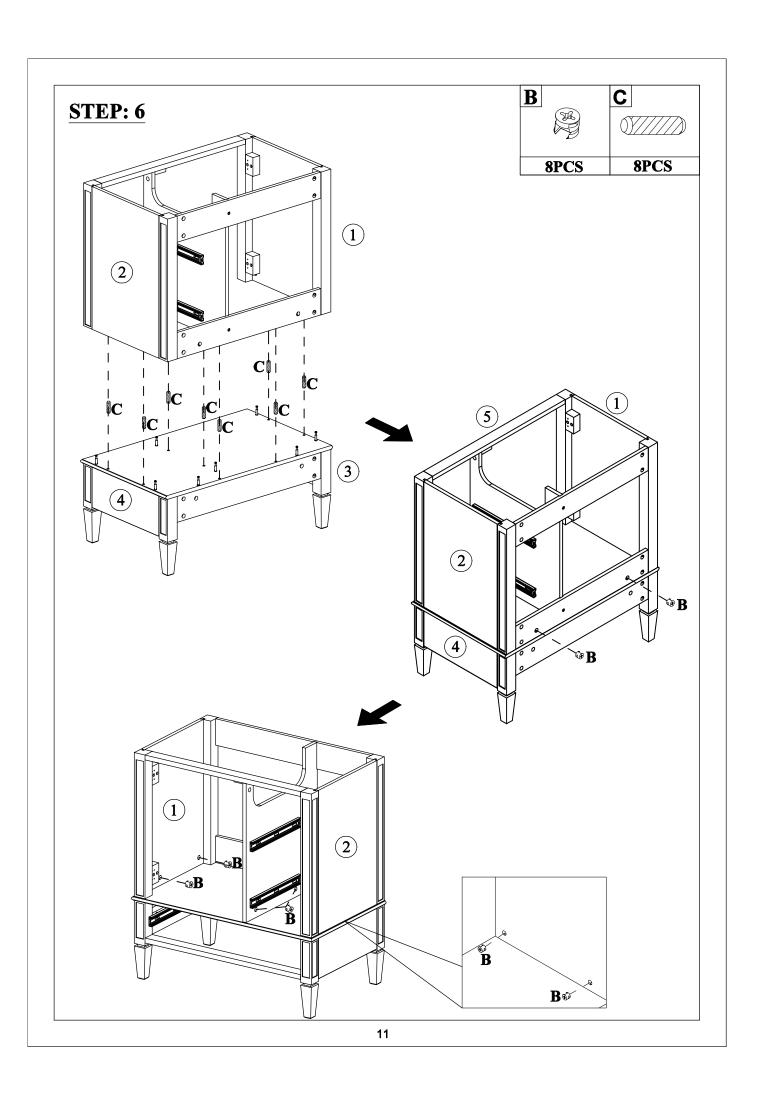


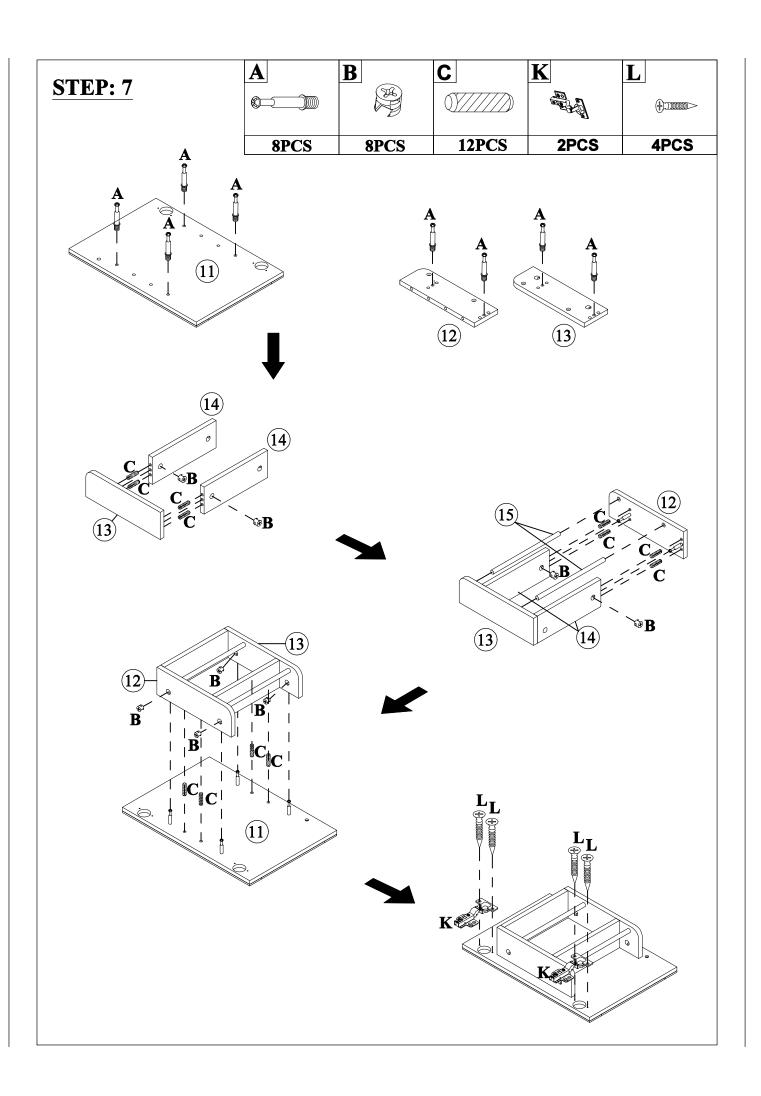

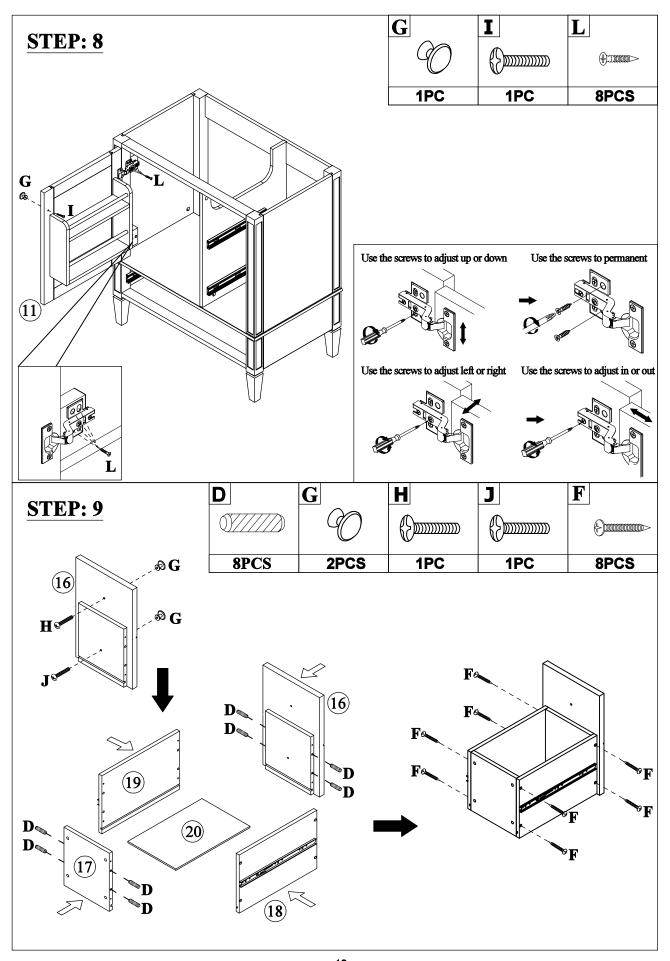


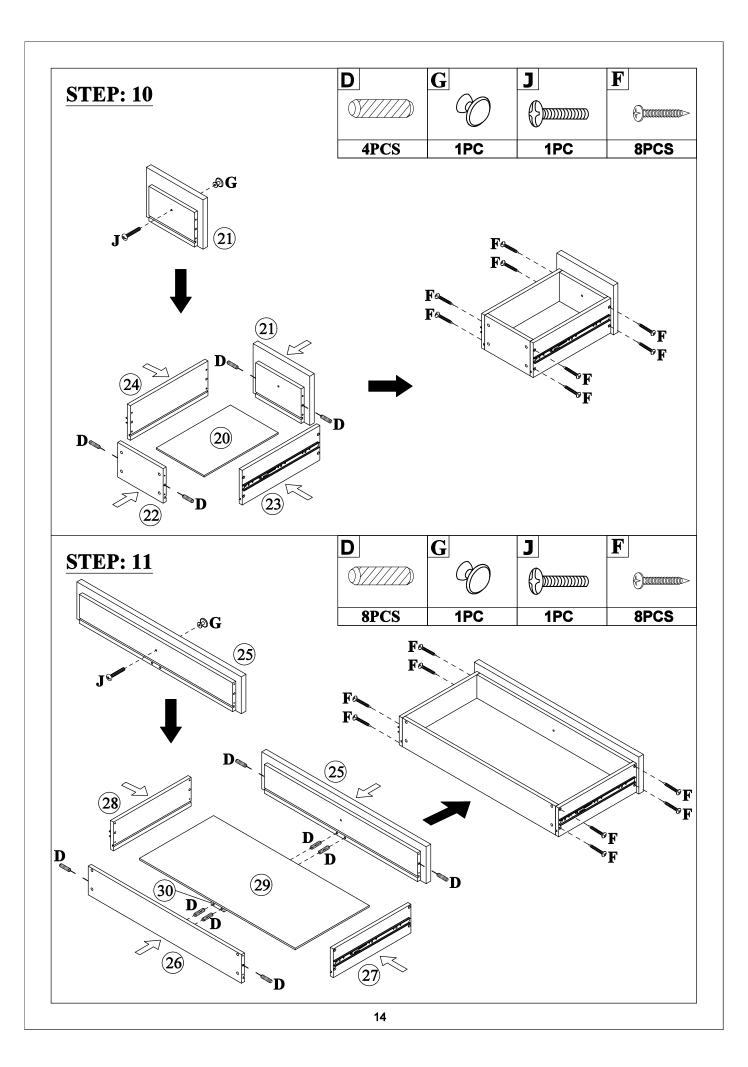

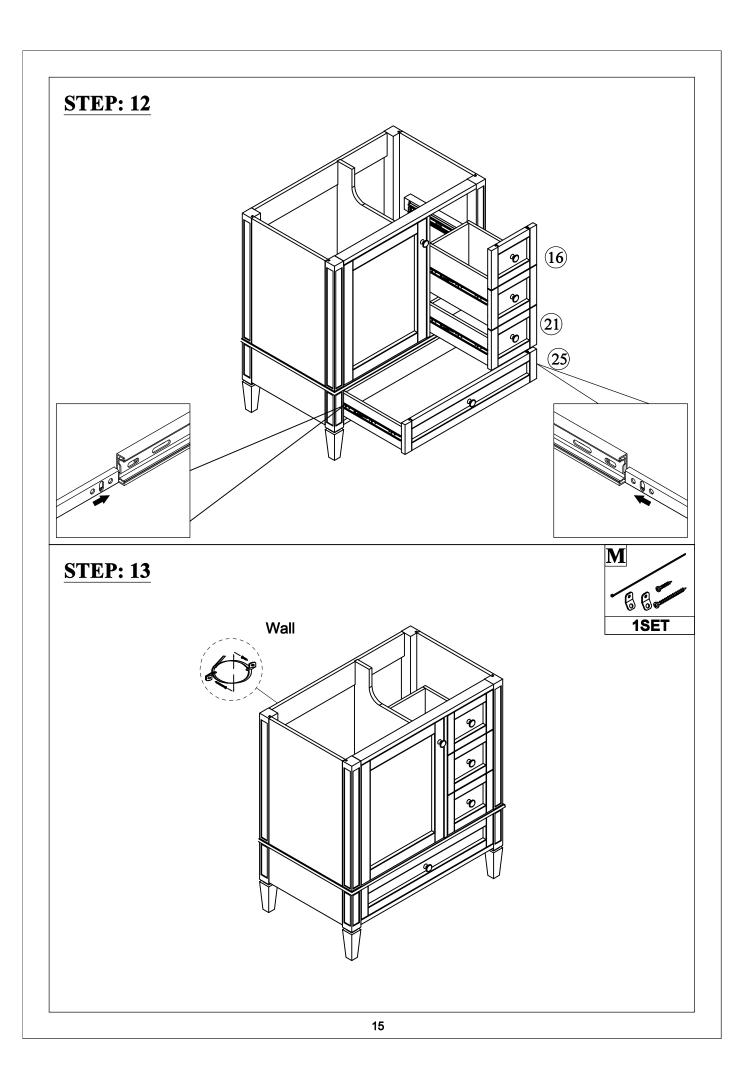

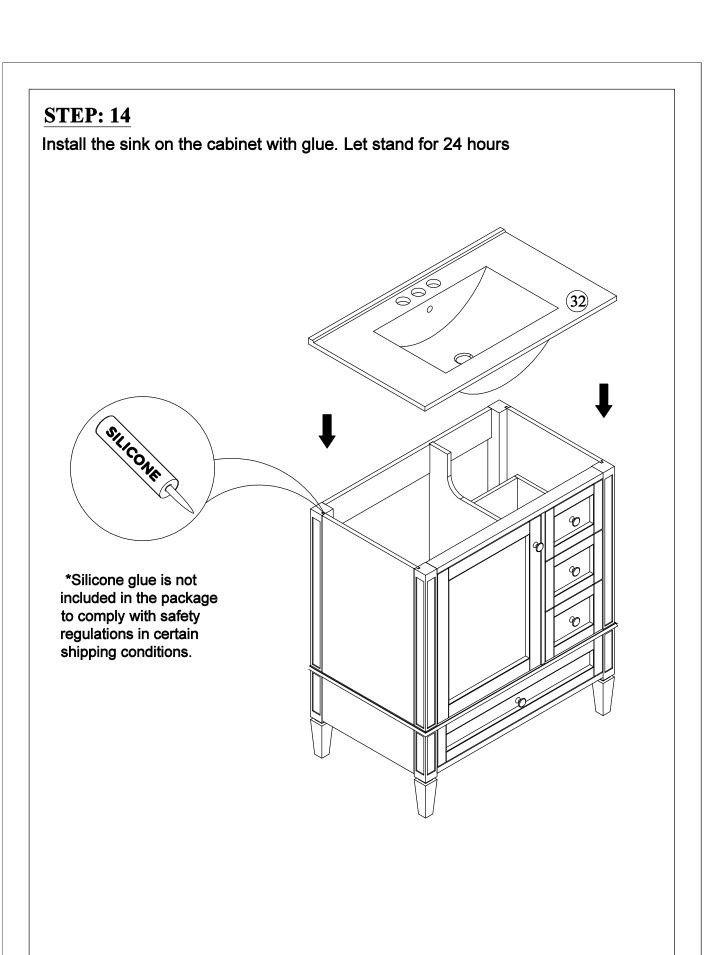


STEP: 15

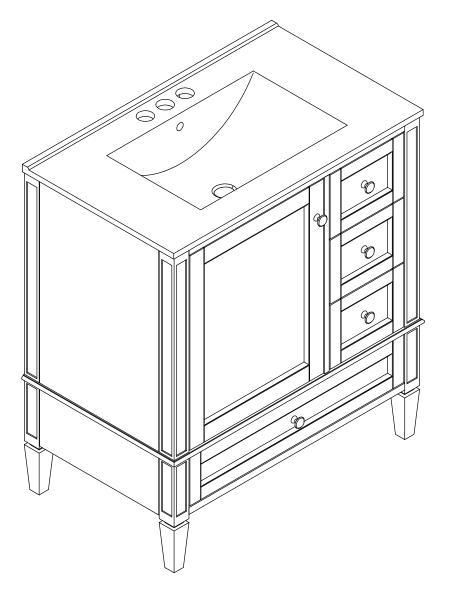




HINGE ADJUSTMENTS

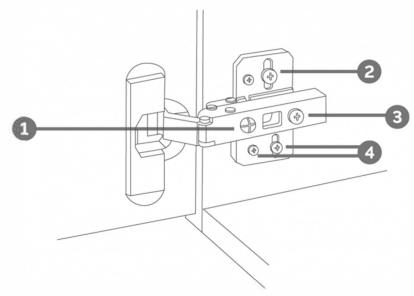

1 Sideways / Tilt adjustment


Turn the screw clockwise to move the door further away from the side of the cabinet anticlockwise to move the door closer to the side of the cabinet

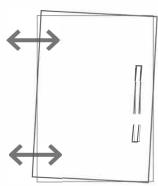

2 4 Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up anticlockwise to move the door down

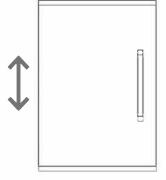

3 Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

