



ALLEN + ROTH® an logo design are trademarks or registered trademark of LF, LLC. All Rights Reserved.

Purchase Date _____

ITEM #3591975

CHANDELIER

MODEL #CH23BLK

Español p. 13

ATTACH YOUR RECEIPT HERE
ADJUNTE SU RECIBO AQUÍ




Questions, problems, missing parts? Before returning to your retailer, call our customer service department at **1-866-439-9800**, 8 a.m. - 8 p.m., EST, Monday - Sunday. You could also contact us at partsplus@lowes.com or visit www.lowespartsplus.com.

AS21007 1


TABLE OF CONTENTS

Package Contents	3
Hardware Contents	. 4
Safety Information	. 4
Preparation	5
Assembly Instructions	6
Care and Maintenance	. 12
Troubleshooting	12
Warranty	12

PART	DESCRIPTION	QUANTITY
Α	Fixture	1
В	Canopy	1
С	Mounting Strap	1
D	Threaded Rod	1
	(preassembled to mounting strap (C))	
E	Hex Nut	2
	(preassembled to threaded rod (D))	
F	Screw Collar Loop	1
	(preassembled to chain (I))	
G	Threaded Ring (preassembled to	1
	screw collar loop (F))	
H	Fixture Loop	1
	(preassembled to fixture (A))	
I	Chain	1
J	Connecting Chain Link	2
	(preassembled to chain (I)	
K	Socket Cover	9
L	23.8-inch Rod	2
	(one preassembled to fixture (A)	
М	11 inch Rod	2
	(one preassembled to fixture (A)	

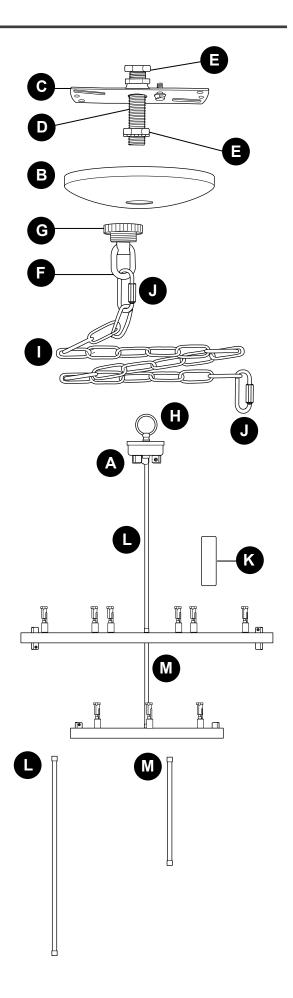

HARDWARE CONTENTS (shown actual size)

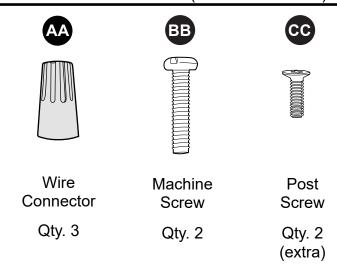



SAFETY INFORMATION

READ AND SAVE THESE INSTRUCTIONS.



DANGER

- For your protection and safety, carefully read and understand the information provided in this manual completely before attempting to assemble, install or operate this product. Failure to do so could lead to electrical shock, fire or other injuries that could be hazardous or even fatal.
- DO NOT connect this fixture to an electrical system that does not provide a means for equipment grounding. Never use a fixture in a two-wire system that is not grounded. Installing a fixture into an electrical system not having a proper grounding means could cause metal parts of the fixture to carry electrical currents if any of the fixture wires, wire connections or splices were to become broken, cut or loose during the mounting or normal operation of the fixture. Under this condition, anyone coming in contact with the fixture would be subject to electrical shock, which could cause serious injury or death.
- DO NOT connect the bare or green insulation fixture ground wire to the black (HOT) current-carrying wire or the white (NEUTRAL) house wire. Connection of the bare or green fixture ground wire to the black or white house wires may cause metal parts of the fixture to carry electrical currents. Under this condition, anyone coming in contact with the fixture would be subject to electrical shock, which could cause serious injury or death.
- DO NOT damage or cut the wire insulation (covering) during installation of fixture. DO NOT permit wires to contact any surface having a sharp edge. To do so may damage or cut the wire insulation, which could cause serious injury or death from electrical shock.



WARNING

• All electrical connections must be in agreement with local codes and ordinances, the National Electric Code (NEC) and ANSI/NFPA 70-1999. Contact your municipal building department to learn about your local codes, permits and/or inspections. Risk of fire - most dwellings built before 1985 have supply wire rated for 140 °F. Consult a qualified electrician before installation.

A SAFETY INFORMATION



WARNING

- To avoid personal injury, the use of gloves may be necessary while handling fixture parts with sharp edges
- DO NOT suspend any fixture by the house wires. A fixture must always be mounted directly to an
 outlet box or to a mounting strap that is first attached to the outlet box. Wire connectors will not
 support the weight of a fixture. Suspending a fixture by the house wires and wire connectors will result
 in the fixture falling, with the possibility of personal injury and the danger of electrical shock or fire.
- To reduce the risk of fire, electrical shock or personal injury, wire connectors provided with this light fixture are designed to accept only one 12-gauge house wire and two lead wires from the light fixture. If your house wire is larger than 12-gauge or there is more than one house wire to connect to the corresponding fixture lead wires, consult an electrician for the proper size wire connectors to use.
- To reduce the risk of damage to the fixture, DO NOT use power tools to assemble any part of the fixture.



A CAUTION

- TURN OFF ELECTRICITY at main fuse box (or circuit breaker box) before beginning installation by removing the fuse (or switching the circuit breaker off).
- If you are not sure the lighting system has a grounding means, DO NOT attempt to install this fixture. Contact a qualified, licensed electrician for information regarding the proper grounding methods as required by the local electrical code in your area.
- All fixtures must be mounted to an outlet box that is supported by the building structure.
- DO NOT use bulbs having a wattage greater than the maximum value stated on the fixture. The use of bulbs with higher wattage than specified will increase temperatures and risk of fire. Use only bulbs that are approved for use in the base up position.
- If a dimmer control switch is used with this fixture, obtain professional advice to determine the correct type to use as well as the electrical rating required.
- Before installation is complete, carefully check all screws, bolts and nuts on fixture to ensure that they are secure.

Distributed by: Litex Industries Inc., P.O. Box 535639, Grand Prairie, TX, 75053; 1-800-527-1292

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 45 minutes


Tools Required for Assembly (not included): Flathead Screwdriver, Phillips Screwdriver, Wire Strippers, Pliers, Wire Cutters, Safety Glasses, Stepladder, Electrical Tape


Helpful Tools (not included): A/C Tester Light, Do-It-Yourself Guide, Soft Cloth

1. Turn off circuit breakers and wall switch to the fixture supply line leads.

DANGER: Failure to disconnect power supply prior to installation may result in serious injury or death.

Remove existing fixture and disconnect all electrical wiring.

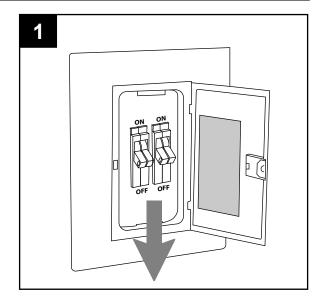

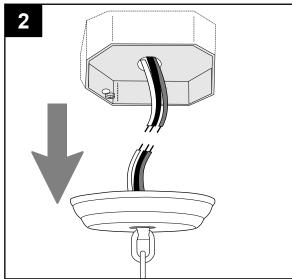

3. Attach mounting strap (C) to outlet box (not included) using the existing washers and outlet box screws or the machine screws (BB). **NOTE:** If the outlet box screws required for your outlet box are of a different size than the machine screws (BB), consult with a licensed electrician before proceeding. Tighten machine screws (BB) completely to secure mounting strap (C).

CAUTION: Make sure the outlet box can suupport 35 lbs. hanging weight. Use metal outlet box; plastic outlet boxes are not recommended.


Hardware Used



Machine Screw




x 2

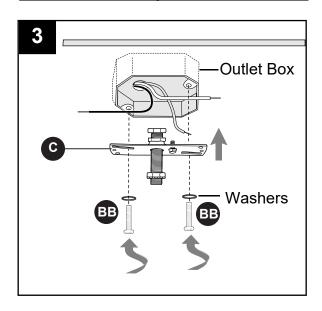


4. Temporarily place canopy (B) over mounting strap (C) to determine amount of adjustment necessary for threaded rod (D). **NOTE:** Canopy (B) should fit flush against ceiling when mounted. Once threaded rod (D) is adjusted, tighten hex nut (E) securely against mounting strap (C).

Set canopy (B) aside.

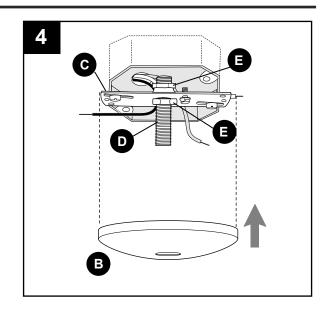


 Locate two posts at top of fixture (A) and partially loosen the screws. Align hole at end of one 23.8-inch rod (L) with loosened screw in post in fixture (A). Tighten screw with a Phillips screwdriver. Repeat for remaining 23.8-inch rod (L).

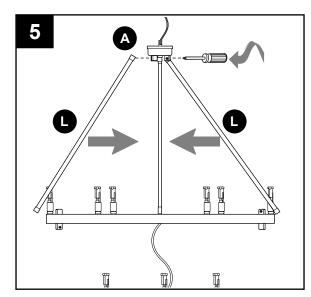


6. Locate two posts on the <u>topside</u> of large fixture ring and partially loosen the screws. Insert the other end of 23.8-inch rod (L) into the corresponding post on the <u>topside</u> of large fixture ring, aligning hole on the 23.8-inch rod (L) with the loosened screw on the post. Tighten loosened screw with a Phillips screwdriver. Repeat for remaining 23.8-inch rod (L).


NOTE: Rods should not cross.

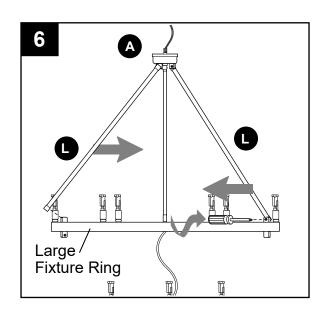


7. Locate two posts on the <u>underside</u> of large fixture ring and partially loosen the screws. Insert 11-inch rod (M) into the post on the <u>underside</u> of the large fixture ring, aligning hole on the 11-inch rod (M) with the loosened screw on the post. Tighten loosened screw with a Phillips screwdriver. Repeat for remaining 11-inch rod (M).

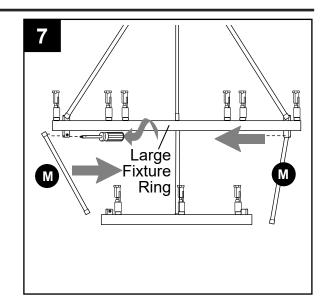

8. Locate two posts on the topside of the small fixture ring and partially loosen the screws. Insert other end of 11-inch rod (M) into the corresponding post on the topside of the small fixure ring, aligning hole in the 11-inch rod (M) with the loosened screw on the post. Tighten loosened screw with a Phillips screwdriver. Repeat for remaining 11-inch rod (M).

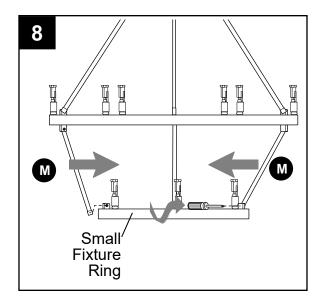


Attach connecting chain link (J) and chain (I) to fixture loop (H). Close connecting chain link (J).

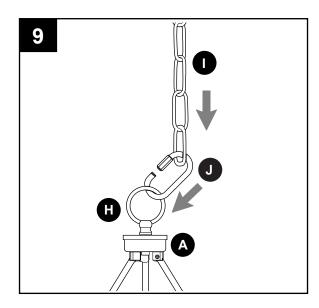


10. Determine the hanging length for fixture (A).
Use pliers, a flathead screwdriver and a soft cloth
(all not included) to open the link of chain (I) at
length chosen. Remove any extra chain (I) at this
time and then close link.

Feed wiring from fixture (A) up through chain (I) to pre-determined length.

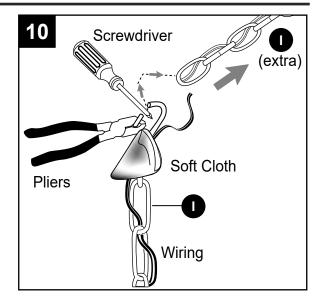


11. Remove threaded ring (G) from screw collar loop (F). Feed chain (I) and wiring through threaded ring (G) and then canopy (B), allowing threaded ring (G) and canopy (B) to slide down the chain (I) until they reach the top of fixture (A).

Lift chain (I) toward threaded rod (D) and attach screw collar loop (F) on threaded rod (D).

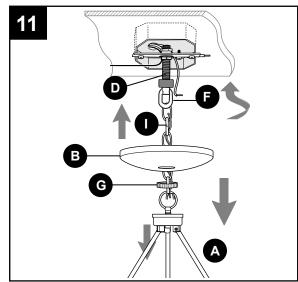

12. Feed wiring up through hole at bottom of threaded rod (D). Gently push wiring until it comes through top of threaded rod (D). Pull all wiring until there is no extra slack left in the wires running through the chain (I).

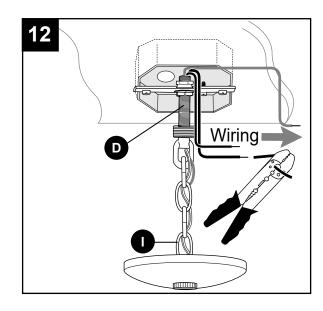

13. Prepare wire by stripping 3/4 in. of insulation from wire ends using wire strippers (not included). Connect BARE/GREEN ground wire from outlet box to BARE ground wire from fixture (A) using wire connector (AA). Connect RIBBED wire from the fixture (A) to WHITE wire from outlet box using existing wire connector or wire connector (AA). Connect the SMOOTH wire from the fixture (A) to BLACK wire from outlet box using existing wire connector or wire connector (AA).

NOTE: If outlet box does not have a BARE/GREEN wire, the BARE ground wire from fixture (A) should be attached to the GREEN SCREW (labeled GND) on mounting strap (C).

NOTE: Screw wire connectors (AA) on in a clockwise direction.

 
WARNING: Never connect ground wire to WHITE or BLACK power supply wires.

WARNING: To reduce the risk of fire, electrical shock or personal injury, wire connectors (AA) provided with this light fixture are designed to accept only one 12-gauge house wire and two lead wires from the light fixture. If your house wire is larger than 12-gauge or there is more than one house wire to connect to the corresponding fixture lead wires, consult an electrician for the proper size wire connectors to use.






Wire Connector




x 3

 Wrap electrical tape (not included) around each individual wire connector (AA) down to the wire.


WARNING: Make sure no bare wire or wire strands are visible after making connections.

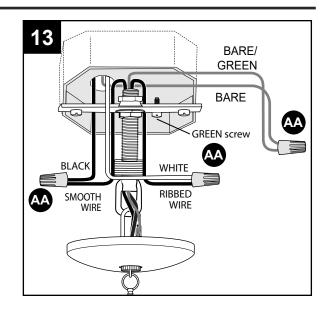

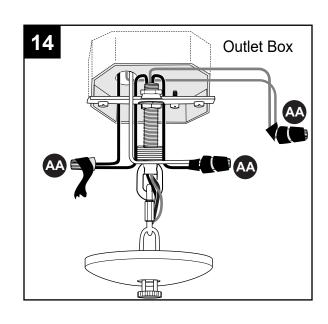


15. Carefully arrange excess wiring and wire connectors (AA) within outlet box.

Slide canopy (B) and threaded ring (G) up the chain (I). Secure canopy (B) to mounting strap (C) by tightening the threaded ring (G).

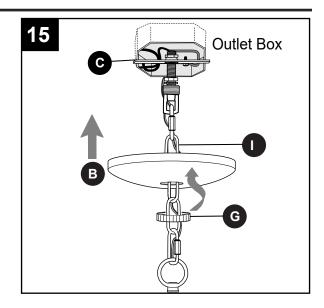

16. Place socket covers (K) on each socket on fixture (A).

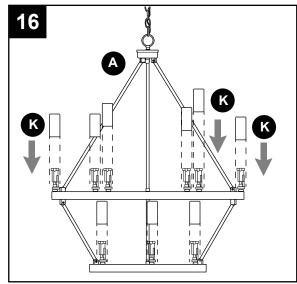


17. Install nine 40-watt max. candelabra-base incandescent bulbs (not included) or CFL/LED equivalent.

CAUTION: When replacing bulbs, please allow bulbs to cool down before touching.

Restore power and test fixture (A).

If lights do not function, please refer to TROUBLESHOOTING on the next page.

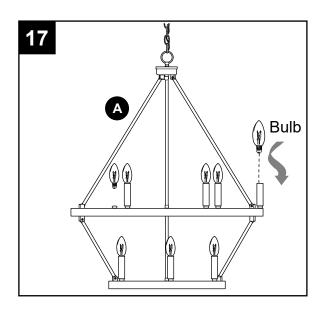

CARE AND MAINTENANCE

• Shut off main power supply. Wipe fixture with soft, damp cloth. Do not use an abrasive cleaner on fixture.

TROUBLESHOOTING

MARNING: Before beginning work, shut off the power supply to avoid electrical shock.

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Bulb will not light.	 Bulb(s) is(are) burned out. Power is OFF. 	Replace light bulb(s). Make sure power supply is ON.
	3. Faulty connection.	3. Check wiring and all connections.
Fuse blows out or circuit breaker trips.	Crossed wires. Power wire is grounding out.	Check wiring. Check all connections.

WARRANTY

The distributor warrants all of its lighting fixtures against defects in materials and workmanship for one (1) year from the date of purchase. If within this period the product is found to be defective, take a copy of the bill of sale as a proof of purchase and the product in its original carton to the place of purchase. The distributor will, at its option, repair, replace or refund the purchase price to the consumer. All costs of installation and removal of the fixture is the responsibility of the consumer. This warranty does not cover fixtures becoming defective due to misuse, accidental damage or improper handling and/or installation and specifically excludes liability for direct, incidental or consequential damages. As some states do not allow exclusions of limitations on an implied warranty, the above exclusion and limitation may not apply. This warranty gives you specific rights and you may also have other rights which may vary from state to state.