



## Instruction Manual

Please save this manual for future reference.

<b>Product Name:</b>	4Ft Pre-Lit Green Flocked Potted Artificial Christmas Tree
<b>SKU #:</b>	WHAP1804

Thank you for purchasing this LuxenHöme product. This product has been manufactured with the highest standards of safety and quality.

### **PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.**

Unpack all parts from Styrofoam and bubble wrap inside the carton to ensure there are no missing or damaged parts. If any parts are missing or damaged, do not attempt to assemble or use the product.

### **CARTON CONTENTS:**

<b>Description</b>	<b>Quantity</b>
Tree Top (A)	1
Tree Bottom (B)	1
MgO Pot	1

### **Before You Start**


1. Decide on an appropriate location for your product, please read assembly and Instruction procedure carefully.  
Note: This tree may utilize light sets that are marked for indoor and outdoor use, but the artificial tree is for indoor display only.
2. Retain the instructions for future use and save the carton for storing your tree.

### **Assembly and Instruction Procedure (no tools required for assembly):**

Remove all packaging (i.e., cardboard or plastic) before beginning. Since the artificial tree has snow-flocking, we suggest unpacking the tree on a large cloth. Some of the flocking may come off during unpacking and fluffing of branches. Select a location that is near a wall outlet.

1. Assemble the Tree:  
Each tree section is identified with a tag named A or B. Please identify the sections before assembling.  
Remove the protective cap and assemble the tree from the bottom to the top. Insert the bottom section of tree body into the pot.  
Next, insert the top section of tree body into the bottom section of tree body.  
Connect the light strings as per the color labels indicated in Fig. A and insert yellow labeled plug into the wall outlet. Your entire tree should now be lit. If some bulbs do not light or flickers, see the Troubleshooting section for tips.

<b>Product Name:</b>	4Ft Pre-Lit Green Flocked Potted Artificial Christmas Tree
<b>SKU #:</b>	WHAP1804

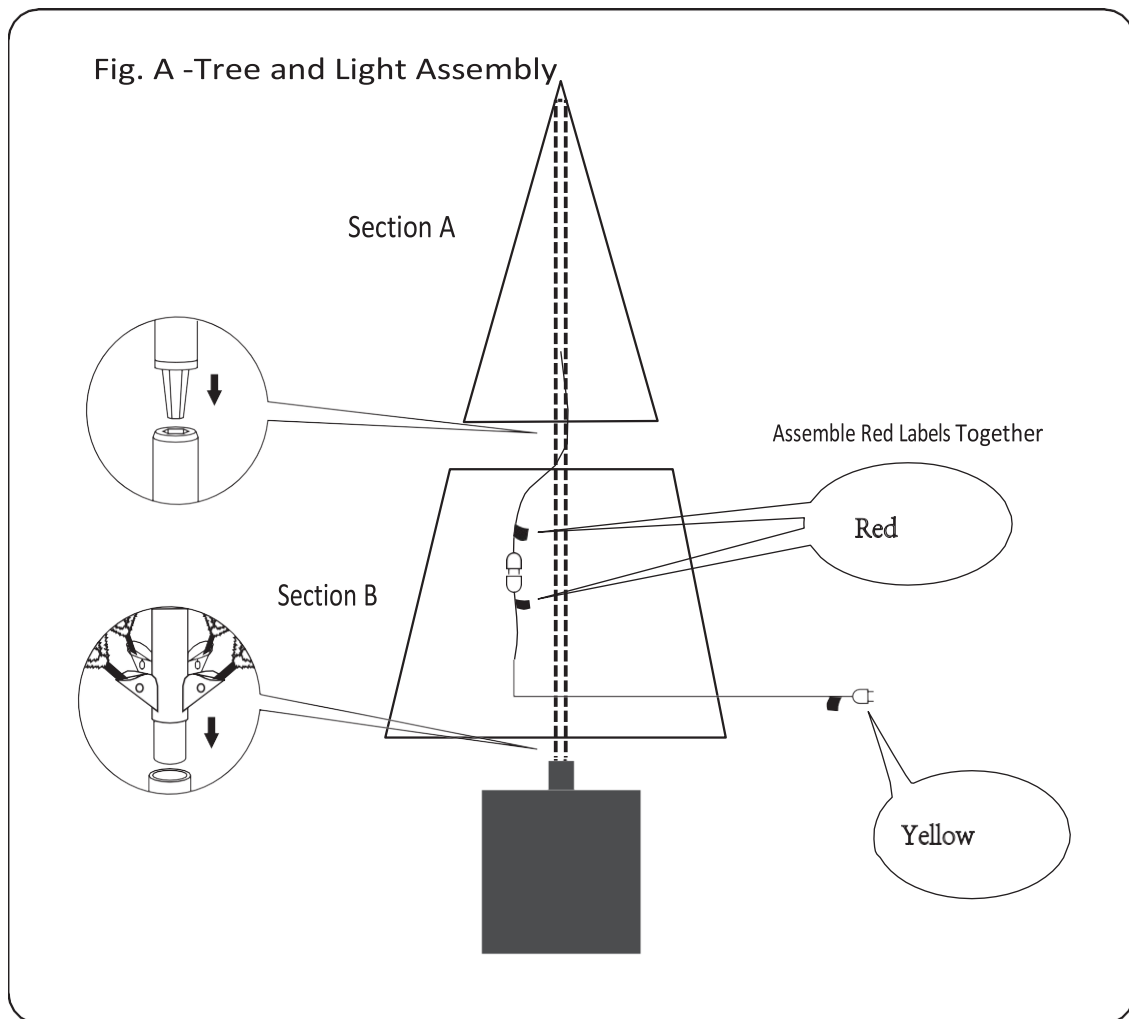

### 2. Shape the Tree:

Begin to shape the branches from the bottom of the tree to the top. Start with the tree tips farthest away from the center pole.

After shaping the tree, step back to look for any gaps. Reshape branches as needed. You can upsweep the branch tips for a uniform look. Once you have the tree the way you want it, you can start decorating!



Fig.1

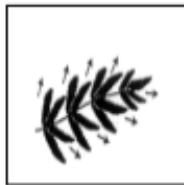 


Fig.2

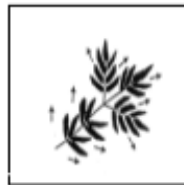 


Fig.3

<b>Product Name:</b>	4Ft Pre-Lit Green Flocked Potted Artificial Christmas Tree
<b>SKU #:</b>	WHAP1804



### Warnings:

1. Risk of Fire and Electric Shock – please follow instructions and warnings on string lights if adding lights to trees.
2. Do not place it near fireplaces, candles, outdoor heaters, or other similar sources of heat. This item is not flame retardant.
3. Do not install near pools, fountains, tubs, sinks, or other areas of standing water that the tree may fall or blow into.
4. Keep wires clear of being pinched or cut during assembly or installation. Discard sets with cut or pinched insulation.
5. Make sure the final assembly stable enough to hold the tree upright.
6. Do not use candles on tree. Use only with the pre-installed string lights included.
7. This product is for decoration use only. Not to be used by children as a toy. Keep out of reach of small children.

### Troubleshooting:

1. Some bulbs are not lighting, or lights do not come on at all: Search for any loose plug connections between the tree sections. Search for loose or missing bulbs. Replace bulbs promptly in order to maintain the performance and life expectancy of your pre-lit tree.
2. Some bulbs are not lighting, or lights do not come on at all: Check to make sure that all plugs are properly connected according to the color labels indicated in Fig. A and the power cord is plugged into the wall outlet. Refer to assembly guide for instructions.
3. Some bulbs are not lighting, or lights do not come on at all: Check for fuses at the light string plugs and power cord plug. Replace as needed. Note: Please make sure to use appropriate replacement fuses as indicated on the light string plug and power cord plug.
4. Tree is not straight: Try adjusting the pole to ensure it is securely fitted into the pot. It is better if the tree is in the vertical position when adjusting.

Note: If these actions do not resolve the issue with the tree, please do not disassemble the tree yet. Please contact customer service for assistance.

### Storage:

1. Remove all decorations (this does NOT include the pre-installed string lights).
2. Starting from the top, carefully unassembled the tree sections. Press the tree tips back up against the pole.
3. Place the branch sections back into the carton, putting the longest one on the bottom.
4. Store the product in a cool, dry location protected from sunlight where the temperature does not exceed 35°C (95°F).