


ASSEMBLY INSTRUCTIONS

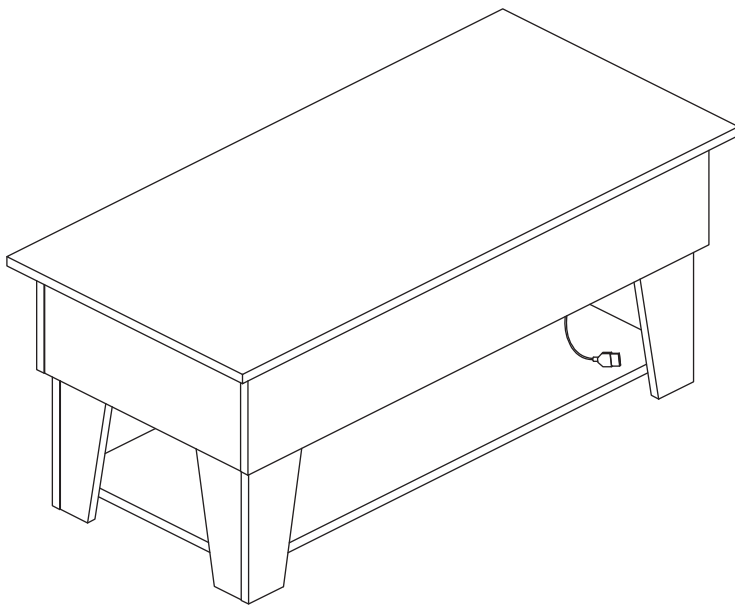

TOOLS REQUIRED



Hammer

(Not Included)



Philips Screwdriver

(Not Included)



**2 - People
Recommended**

ASSEMBLY RATING



EASY —————> DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.



CHECK BEFORE STARTING

☐

Are you missing anything?

Double-check all parts, hardware and accessories listed are all accounted for.

☐

Check out our Quick Tips!

We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!

☐

Should we send any replacements?

Are there any irregularities or flaws in the parts? We can send replacements!


☐

Prep Time!

Please review the assembly instructions and all diagrams prior to assembling. Arrange parts as recommended on Page 7 and group identical hardware together to make assembling easier.



PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.

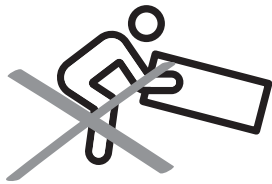

Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.

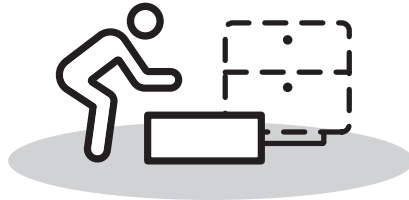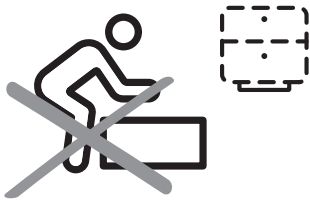

Suitable Location

Assembling near the area of the intended location is highly recommended.




Sufficient Space

Make sure you have enough space to move around during the assembly.



Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.

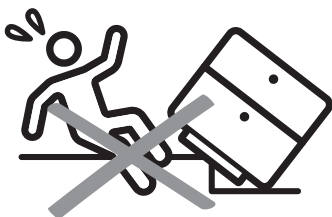

Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.


ASSEMBLY AND CARE ADVICE



**FAILURE TO FOLLOW THE GUIDELINES BELOW MAY
RESULT IN INJURY AND/OR PROPERTY DAMAGE.**



Position each part correctly
and insert screws or bolts into
their respective holes.

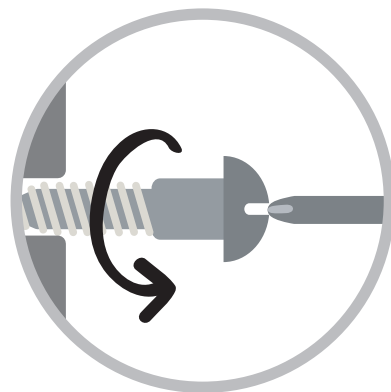


Turn clockwise to tighten and
only tighten when step is
completed or when instructed
to do so.



Save the instructions and store
any supplied tools for later
maintenance.

Use the appropriate hand tools
or power tools for assembly.
Select steps, such as tightening
screws and/or bolts, may require
hand tools to avoid causing
damage during assembly.

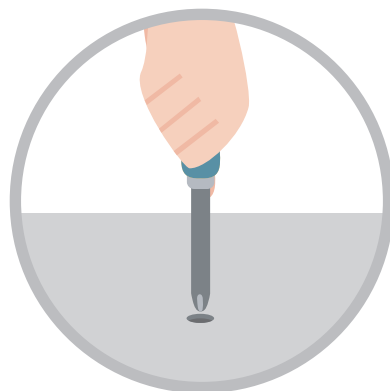


After two weeks, check and
tighten any loose hardware and
repeat again every six months
thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

CAM LOCK FASTENER ASSEMBLY INSTRUCTIONS

Note :


Every cam lock bolt must have a cam lock connector in order to fasten the parts together.

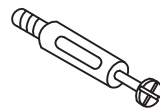


cam bolt



cam lock

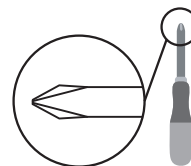


screwdriver

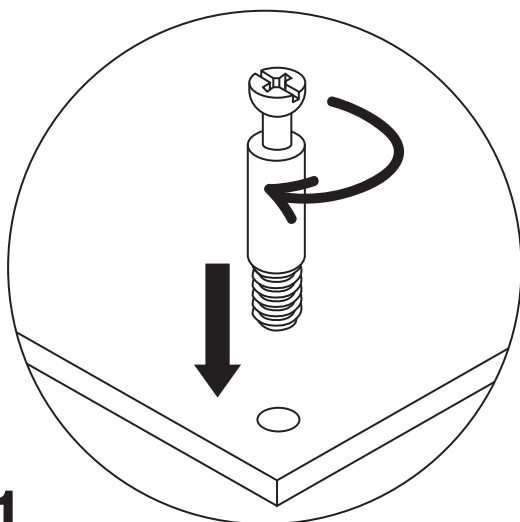


1

Screw the cam bolt into panel.

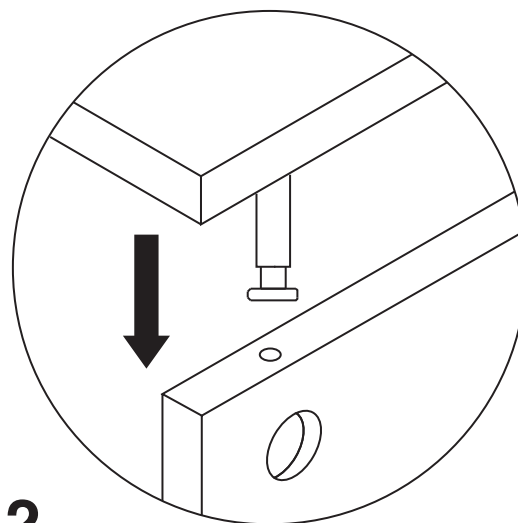


2

Insert the cam bolt into the bolt hole of joint panel.

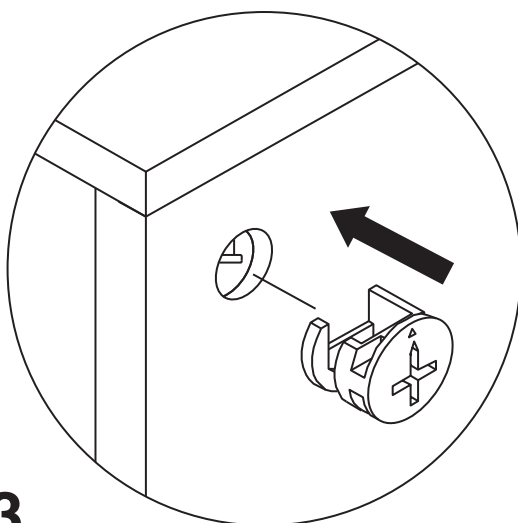

3



Align the cam lock with its side opening (or arrow) pointing to cam bolt.

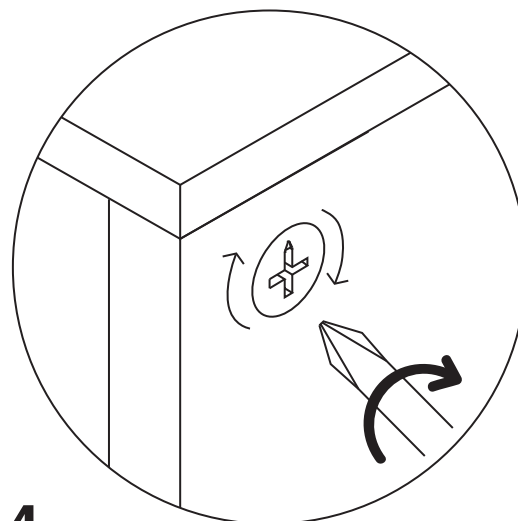


4

Turn the cam lock clockwise gently until it will not turn any more.

 
COFFEE TABLE

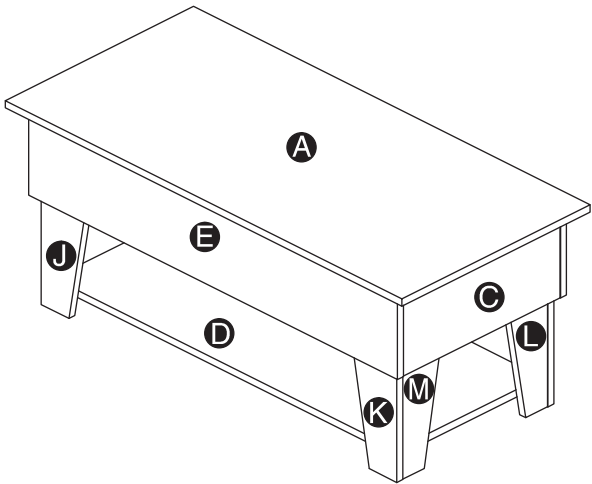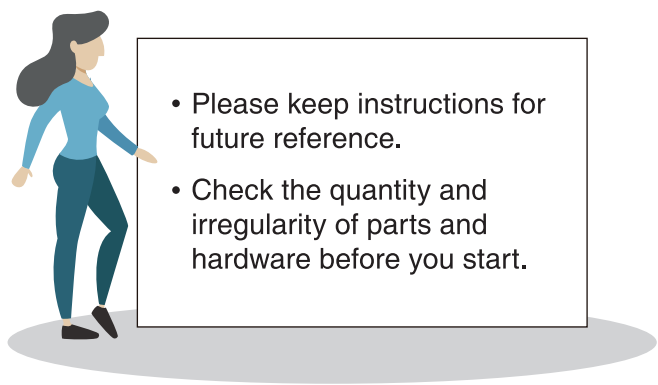


PARTS

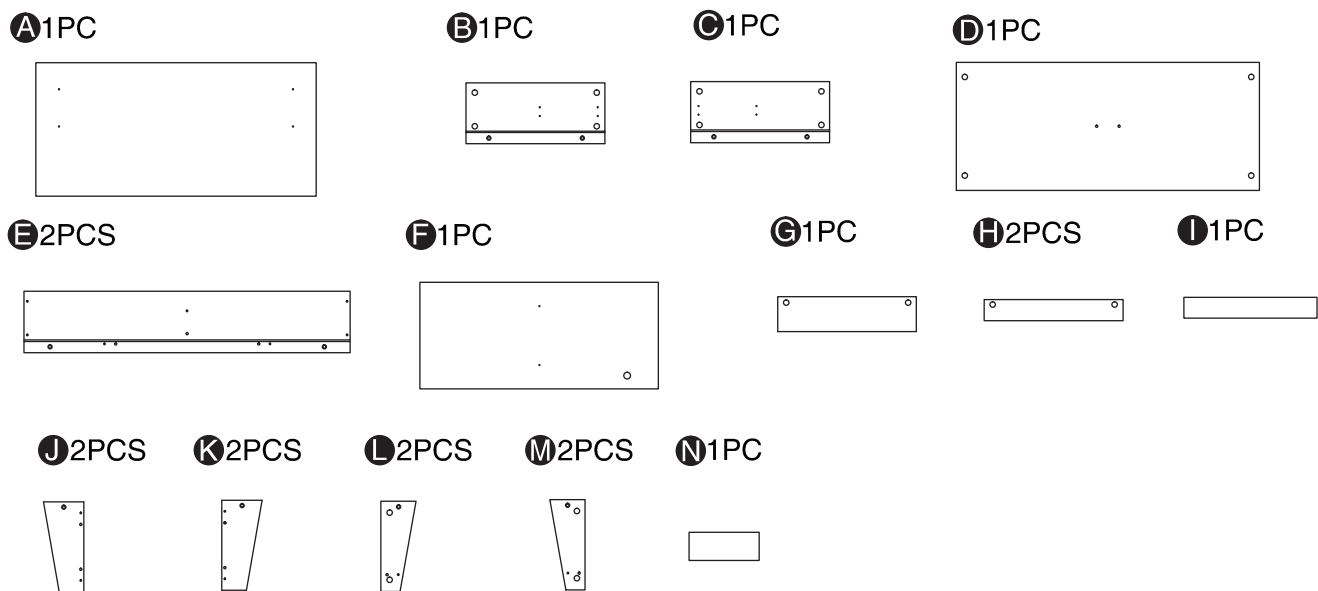

HARDWARE

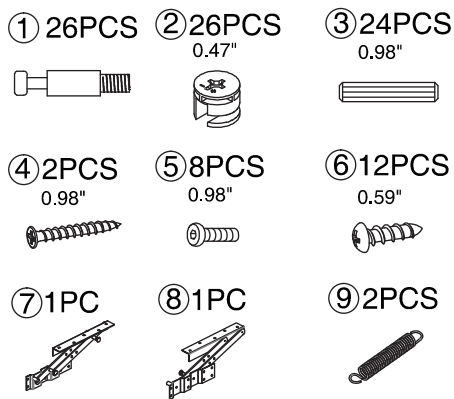


ACCESSORIES

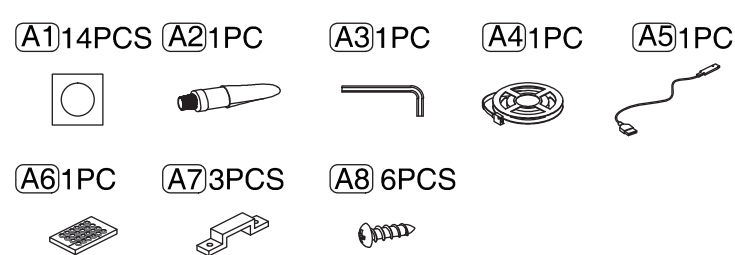


GET READY

Please group boards as below.


G1PC

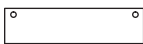


H2PCS

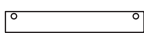


I1PC

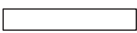


B1PC

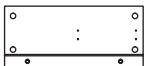


C1PC

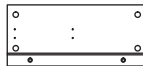

E2PCS

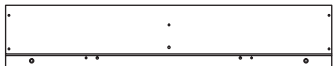

F1PC

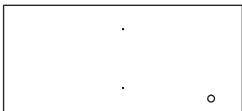

J2PCS



K2PCS




L2PCS



M2PCS



D1PC

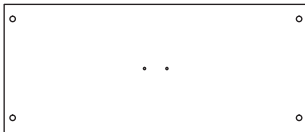

N1PC



A1PC



Body












ASSEMBLY INSTRUCTIONS

1

Hardware ① x 26PCS

Hardware ③ x 24PCS


Accessory A2 x 1PC

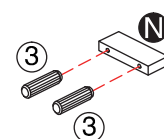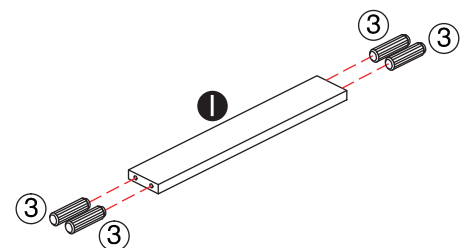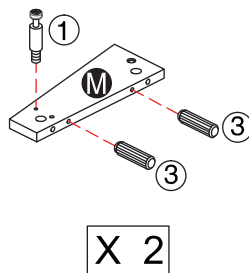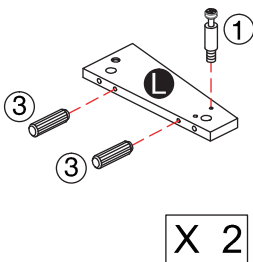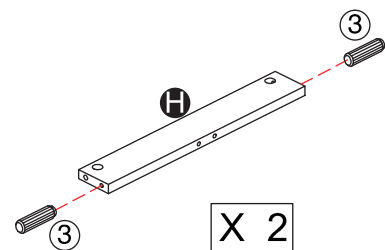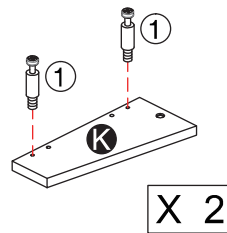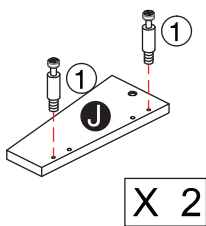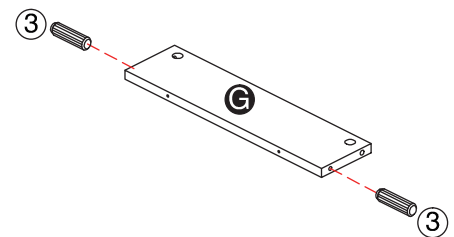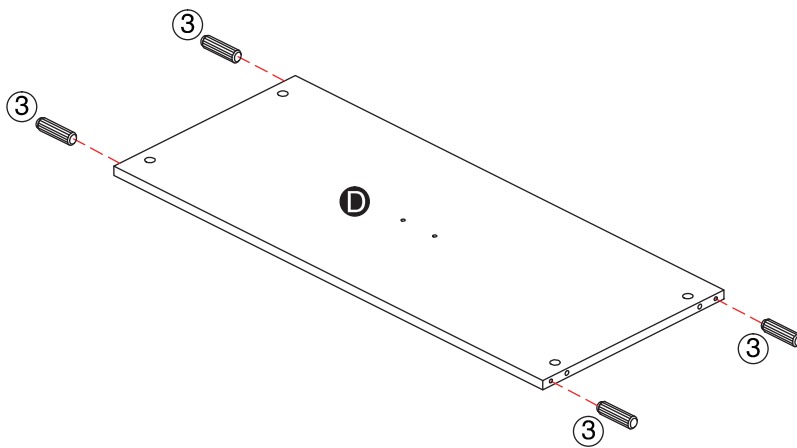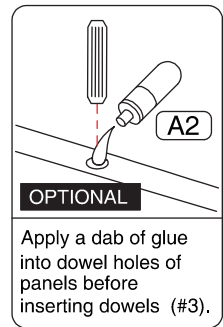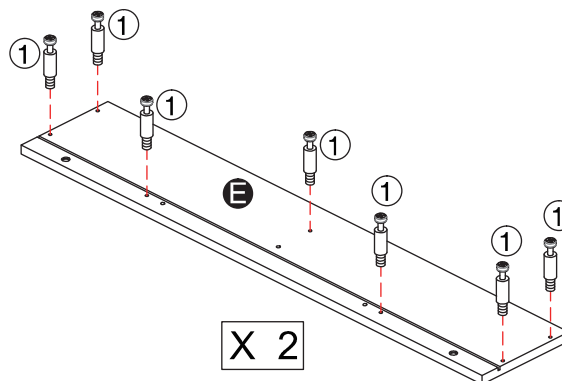

ASSEMBLY INSTRUCTIONS


2

- Part **B** x1PC
- Part **C** x1PC
- Part **E** x1PC
- Part **G** x1PC
- Part **H** x2PCS
- Part **I** x1PC
- Hardware **(2)** x 7PCS
- Accessory **(A1)** x 5PCS

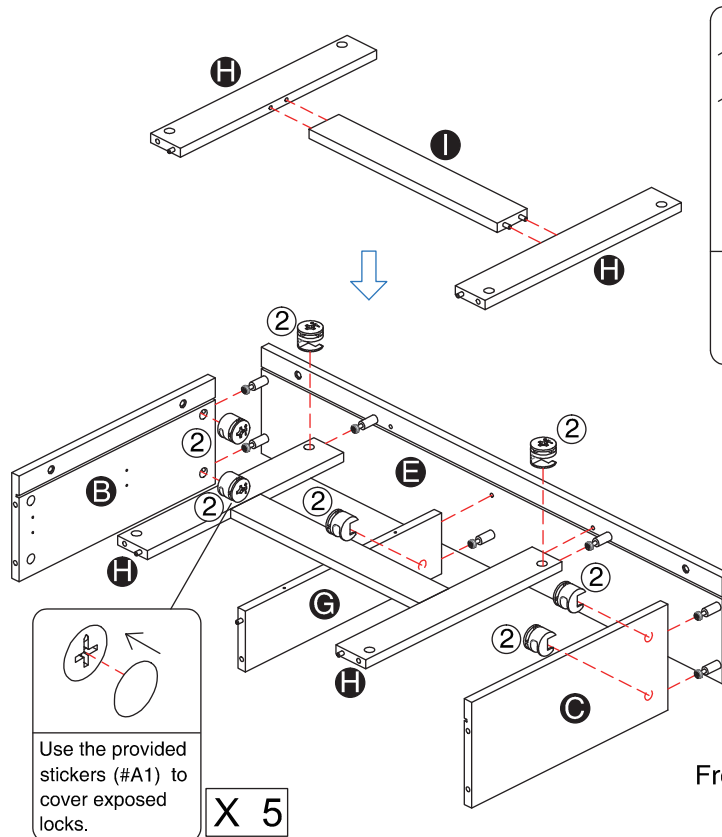

3

- Part **F** x1PC

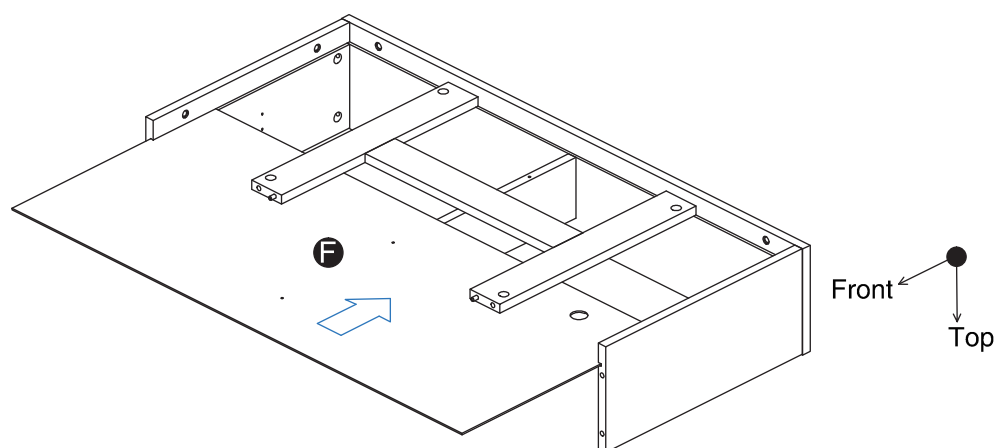

ASSEMBLY INSTRUCTIONS


4

Part **E** x1PC

Hardware **2** x 7PCS

Hardware **4** x 2PCS

Accessory **A1** x 5PCS

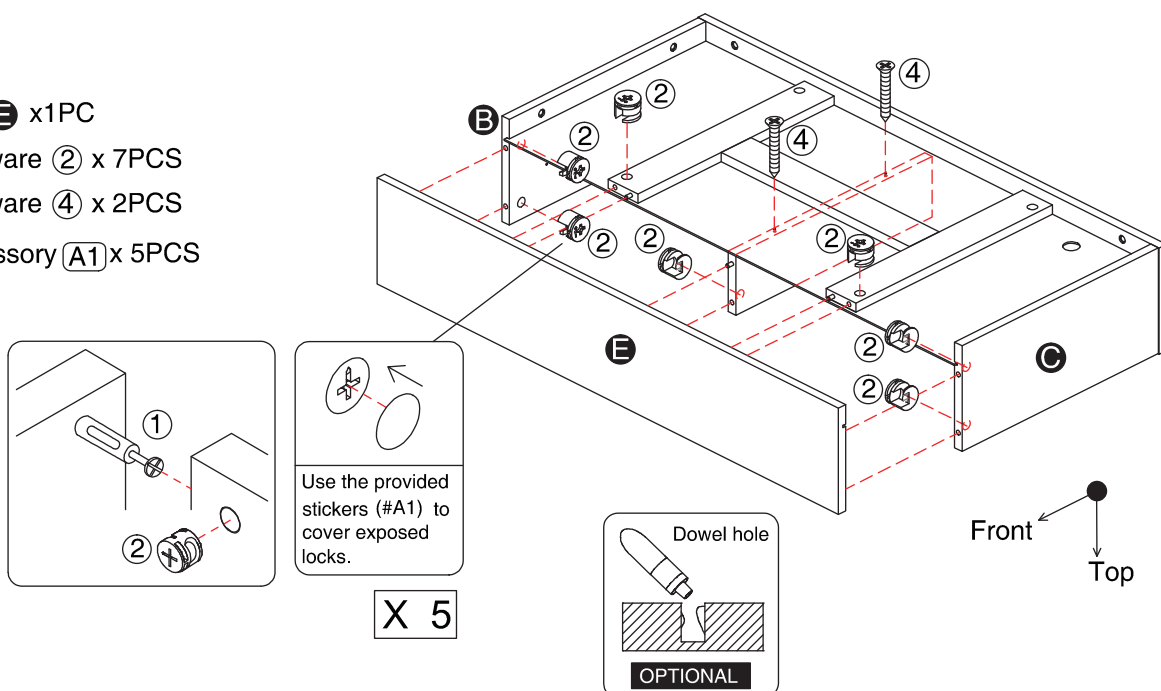


5

Accessory **A4** x 1PC

Accessory **A5** x 1PC

Accessory **A7** x 3PCS


Accessory **A8** x 6PCS

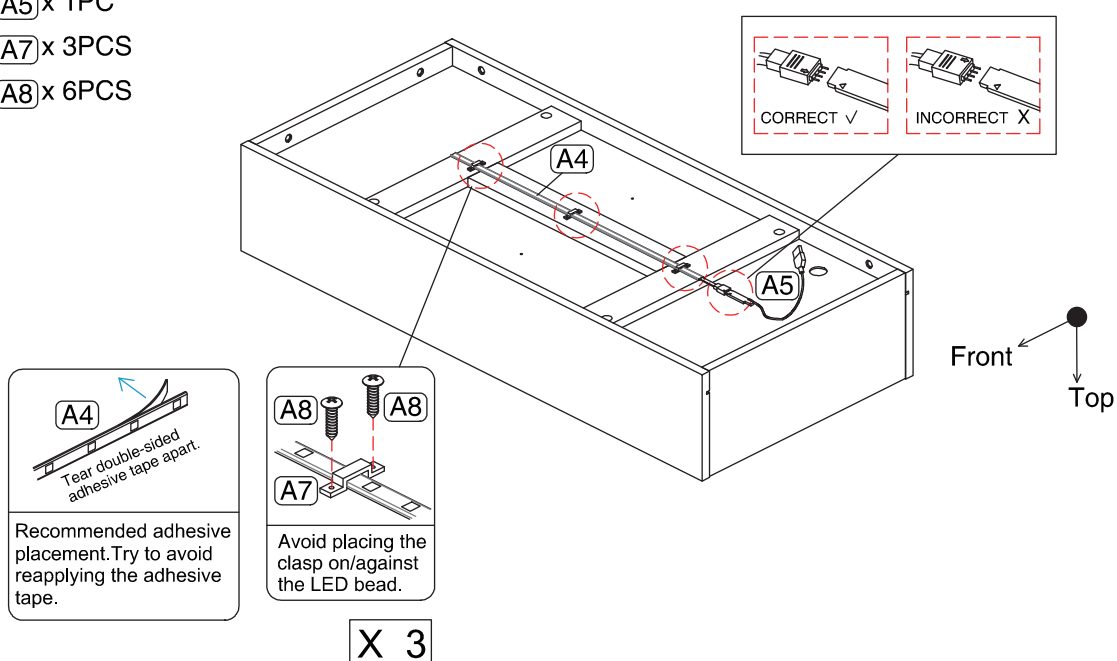


ASSEMBLY INSTRUCTIONS

6


- Part **J** x2PCS
- Part **K** x2PCS
- Part **L** x2PCS
- Part **M** x2PCS
- Hardware **2** x 8PCS
- Accessory **A1** x 4PCS

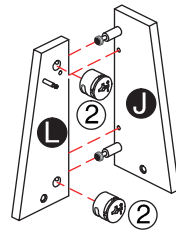

X 2

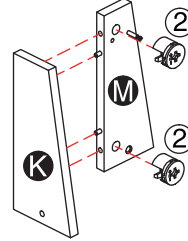




X 2

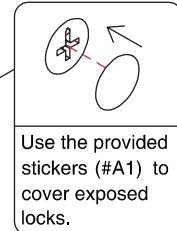

X 4

7

- Part **D** x1PC
- Hardware **2** x 4PCS

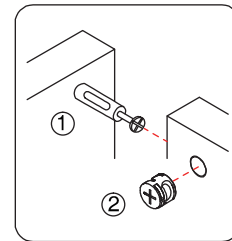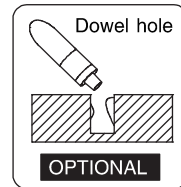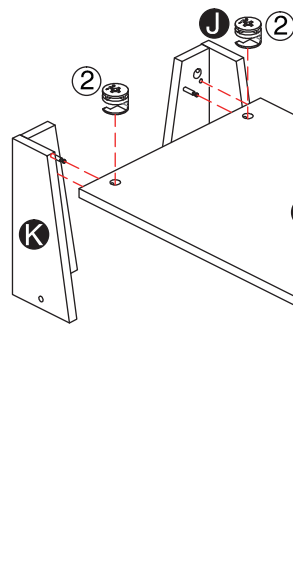

Front
Top



ASSEMBLY INSTRUCTIONS

8

Part **N** x1PC

Hardware **5** x 8PCS

Accessory **A3** x 1PC

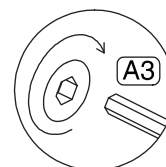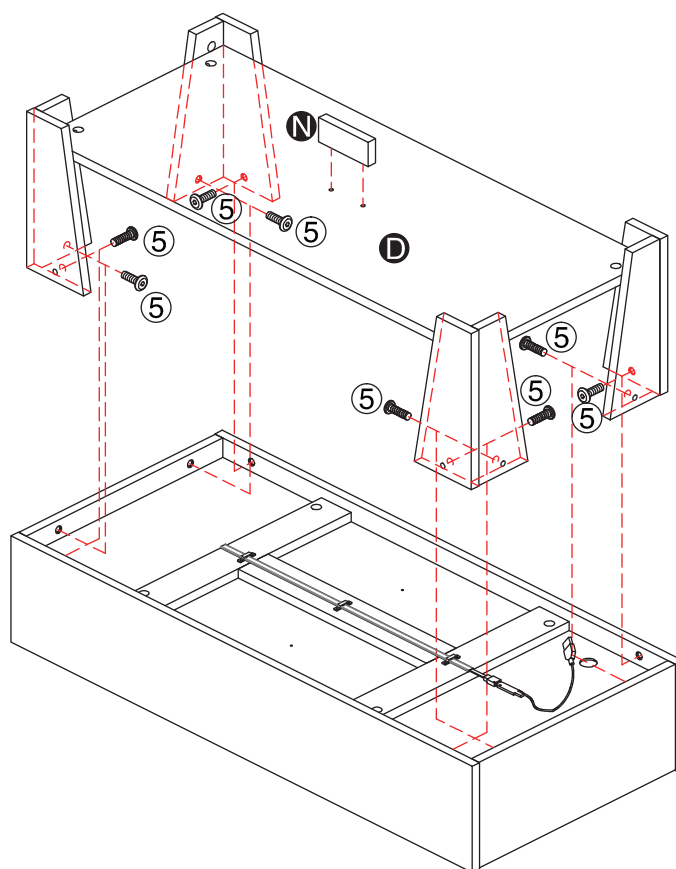



Front
Top

9

Hardware **7** x 1PC

Hardware **8** x 1PC

Hardware **9** x 2PCS

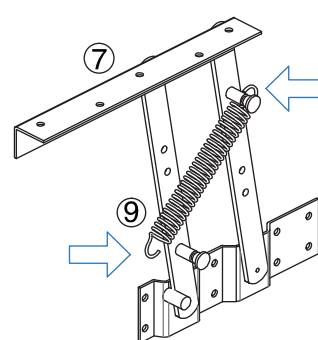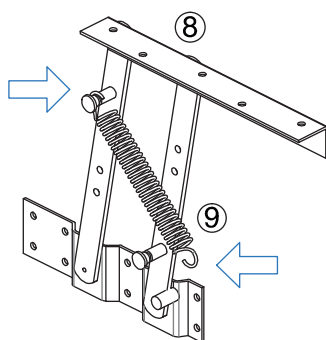


Align and hook the springs to the hinges.

ASSEMBLY INSTRUCTIONS

10


Part **A** x1PC

Hardware **⑥** x 4PCS

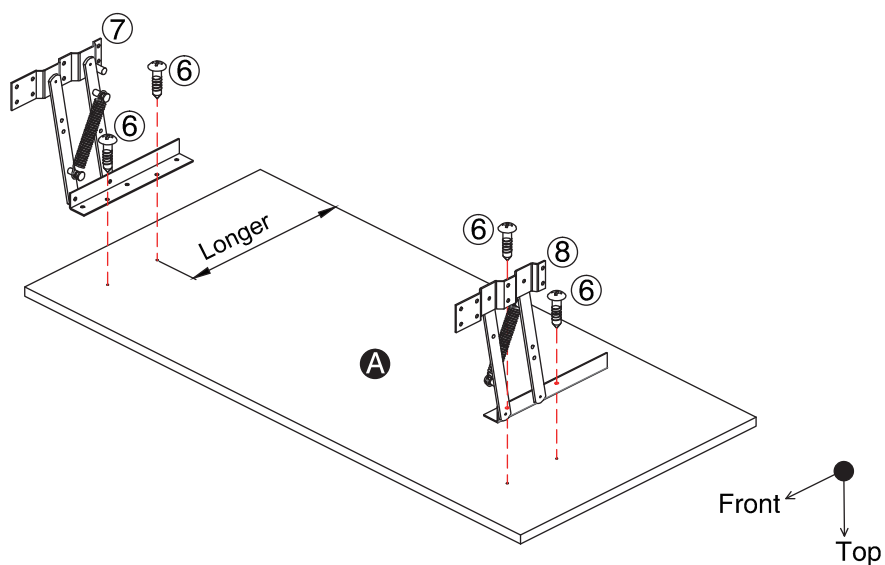

11

Hardware **⑥** x 8PCS

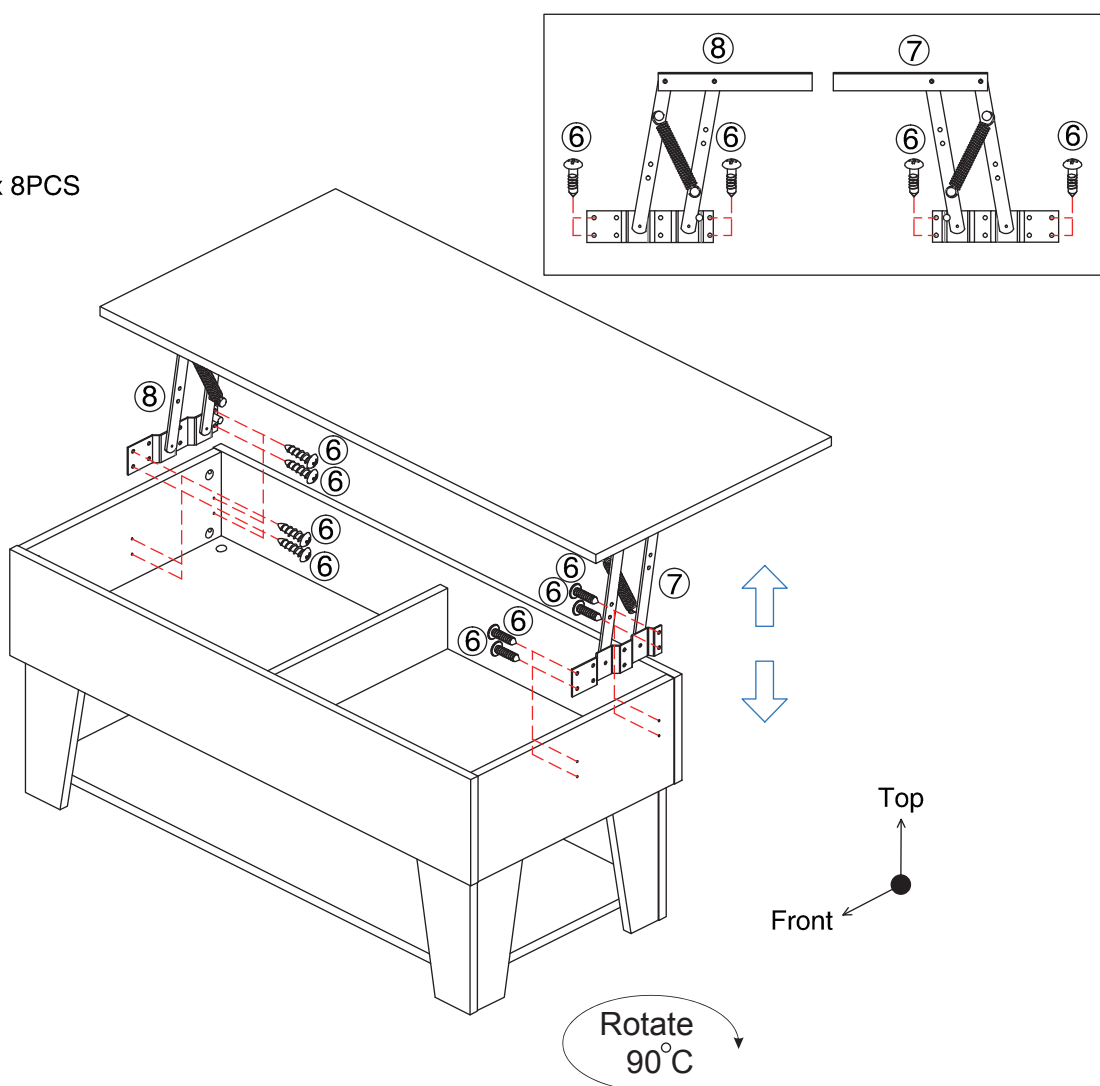

ASSEMBLY INSTRUCTIONS

12

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.




Keep this handy!

Please retain this instruction manual and any order-related information for future reference.




Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting or adjusting the placement.

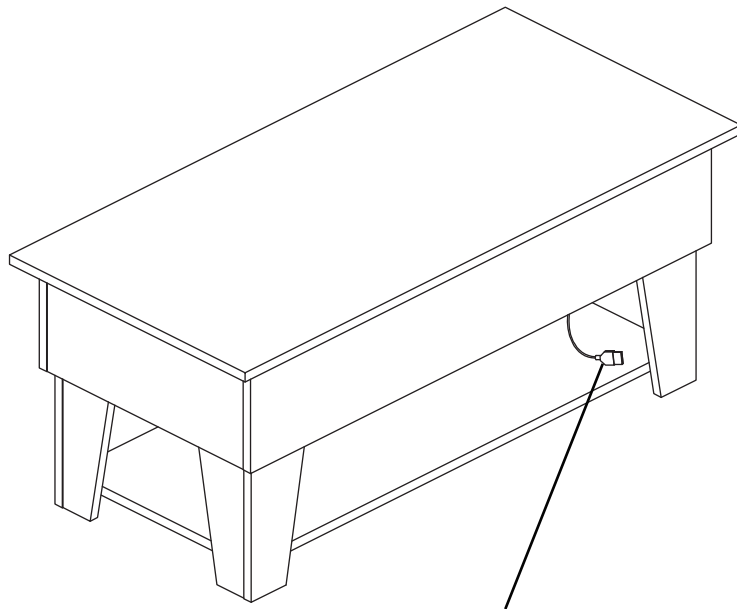

Compatible with portable charger (not included with this product)

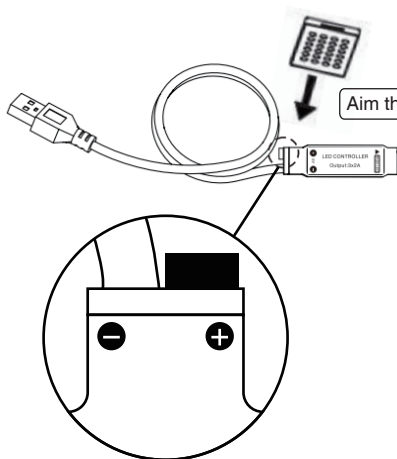

Aim the remote control at the Led controller

