

NOTICE

*Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

*This item may require periodic tightening.

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 90 minutes.

*Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.


Part List

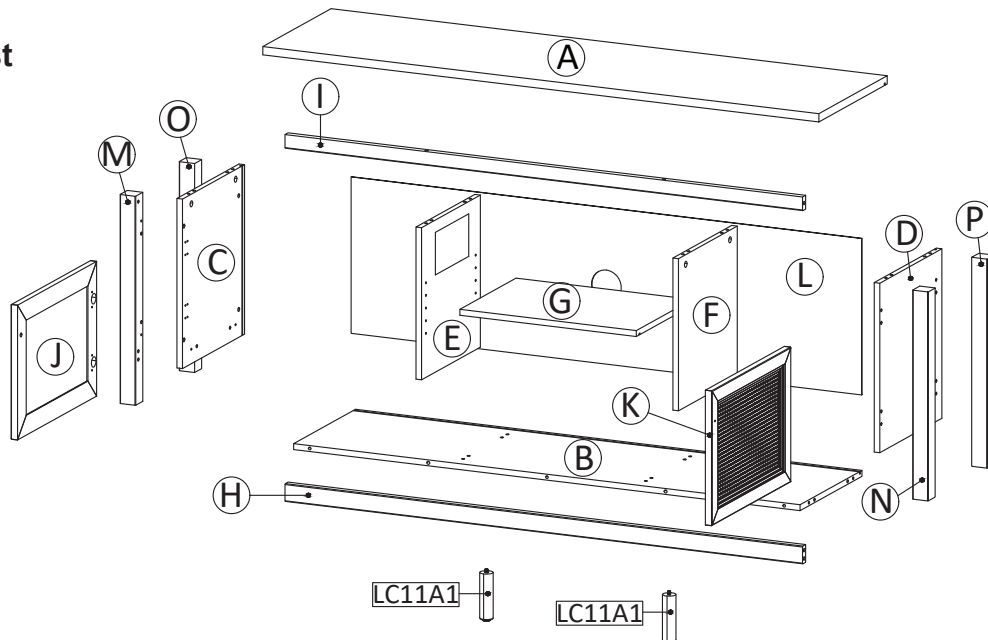

 **SAFAVIEH**
FURNITURE

Model# MED9629

Product Dimensions: 59"Wx16"Dx22"H

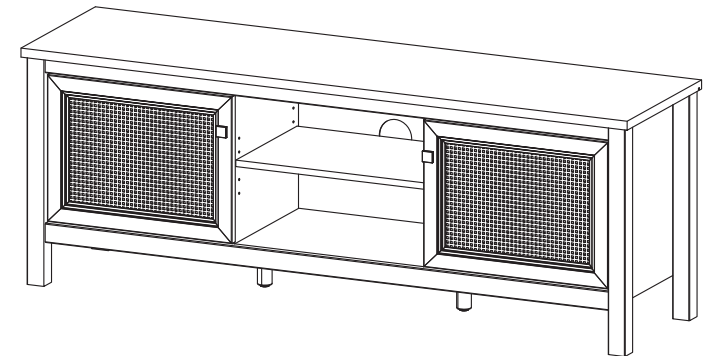









WARNING :

WEIGHT CAPACITY: 86 LBS.

Warning : Do not stand on media stand.

Warning : Do not over torque bolts.

   Hardware List

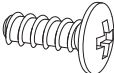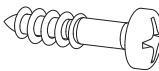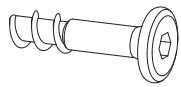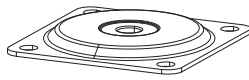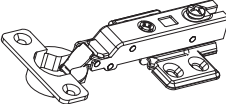HW1x15  Ø 6 x 35 mm	HW2x15  Ø 15 mm	HW3x34  Ø 8 x 30 mm	HW4x4  M 7 x 50 mm	HW5x10 
HW6x32  M 4.5 x 12.5 mm	HW7x2  M 4 x 22 mm	HW8x4 	HW9x2 	HW10x10  M 3.5 x 15.5 mm
HW11x2 	HW12x1 	HW13x1  M 3.5 x 20 mm	HW14x4 	HW15x8  M 6.4 x 25 mm
HW PM2x2 	HW HS26Ax4 			


Part List & HW For Multi-Box Items

Piece	Description	Qty
A	Top Board	1
B	Bottom Board	1
C	Side Board Left	1
D	Side Board Right	1
E	Center Board Left	1
F	Center Board Right	1
G	Adjustable Shelf	1
H	Bottom Skirt	1
I	Front Skirt	1
J	Frame Door Left	1
K	Frame Door Right	1
L	Back Board	1
M	Front Leg 1	1
N	Front Leg 2	1
O	Back Leg 1	1
P	Back Leg 2	1
LC11A1	Leg	2


Piece	Description	Qty
HW1	Cambolt	15
HW2	CamLock	15
HW3	Dowel	34
HW4	Screw M 7 x 50 mm	4
HW5	Wedge	10
HW6	Screw M 4.5 x 12.5 mm	32
HW7	Screw M 4 x 22 mm	2
HW8	Shelf Pin	4
HW9	Allen key	2
HW10	Screw M 3.5 x 15.5 mm	10
HW11	Handle	2
HW12	Mini Block	1
HW13	Screw M 3.5 x 20 mm	1
HW14	Floor Protector	4
HW15	Screw M 6.4 x 25 mm	8
HW PM2	Mounting Plate	2
HW HS26A	Hinge	4

PREPARATION

 
- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 90 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

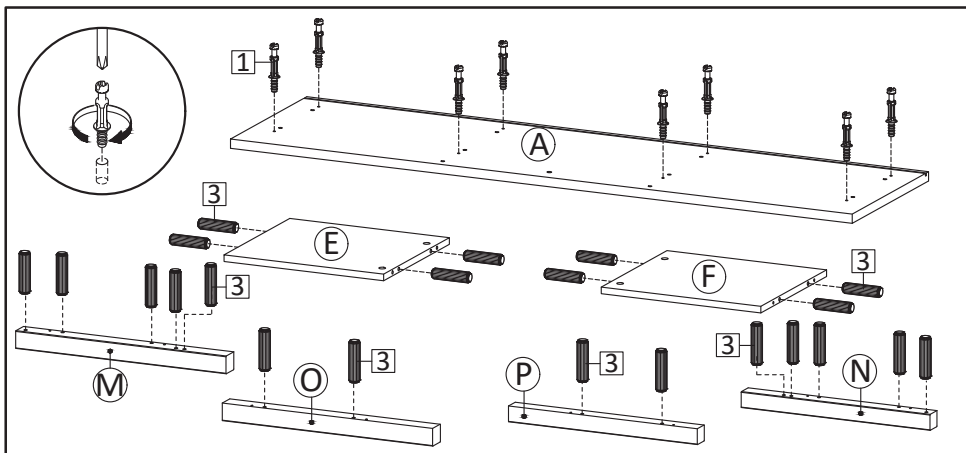

 
STEP1: Insert Cambolt (HW1) into Top Board (A), and insert Dowel (HW3) into Center Board Left (E), Center Board Right (F), Front Leg 1 (M), Back Leg 1 (O), Front Leg 2 (N), and Back Leg 2 (P).

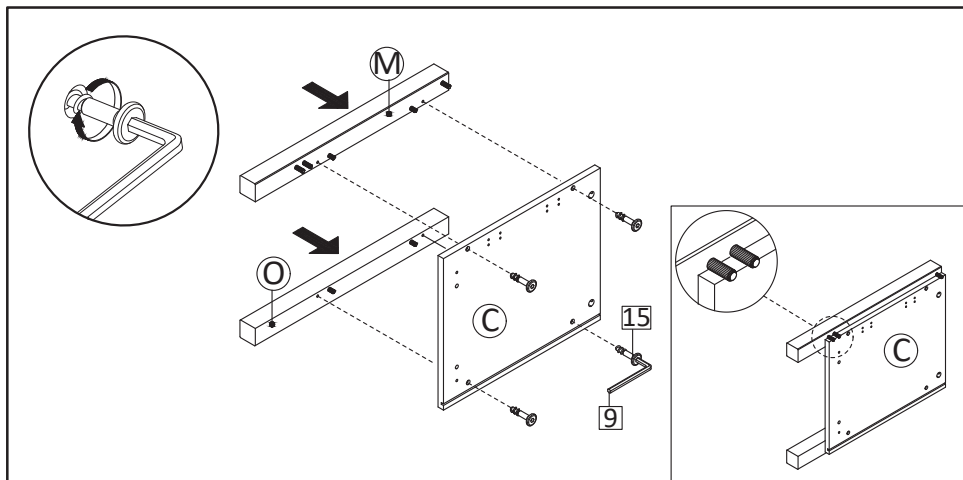

 STEP2: Combine Side Board Left (C), Front Leg 1 (M) and Back Leg 1 (O) secure with Screw M6.4x25mm (HW15), tighten screws using Allen Key (HW9). Carefully check result of assembly as per figure.

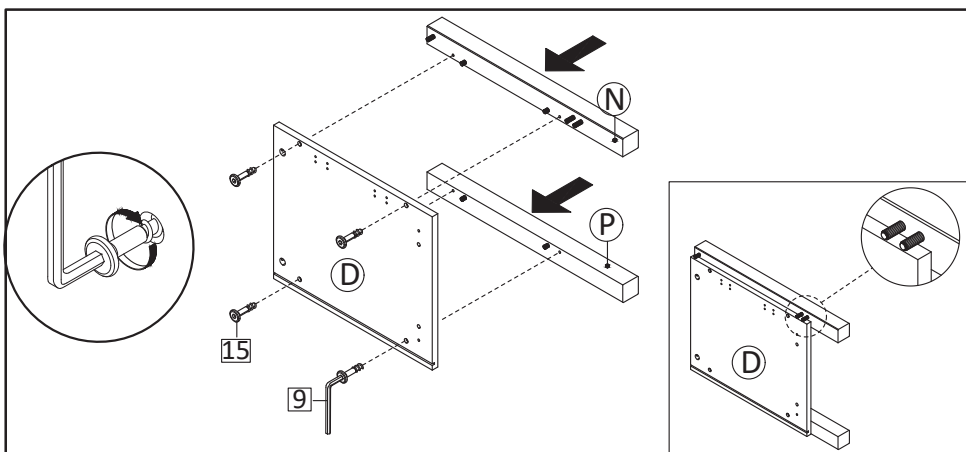

 STEP3: Combine Side Board Right (D), Front Leg 2 (N) and Back Leg 2 (P) secure with Screw M6.4x25mm (HW15), tighten screws using Allen Key (HW9). Carefully check result of assembly as per figure.

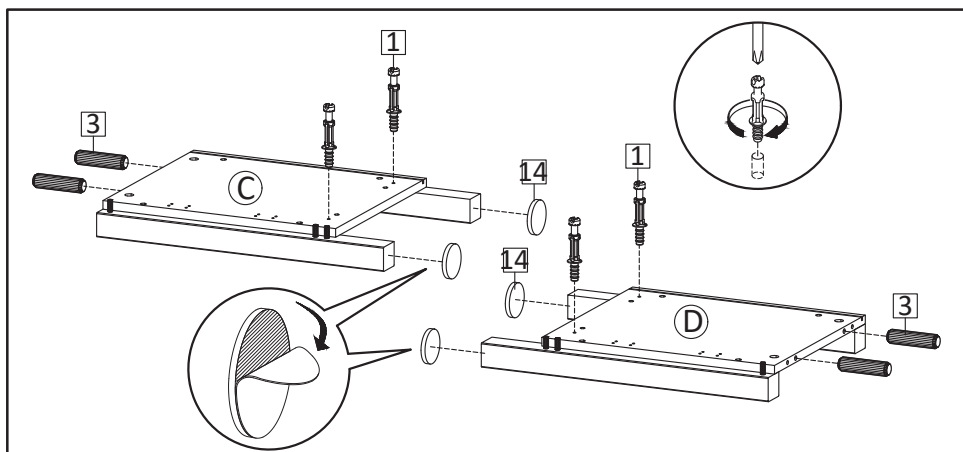

STEP4: Insert Cambolt (HW1) and Dowel (HW3) into Side Board Left (C) and Side Board Right (D). Peel off the back paper of Floor Protector (HW14) then attach to all legs.

PREPARATION

 
*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 90 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

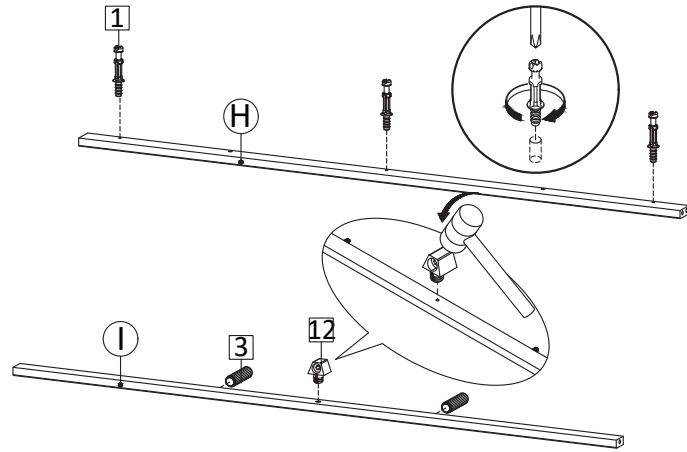

 
STEP5: Insert Cambolt (HW1) and Dowel (HW3) into Front Skirt (I). Attach Mini Block (HW12) into Front Skirt (I) by gently knock it using hammer.

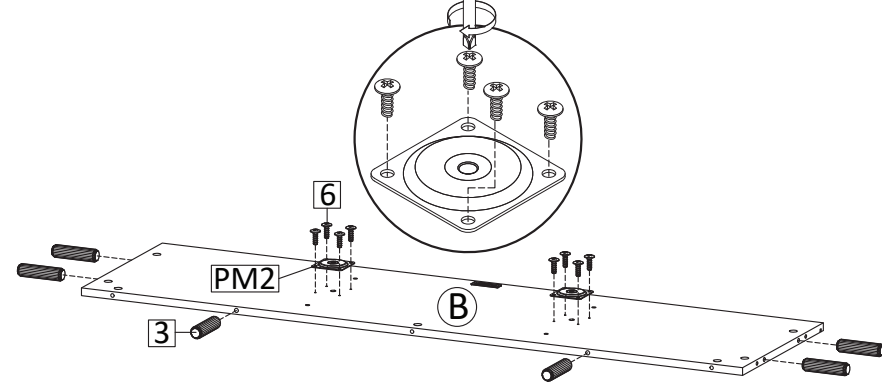

 STEP6: Insert Dowel (HW3) into Bottom Board (B). Install Mounting Plate (PM2) and secure with Screw M4.5x12.5mm (HW6).

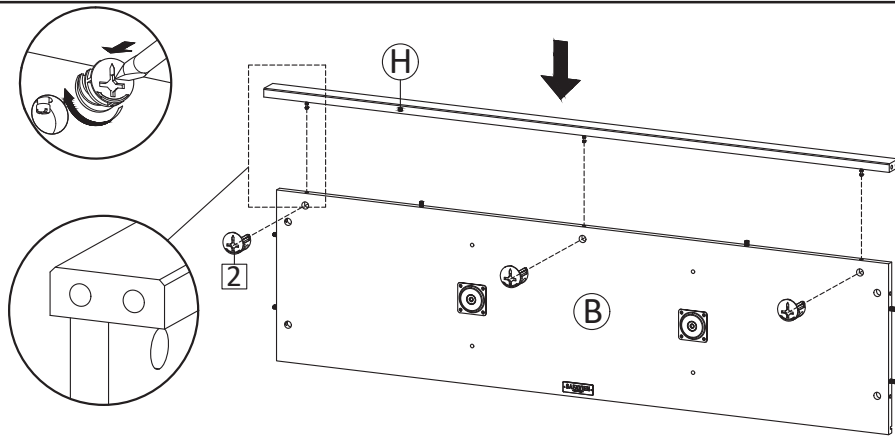

 Step7: Attach Bottom Skirt (H) into BottomBoard (B). Insert Camlock (HW2) then tighten using screwdriver

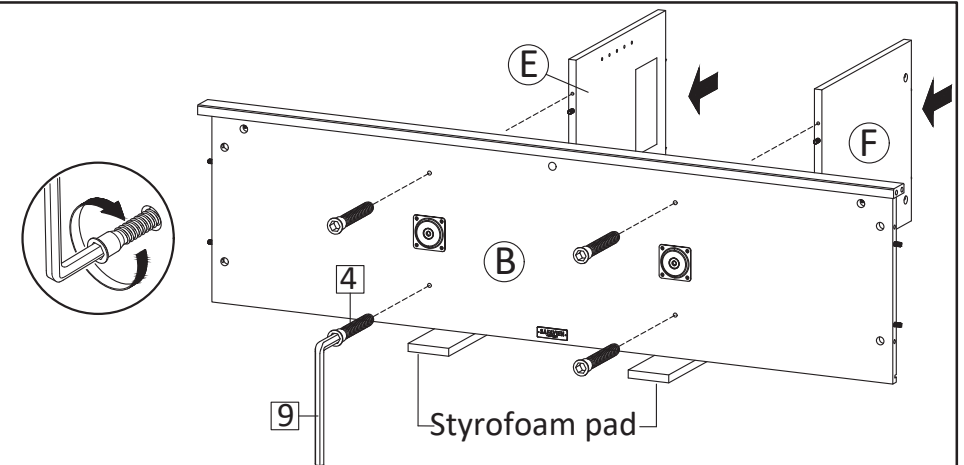

Step8: Use styrofoam from the packaging material to elevate the bottom board (B) from the floor. Insert Center Boards Left&Right (E&F) as figure. Put Bottom Board (B) and secure with Screw M7x50 mm (HW4), tighten screws using Allen Key (HW9).

PREPARATION

 
*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 90 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

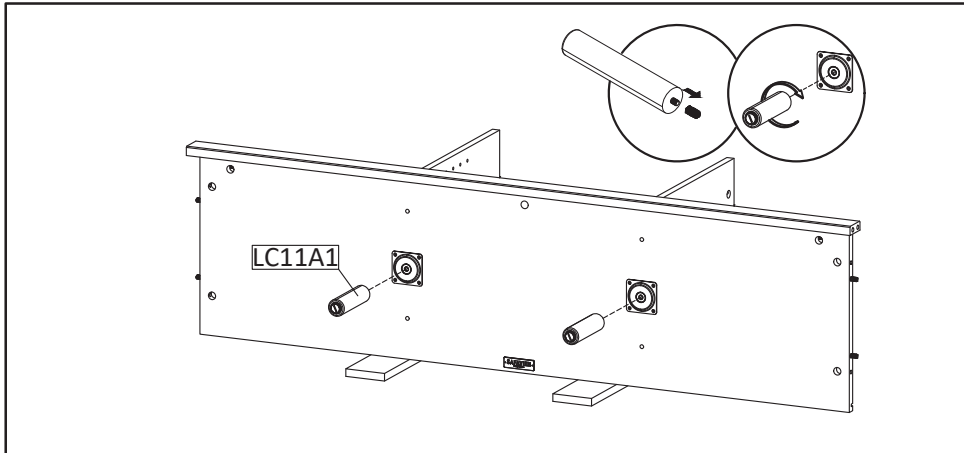

 
STEP9: Insert Leg (LC11A1) into Mounting Plate, tighten by rotating . the leg clockwise.

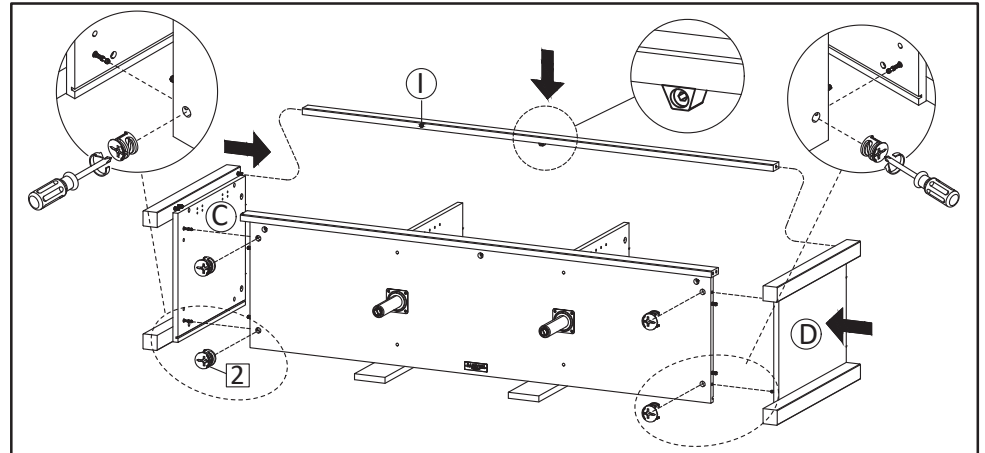

 STEP10: Attach Front Skirt (I), Side Board Left (C) and Side Board Right (D) into Bottom Board (B). Insert Camlock (HW2) then tighten using screwdriver.

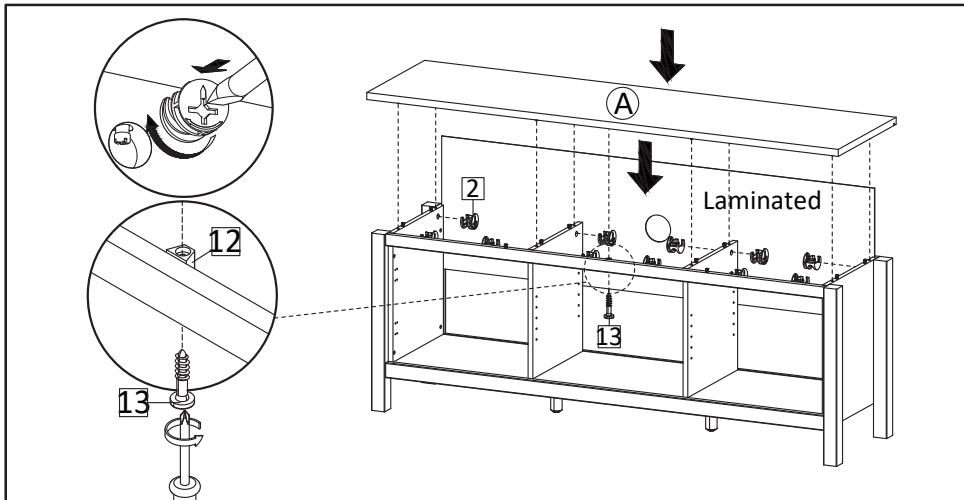

 STEP11: Attach Back Board (L) and Top Board (A) into Body position as shown in the figure. Insert Camlock (HW2) then tighten using screwdriver. And secure with Screw M3.5x20mm (HW13).

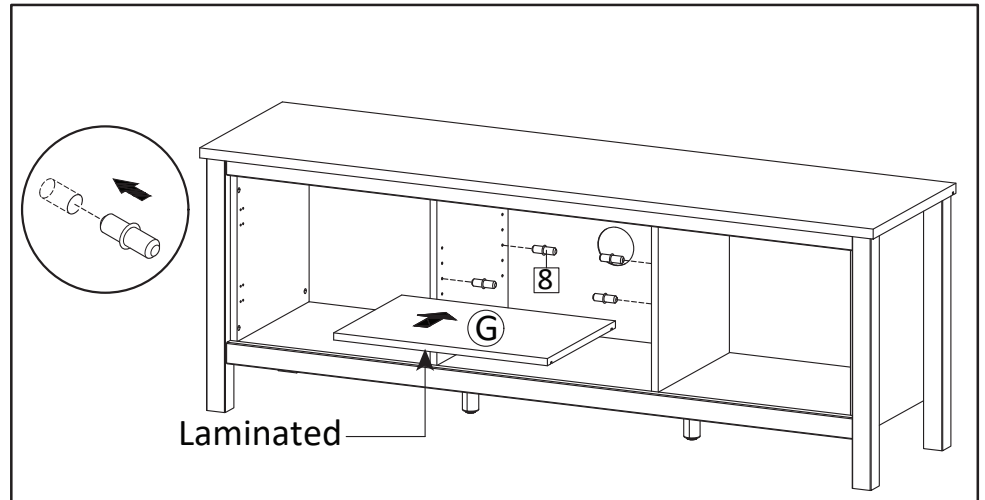

STEP12: Insert Shelf Pin (HW8) into the between Center boards on the desired level. Then place the Adjustable Shelf (G) onto the Shelf Pin.

PREPARATION

 
*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 90 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

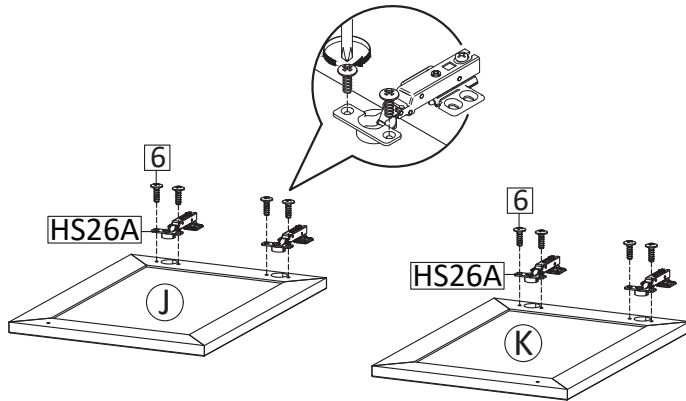

 
STEP13: Insert Hinge (HW HS26A) into Frame Door Left (J) and Frame Door Right (K). Secure with Screw M4.5x12.5mm (HW6).

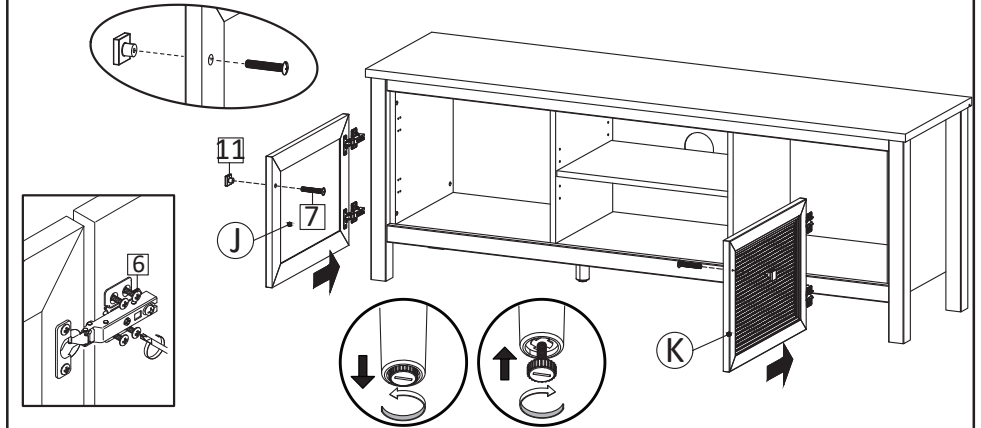

 STEP14: Install Frame Door Left (J) and Frame Door Right (K) into Side Boards and Center Board. Secure with Screw M4.5x12.5mm (HW6). Insert Handle (HW11) Secure with Screw M4x22mm (HW7) into Frame Doors. Place your furniture on level floor. The legs come with adjustable leveller, adjust it as needed until your furniture sit steady on the floor.

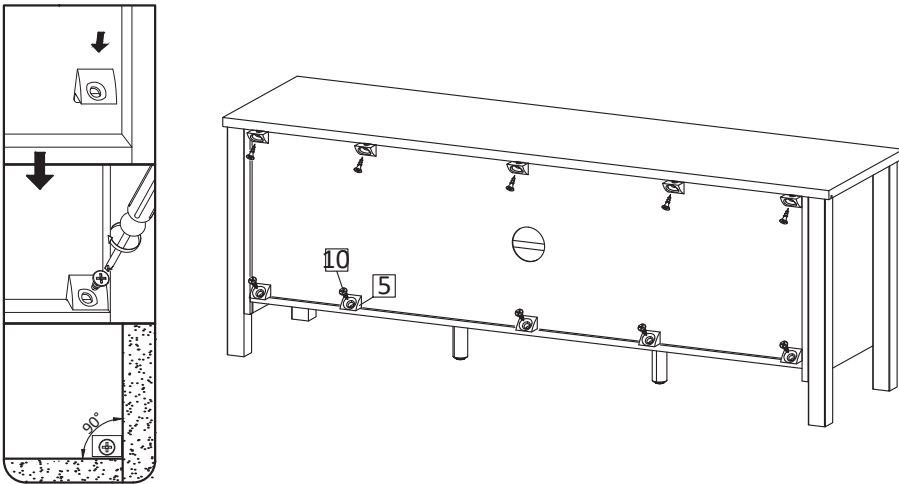

 STEP15: Use Wedge (HW5), Screw M3.5x15.5mm (HW10) to tighten the back of media stand by using screwdriver. Please align the top board and bottom board in 90° position against the side board, before securing the wedges (HW5).

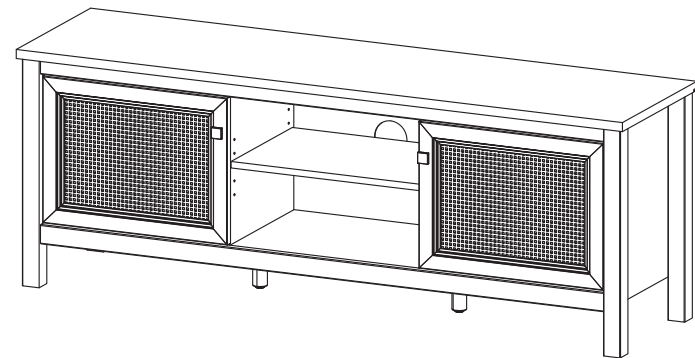





STEP16: Assembly is Complete.

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE



Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for your wall type.

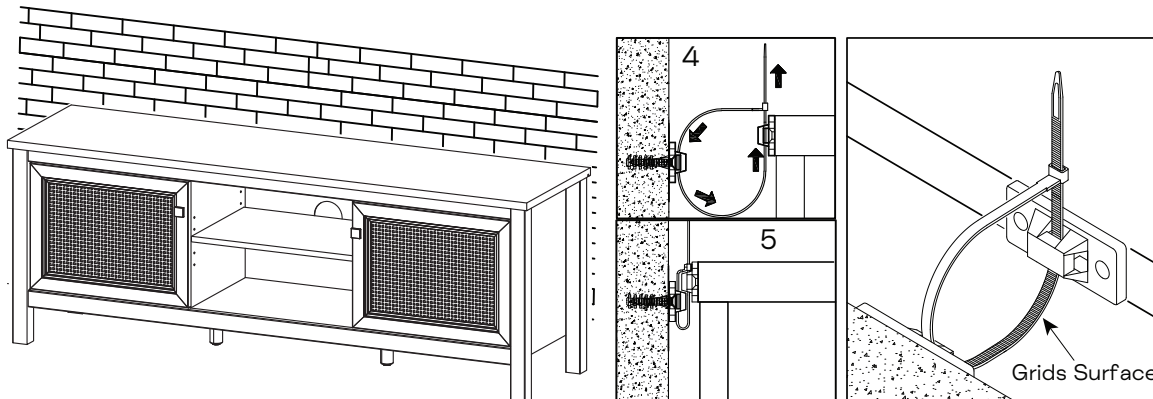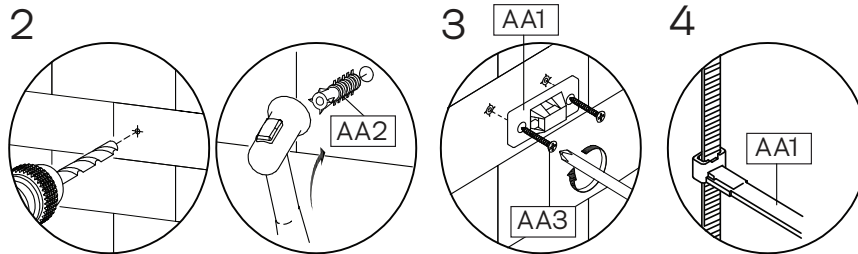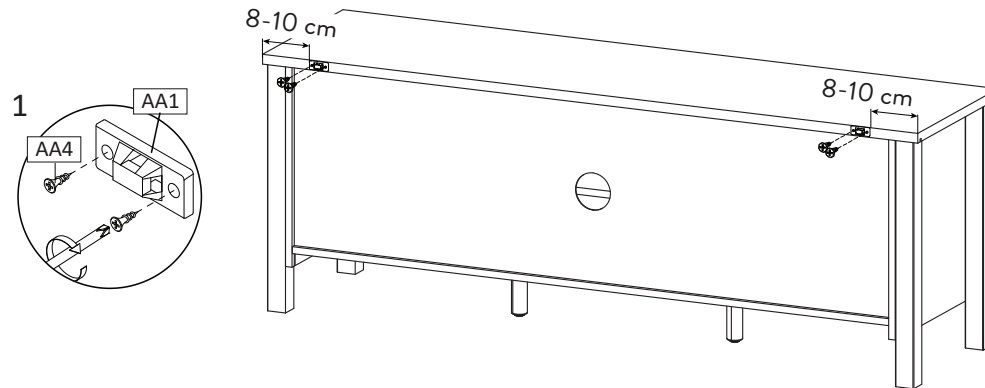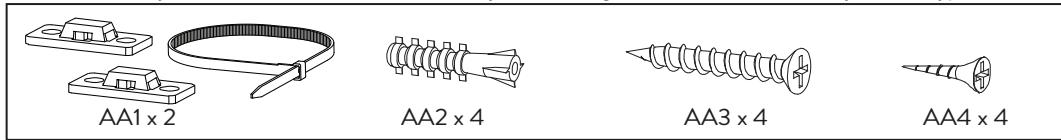


HOW TO ADJUST HINGES

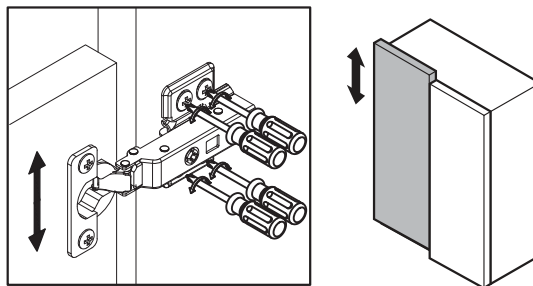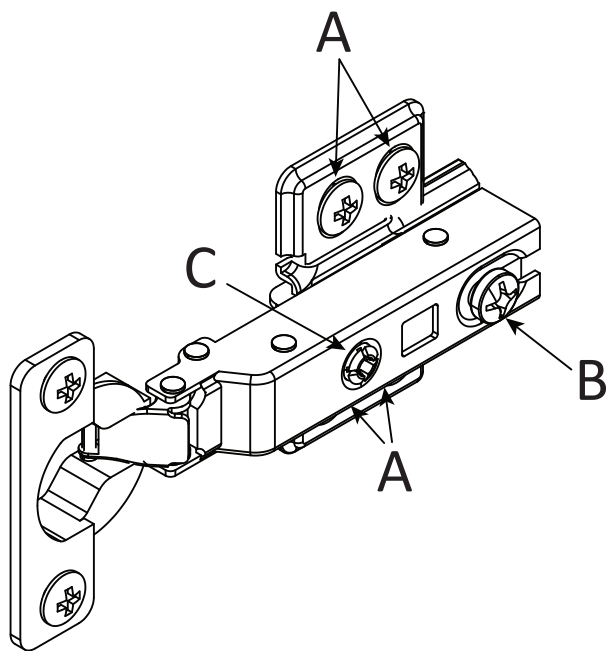


To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by few mm. Then tighten back up.

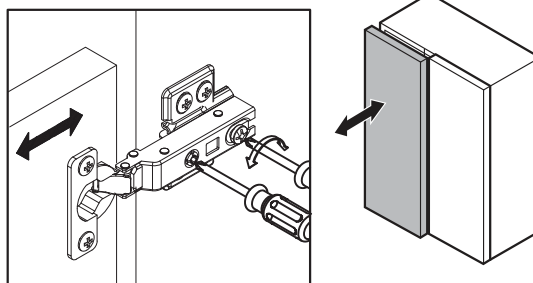

To adjust depth.

Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

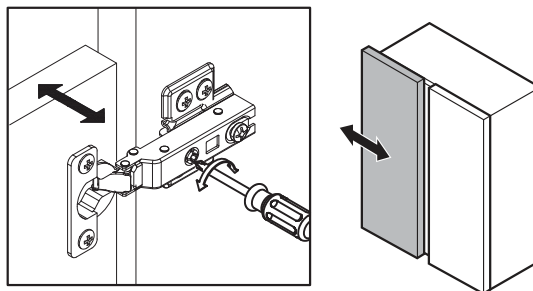

To adjust side ways.

Turning the screw "C" on BOTH hinges on each door.