

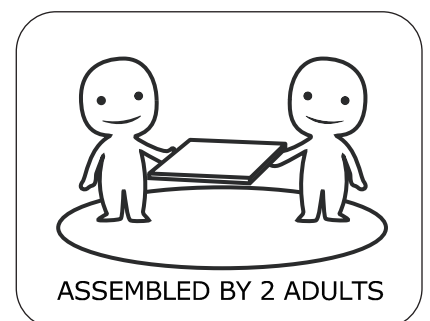




Display Cabinet

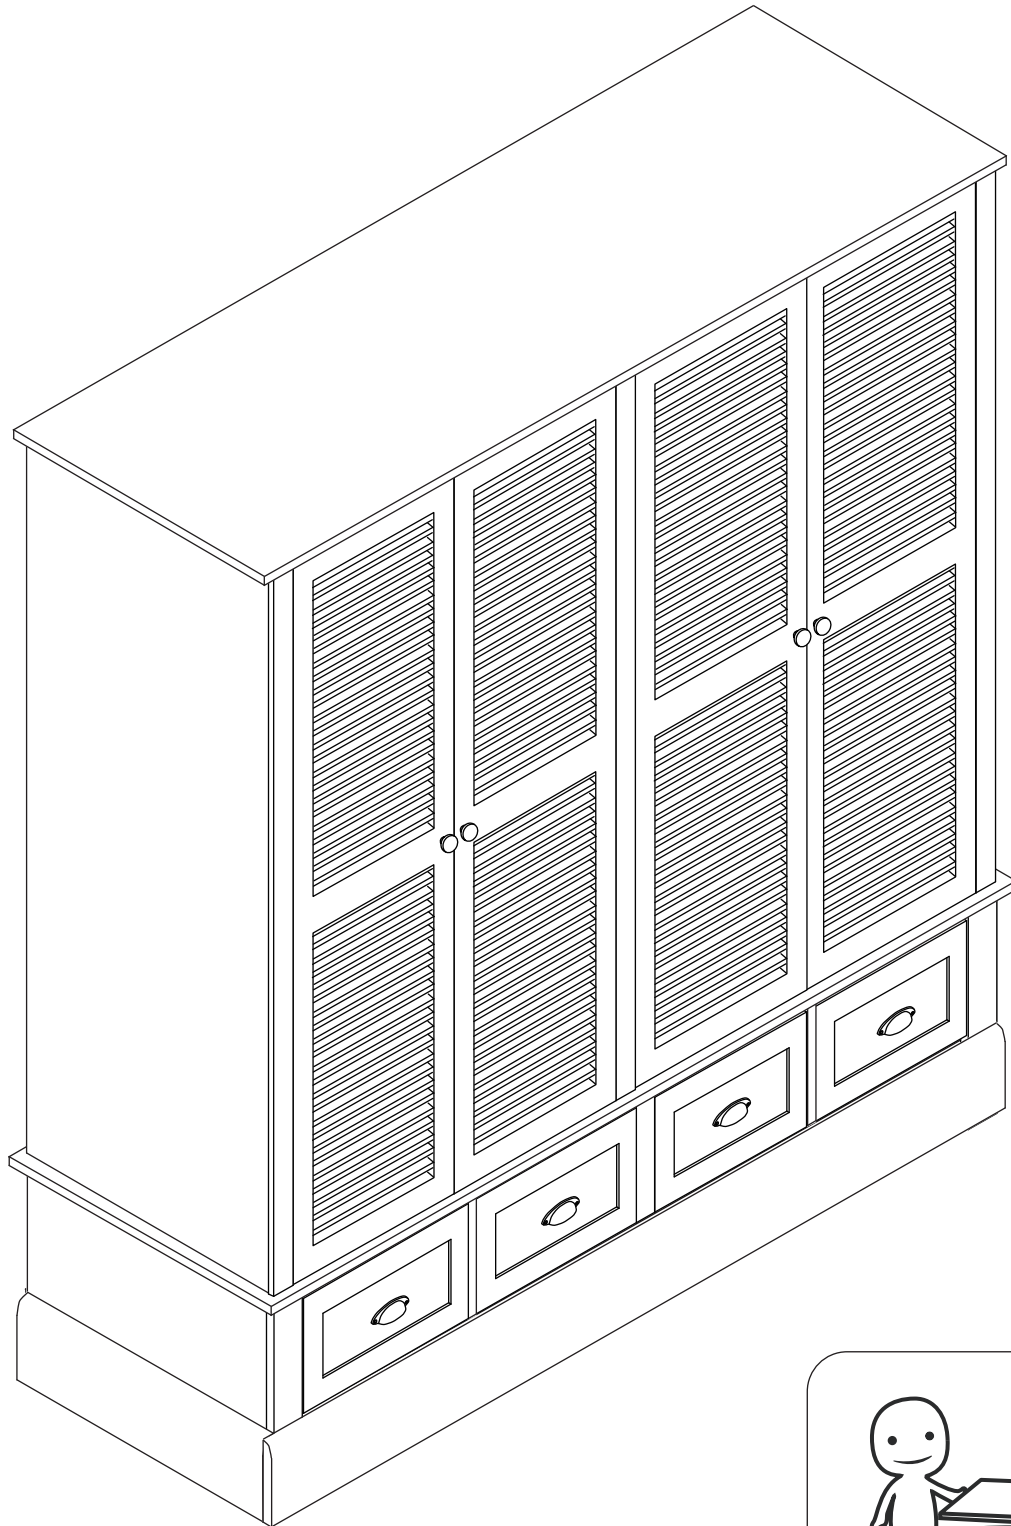

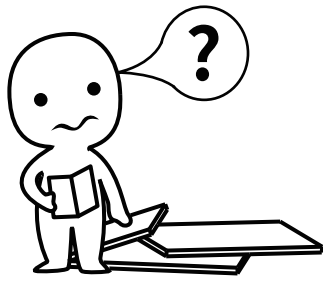


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

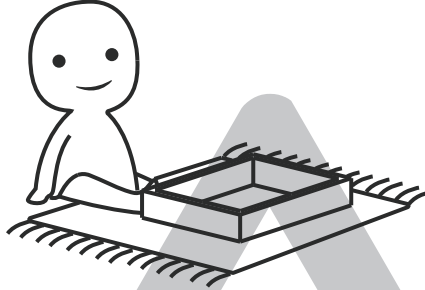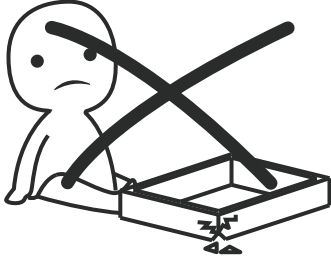



AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

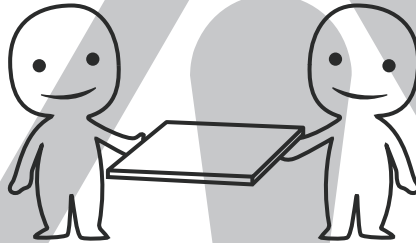

IMPROVE EFFICIENCY !

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

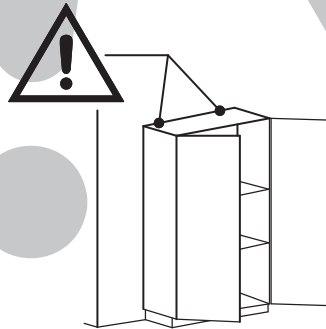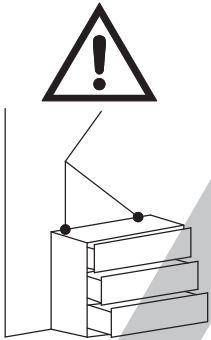

ANTI-TOPPLE WARNING !


Overtured furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !


It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

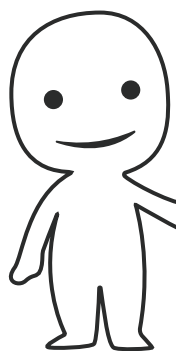


Please prepare the following tools

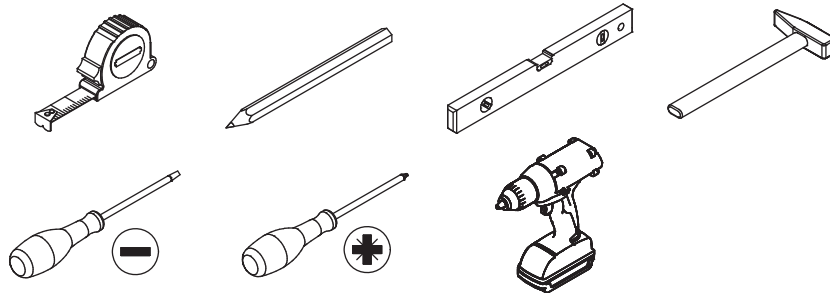

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

<p>A x 104</p> <p>Ø 6 x 35 mm</p>	<p>B x 136</p> <p>Ø 3 x 12 mm</p>	<p>C x 104</p> <p>Ø 15 x 12 mm</p>	<p>D x 4</p> <p>x2</p>	<p>F x 4</p> <p>Ø 4 x 28 mm</p>
<p>G x 4</p>	<p>J x 32</p> <p>Ø 4 x 25 mm</p>	<p>M x 4</p>	<p>N x 4</p>	<p>O x 12</p>
<p>P x 4</p>	<p>Q x 4</p>	<p>R x 4</p>	<p>S x 4</p>	<p>W x 2</p> <p>Ø 3 x 12 mm x3</p>
<p>X x 1</p>	<p>T x 16</p>	<p>U x 2</p> <p>x2</p>		

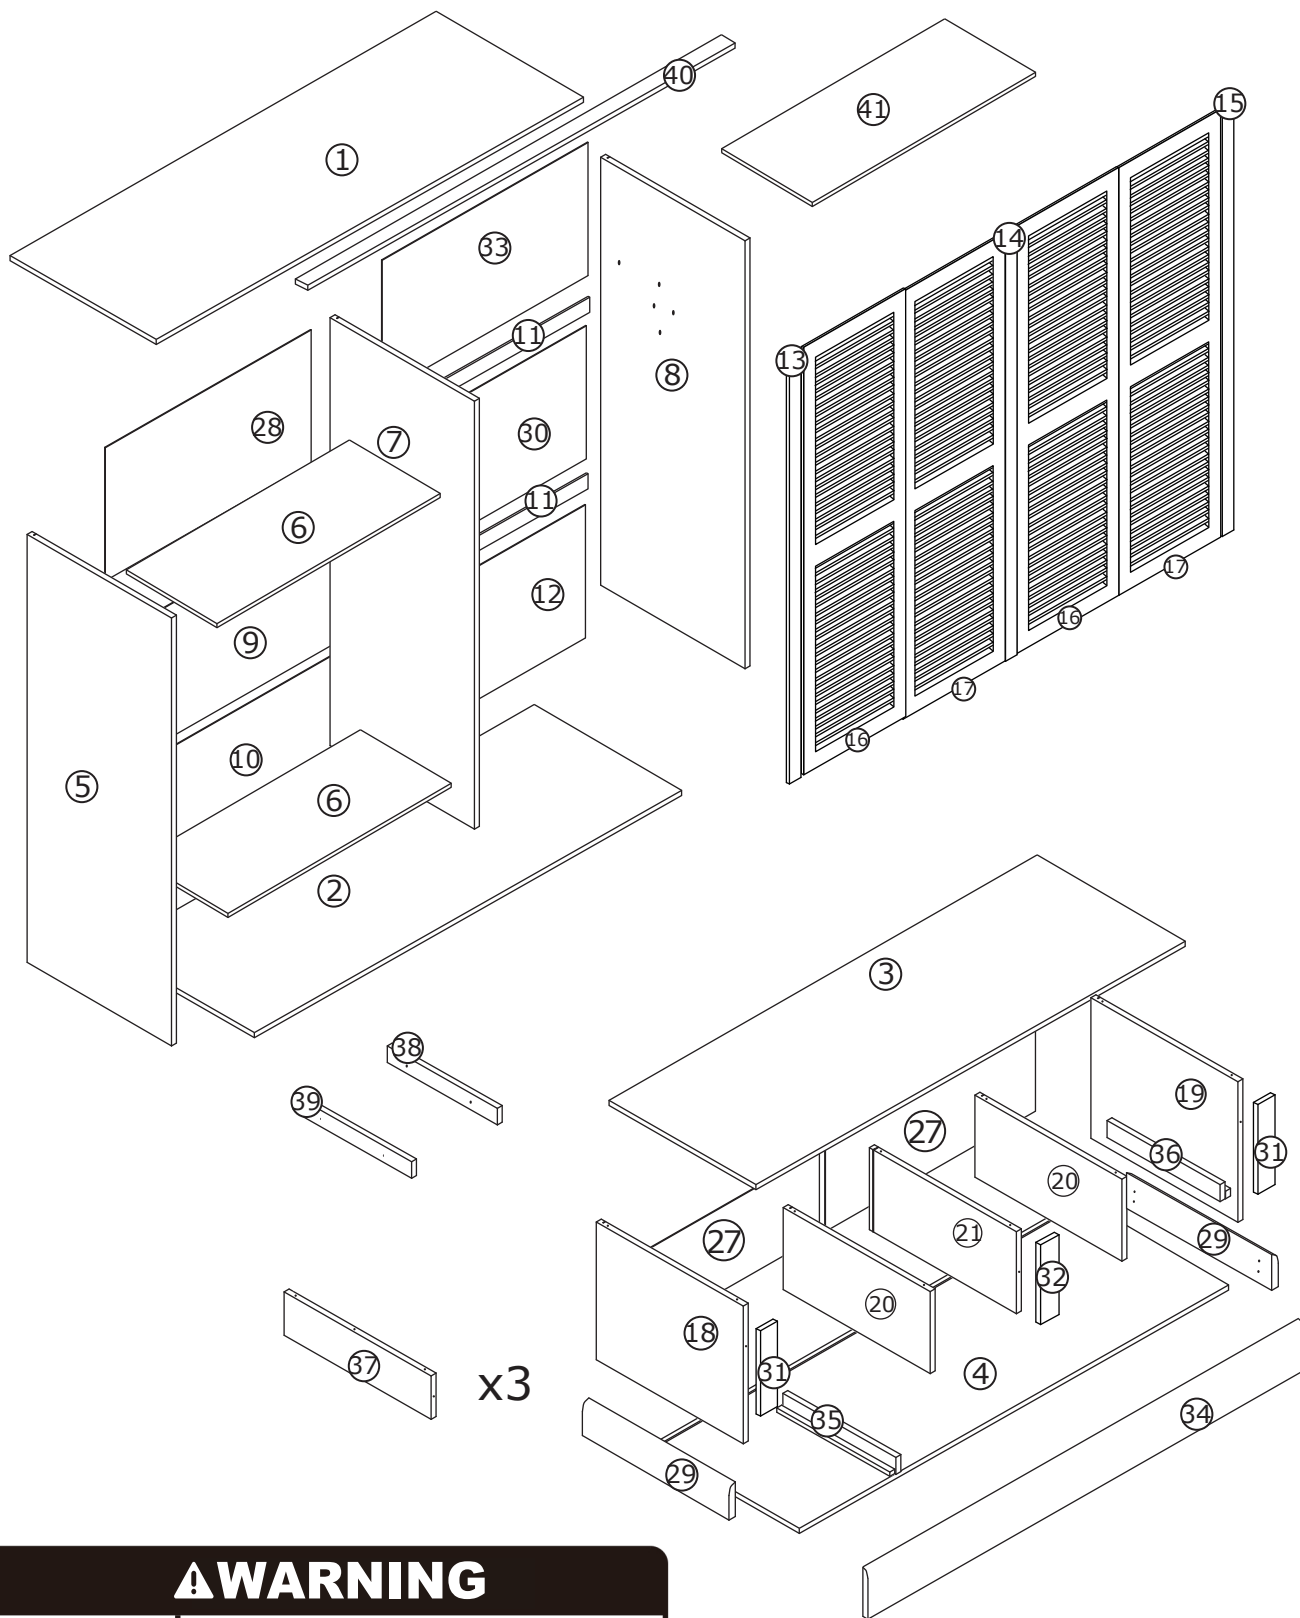


⚠ WARNING





Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.





*This is a permanent label.
Do not remove!*

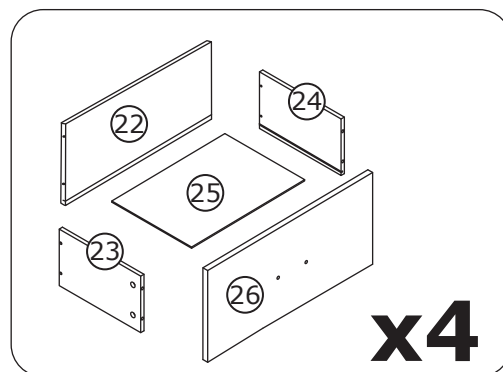

1

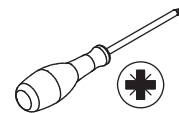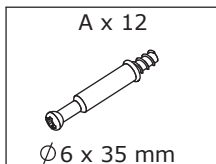

Screw eccentric rod(A) into board 4 with a screwdriver as shown.

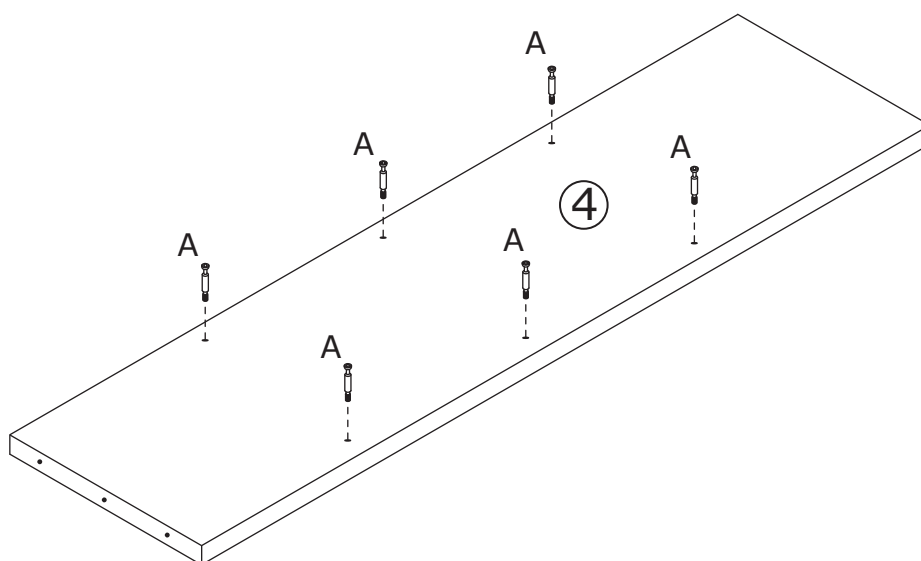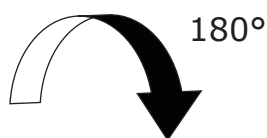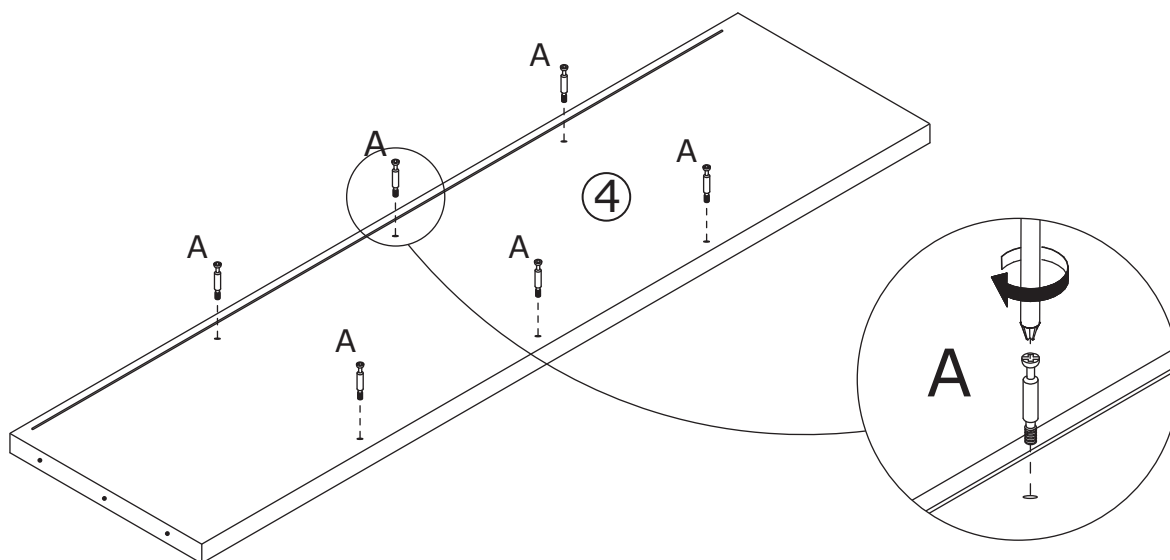
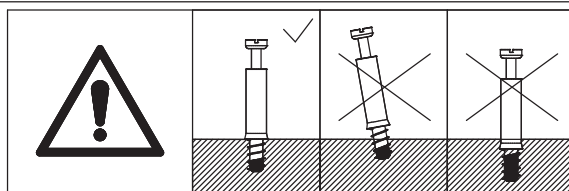


2


C x 12





Ø15 x 12 mm

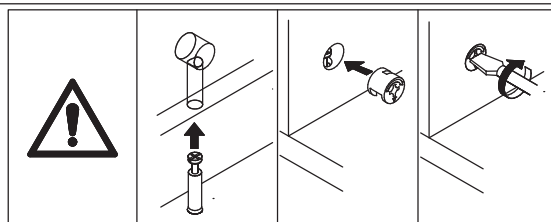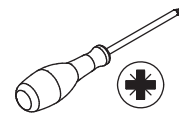



Attach board 20,21,37 to board 4, add cam lock(C) into board 20,21,37 turn clockwise to tighten as shown.

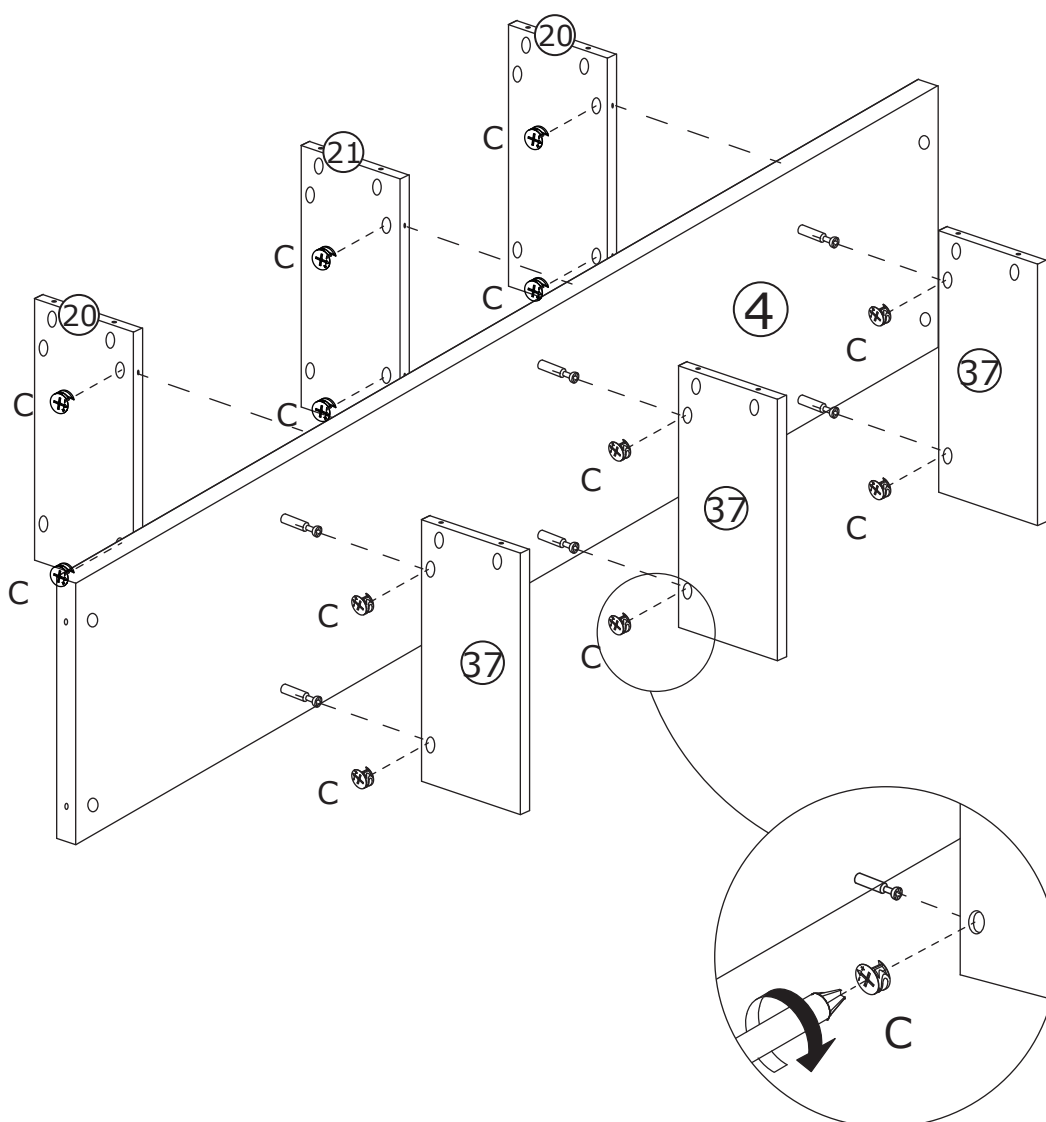



3

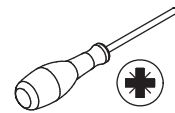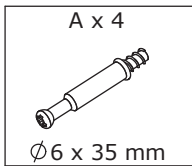



Screw eccentric rod(A) into board 18 and 19 with a screwdriver as shown.

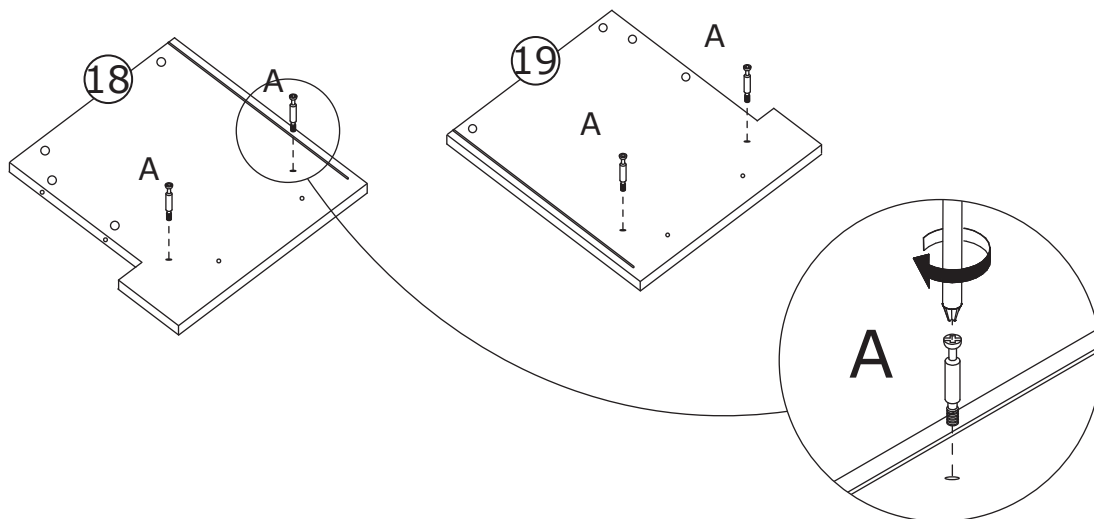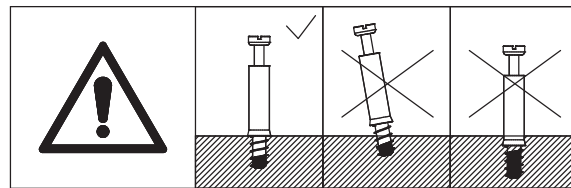

4

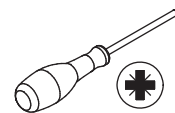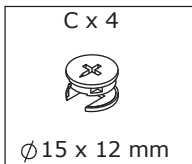


Attach board 18 and 19 to board 4, add cam lock(C) into board 4 and turn clockwise to tighten as shown.

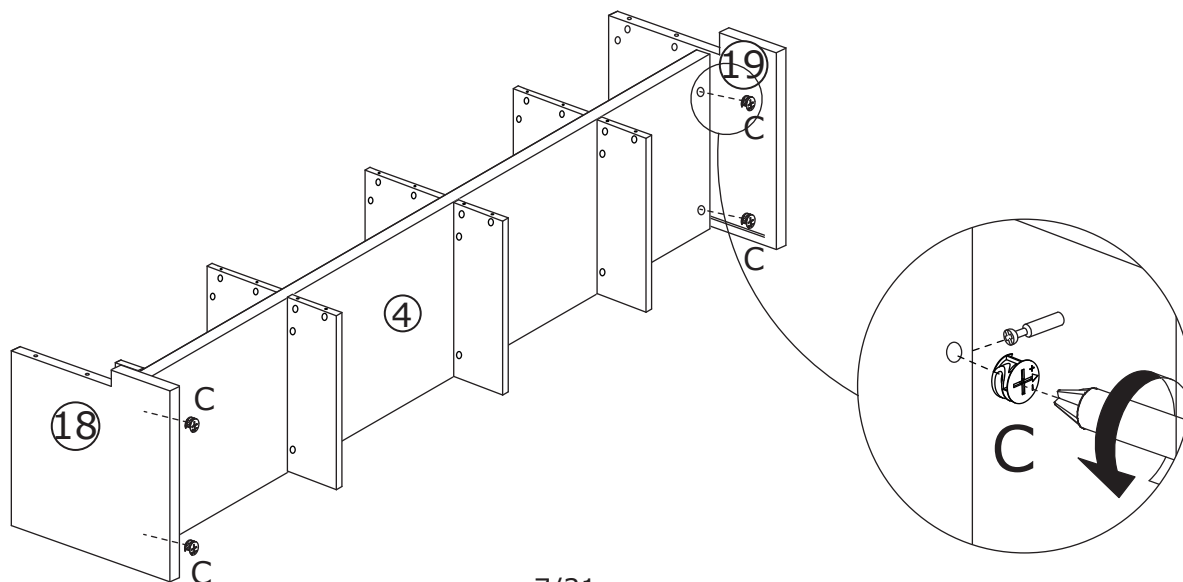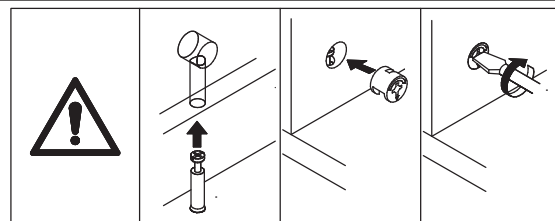


5





A x 6

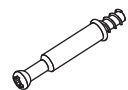

Ø6 x 35 mm

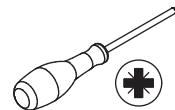

Screw eccentric rod(A) into board 31 and 33 with a screwdriver as shown.

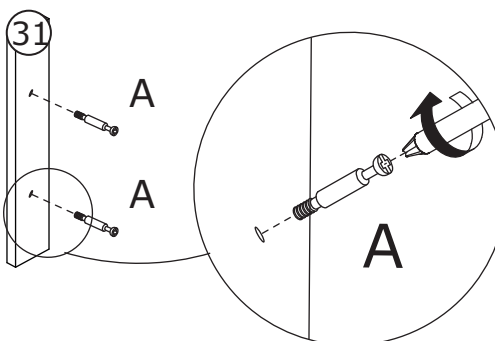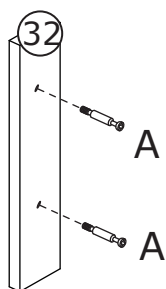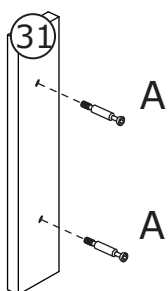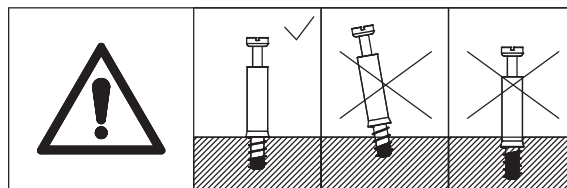


6




C x 6






Ø15 x 12 mm

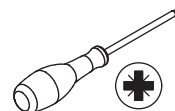



Attach plate 31 and 32 to plate 18, 21 and 19 insert cam lock(C) into holes in plate 18, 21, 19 and turn clockwise to tighten as shown.

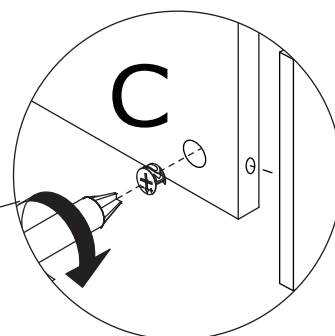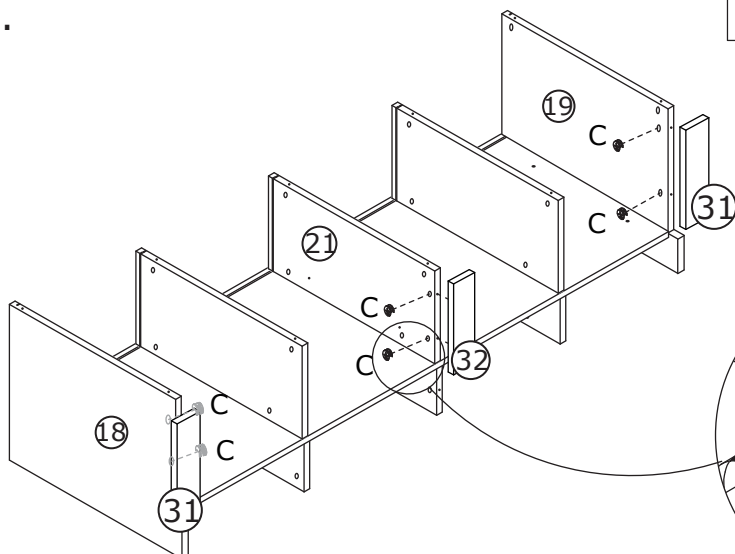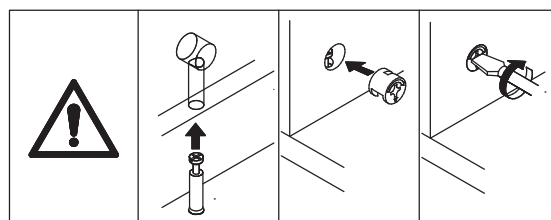



7

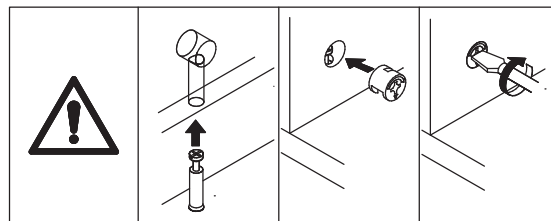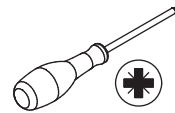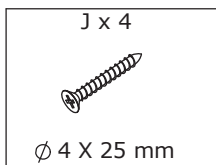



Fix board 29 to board 18 and 19 respectively with screw(J) as shown.

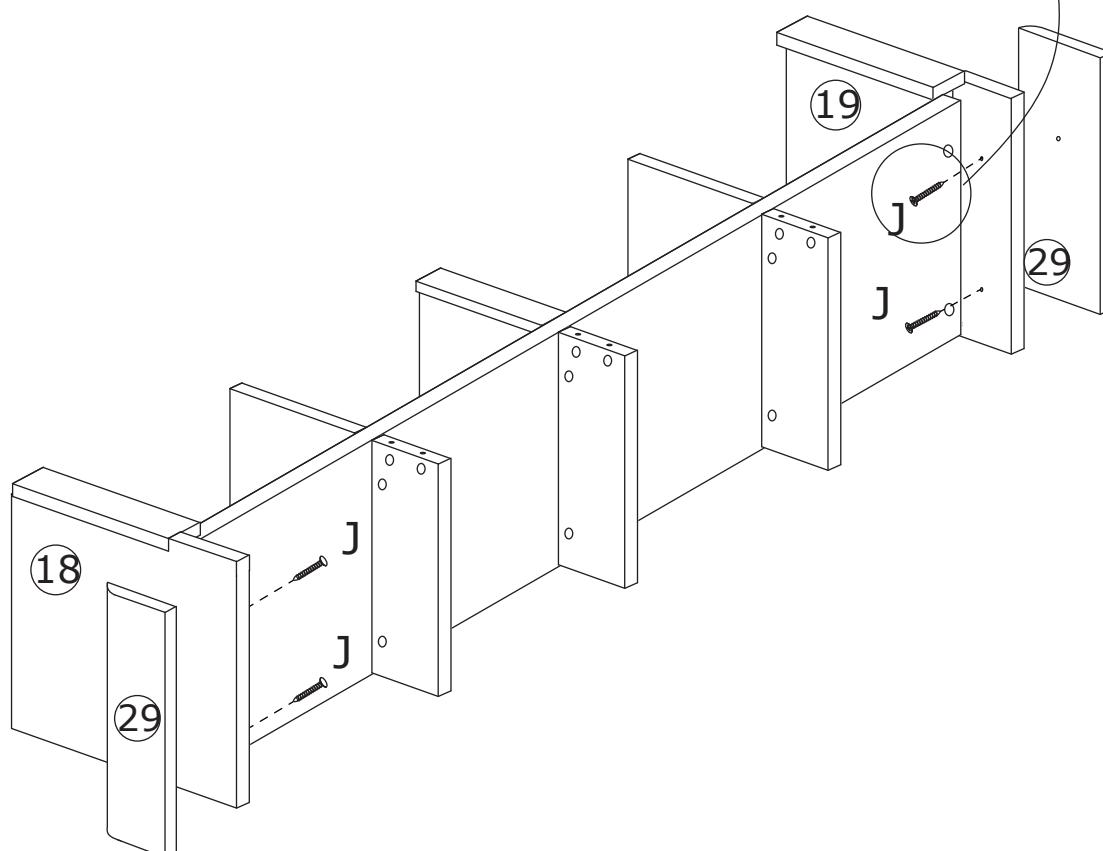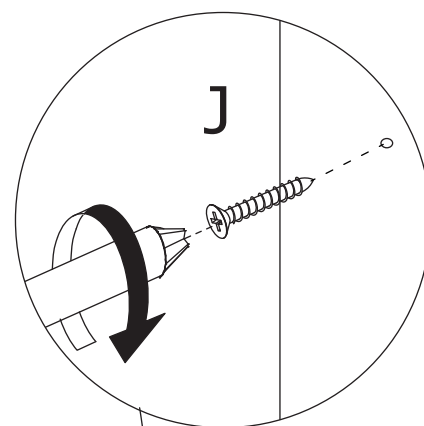



8

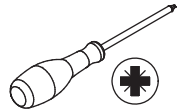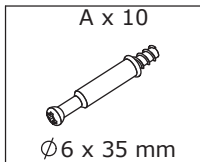



Screw eccentric rod(A) into board 34 with a screwdriver as shown.

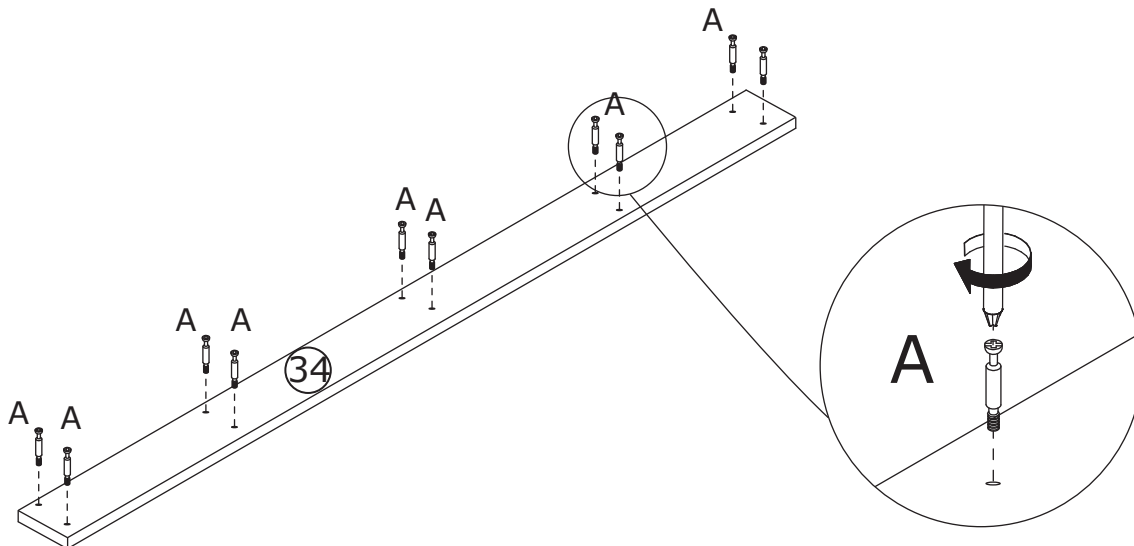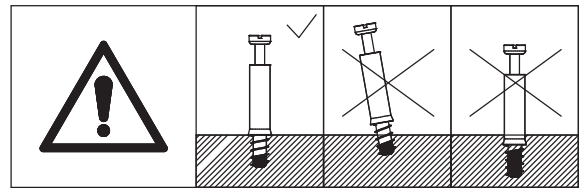



9

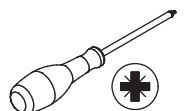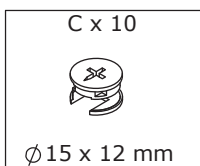


Attach plate 34 to plate 37,18,19 insert cam lock(C) into holes and turn clockwise to tighten as shown.

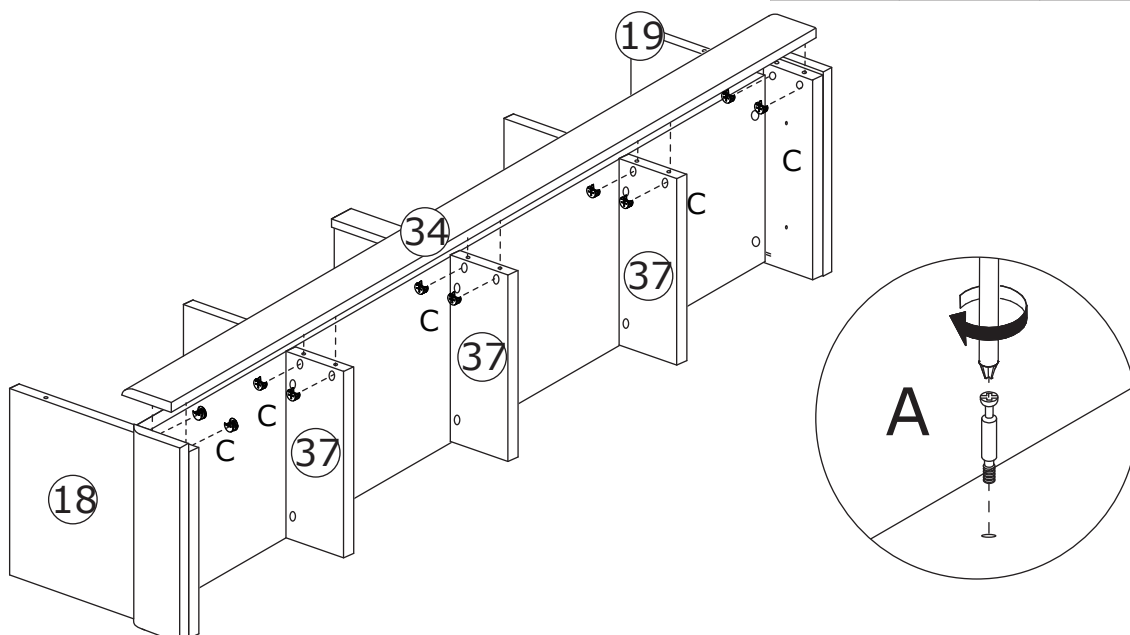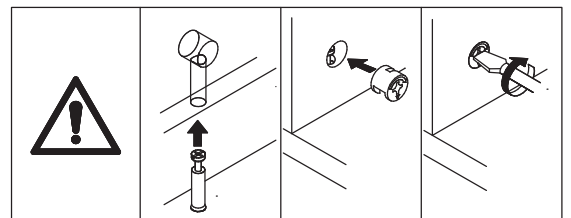


10

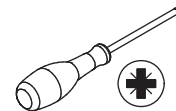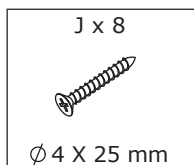




Slide board 27 along grooves as shown.
Fix board 38 and 39 to board 21, board 35 and 36 to board 4 with screw(J) as shown.

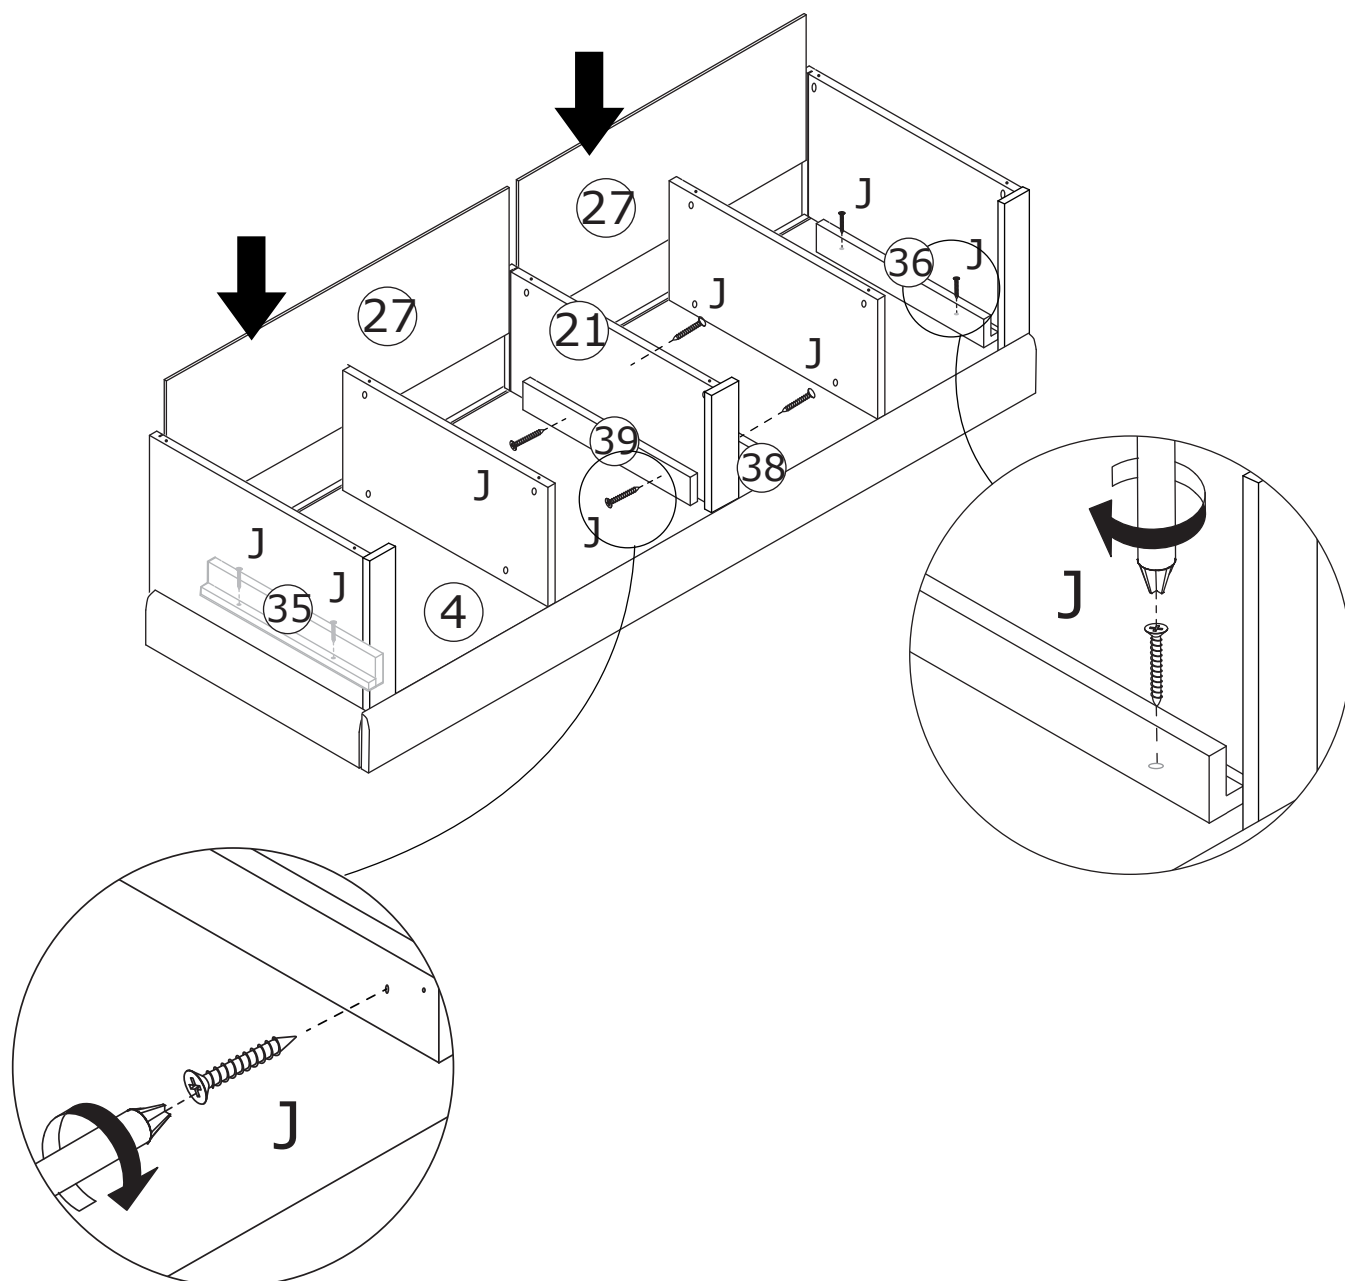





11

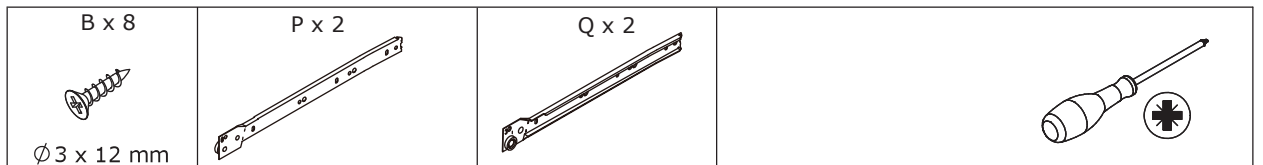



Fix slide rail(Q) and rail(P) to plate 20 using screw(B) as shown.

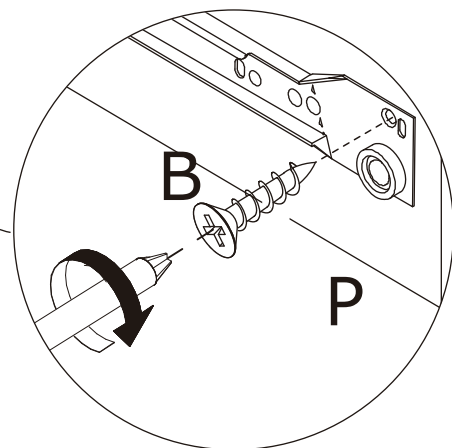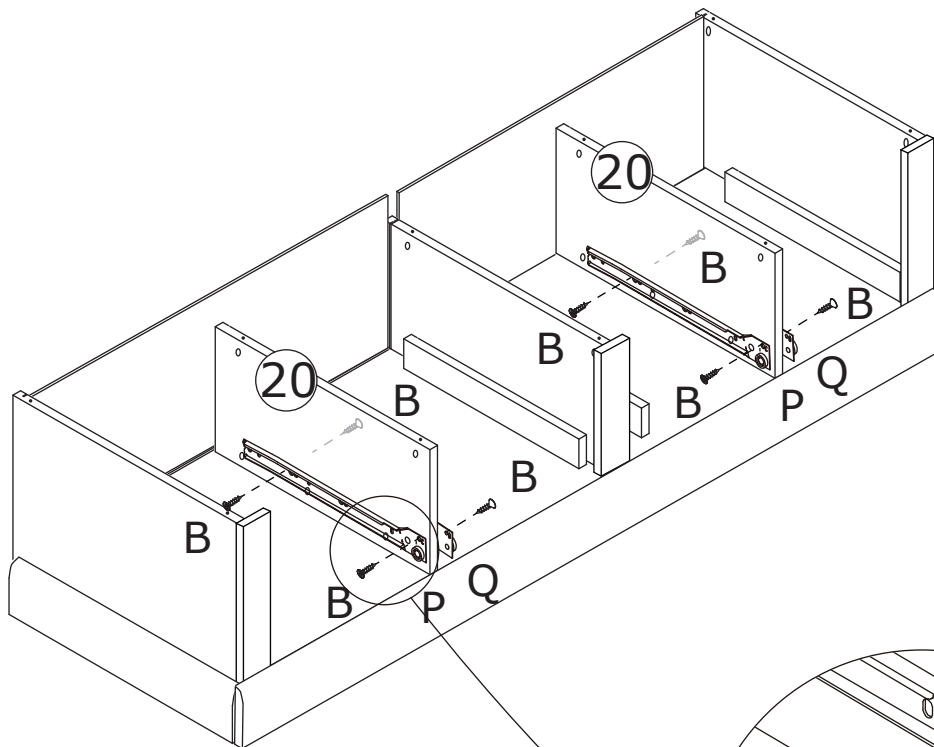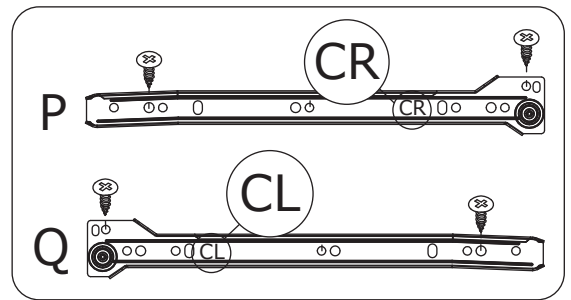

12

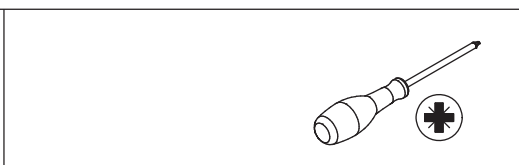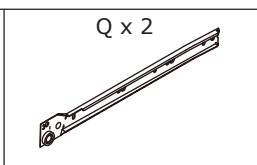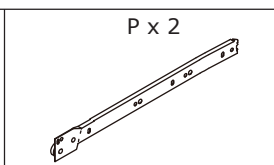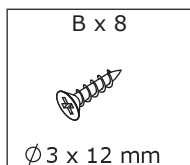

Fix slide rail(Q) to plate 35 and 38, fix slide rail(R) to plate 36 and 39 using screw(B) as shown.

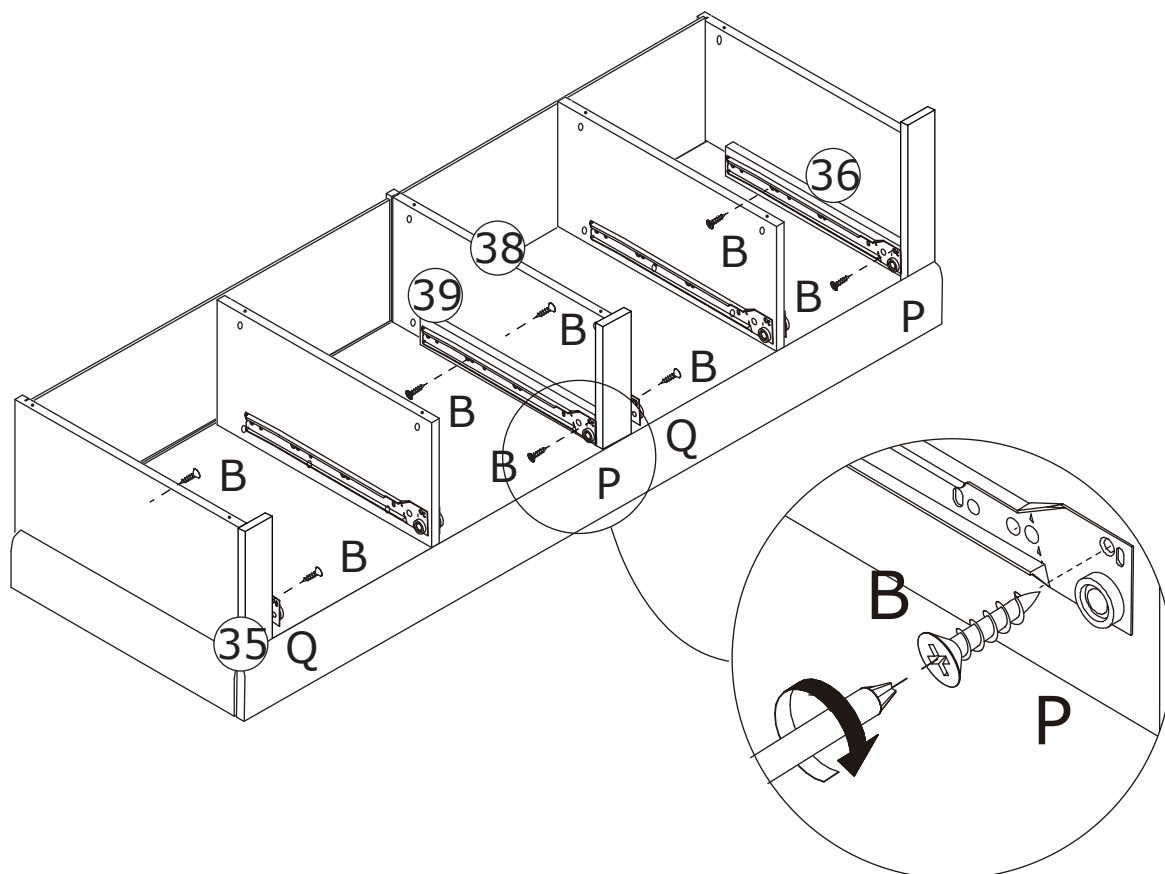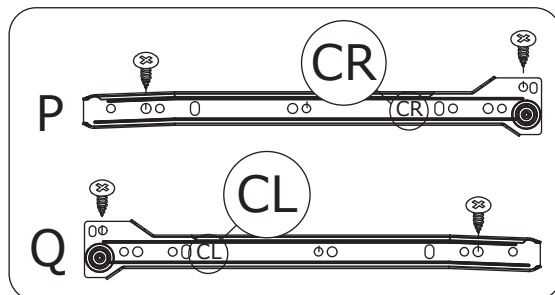


13

C x 10




Ø15 x 12 mm




A x 10

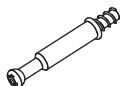

Ø6 x 35 mm

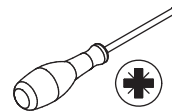




Screw eccentric rod(A) into board 3 with a screwdriver as shown.

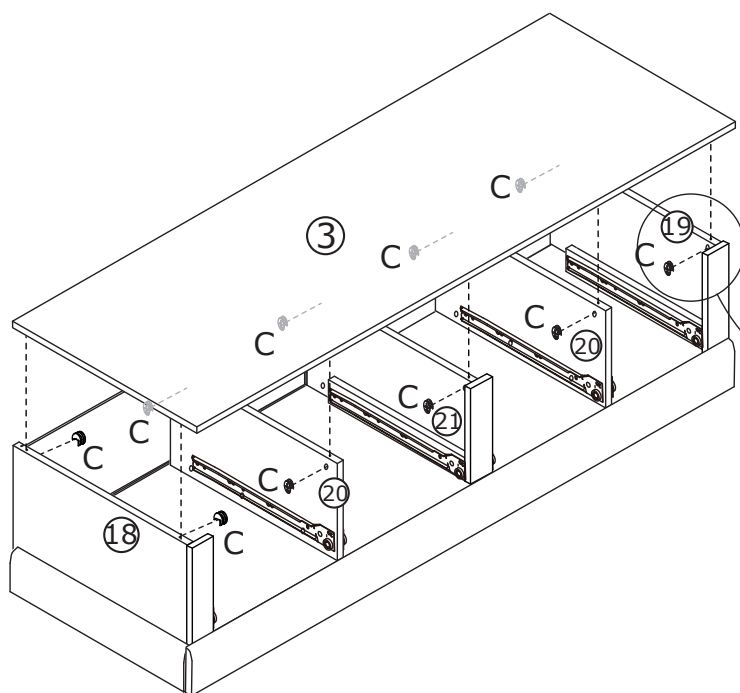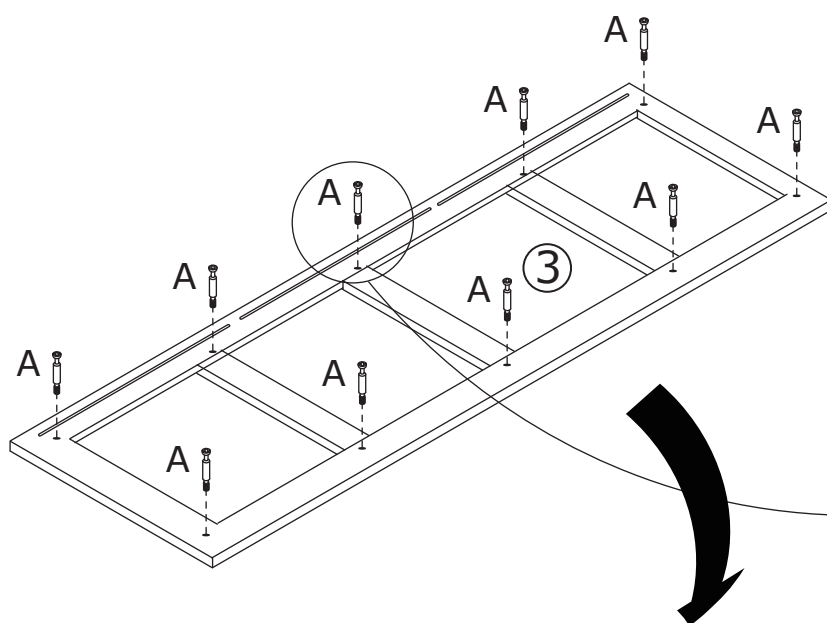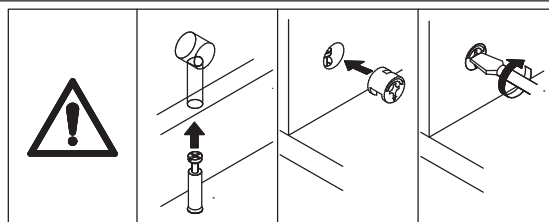


Cover plate 3 to the top of the component, insert cam lock(C) into holes in plate 18,19, 20,21 and turn clockwise to tighten as shown.

14


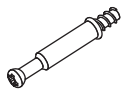
A x 22

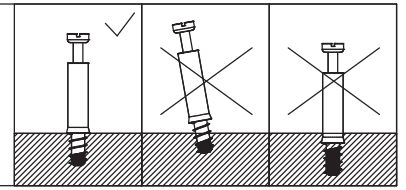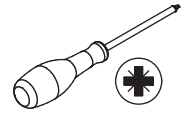 Ø6 x 35 mm

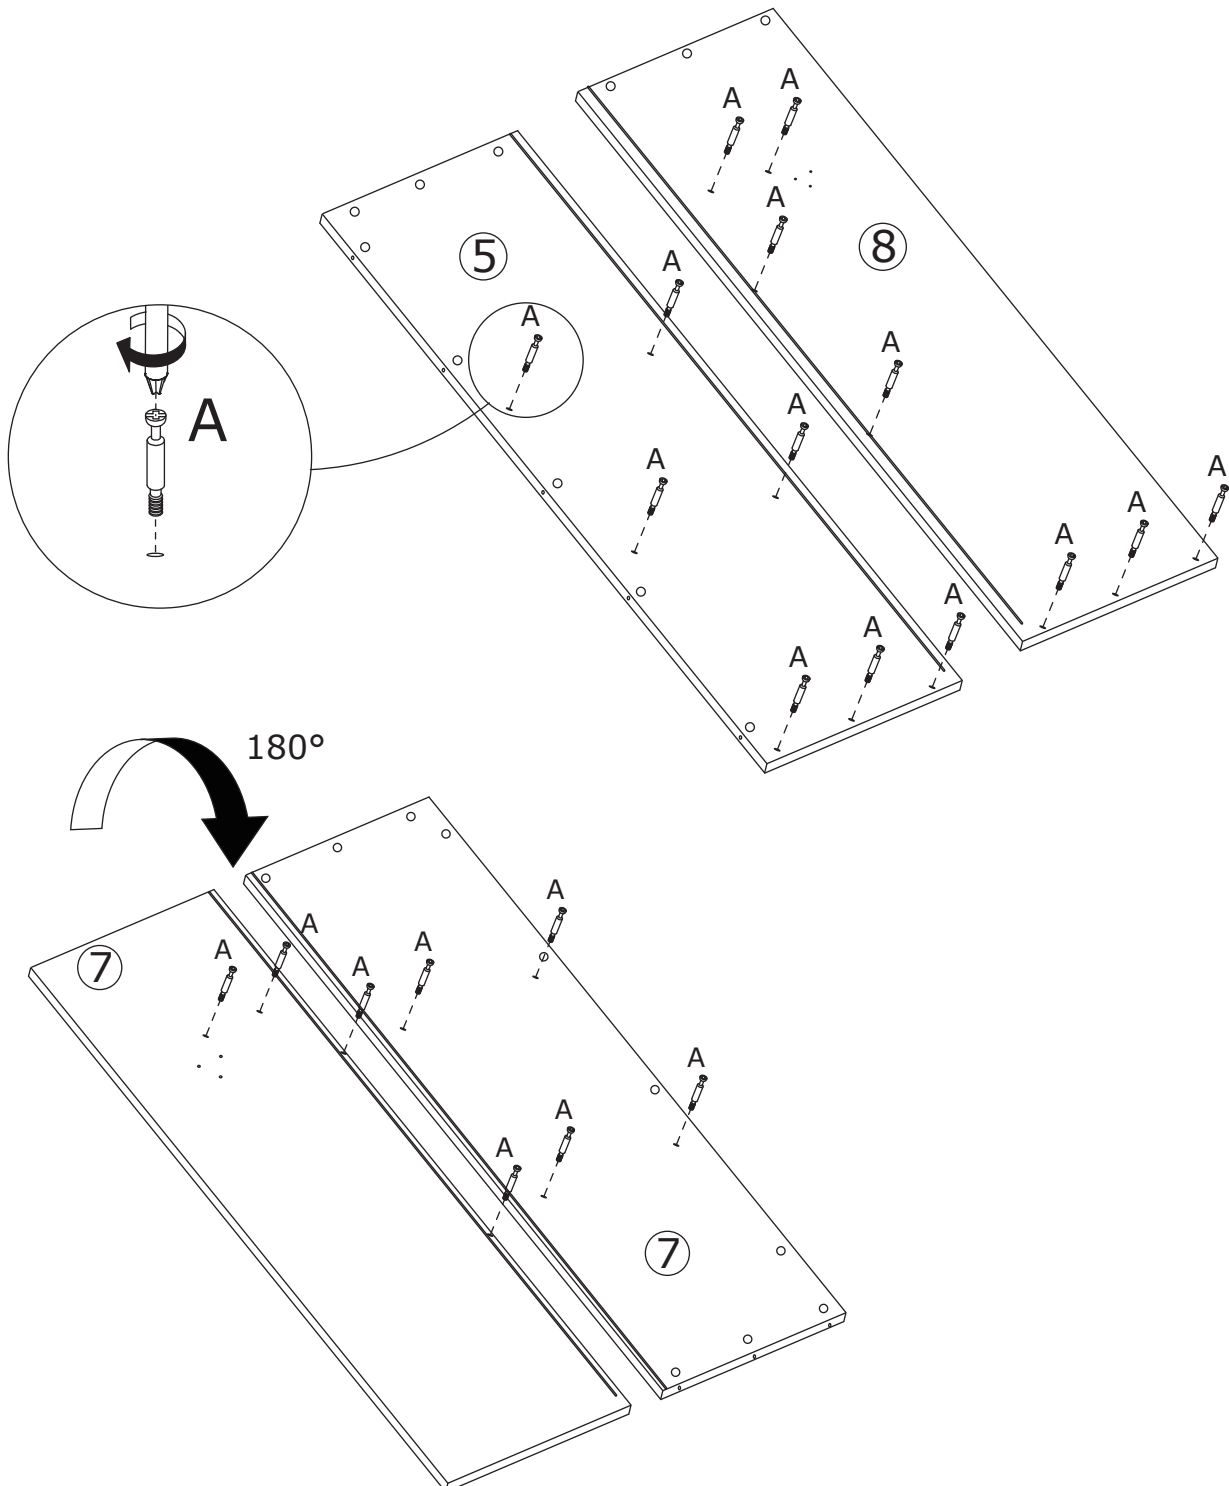



Screw eccentric rod(A) into board 7 with a screwdriver as shown.
 Flip the board 180°, screw eccentric rod(A) as well.

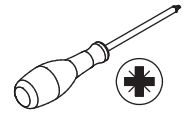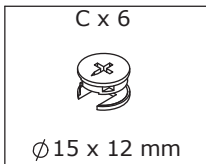



15





Attach plate 6 and 41 to plate 7 insert cam lock(C) into holes in plate 6 and 41 and turn clockwise to tighten as shown.

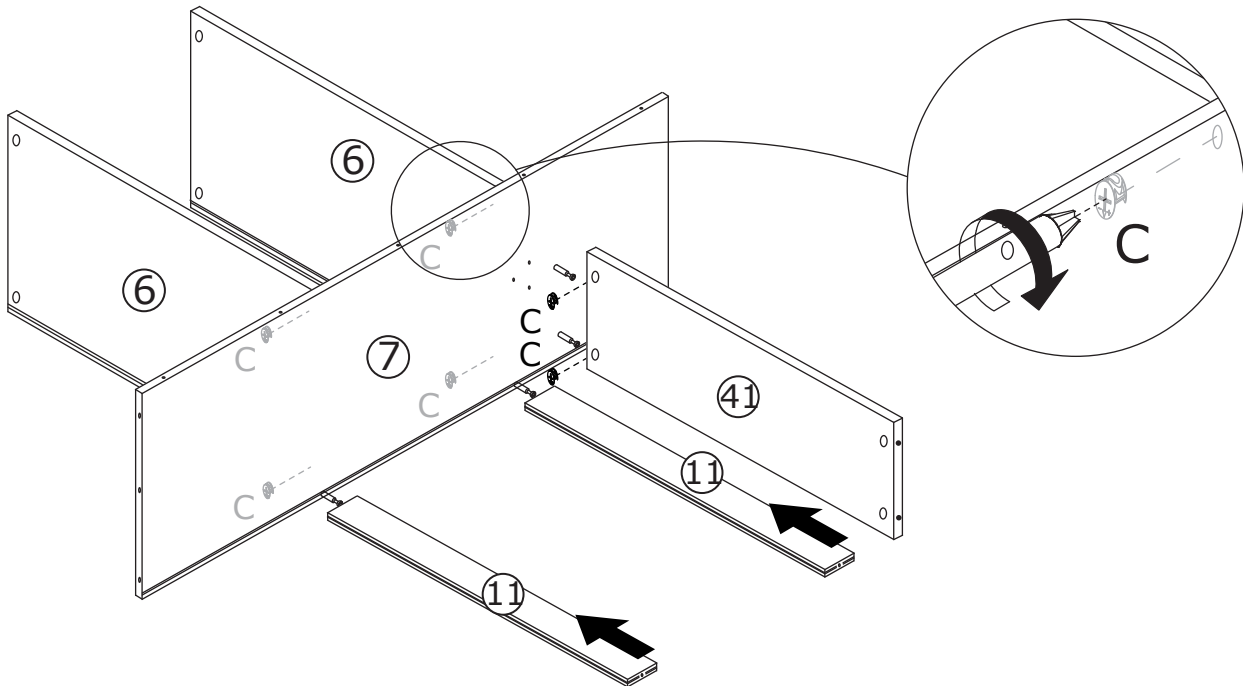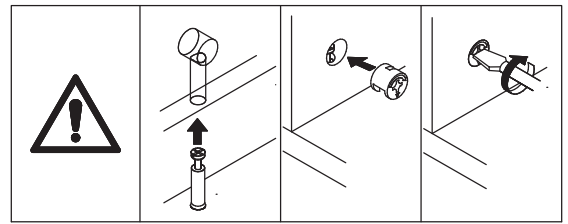

16

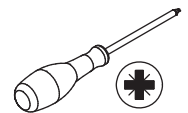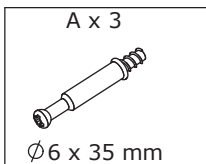

Screw eccentric rod(A) into board 2 with a screwdriver as shown.

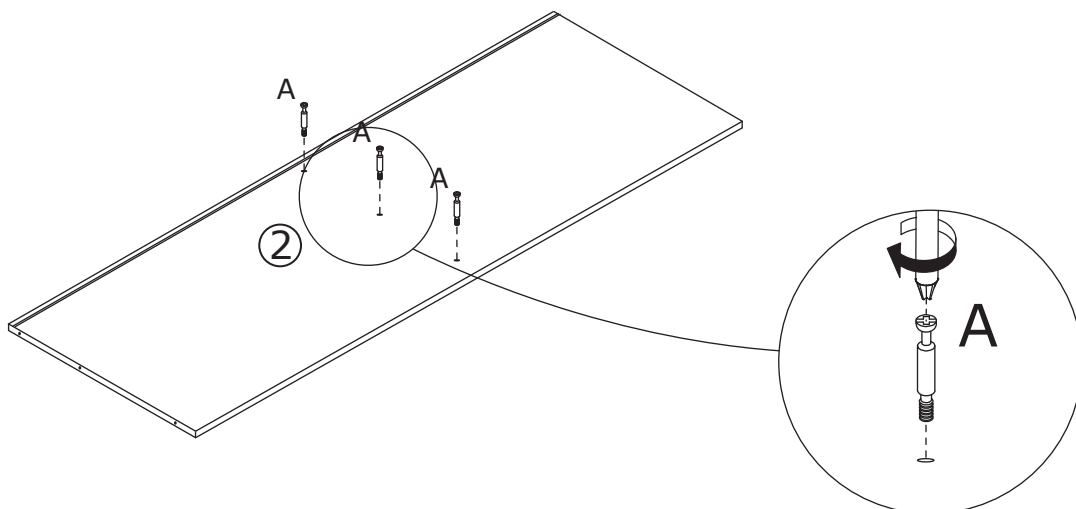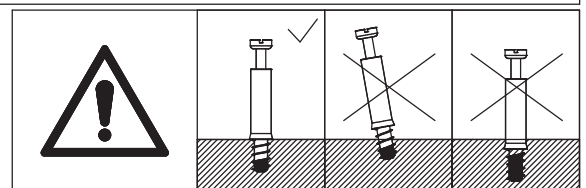




17

C x 3




Ø15 x 12 mm

Attach board 7 to board 2 add cam lock(C) into board 7 and turn clockwise to tighten as shown.

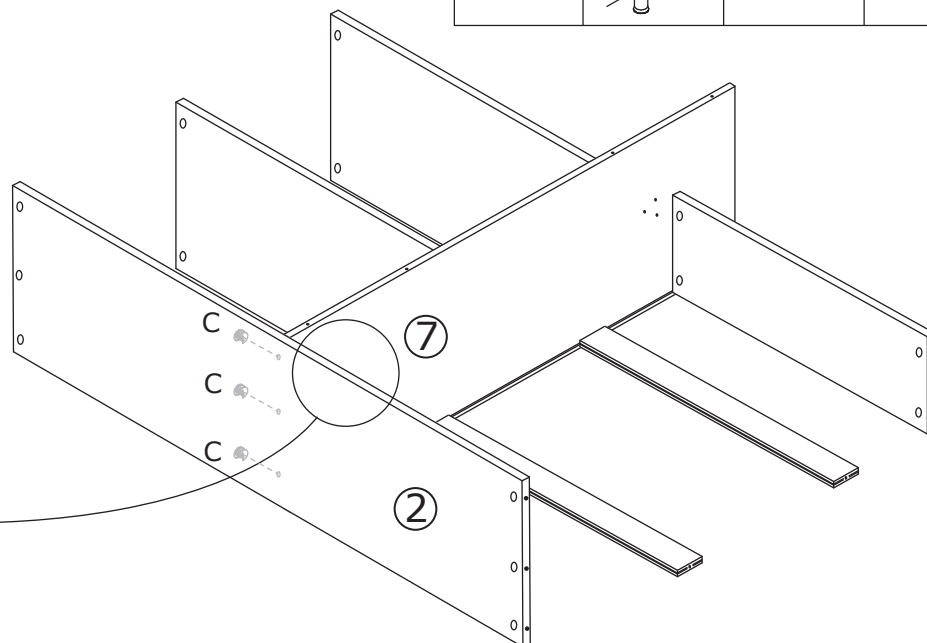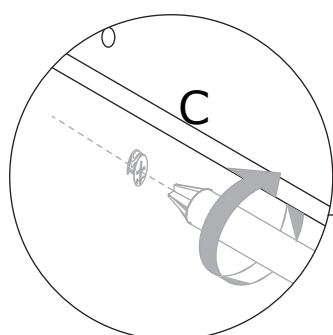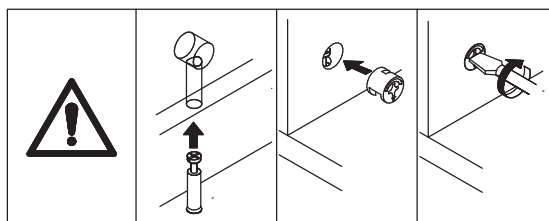

18

Slide board 9,10 ,12 ,30 along grooves as shown.

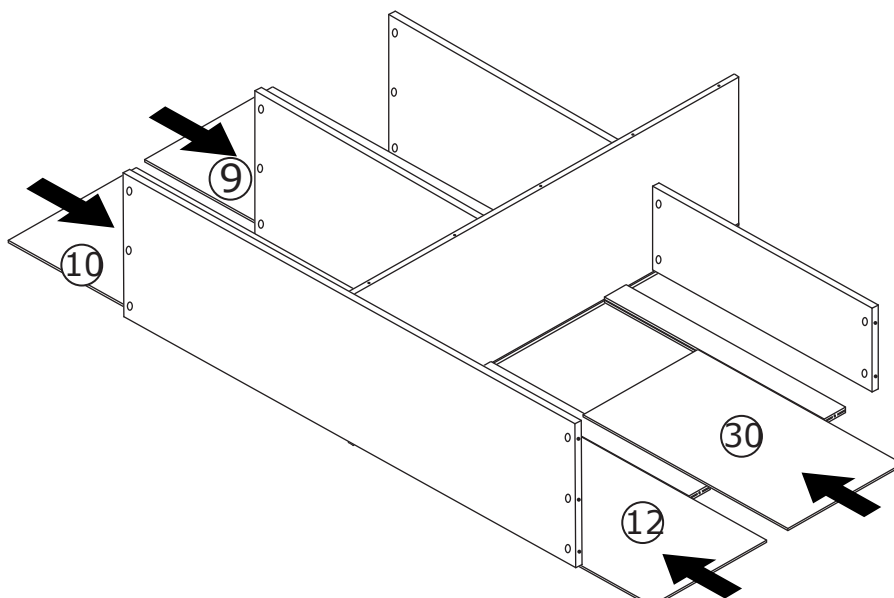


19



C x 12



Ø15 x 12 mm

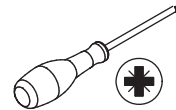

Attach board 5 and 8 to board 2,6,41
add cam lock(C) into board 2,6,11 and
turn clockwise to tighten as shown.

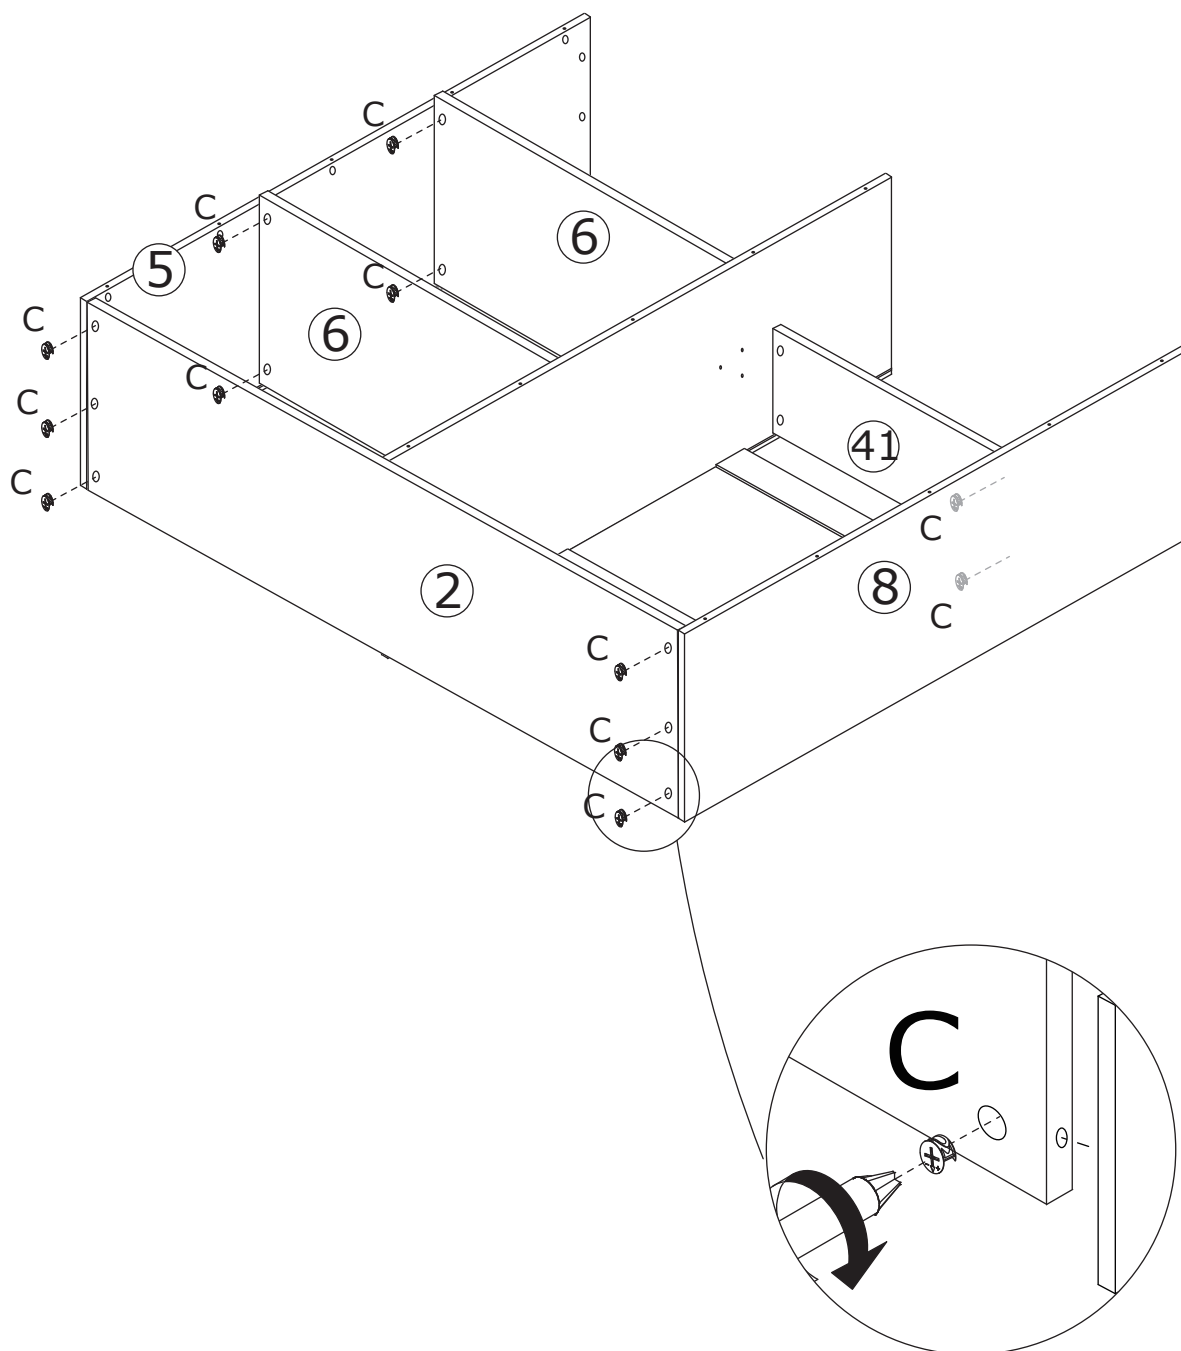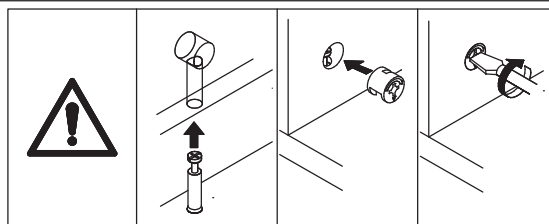


20

C x 4






Ø 15 x 12 mm

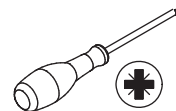

Slide board 28 and 33 along grooves as shown.

Attach board 11 to board 7 and 8 add cam lock(C) into board 11 and turn clockwise to tighten as shown.

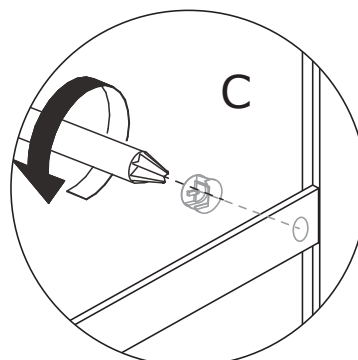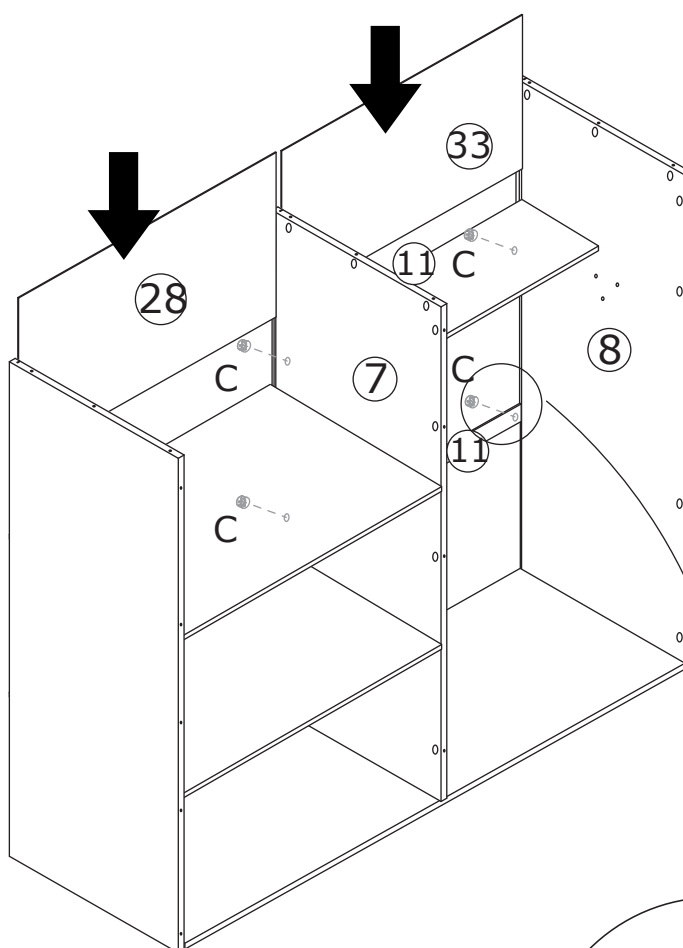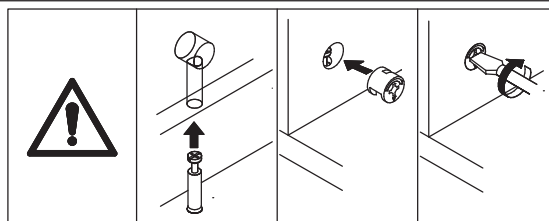

21


A x 9








C x 9



Ø15 x 12 mm

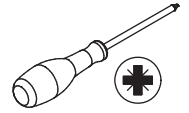


Screw eccentric rod(A) into board 1 with a screwdriver as shown.

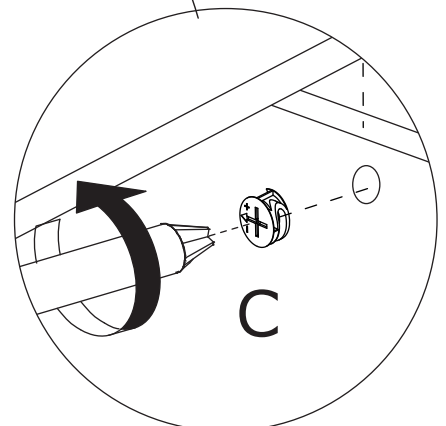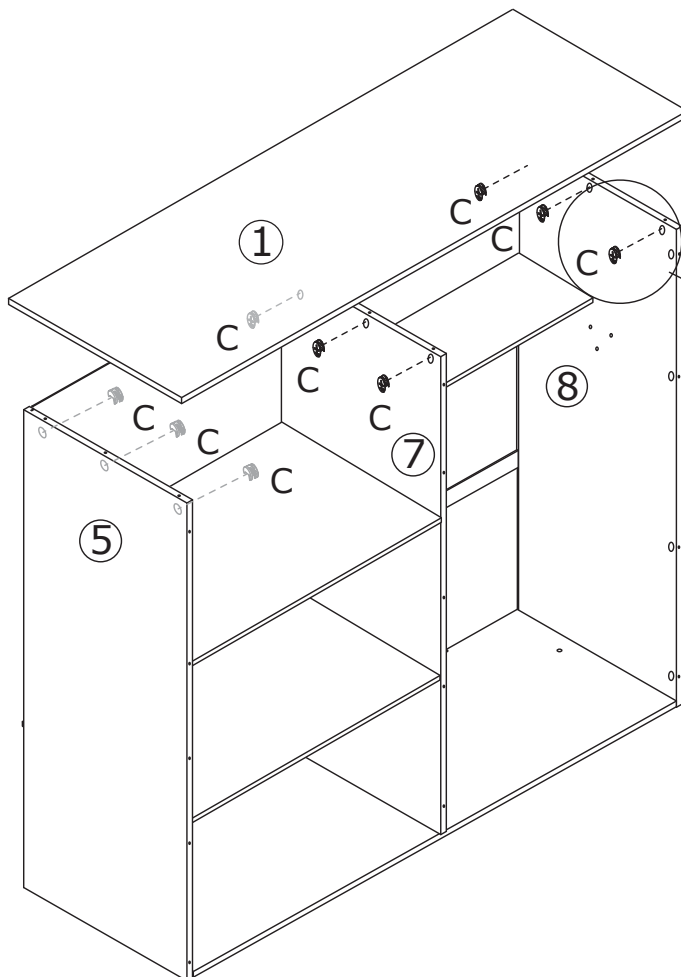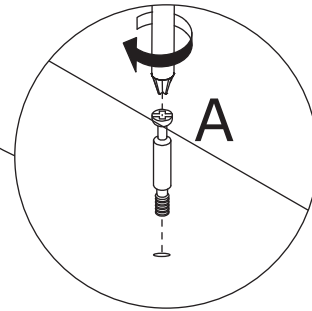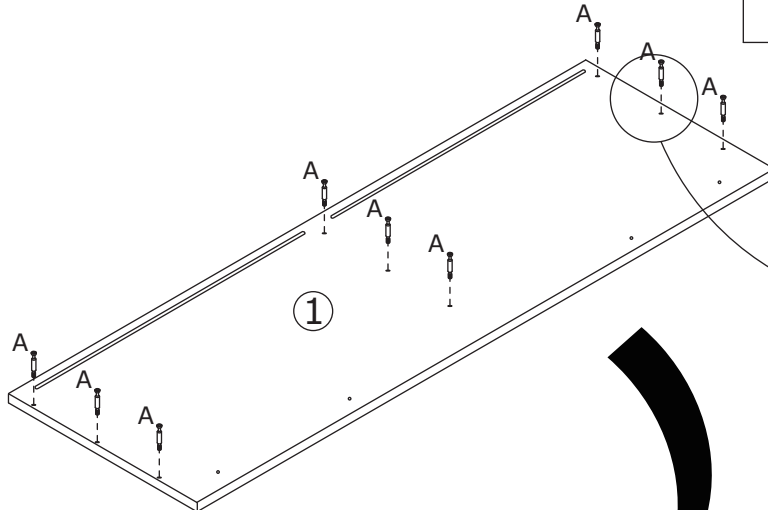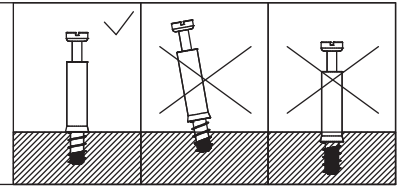

Cover plate 1 to the top of the component, insert cam lock(C) into holes in plate 8,7, 5 and turn clockwise to tighten as shown.

22


M x 4

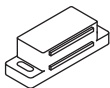


B x 8



Ø 3 x 12 mm

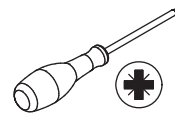

Fix part(M) to board 40 with screw(B) as shown.

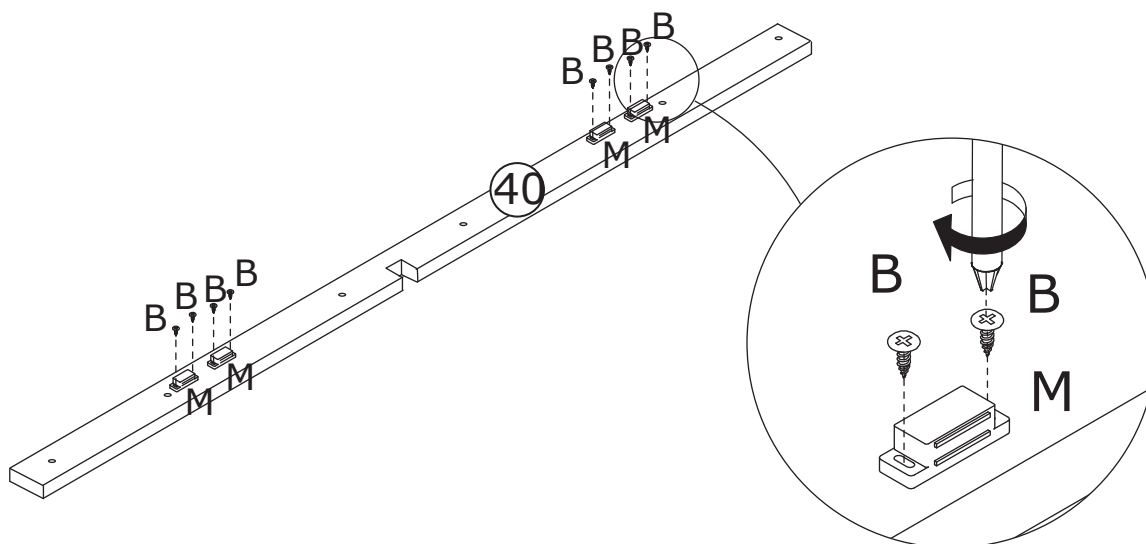


23


J x 4



Ø 4 X 25 mm

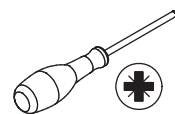


Fix plate 40 to plate 1 with screw(J) as shown.

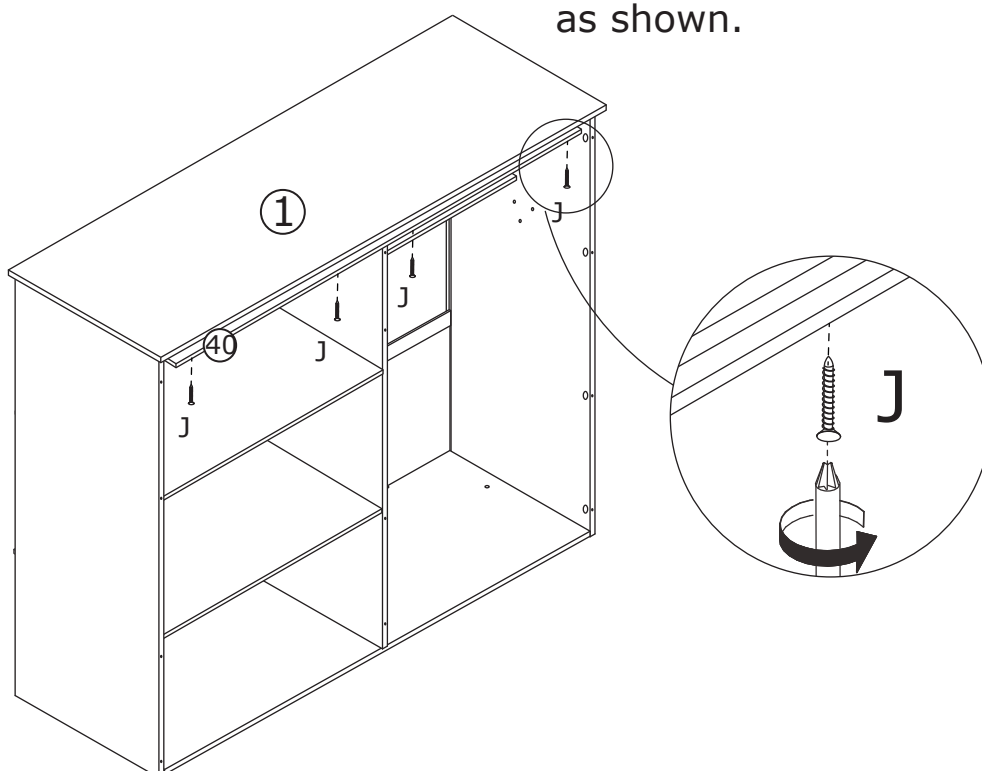


24




A x 12

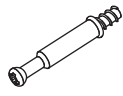

Ø6 x 35 mm

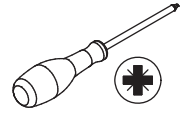

Screw eccentric rod(A) into board 13 14 and 15 with a screwdriver as shown.

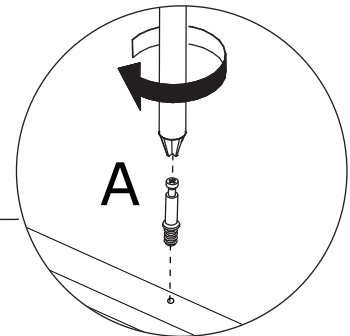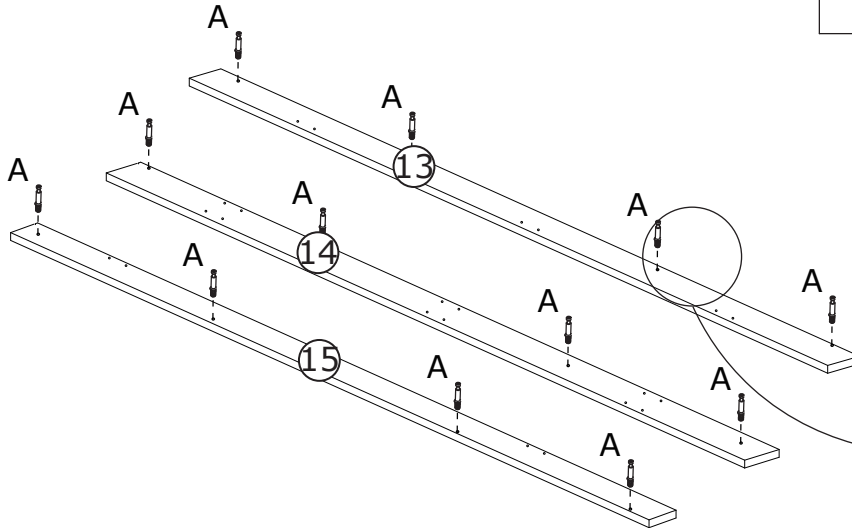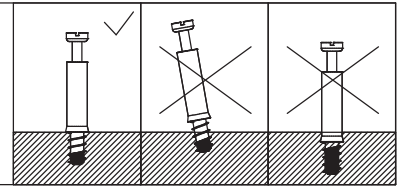



25

B x 36





Ø3 x 12 mm

O x 12

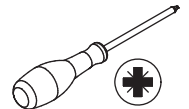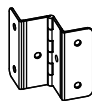

Fix hinge(O) to board 13,14 and 15 with screw(B) as shown.

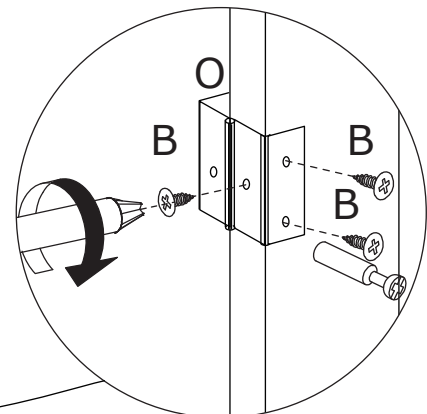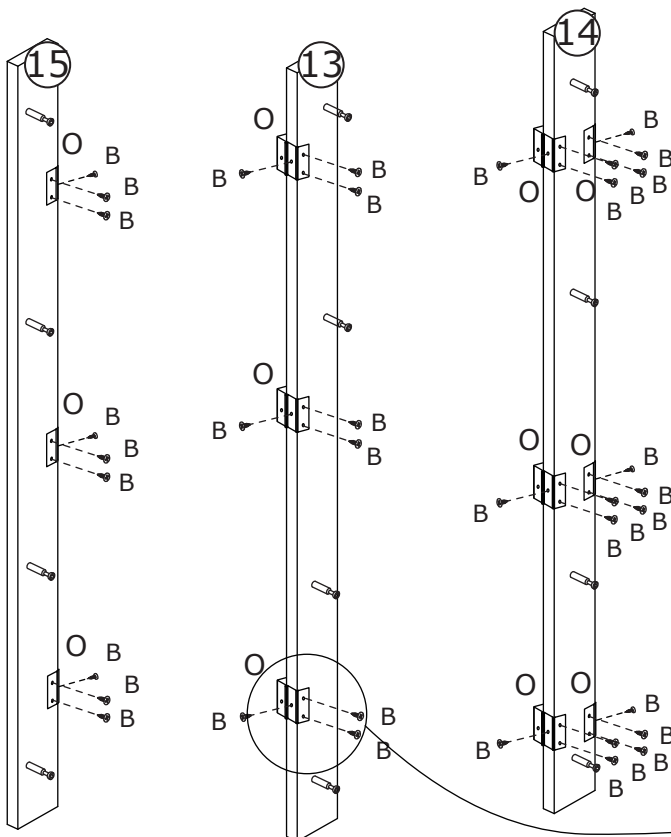


26



C x 12



Ø 15 x 12 mm

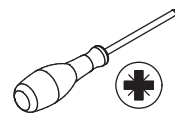



Attach board 13 to board 5,
board 14 to board 7, board 15
to board 8, add cam lock(C)
into board 5,7,8 and turn
clockwise to tighten as shown.

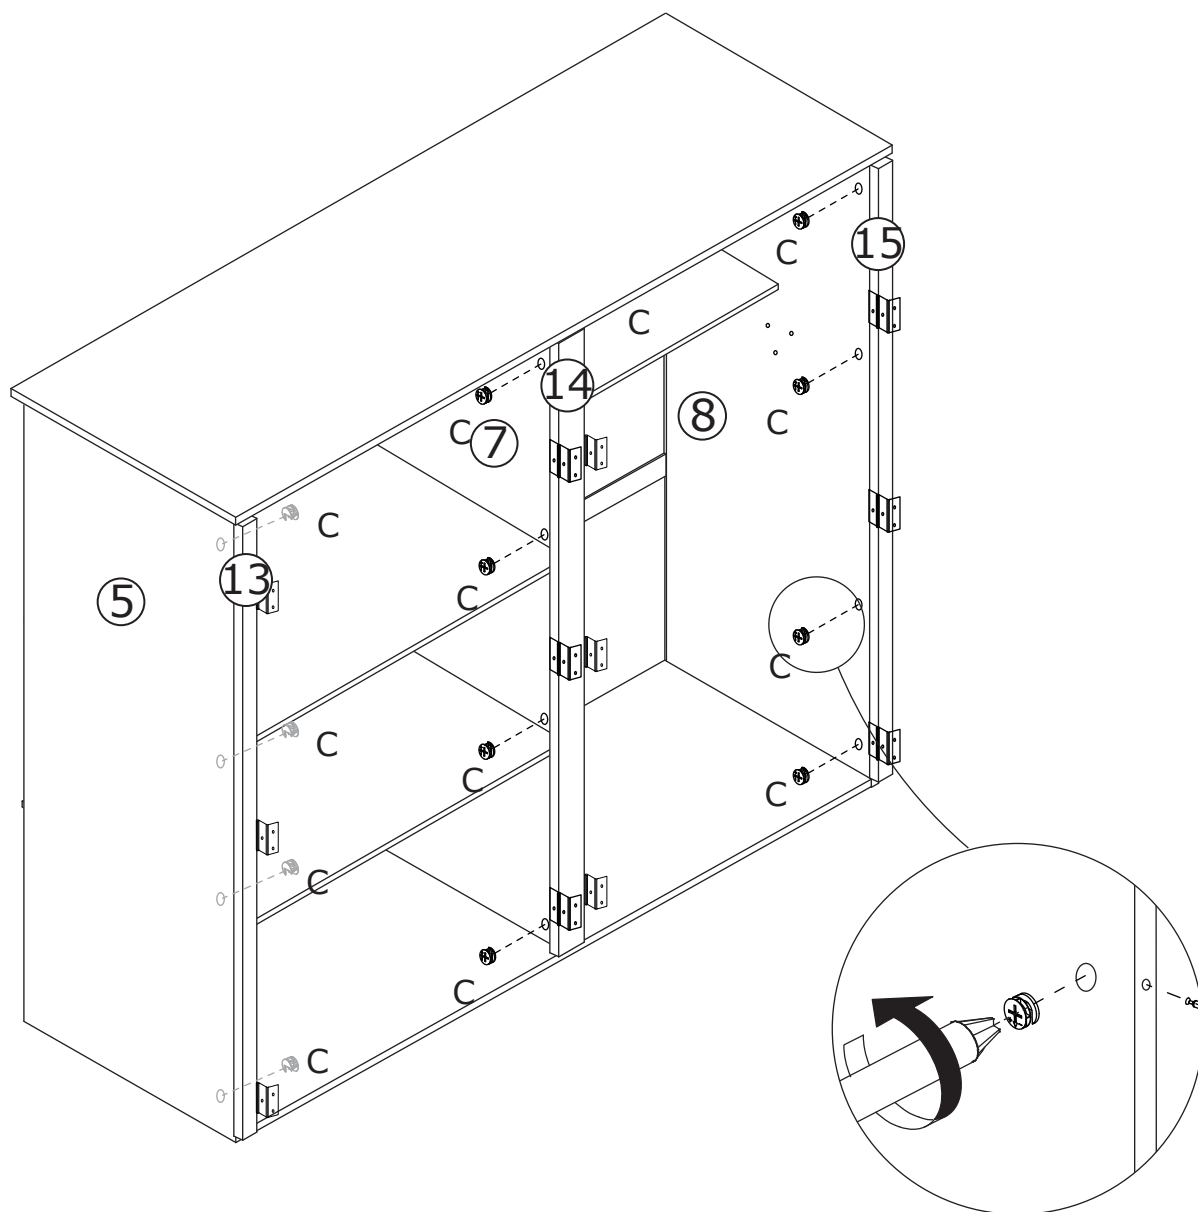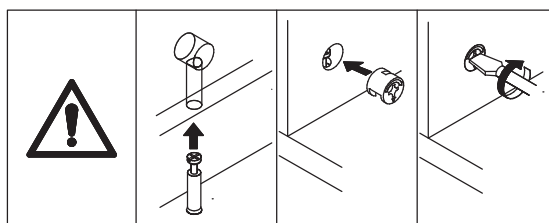

27




Fix handle(D) to board 26 with screw as shown. as shown. Screw eccentric rod(A) into board 26 with a screwdriver as shown.

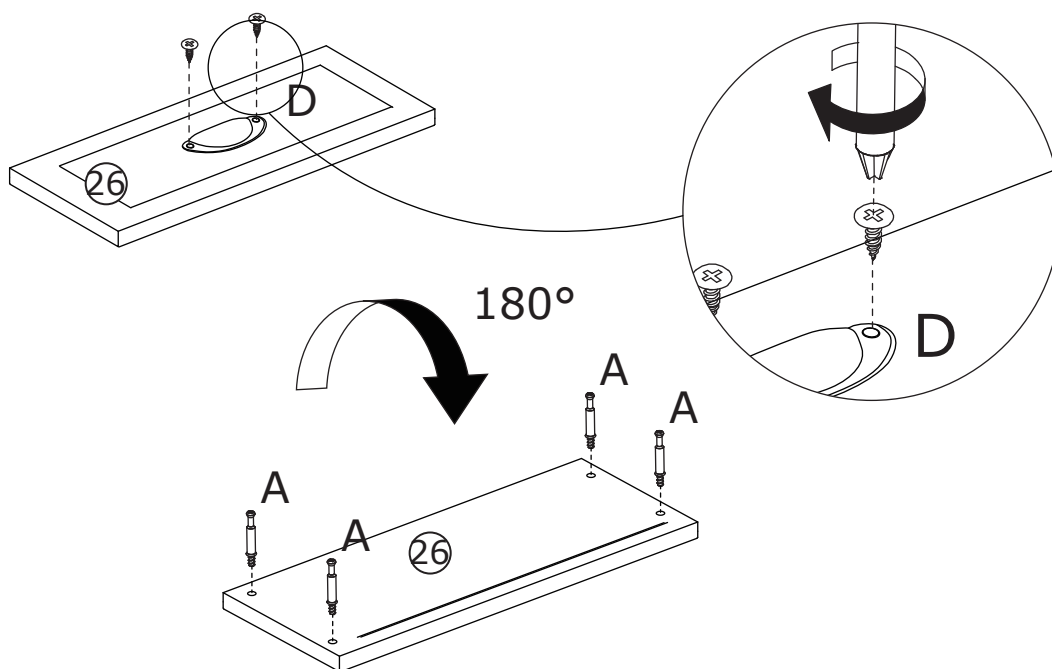
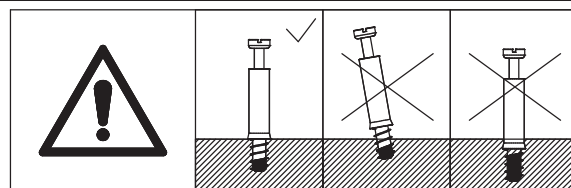


x4

28

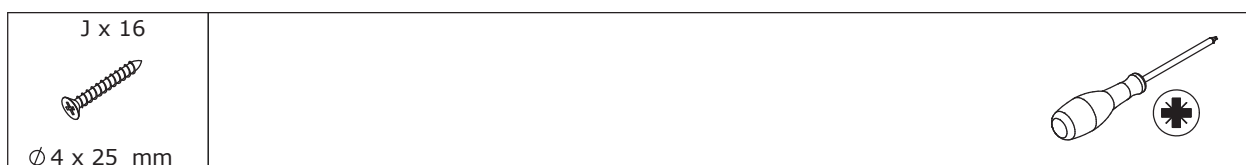


Fix board 23 and 24 to board 22 with screw(J) as shown.

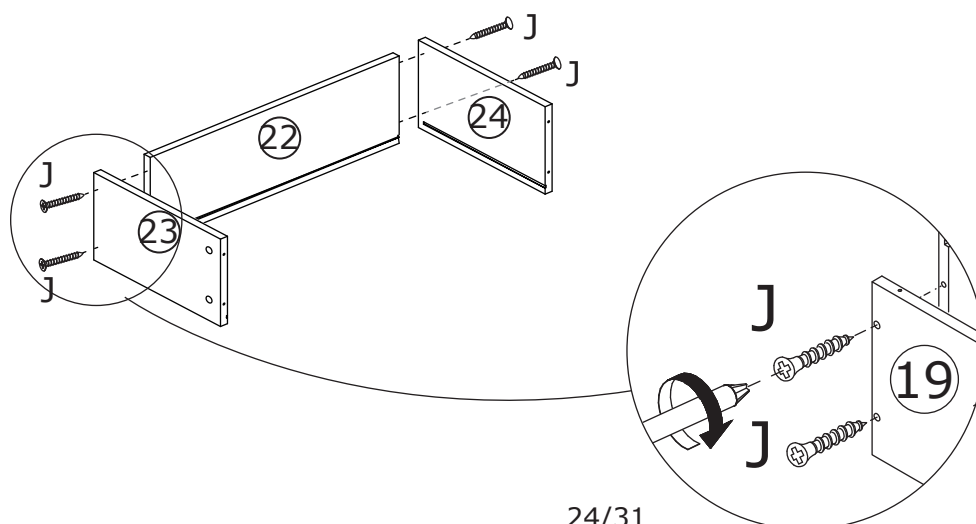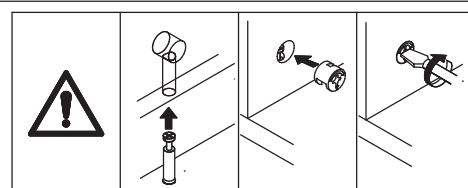

x4

29

Insert board 25 along grooves as shown.

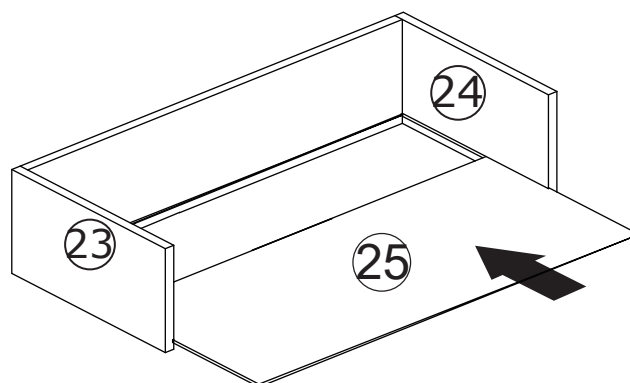

x 4

30



C x 16



Ø15 x 12 mm



Attach board 26 to board 23 and 24, add cam lock(C) and turn clockwise to tighten as shown.

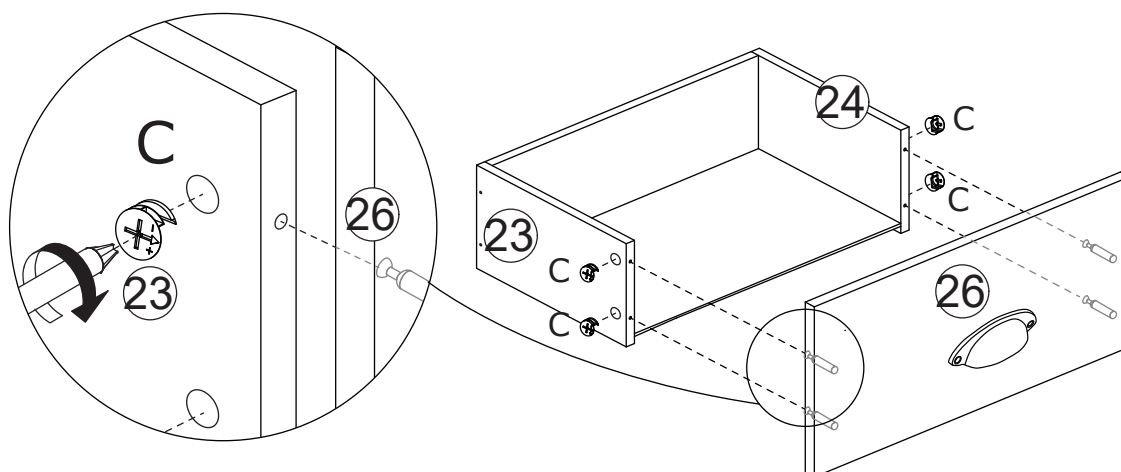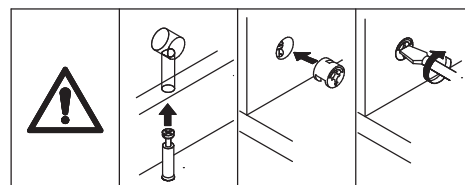

x 4


31

B x 16




Ø3 x 12 mm


S x 4

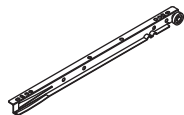

R x 4

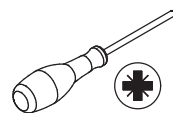
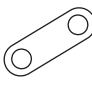
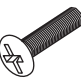

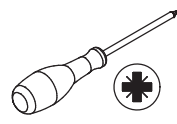


Fix runner(S) and (R) to board 23 and 24 with screw(B) as shown.

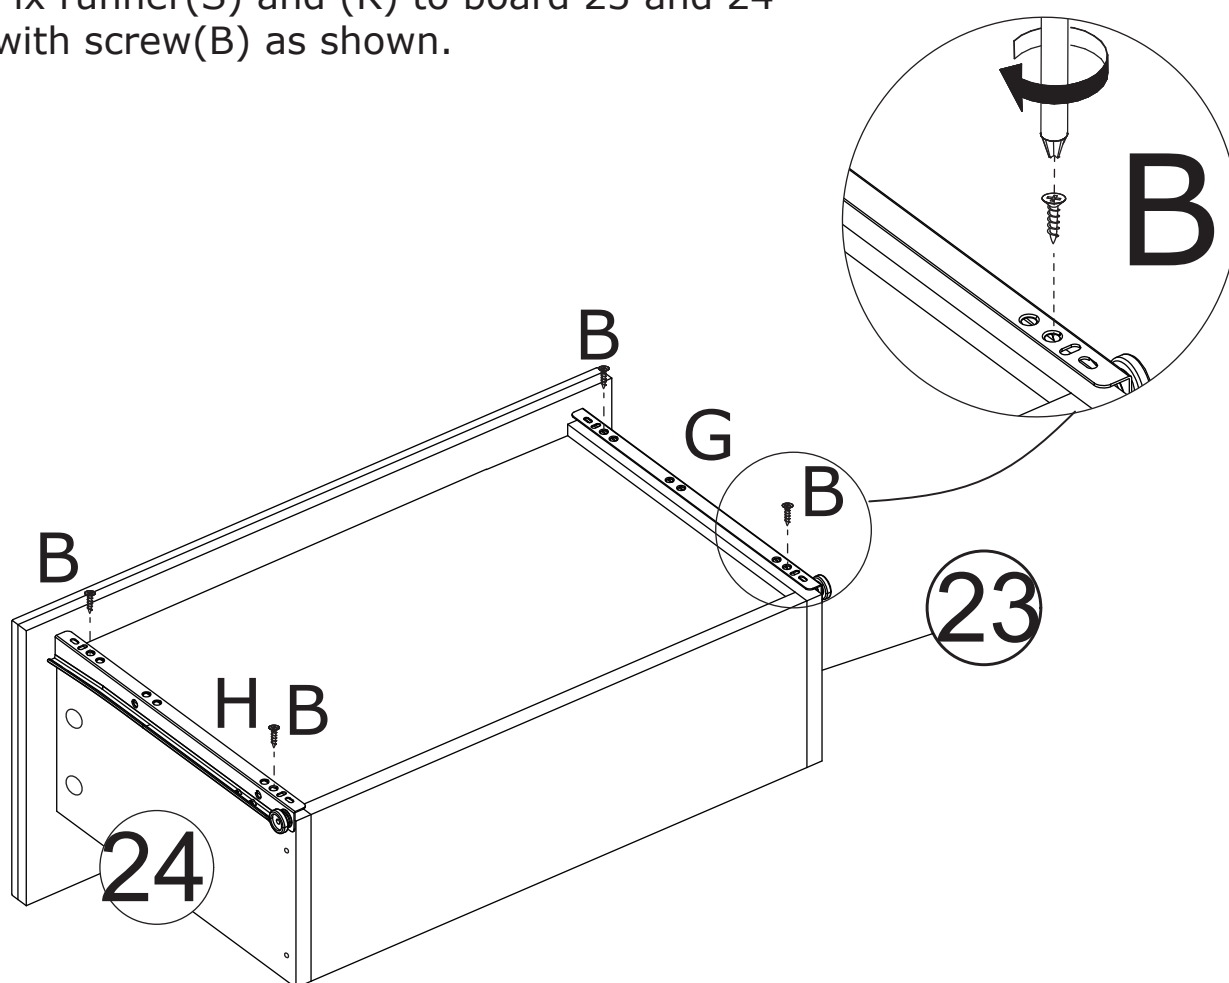


x 4


32

G x 4 	N x 4 	F x 4  Ø 4 x 20 mm	B x 44  Ø 3 x 12 mm	
--	--	---	--	---

Fix knob(G) to board 17 and 16 with screw(F) as shown.
Fix part(N) to board 17 and 16 with screw(B) as shown.

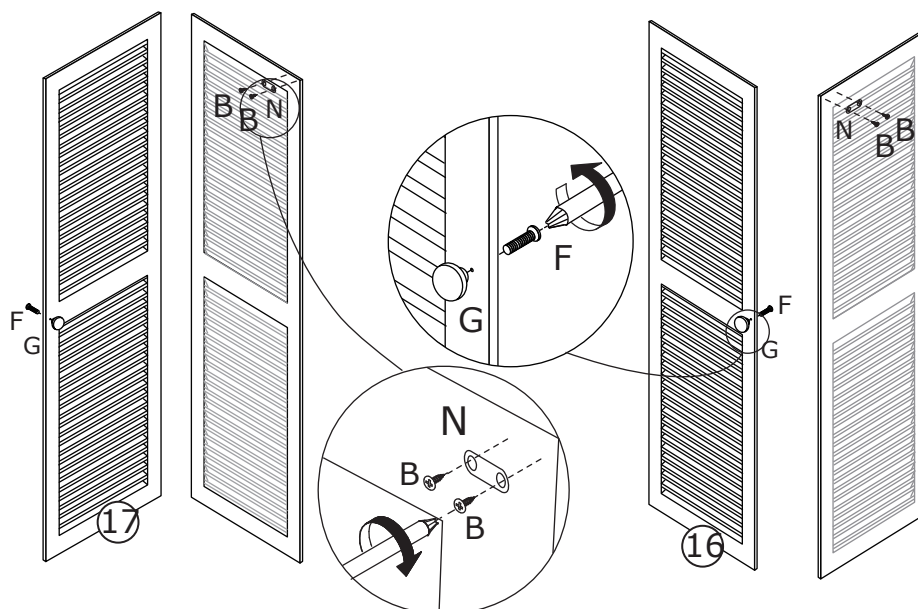


x 2


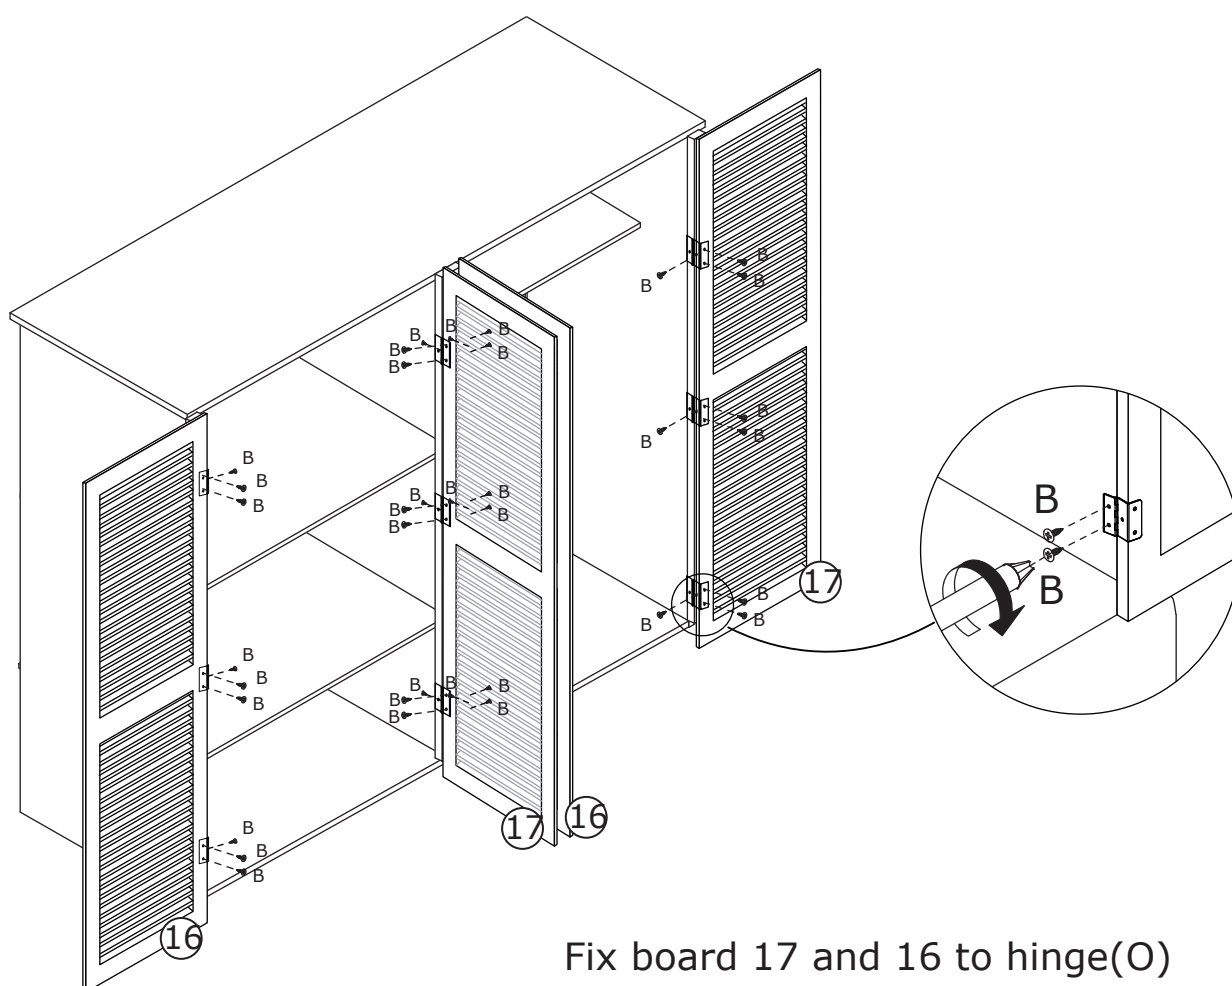


Fix board 17 and 16 to hinge(O)
with screw(B) as shown.

33

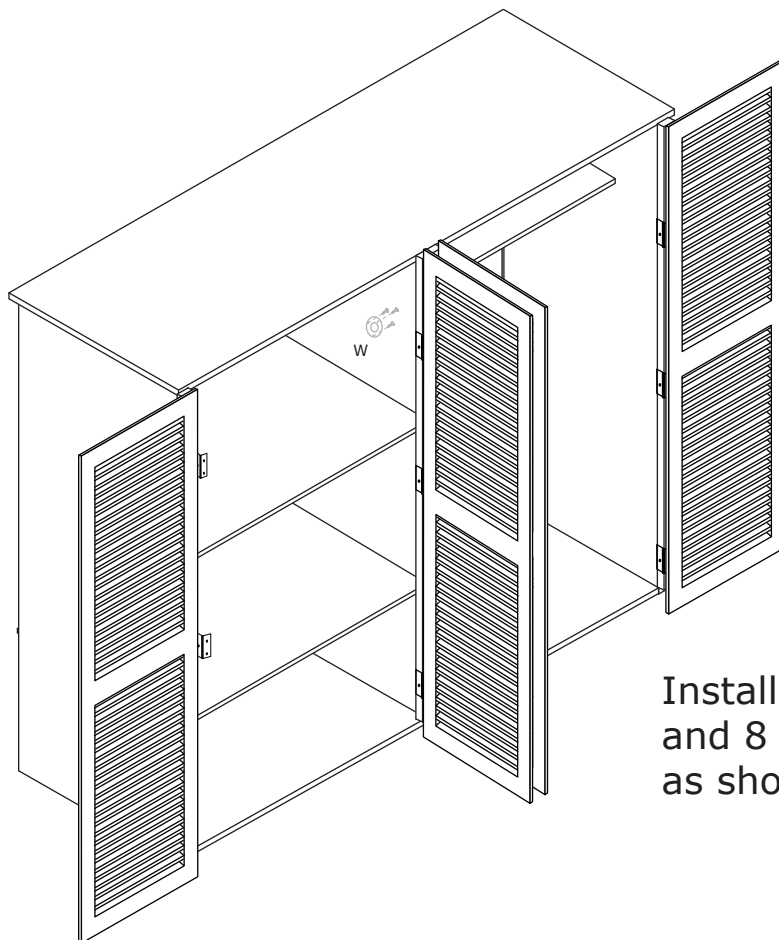

Installation kit(W) to plate 7 and 8 with pole(X) using screw(B) as shown.

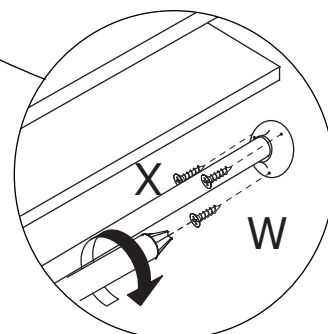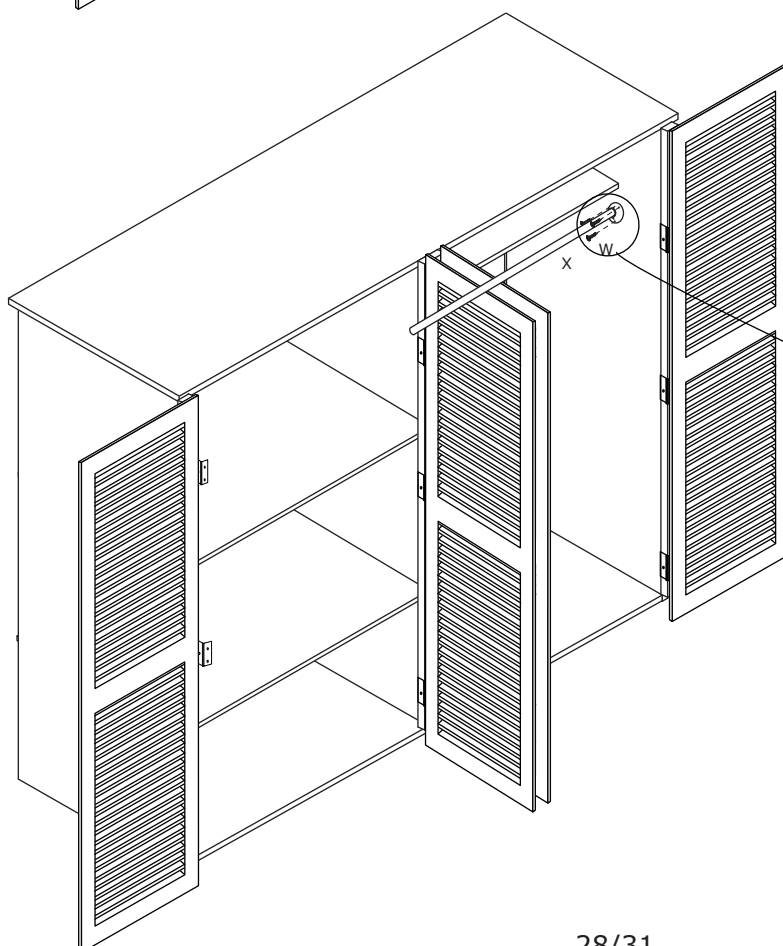


34

V x 4




Ø6 x 30 mm

K x 1

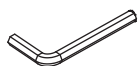


Fix board 2 to board 3 with screw(V) as shown.

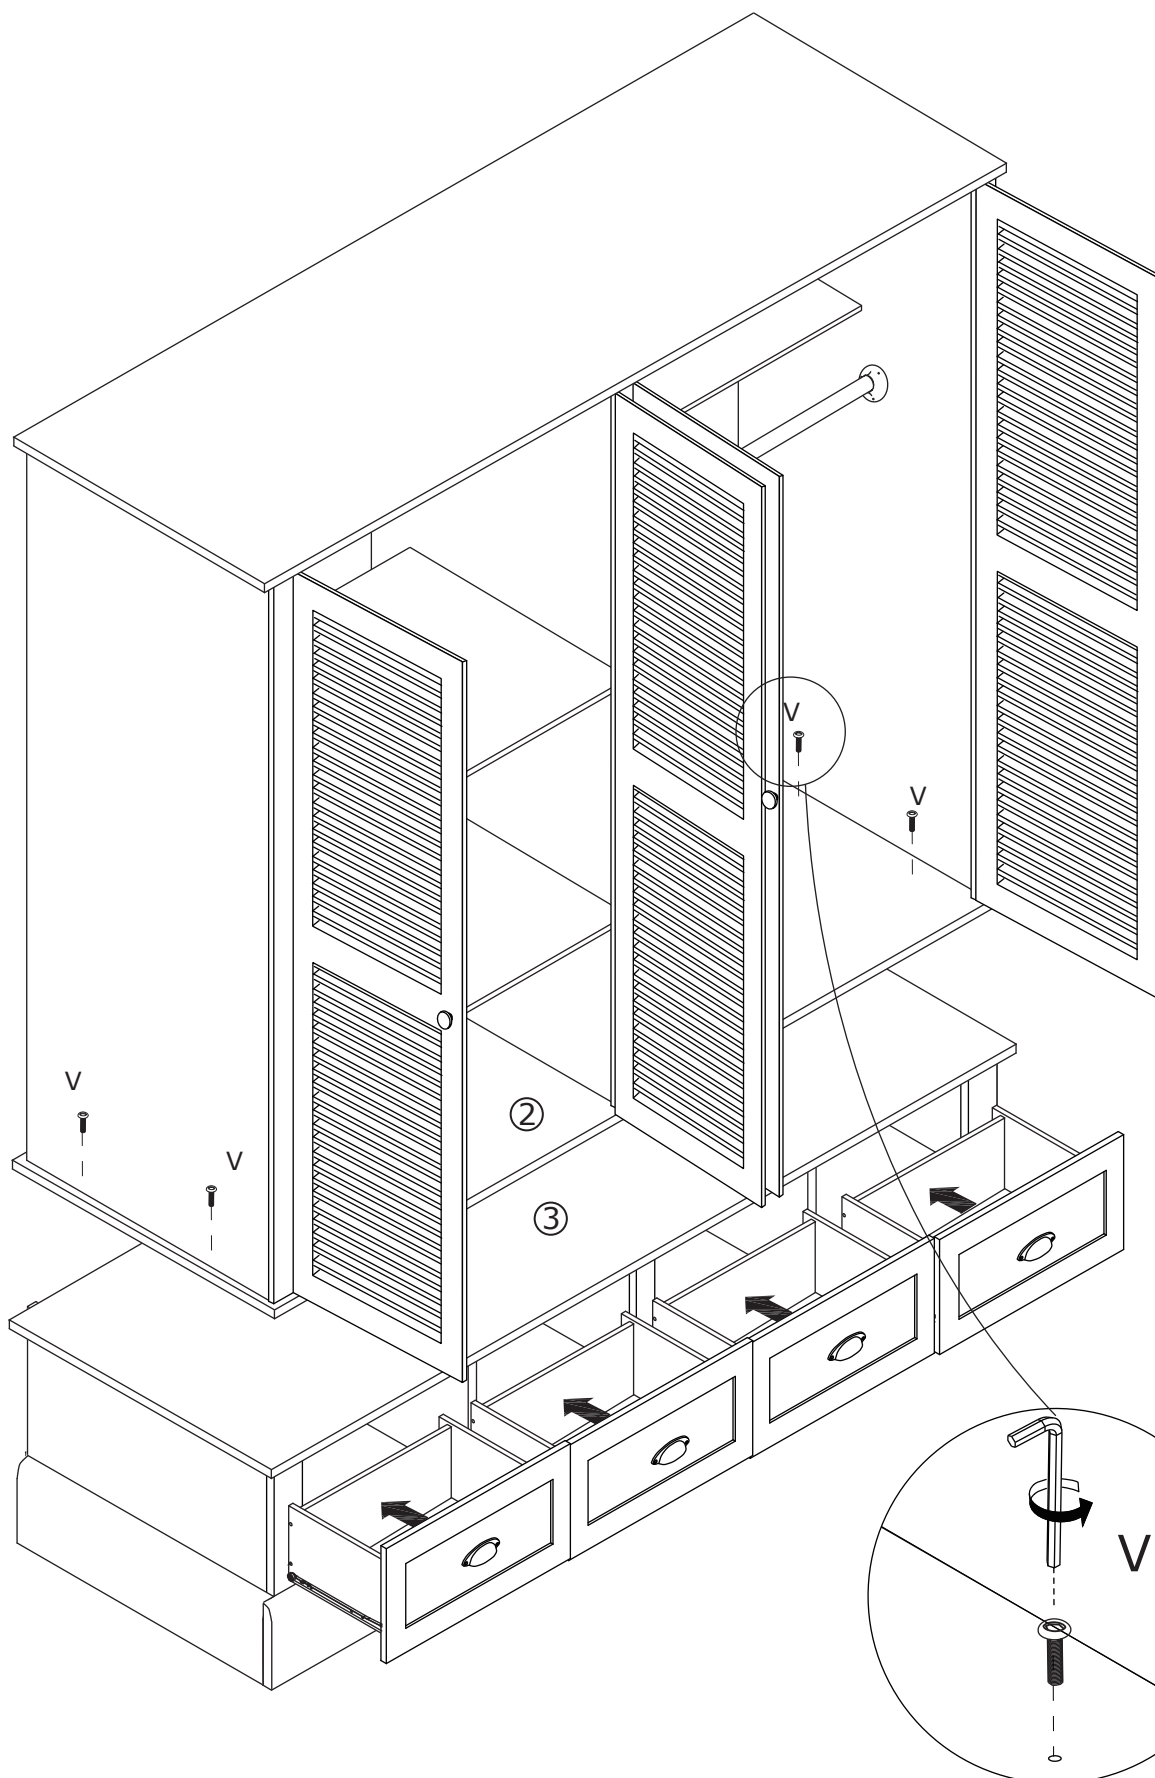

35


T x 16

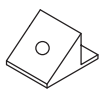


B x 16







Ø3 x 12 mm

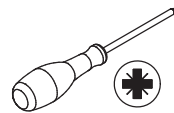




Insert buckle(T) into back slots and fix with screw(B) as shown.

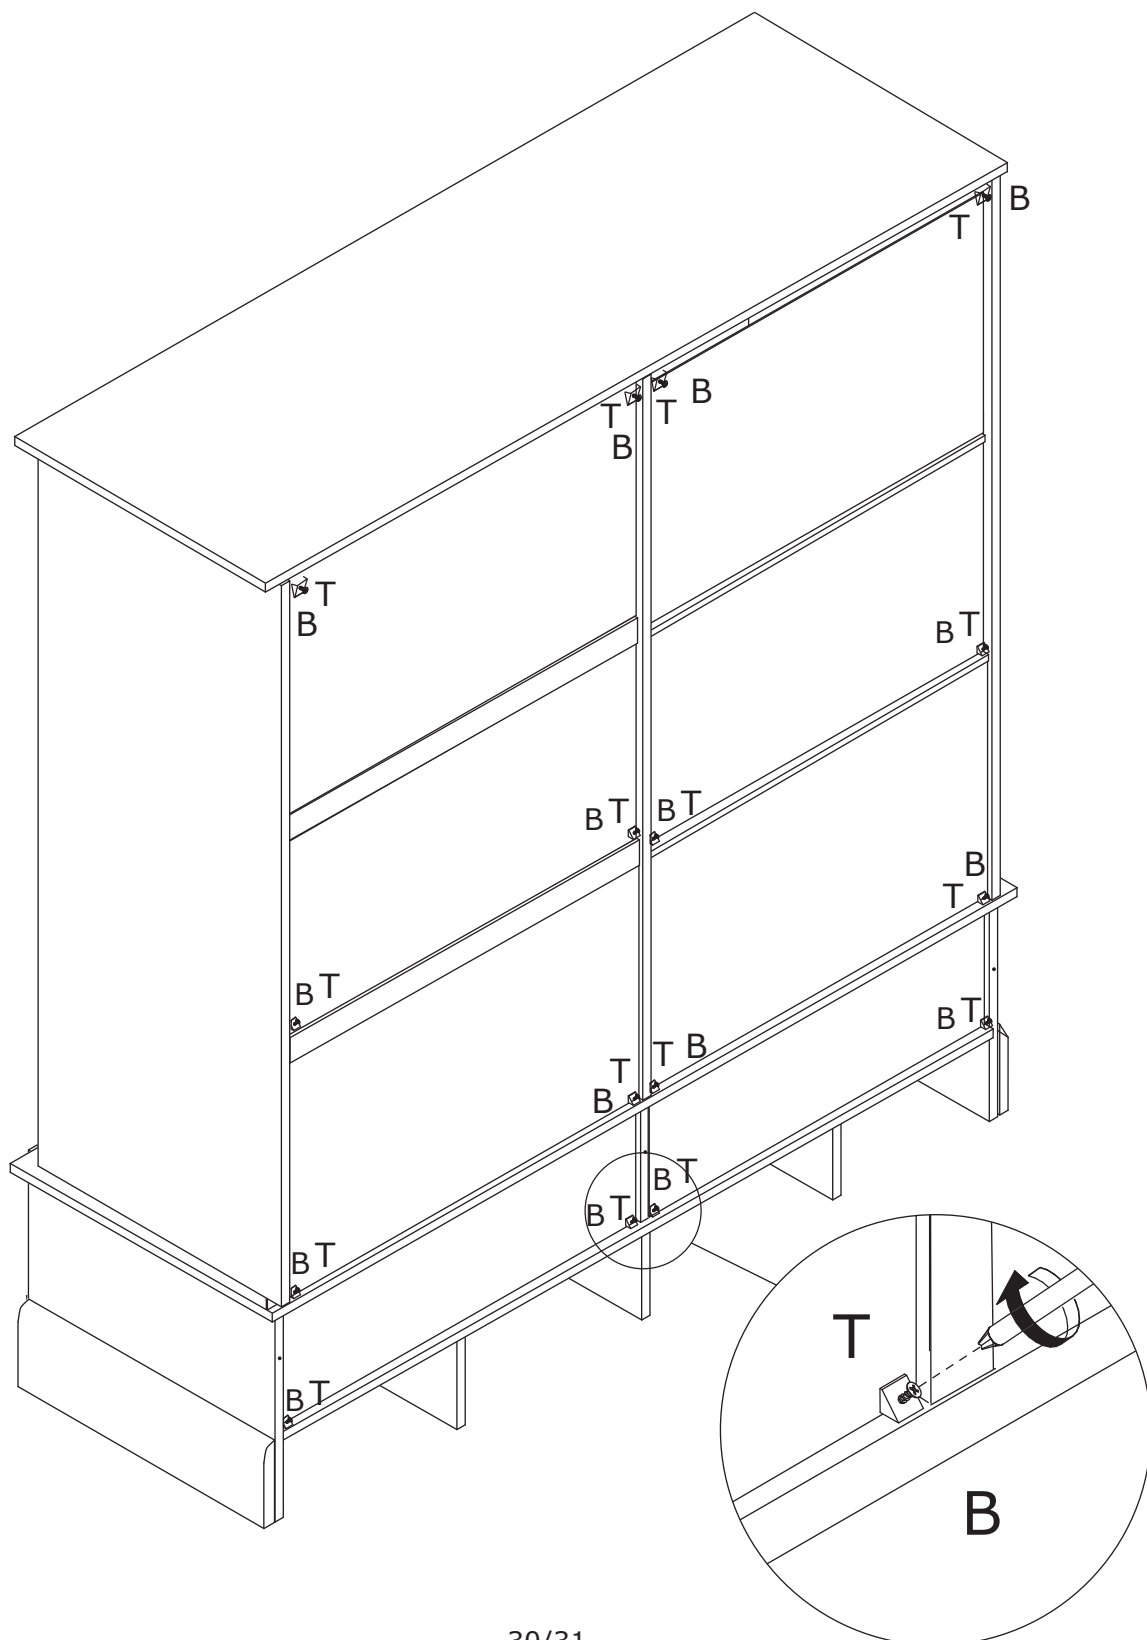

36

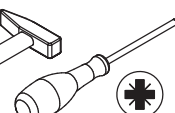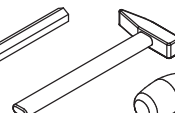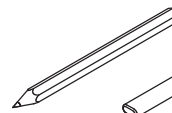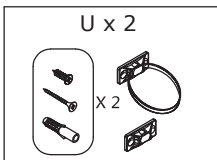

Install anti-tipping device as shown.

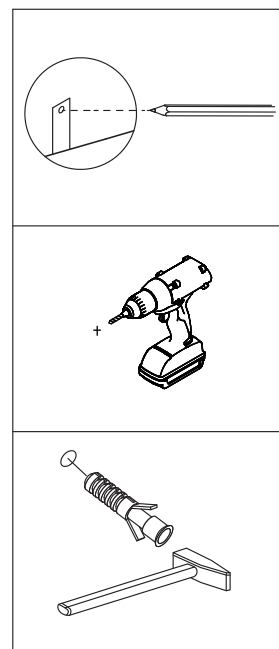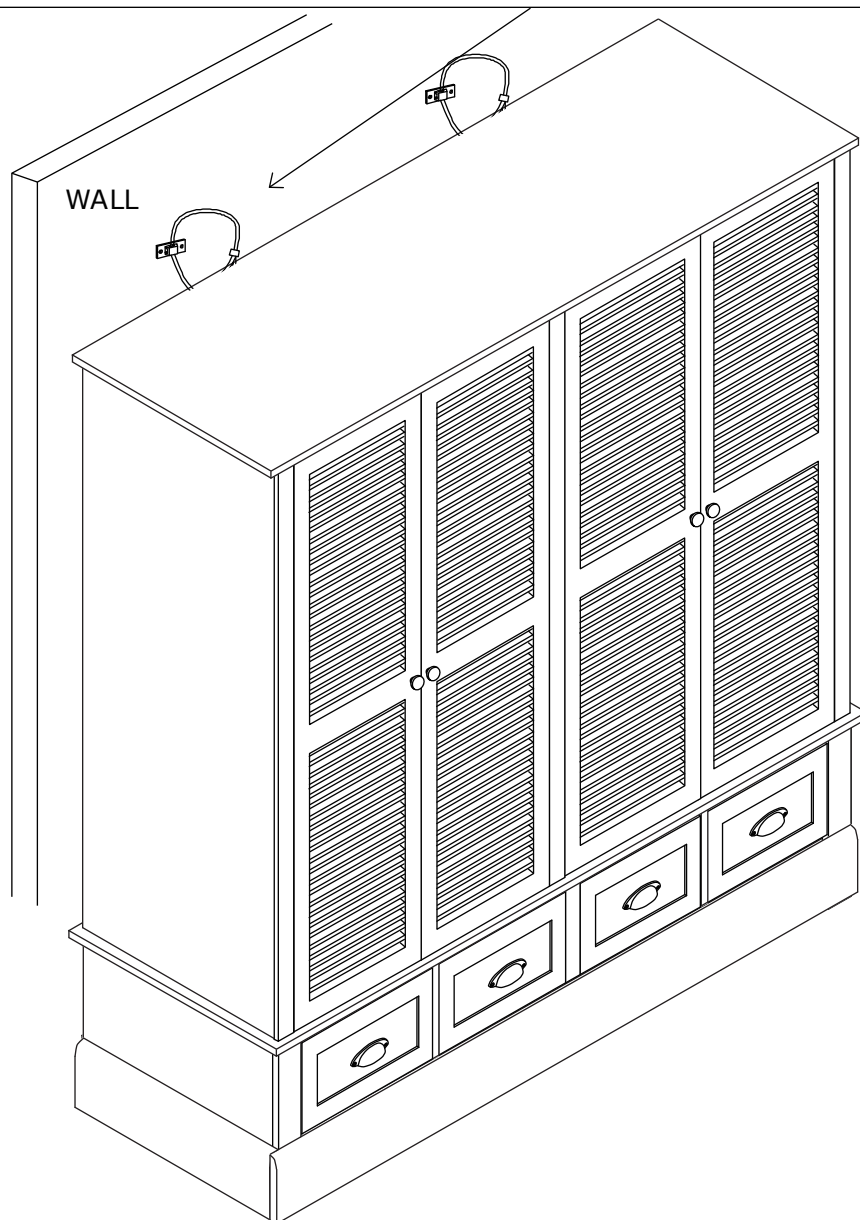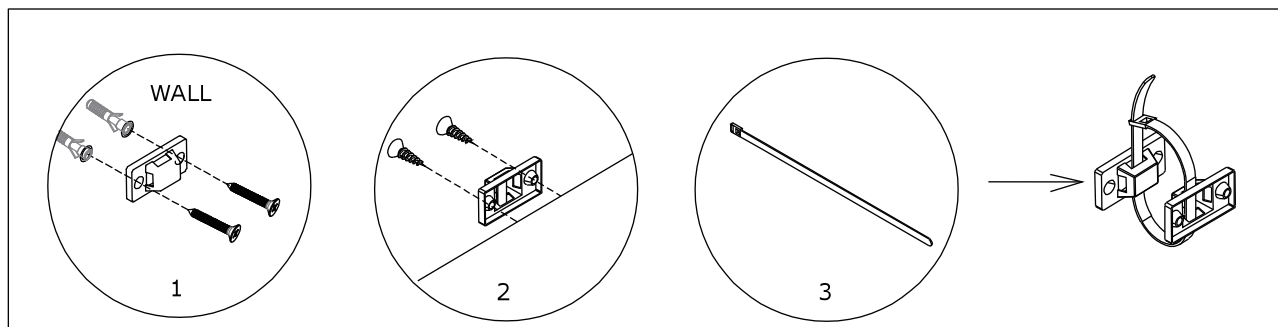

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



feedbackstation@163.com



(303)800-6387