Instruction Manual Rain Shower System



CONTENT

1:Installation Condition · · · · · · · · · · · · · · · · · · ·	1page
2:Product List · · · · · · · · · · · · · · · · · · ·	2page
3:Installation shower set size · · · · · · · · · · · · · · · · · · ·	3page
4:Installation Depth Of Shower Arm &shower Holder · · · · · · · · · · · · · · · · · · ·	3page
5:Installation Depth Of Main Body · · · · · · · · · · · · · · · · · · ·	4page
6:Wall mounted/celiling mounted installation before tilong · · · · · · · · · · ·	4page
7:Main Body Connecting Pipe Schematic Diagram · · · · · · · · · · · · · · · · · · ·	5page
8:Main Body Valve Installation · · · · · · · · · · · · · · · · · · ·	6page
9:Main Body Assembly Schematic Diagram · · · · · · · · · · · · · · · · · · ·	6page
10:Installation of rain shower head& shower arm·····	7page
11:Shower Holder Installation Install The Hand Show Holder · · · · · · · ·	·7page
12:Care And Maintenance ·····	8page
13:If A Large-scale Clean-up Is Necessary, Follow These Procedures · · · · · ·	8page




- 1.Refer to the 《Standard Part List》 when unpacking, check all parts available.
- 2.Do not disassemble mixer body by yourself.
- 3. Connect inlet hoses to supply valves.
- 4.Make sure inlet pipes and supply valves have been installed and cleaned, also ensure no impurities in pipeline.




- 5. After installation, check all joints for leakages.
- 6. Suggest don't fit the faucet in the severely corrosive environments.



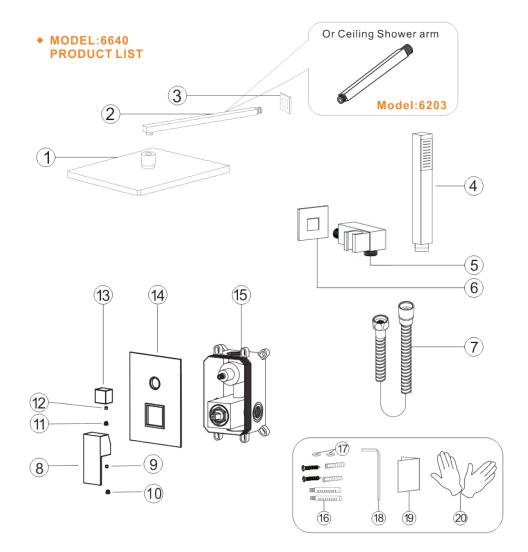


No.	Part name	Qty	No.	Part name	Qty
1	Shower head	1	11	Water diverter cup	1
2	Shower arm	1	12	Water diverter screw	1
3	Shower arm cup	1	13	Water diverter	1
4	Shower hand	1	14	Panel	1
5	Hand shower holder	1	15	Main body	1
6	Holder cup	1	16	Body box screw	4
7	Shower hose	1	17	Valve gasket spare parts	4
8	Handle	1	18	Wrench	1
9	Handle screw	1	19	Instruction manual	1
10	Handle cup	1	20	Gloves	2


♦ INSTALLATION SHOWER SET SIZE

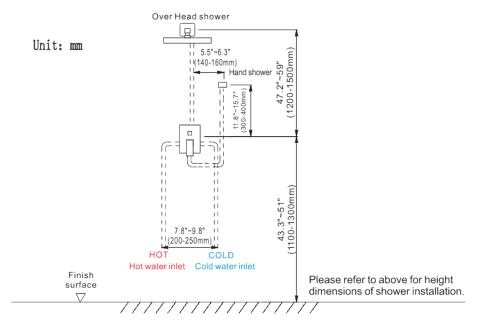

◆ INSTALLATION DEPTH OF SHOWER ARM & SHOWER HOLDER

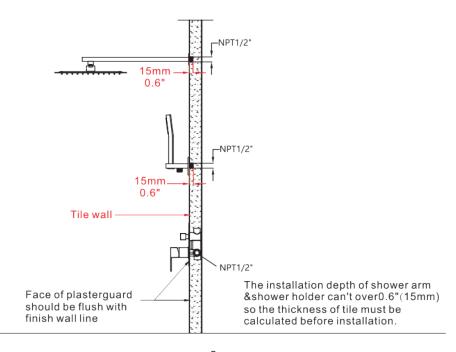


INSTALLATION DEPTH OF MAIN BODY

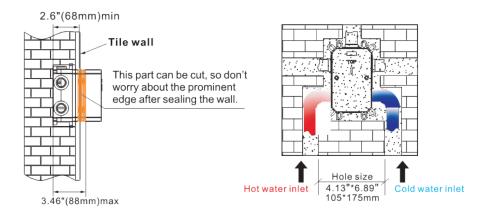


- 1: Including the thickness of ceramic tile is less than or equal to the thickness of valve 3.46" (88mm), so the thickness of tile must be calculated before installation.
- 2: Installation Main body depth not less than 2.6"(68mm)min and not more than 3.46" (88mm) Max, Otherwise, the panel cannot be installed.

WALL MOUNTED/CELILING MOUNTED INSTALLATION BEFORE TILONG

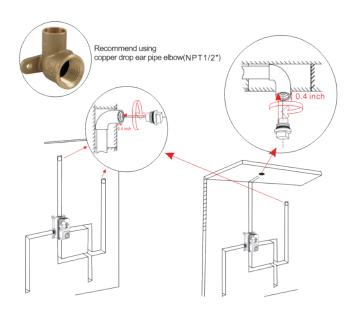

1:Recommend using Copper drop ear pipe elbow(NPT 1/2)

◆ MAIN BODY CONNECTING PIPE SCHEMATIC DIAGRAM

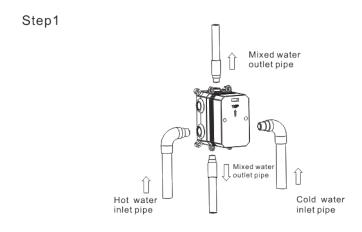


As shown in the figure, the inlet and outlet pipes are pre-buried,pay attention to the correct direction of installing the pre-buried box,and make sure that the mark TOP on the top of the installation box is facing upward.

Step2




Warning:must install hot water and cold water inlet strictly as instructions.

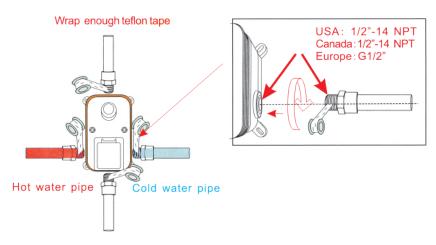

Install the hot and cold water inlet pipes, Shower head and hand shower holder pipes. Turn on the water source to test whether the left and right inlet pipes are tightly connected without leakage. After the test, adjust the flow switch to be on to test whether the mixed outlet pipe. The connection is tight and there is no leakage.


♦ MAIN BODY VALVE INSTALLATION

According to the size of installation to install the anchors to the wall, then use not yellow gasket spare partsthen install the Main body

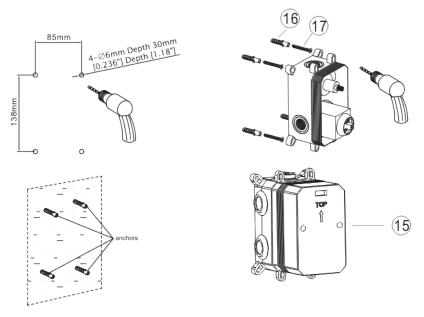


Please note that the level meter should be parallel, otherwise the panel cannot be installed Pay attention to the length and width of the screw position before marking

MAIN BODY ASSEMBLY SCHEMATIC DIAGRAM

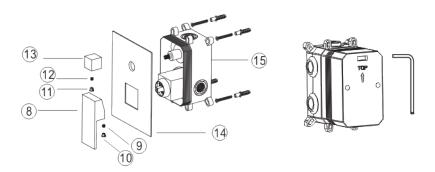


Please fix the ®Main body to the wall then remove the plastic protective cover and install ®Panel ® Water divider, ® Screw, ® Water divider cup in the order. Finally you could install ® Handle, 9 Screw, ® Handle cup.

◆ INSTALLATION OF RAIN SHOWER HEAD& SHOWER ARM

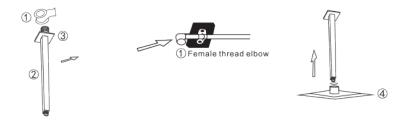


Connect top outlet 1 to shower arm 2 with proper fittings. To prevent damage, to finish on shower arm, insert wall end of shower arm into shower flange 3 before screwing arm into riser connection. Thread showerhead 4 onto shower arm. Apply tape to pipe threads on both ends. Do not overtighten showerhead. The showerhead is 360° swivel connection.

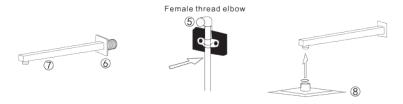

Connect top outlet ⑤ to shower arm ⑦with proper fittings. To prevent damage, to finish on shower arm, insert wall end of shower arm into shower flange ⑥ before screwing arm into riser connection. Thread showerhead ⑧ onto shower arm. Apply tape to pipe threads on both ends. Do not overtighten showerhead. The showerhead is 360°swivel connection.

SHOWER HOLDER INSTALLATION INSTALL THE HAND SHOW HOLDER

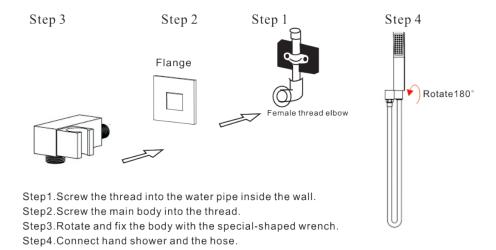

◆ CARE AND MAINTENANCE

In order to keep the mixer surface bright, please clean the mixer regularly.

Rinse faucet with clean water and wipe with soft cotton cloth.

Avoid suing cleaning powder, harsh cleaning chemicals, brushes, and cloth with coarse surface to prevent scratching and corrosion.

Do not use acid cleaner to clean the faucet as it may cause surface corrosion of the faucet. If the faucet comes into contact with harmful acid substances, please rinse it with water immediately.





◆ IF A LARGE-SCALE CLEAN-UP IS NECESSARY, FOLLOW THESE PROCEDURES

- 1:Use clean water and soft cloth to remove dirt on the surface as much as possible.
- 2:Use one of the following cleaners to remove dirt on the surface

Mild liquid cleaner.

Colorless glass cleaner, powder cleaner which does not have abrasive function and can be dissolved completely.

Polish liquid which does not abrasive function.

3:After cleaning, remove the cleansing agent with clean water completely and wipe with soft cotton cloth.

After-sales contact Email:contactus24service@gmail.com TEL:(303) 747-4321