

NOTICE

- *Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- *This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- *This item may require periodic tightening.
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 10 minutes.

CARE AND MAINTENANCE

Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.

The use of steam or water-based cleaners may cause excessive shrinking or staining.

Parts List and Hardware List


PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Front Leg		1X
B	Front Leg		1X
C	Back Leg		1X
D	Back Leg		1X
E	Seat		1X
/	Plastic washer		4X

SAFAVIEH

COUTURE

Model# SFV5020

Product Dimensions: 27.95" W x 33.46" D x 31.10" H

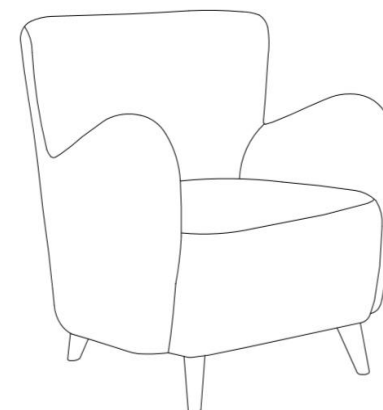

Weight Capacity: 275 lbs

WARNING: DO NOT STAND ON CHAIR

WARNING: DO NOT OVER TORQUE BOLTS

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.

*Estimated Assembly Time: 10 minutes.

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com


1

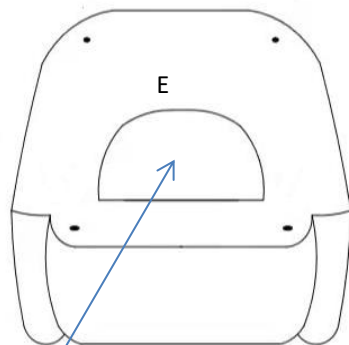

Legs inside here


STEP 1: OPEN THE ZIPPER ON THE BOTTOM OF THE SEAT AND TAKE OUT LEGS AND HARDWARE.

2

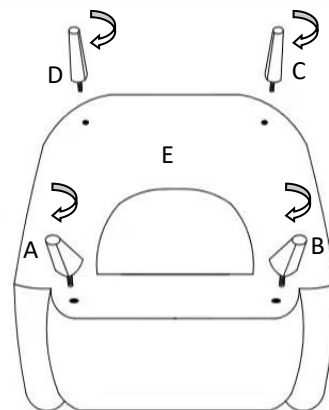


STEP 2: INSERT THE LEGS AND SCREW THE LEGS BUT DON'T TIGHTEN COMPLETELY. REPEAT THE SAME STEPS FOR THE OTHER THREE LEGS.

3

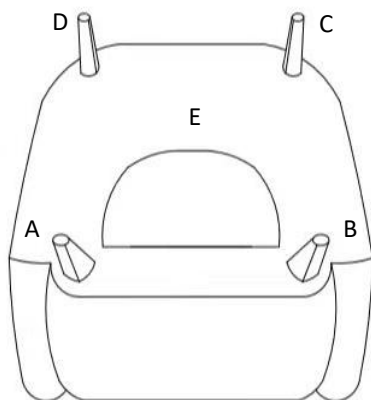

STEP 3: CLOSE THE ZIPPER ON THE BOTTOM OF THE SEAT.

4

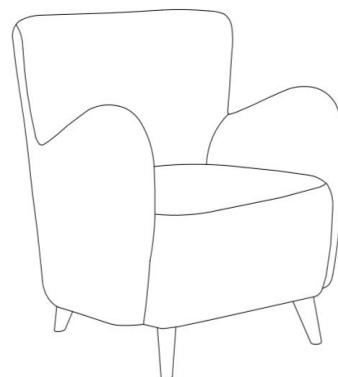

STEP 4: PUT THE CHAIR UPRIGHT AND MAKE SURE ALL LEGS ARE LEVEL, IF THE CHAIR SLIGHT WOBBLE, YOU CAN ADJUST THE LEGS BY ADDING PLASTIC WASHER AFTER ROTATING.