

CAUTION: Maintenance

- 1. Replacement parts may be available at the store where you purchased your faucet.
- 2. Always turn off water and relieve pressure before working on your faucet.

NOTES: Cleaning Instructions

- 1. To keep the faucet clean, you should clean the faucet frequently and regularly.
- 2. Clean the faucet with clear water or mild liquid, rinse the faucet with clear water and then dry the faucet with soft cotton cloths.
- 3. Do not use any abrasive cleansers, cloths, or paper towel.
- 4. Do not use any acid or abrasive detergent.

TROUBLE-SHOOTING

If you've followed the instruction carefully and your faucet still does not work properly, take these corrective steps.

Problem	Cause	Action
Leaks underneath handle.	Cartridge has come loose.	Tighten the cartridge.
Water will not shut off completely.	Dirty or worn out washer in cartridge.	Remove handle and cartridge to check if the washer is damaged permanently or dirty. Re-install or replace cartridge.


AKICON®
Cold only water filter faucet

Model: 97703
97718
97718P1

PACKING LIST


After you open this package, please check to ensure that all of the following items are included.

- A- Faucet B- Mounting Assemblies C- Quick connector for 1/4 inch pipe D- Quick connector for 3/8 inch pipe
E- Allen wrench

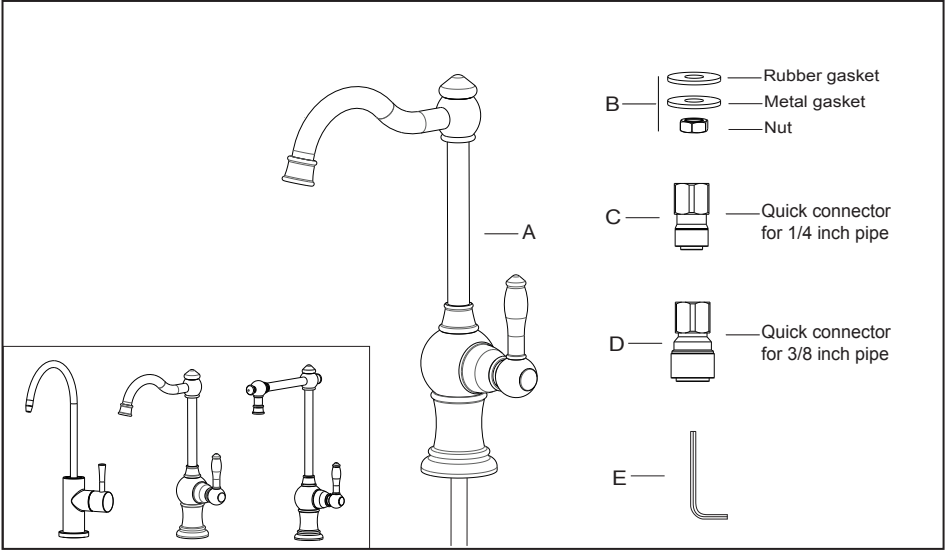

IMPORTANT NOTICES: For easy installation, please read all the instruction completely before beginning.
Before installing this product, make sure that water line trash is cleared to avoid blockage.


YOU MAY NEED

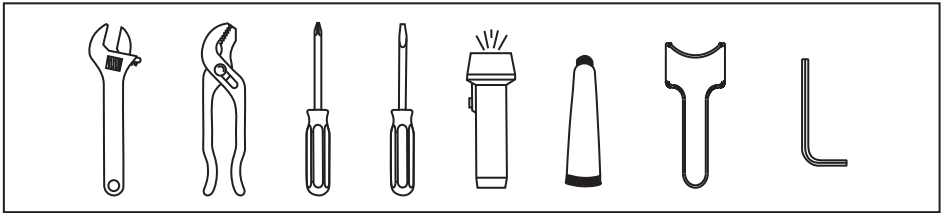

Questions, problems, missing parts?
call Akicon Customer Service 8 a.m.-6p.m. EST, Monday-Friday
Phone: +1(302)213 4406, Email: service@akiconshop.com
AKICONSHOP.COM


INSTALLATION PROCEDURES

1

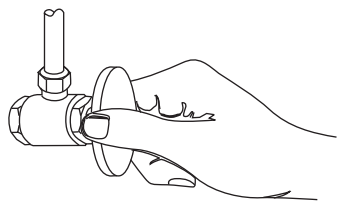


You should clean all the dirt from valve outlets. Turning off the water supply valves. This is usually found near the water meter. If you are replacing an existing faucet, remove the faucet from the sink and clean the sink surface thoroughly.

3

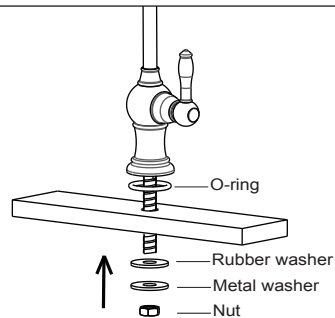


Check that the bottom of the base has O-ring. Install the faucet through the hole on the sink, and then place the rubber washer, metal washer and nut from the bottom of the sink in sequence, put the faucet in the correct position and tighten the nut.

5

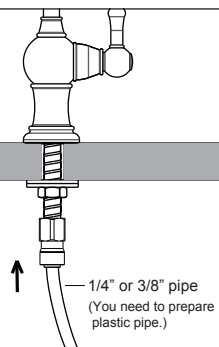


Insert the plastic pipe into the quick connector.
(Note: insert the pipe completely into the hole.)

2

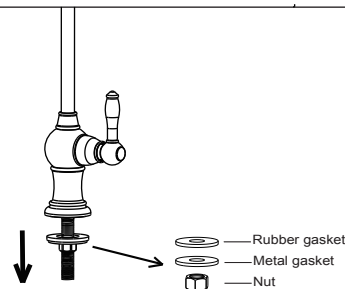


Take out the faucet and unscrew the nut, metal gasket and rubber gasket in sequence.

4

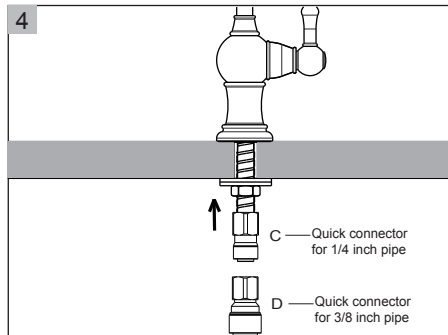


Screw the quick connector C or D onto the threaded pipe of the faucet (C or D will connect the 1/4 inch pipe or 3/8 inch pipe according to your needs), and tighten it slightly with a wrench. (Note: you don't need a lot of torque to tighten it.)

Note:

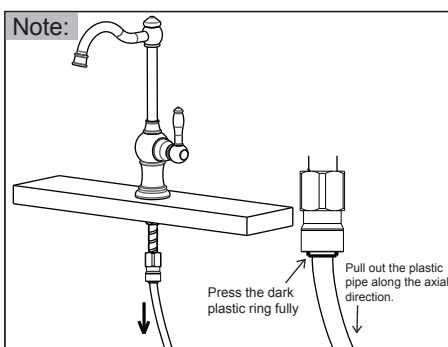


Note: if you want to pull out the plastic pipe, do not pull it out by force at will. First, you must completely press the dark plastic ring and pull out the plastic pipe along the axial direction at the same time. Your improper operation may damage the connector and cause leakage.

6

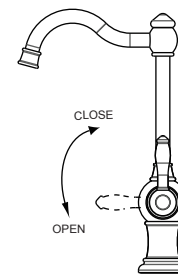


Open or close the valve.

7

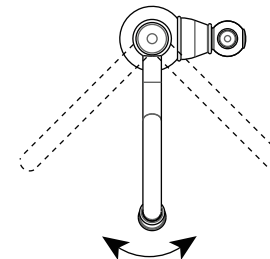


The water outlet can be rotated.

Handle Removal Maintenance.

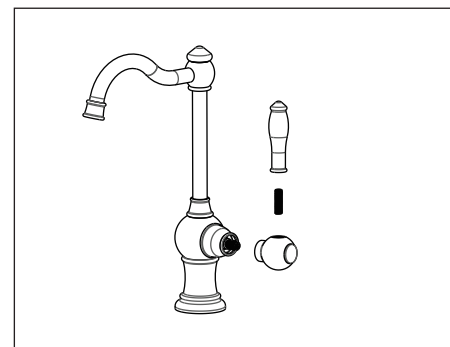

Turn off the water and release the pressure! Screw off the handle rod, use the hexagon wrench to screw out the set screw and take off the handle.

Cartridge removal maintenance.

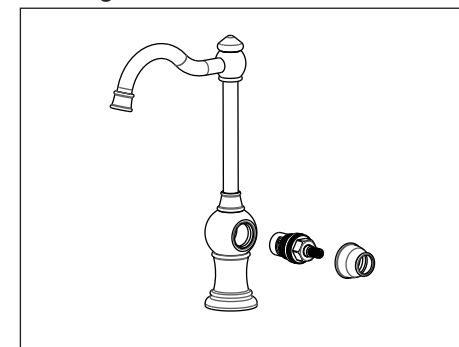

Remove handles. Unscrew Dome Cap counter clockwise by hand. Screw out cartridge assembly with a spanner wrench and check. Replace parts as necessary. Reassemble parts by reversing steps.