


# Assembly

Your sweeper requires very little assembly.

1. Find the handle section with the connector piece. The connector piece will connect the handle to the base of the sweeper.
2. Screw the connector piece to the base of the sweeper. Ensure that the connector piece is screwed tightly to the base of the sweeper or the handle may become loose during use.
3. Continue to assemble the handle one section at a time by tightly screwing the threaded sections together until you have used all sections or have reached the desired handle height.
4. Screw the handle grip onto the threaded end of the top handle section until secure. The storage loop in the handle grip can be aligned as needed for storage

For best performance, ensure that all handle sections are secure before using

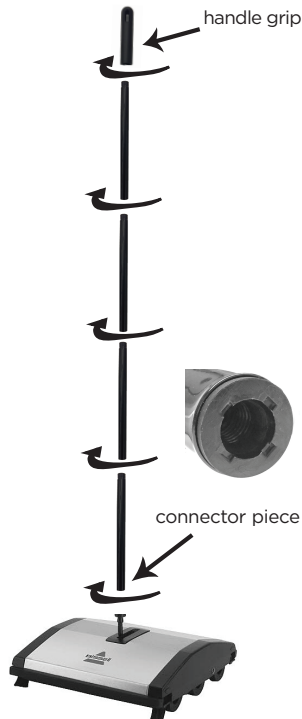

# Emptying

To empty the dirt pans hold the sweeper over a trash bin and pull down on the tabs on the sides of the sweeper.



# Maintaining

For best performance keep brushes and bearings clean of hair, threads and other debris.

The sweeper case will bow slightly to allow the center brush rolls to be removed for cleaning. To replace brush rolls fit the bearing to the proper axle end.



©2018 BISSELL Homecare, Inc  
Grand Rapids, Michigan  
All rights reserved. Printed in China  
Part Number 161-7999 09/18 RevA  
Visit our website at: [www.BISSELL.com](http://www.BISSELL.com)