 


TV STAND

Assembly Instructions - Please keep for future reference

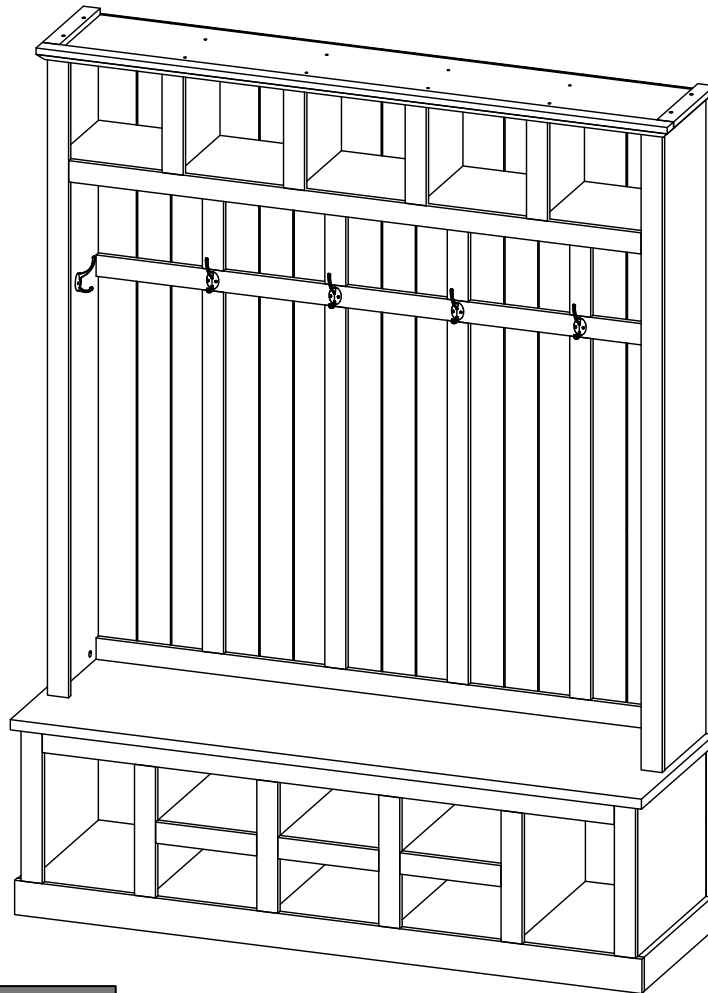

Dimensions

Width-59.1inch

Depth-18.11inch

Height-78.74inch

Important – Please read these instructions fully before starting assembly

 


Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.

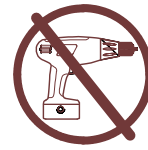

power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning –
please follow these instructions

 
 
 
 
 
To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Components - Fittings

Please check you have all the panels listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A1  Cam lock x 78 + 2	A2  Cam bolt x 78 + 2	A3  Cam cap x 74 + 2	B  8*30mm Dowel x 100 + 2
C  6*50mm Screw x 28 + 2	D  Allen key x 1	E  3.5*16mm Screw x 16 + 2	F  4*16mm Screw x 100 + 2
G  16mm Nail x 33	H  Nail leg x 8	I  Spring door support x 16 + 2	J  L bracket x 2
K  Hook x 6	L1  4*12mm Screw x 2	L2  4*50mm Screw x 2	L3  Wall plug x 2
L4  PVC strip x 2			

 Tools required




Philips screwdriver
(medium & large)

 

Using Camlocks


Step 1

 Connect the male camlock as directed in the assembly instructions using a screwdriver.

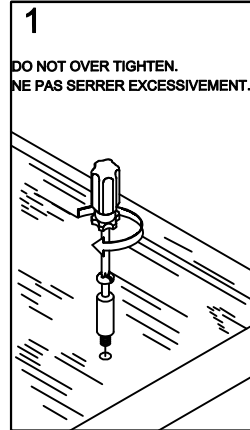

Step 2

 
Push the male camlock into the entry hole.

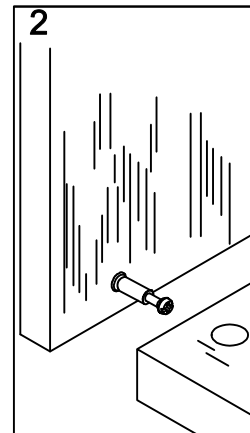

Step 3

Insert the female camlock as shown in the instruction.

 Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

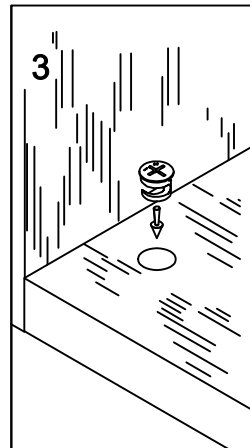


Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.





 
The joint is now secure.

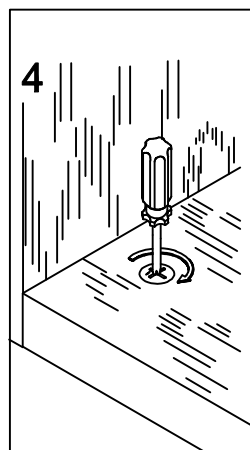



Components - Parts

Please check you have all the panels listed below.
Please note that there are 2 boxes of this product.

     Box A - WF326066














① 	⑤ 	⑥ 
Top Panel (Up) 1500*298*30 1 PC	Center Panel (Up) 263*234*15 4 PCS	Back Bone (Up) 1428*50*15 1 PC
⑦ 	⑧ 	⑨ 
Back Bone (Down) 1428*50*15 1 PC	Front Bone Long (Up) 1360*50*15 1 PC	Side Bone (L&R) 1500*50*15 2 PCS
⑩ 	⑪ 	⑫ 
Center Bone (Up) 234*50*15 4 PCS	Back Bone Long 853*50*15 4 PCS	Back Bone Short 298*50*15 4 PCS
⑮ 	⑯ 	⑳ 
Top Panel (Center) 1500*460*24 1 PC	Bottom Panel (Down) 1428*430*15 1 PC	Front Bone Long (Down) 1359*50*15 1 PC

  Components - Parts


24 	25 	26 
Down Side Bone (L&R) 359*50*15 2 PCS	Down Center Bone 309*50*15 4 PCS	Down Middle Bone 240*50*15 3 PCS
27 	28 	
Leg Panel (Center) 1491*81*15 1 PC	Center Leg 430*65*15 1 PC	

Components - Parts

             
Box B - WF326067

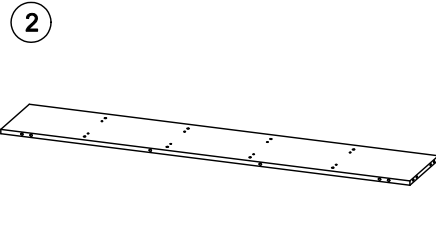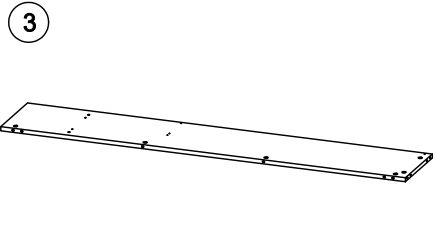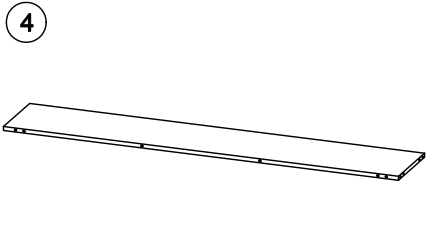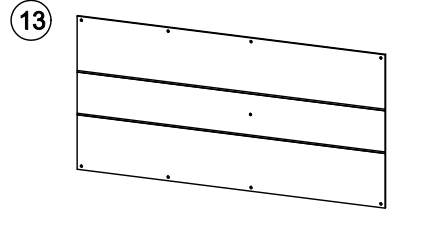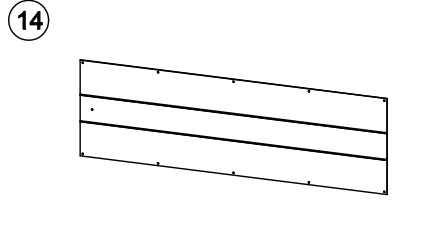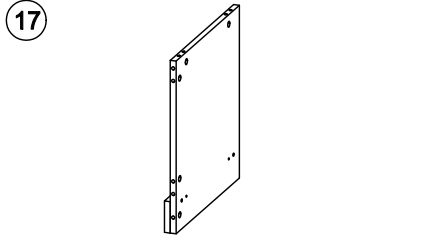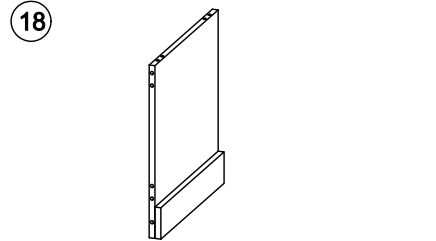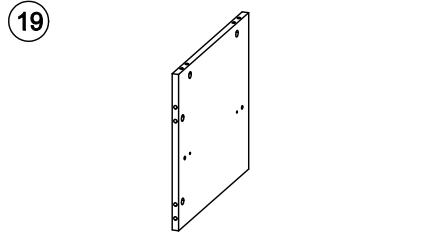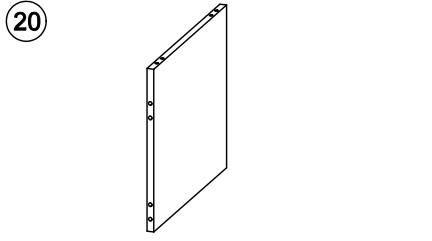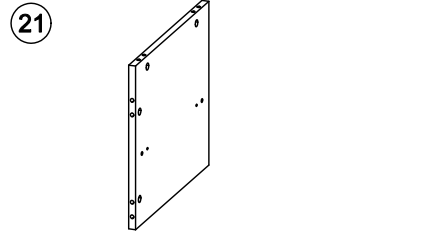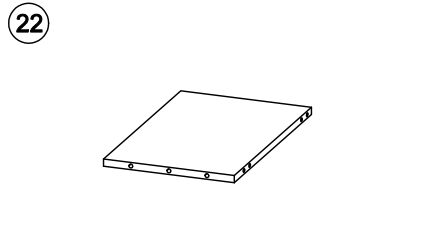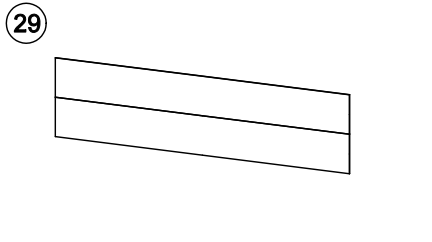		
Bottom Panel (Up) 1428*263*15 1 PC	Side Panel (L) 1500*263*15 1 PC	Side Panel (R) 1500*263*15 1 PC
		
Back Panel (Up) 587*291*2.5 5 PCS	Back Panel (Center) 940*291*2.5 5 PCS	Down Side Panel (L) 440*430*30 1 PC
		
Down Side Panel (R) 440*430*30 1 PC	Down Center Panel (L) 430*360*15 1 PC	Down Center Panel (R) 430*360*15 1 PC
		
Down Center Panel 430*360*15 2 PCS	Middle Panel 430*275*15 3 PCS	Back Panel (Down) 1458*194*2.5 1 PC
		
Hardware Pack 1 PCK		

 
Assembly Instructions

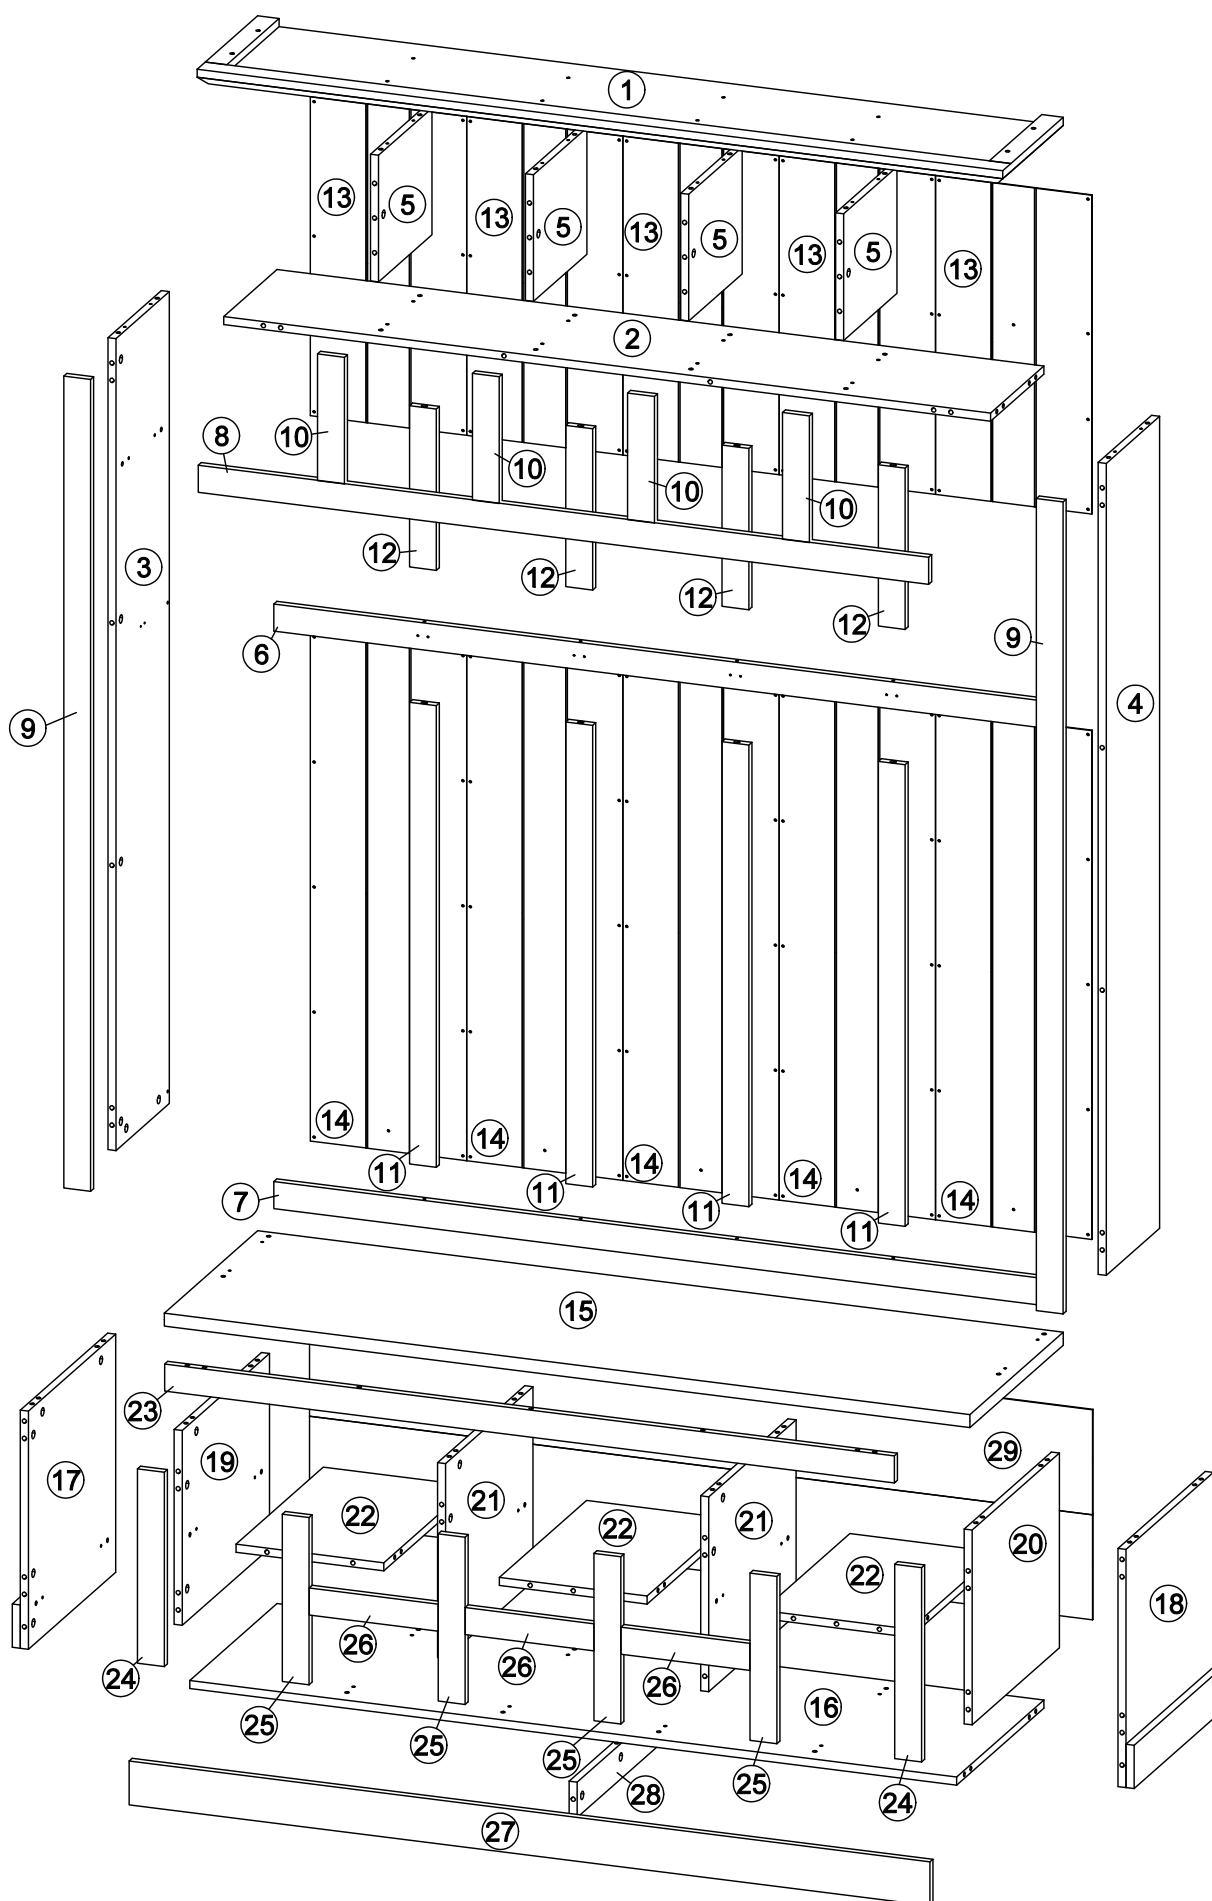

 
STEP 1

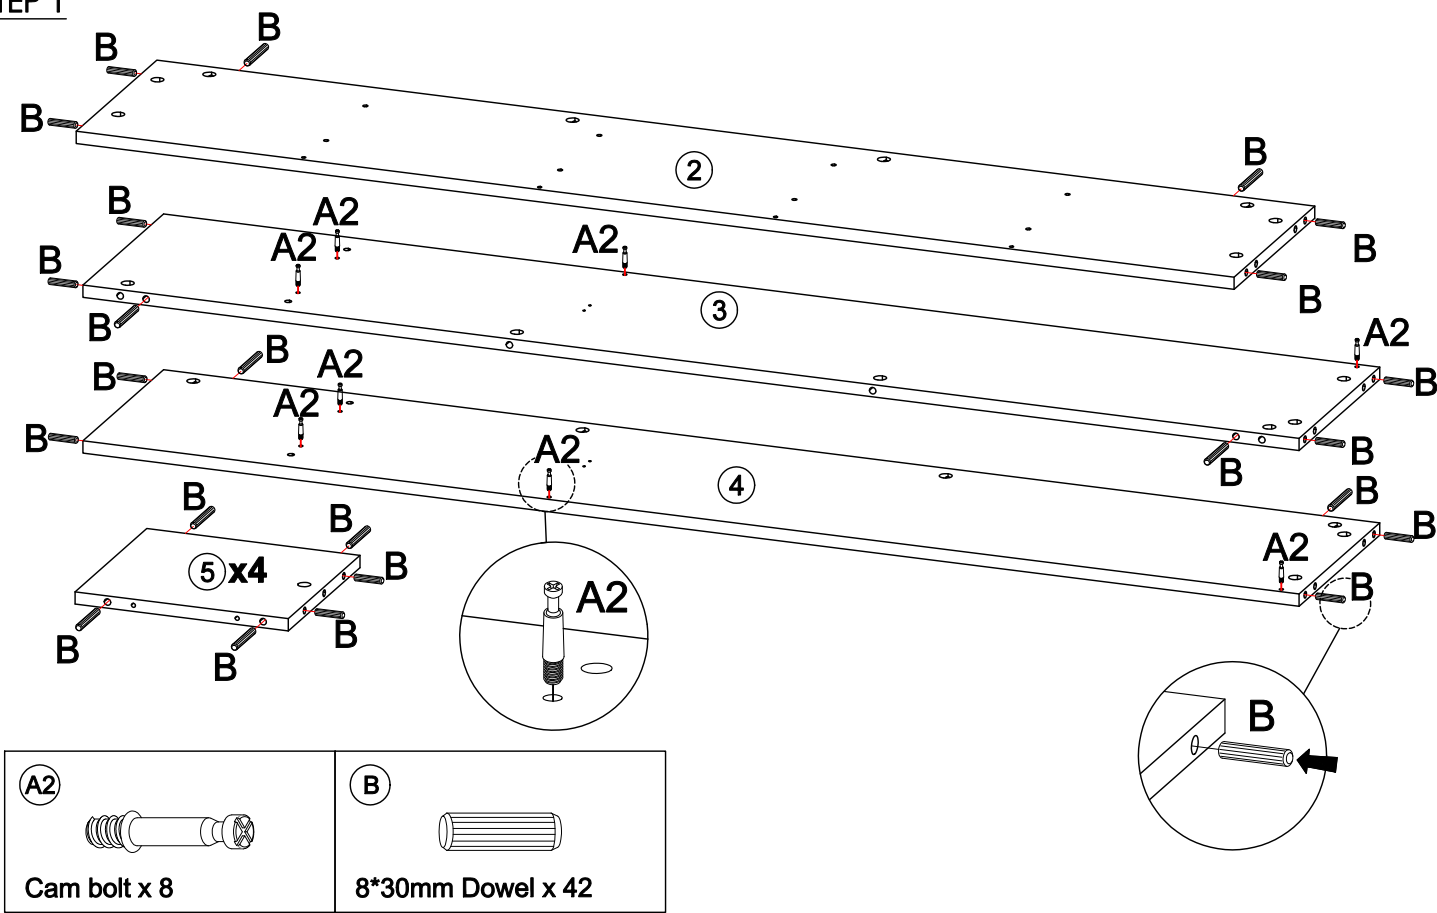

 
STEP 2

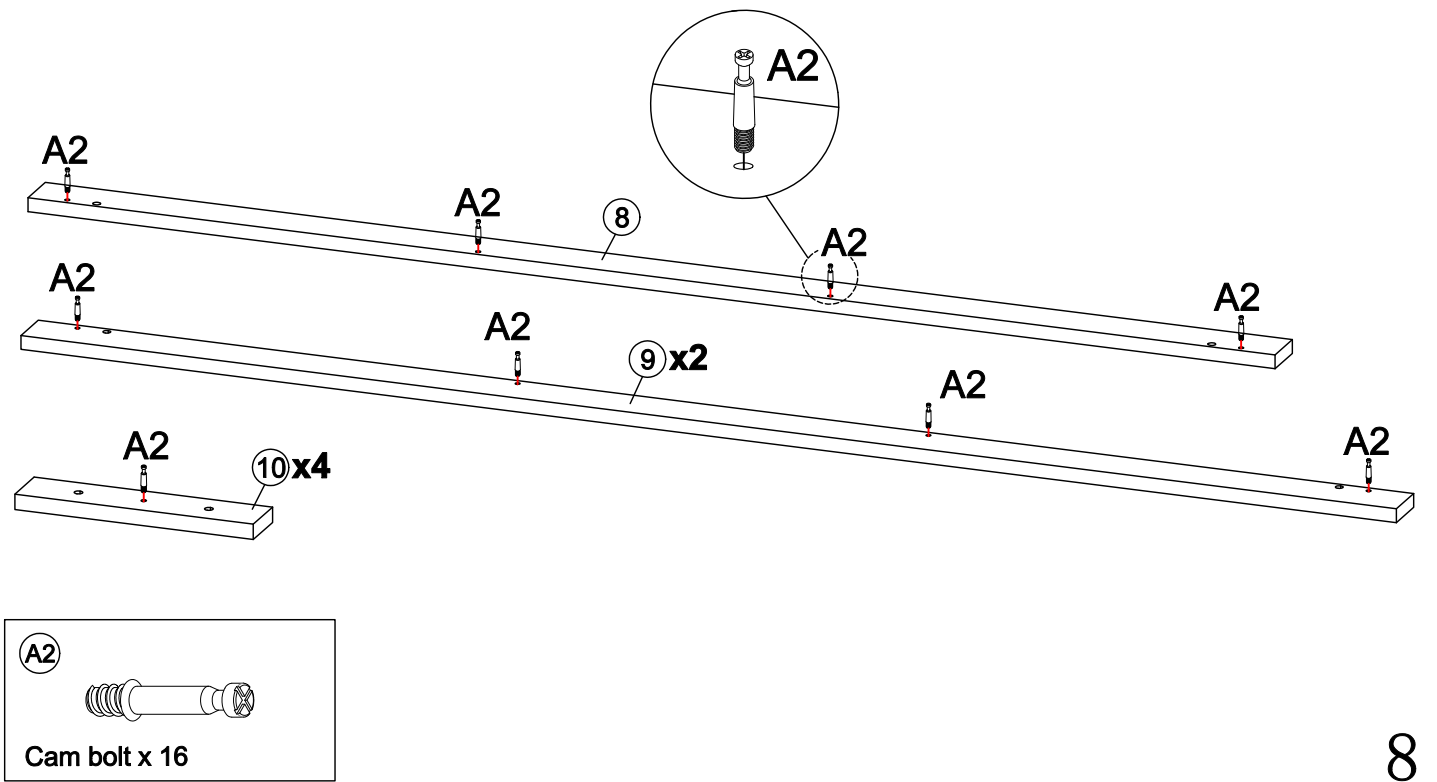

 
STEP 3

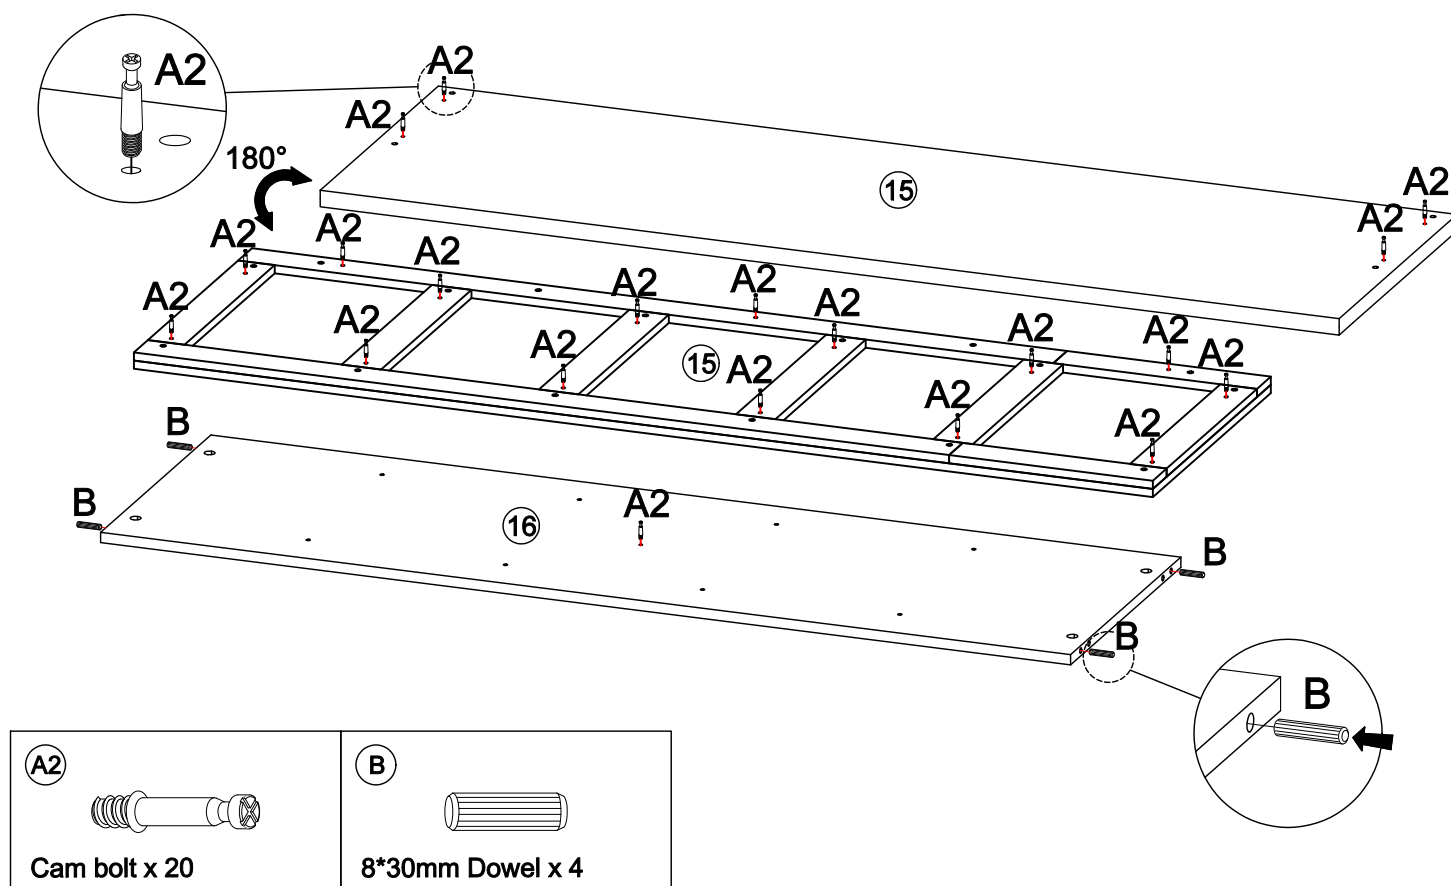

 
STEP 4

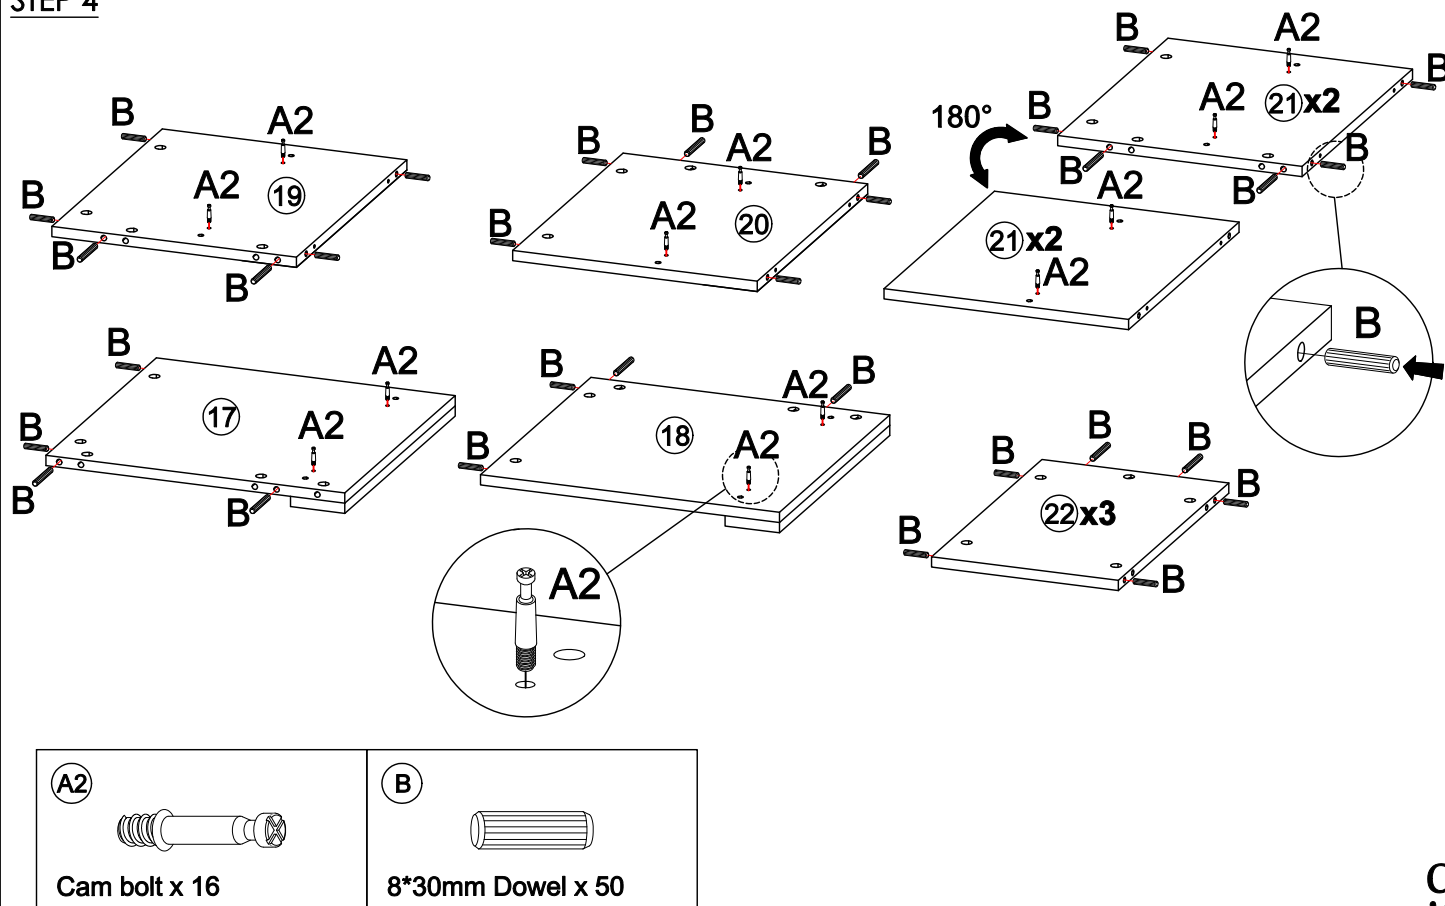

 
STEP 5

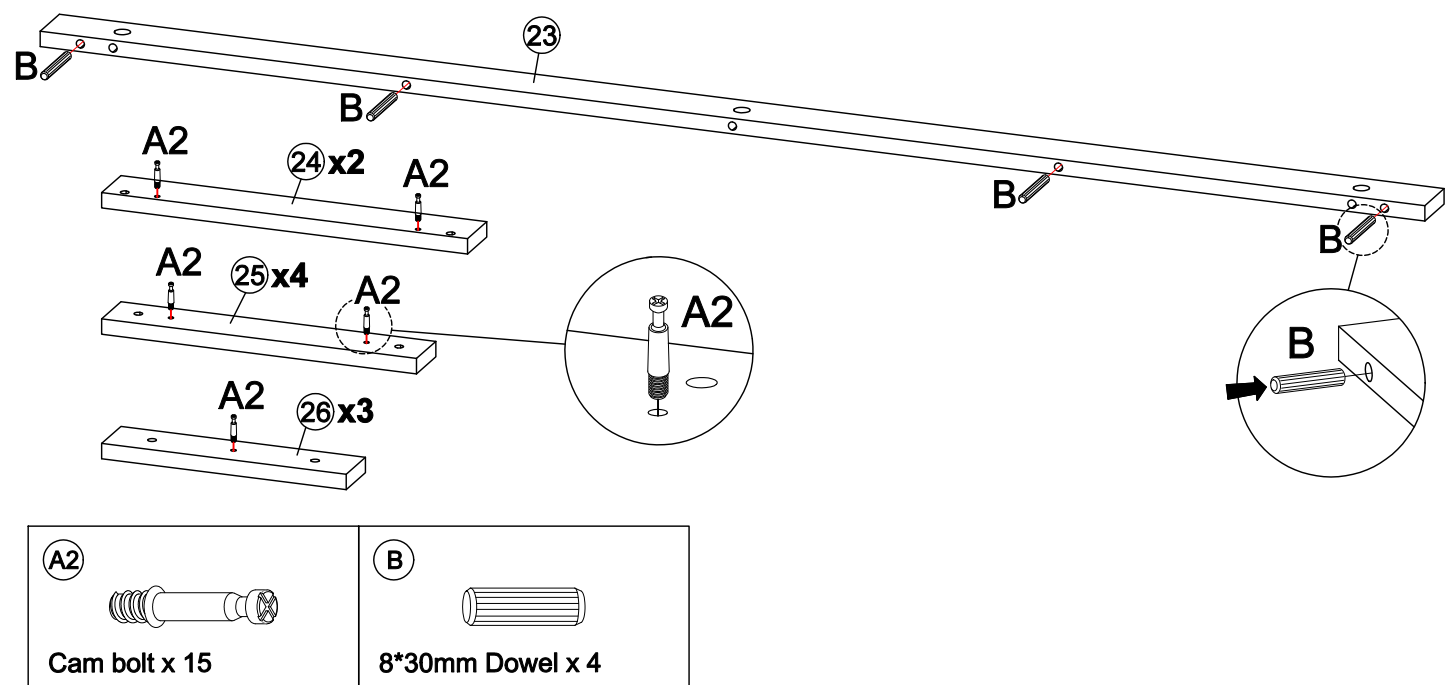

 
STEP 6

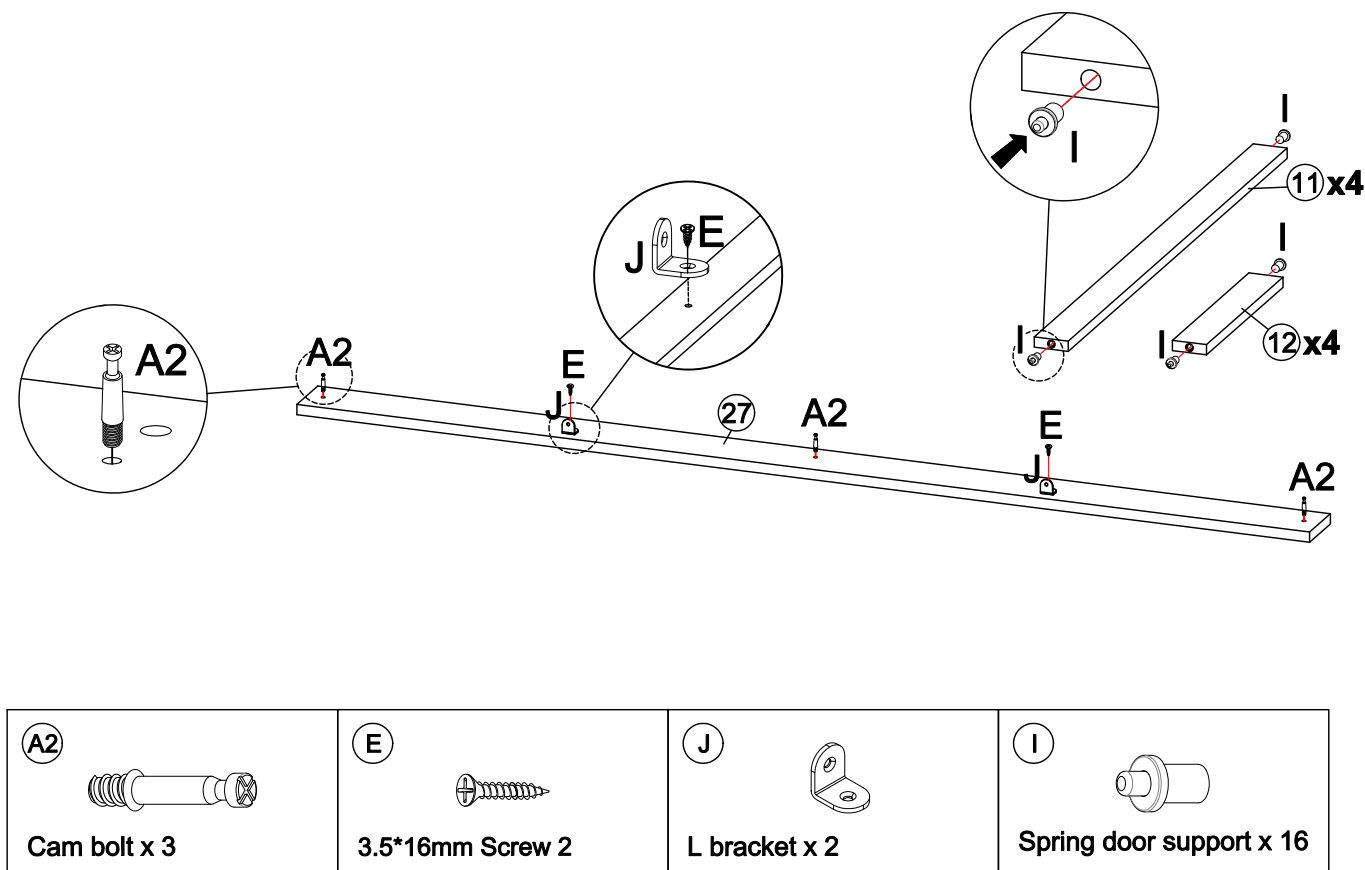

 
STEP 7

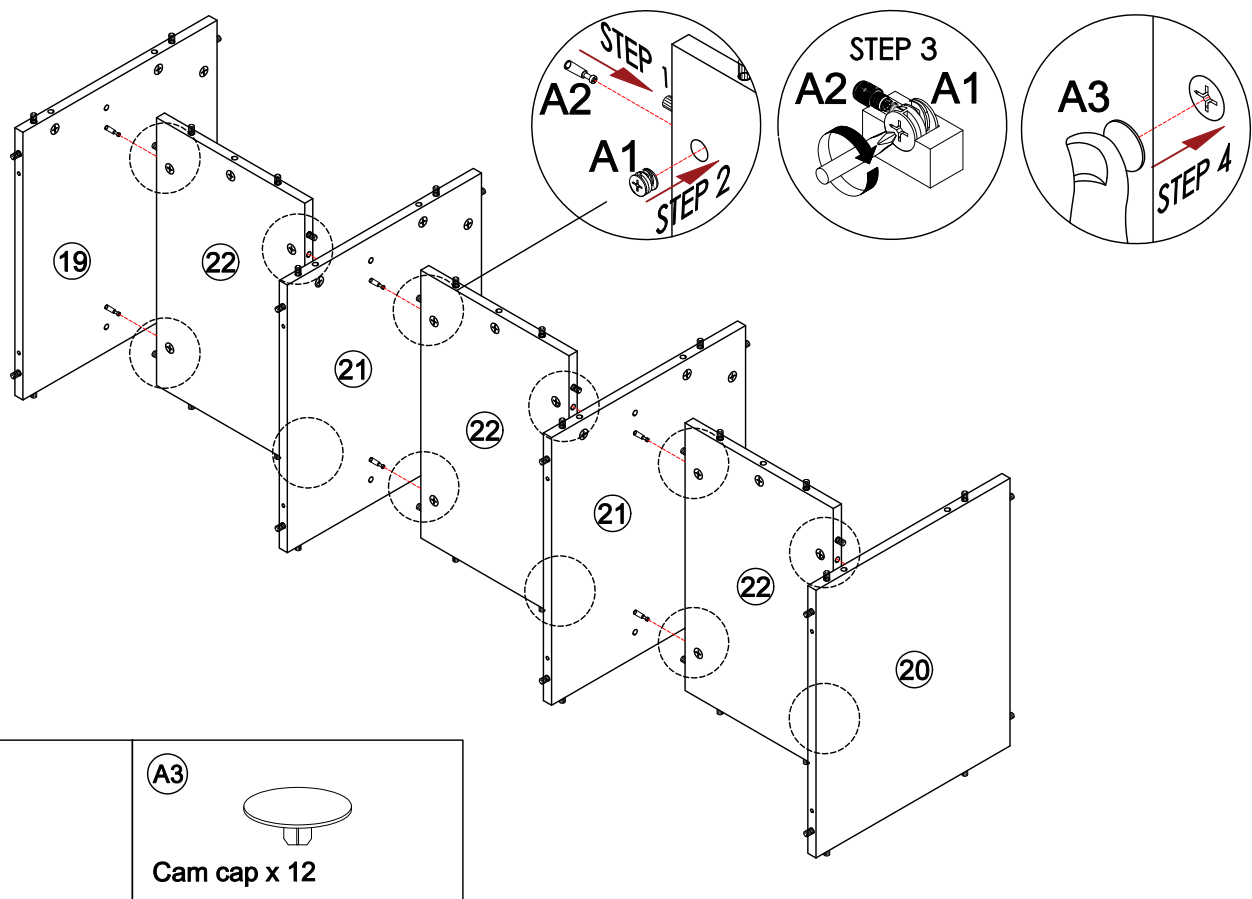

 
STEP 8

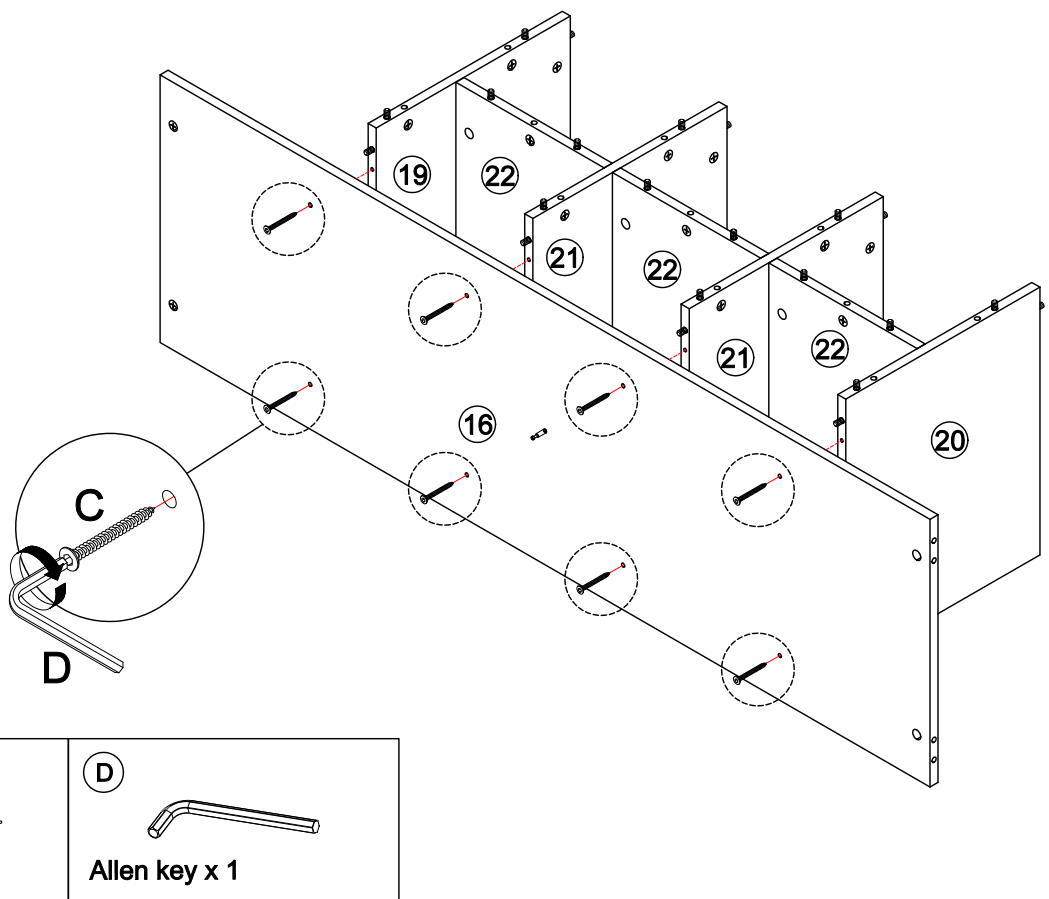

 
STEP 9

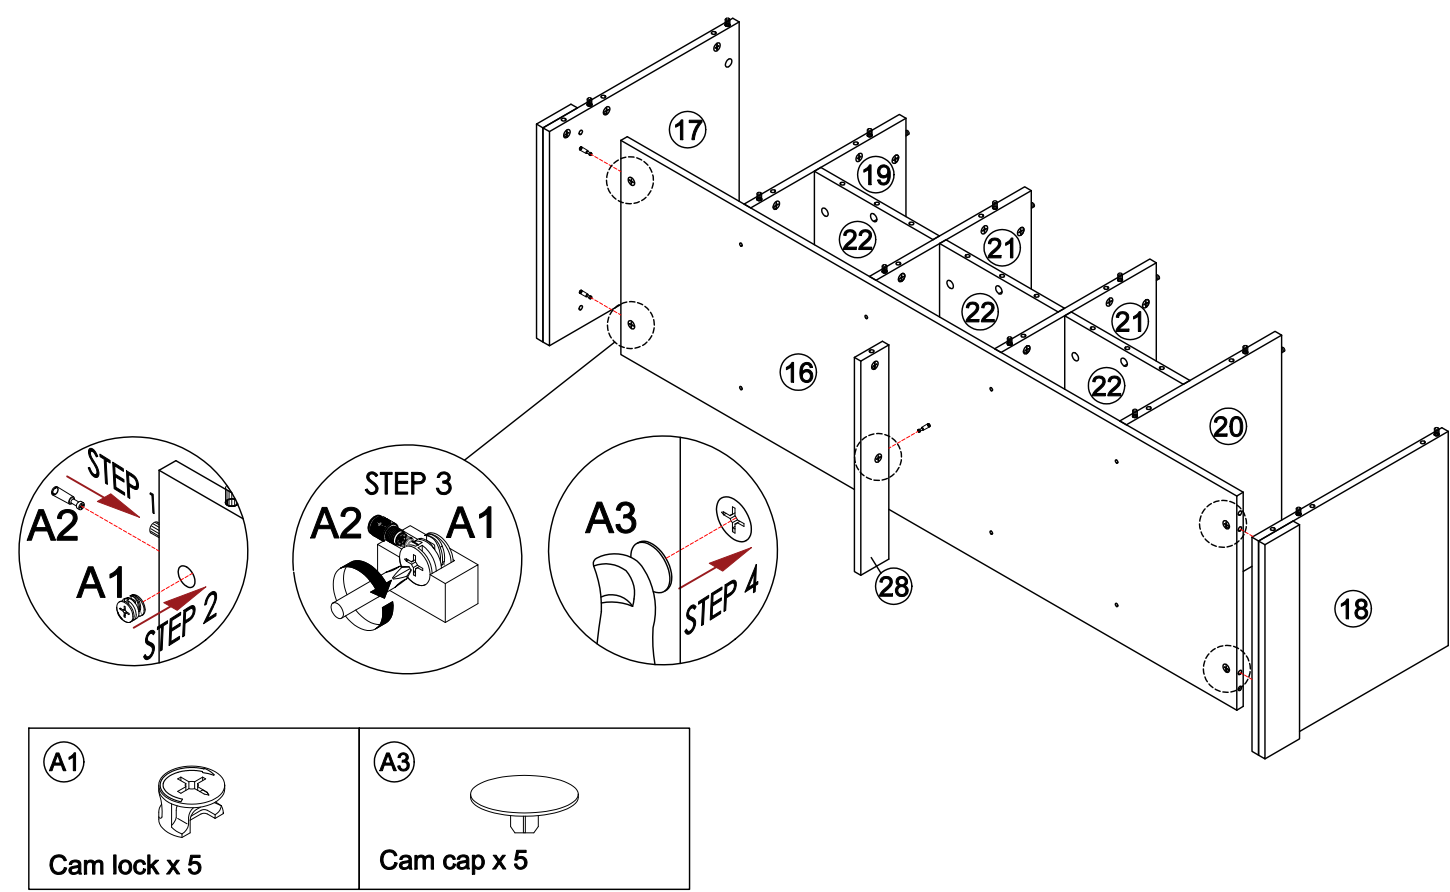

 
STEP 10

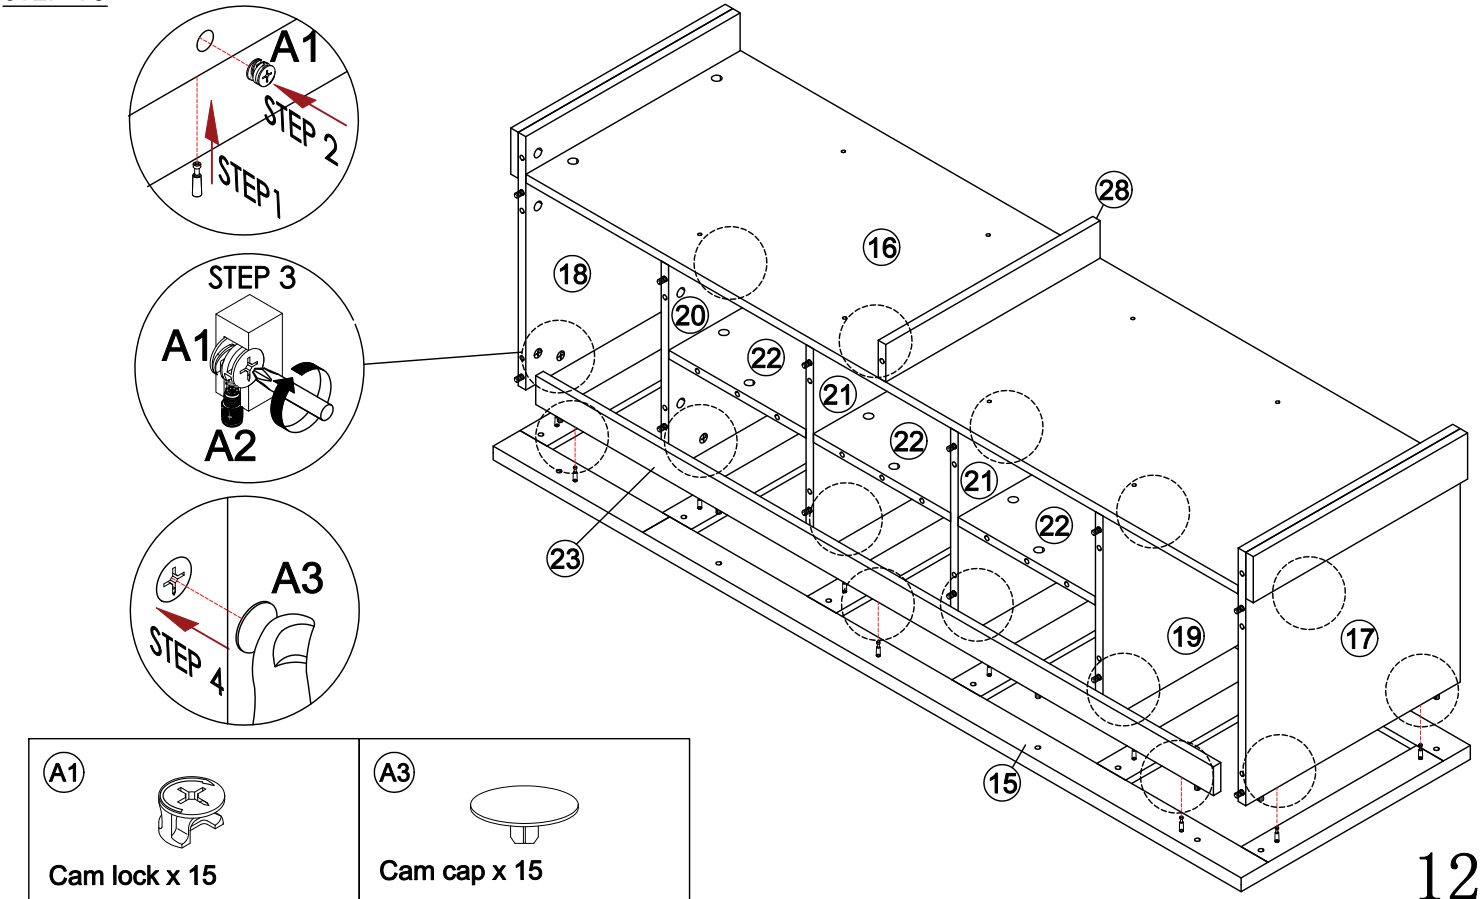

 
STEP 11

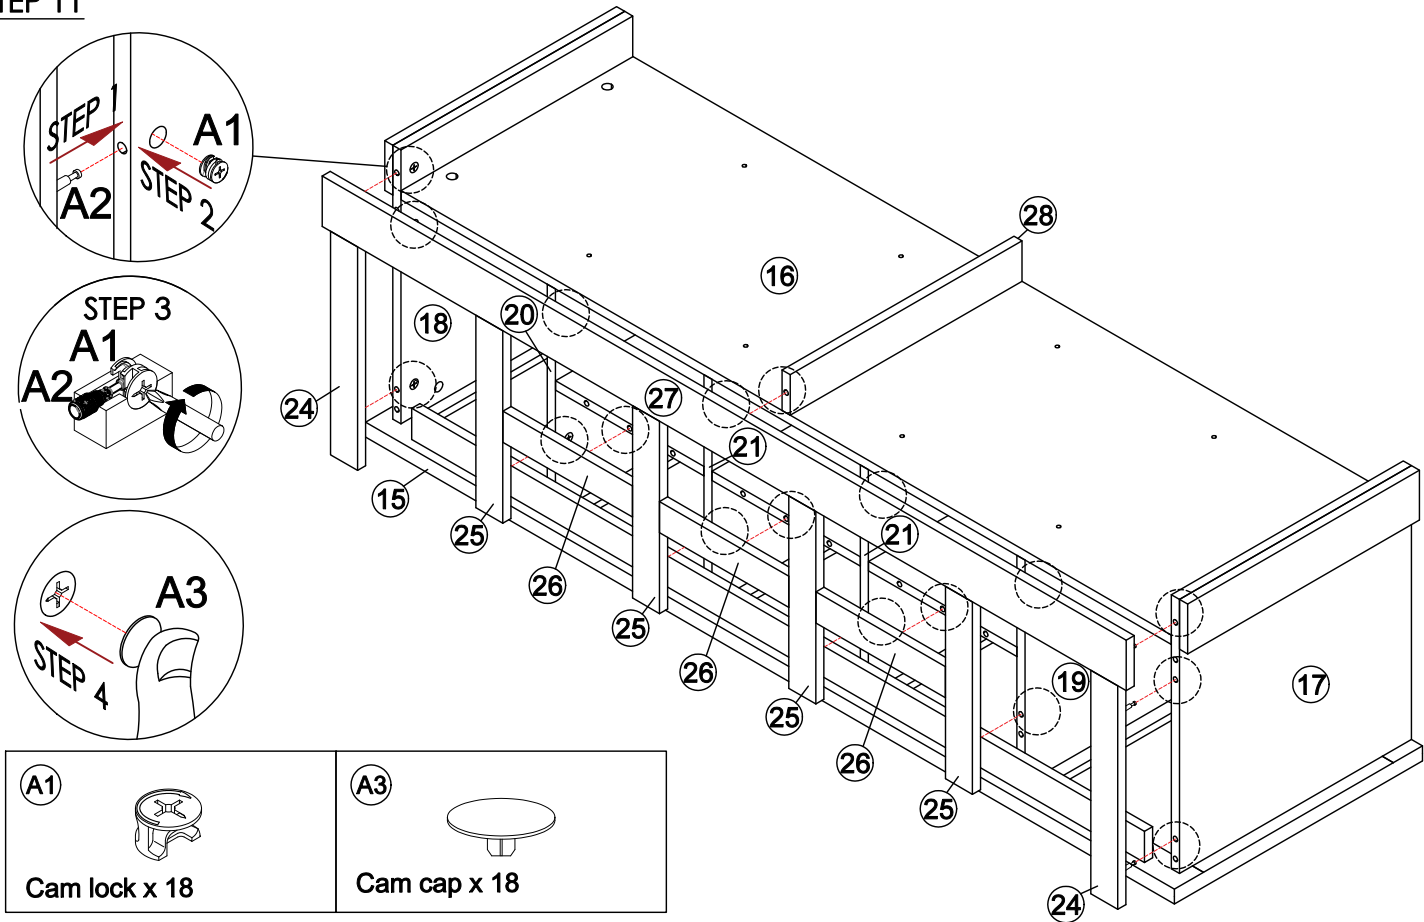

 
STEP 12

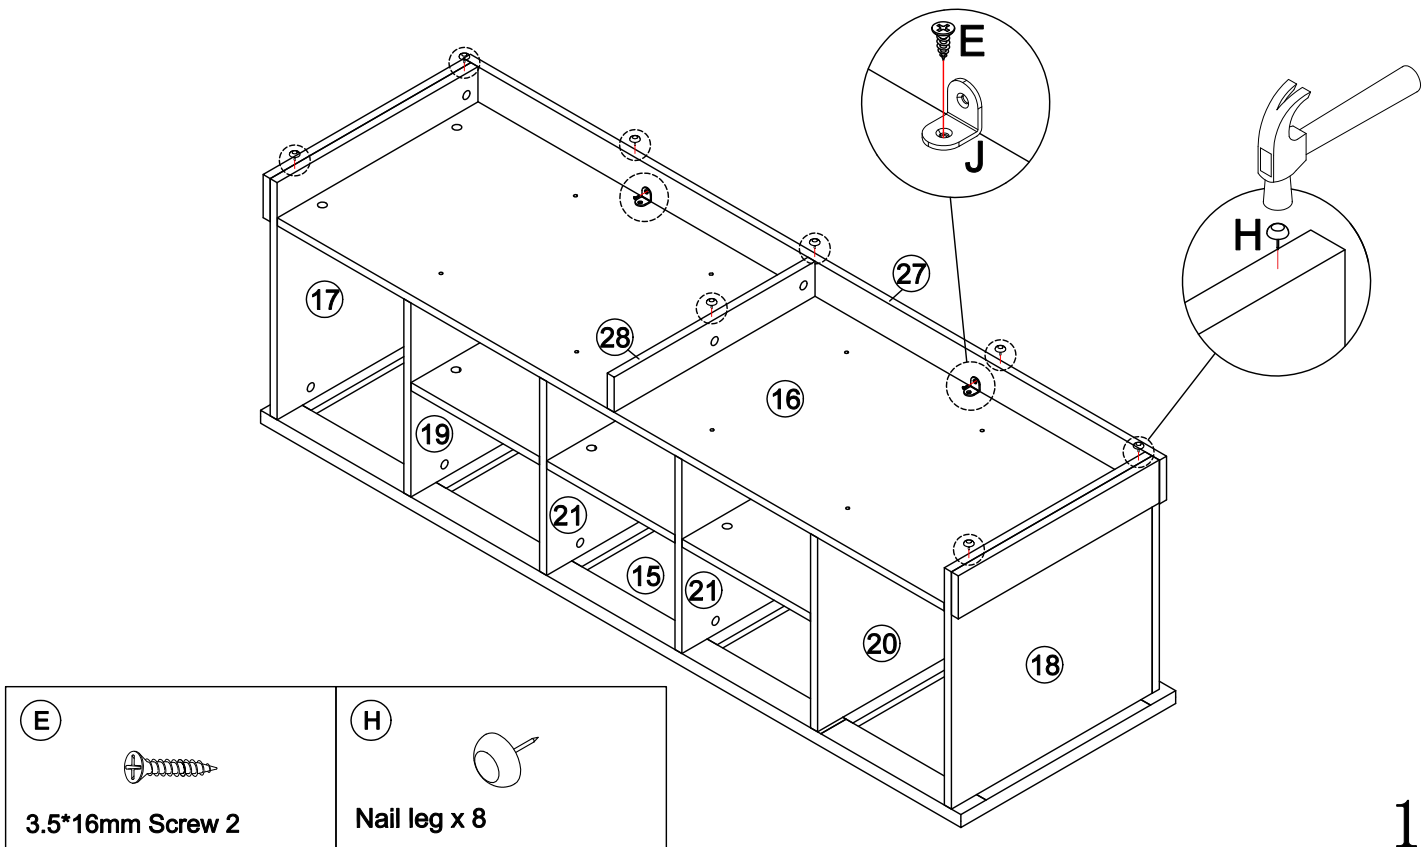

 STEP 13

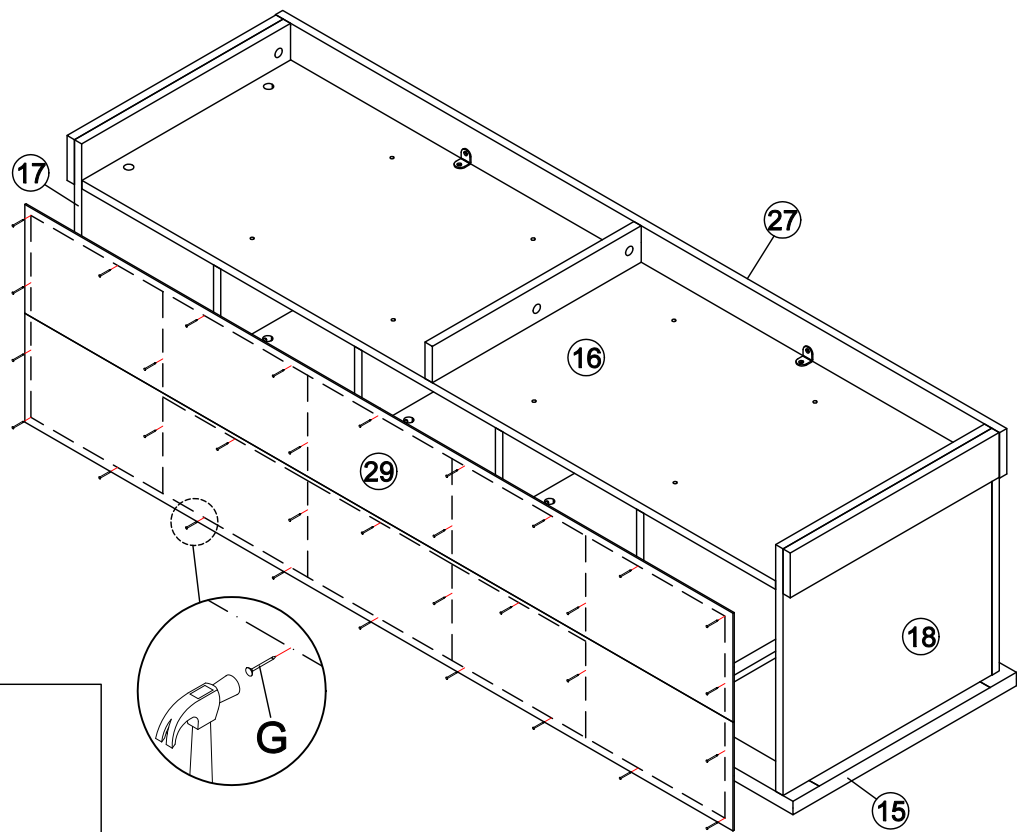



G

 



16mm Nail x 33

  STEP 14


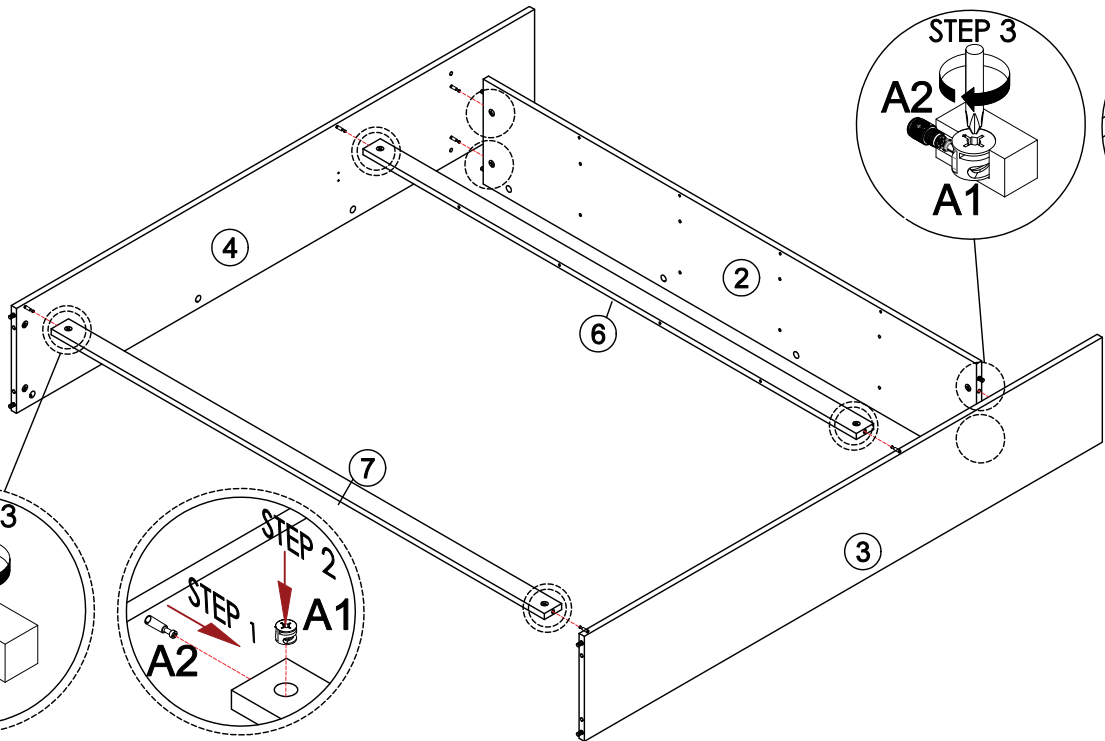


A1 	A1 	A3 
Cam lock x 4 (Without cap)	Cam lock x 4	Cam cap x 4

  
STEP 15

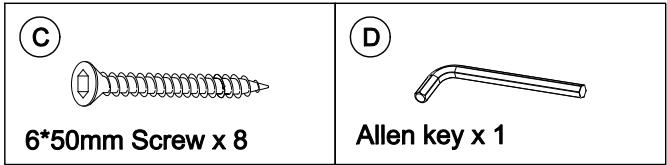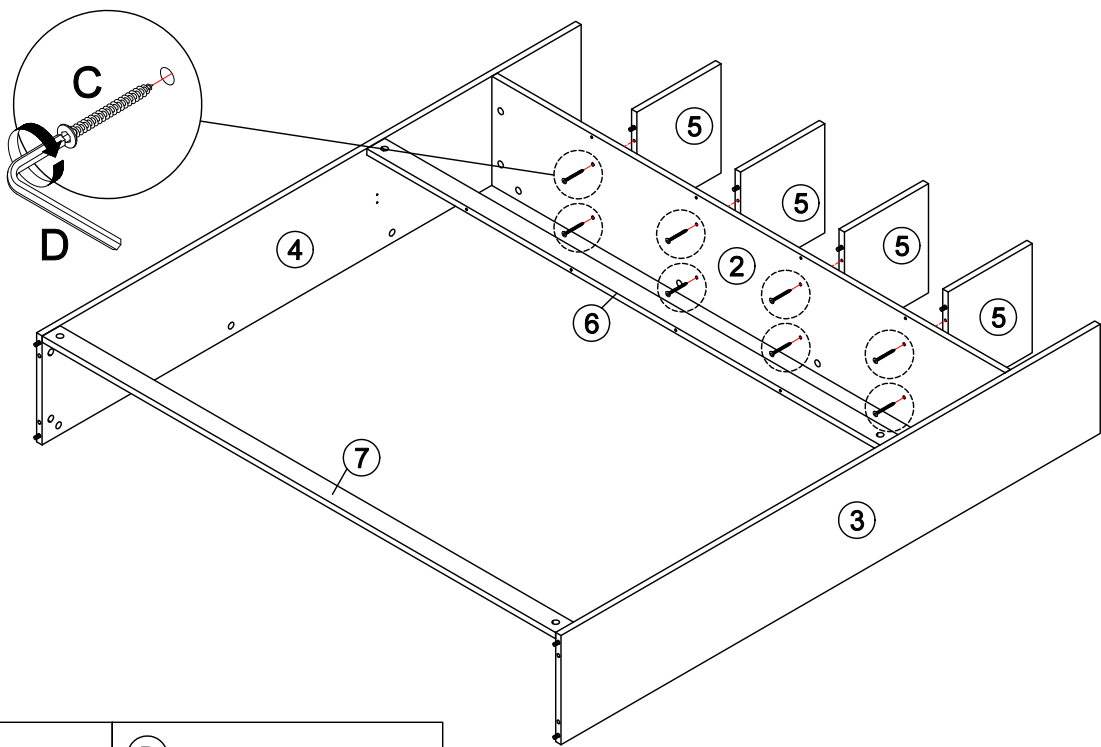

  
STEP 16

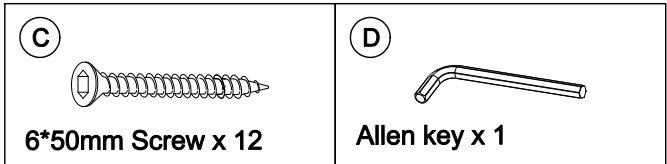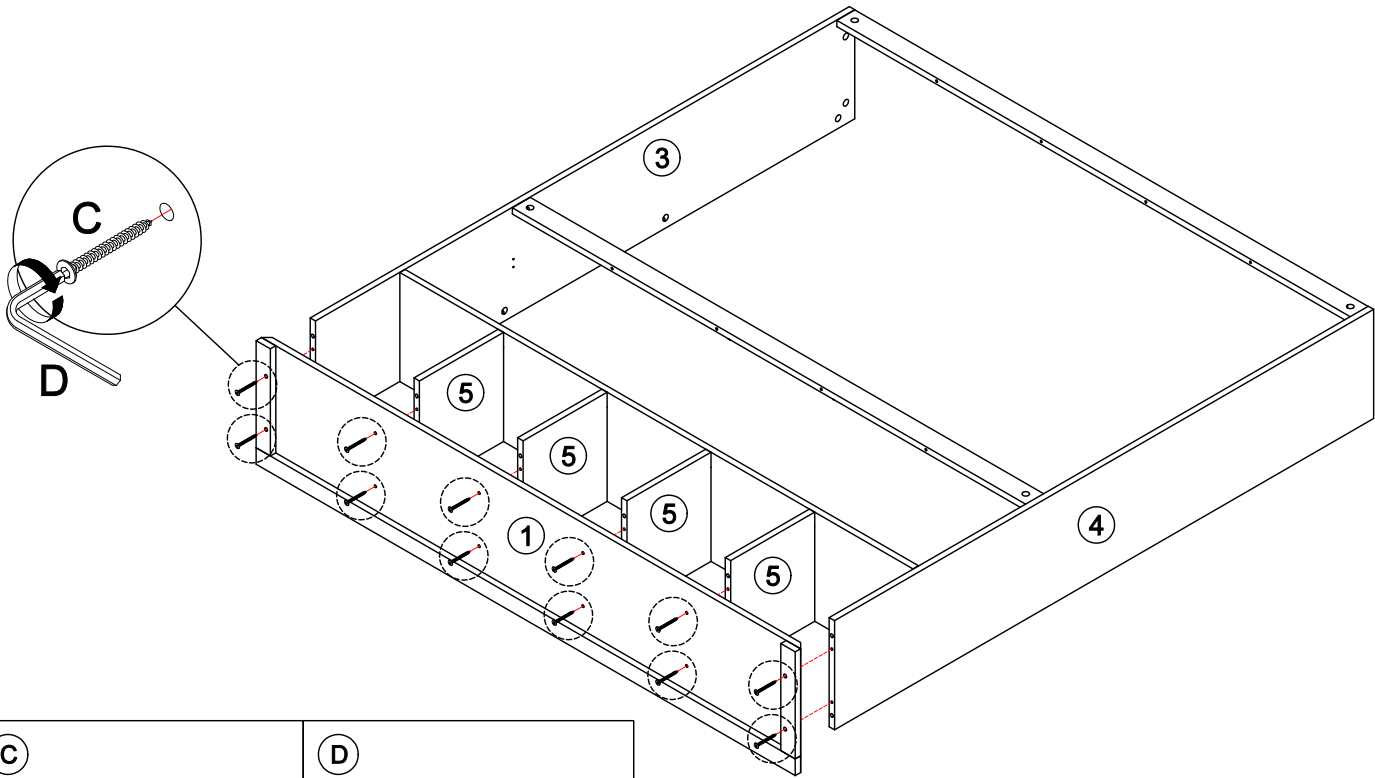

 
STEP 17

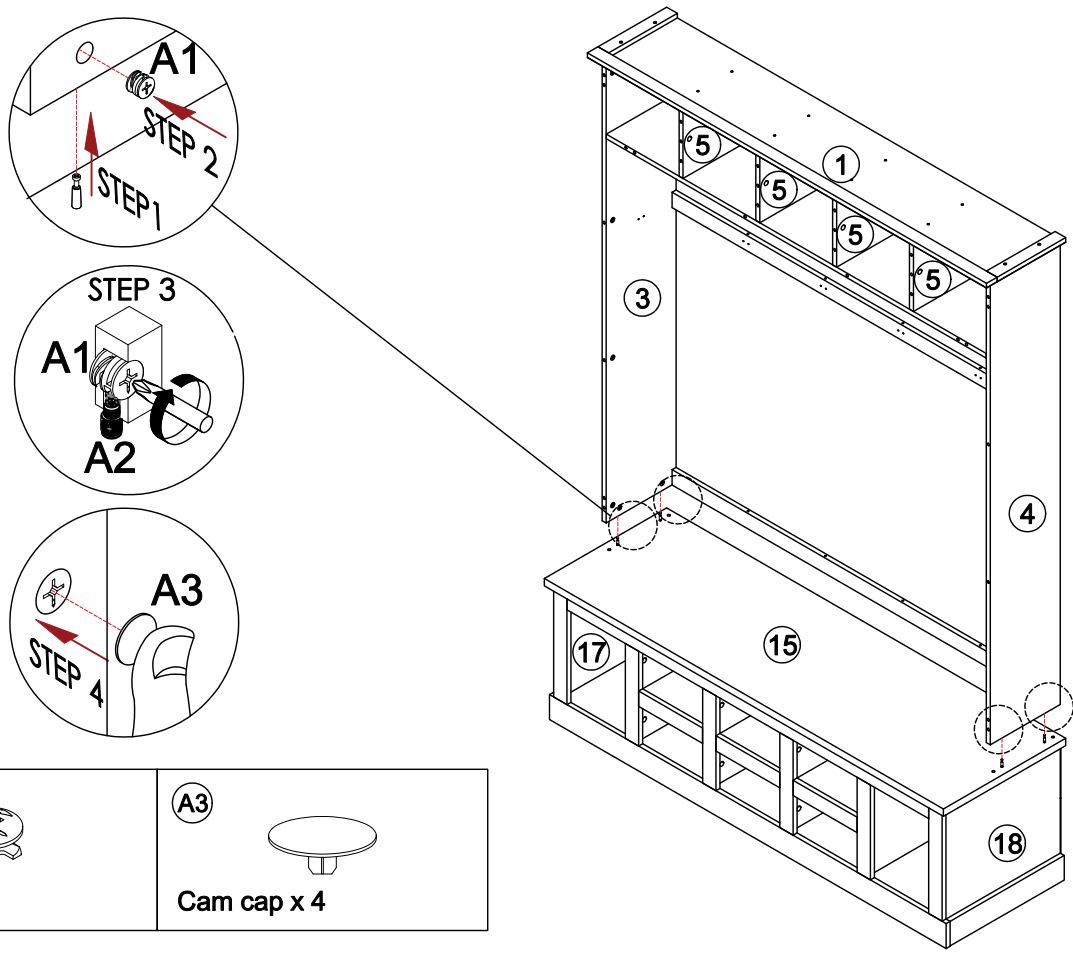

 
STEP 18

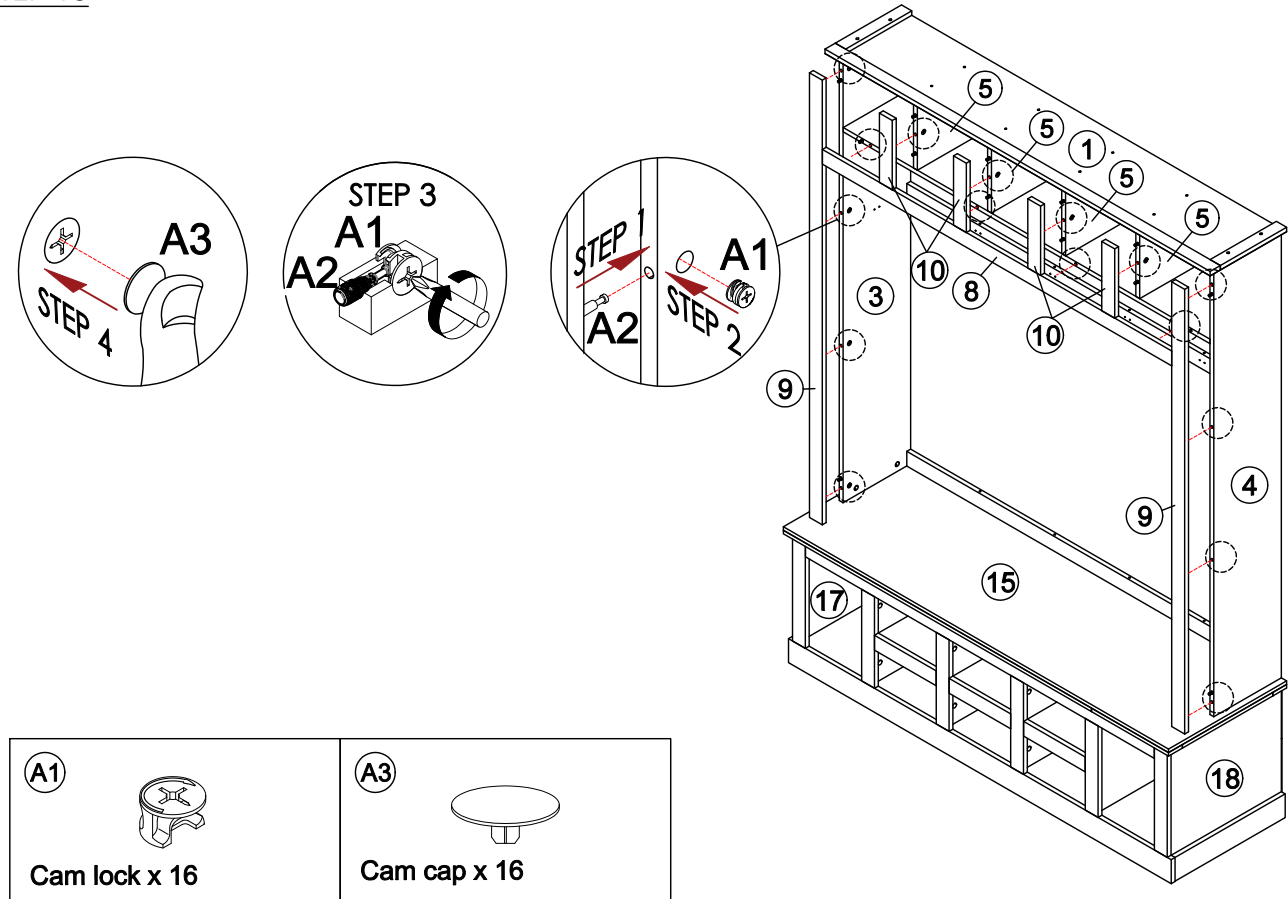

 STEP 19

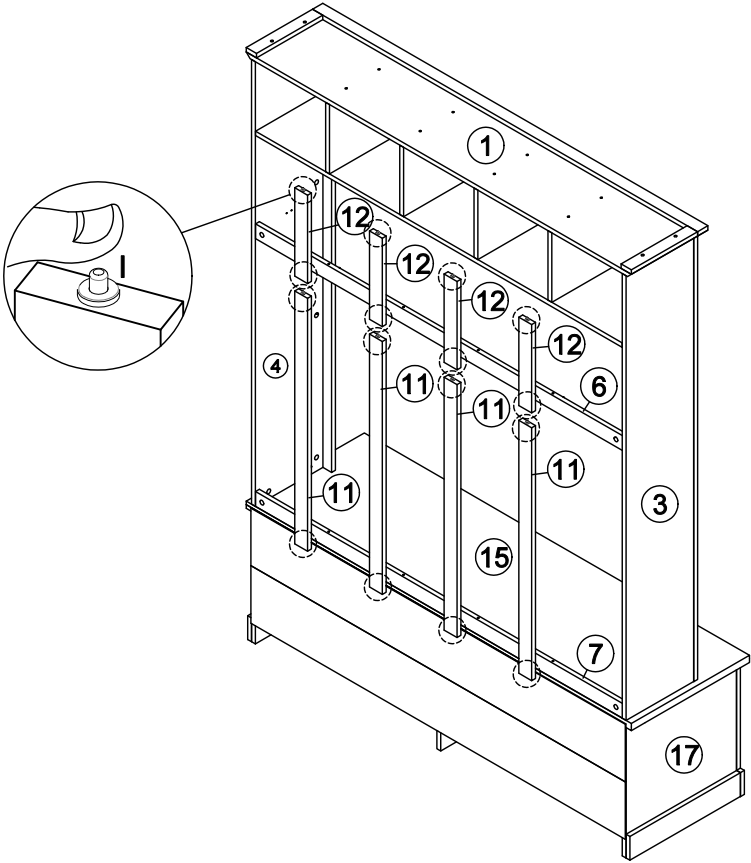

 STEP 20

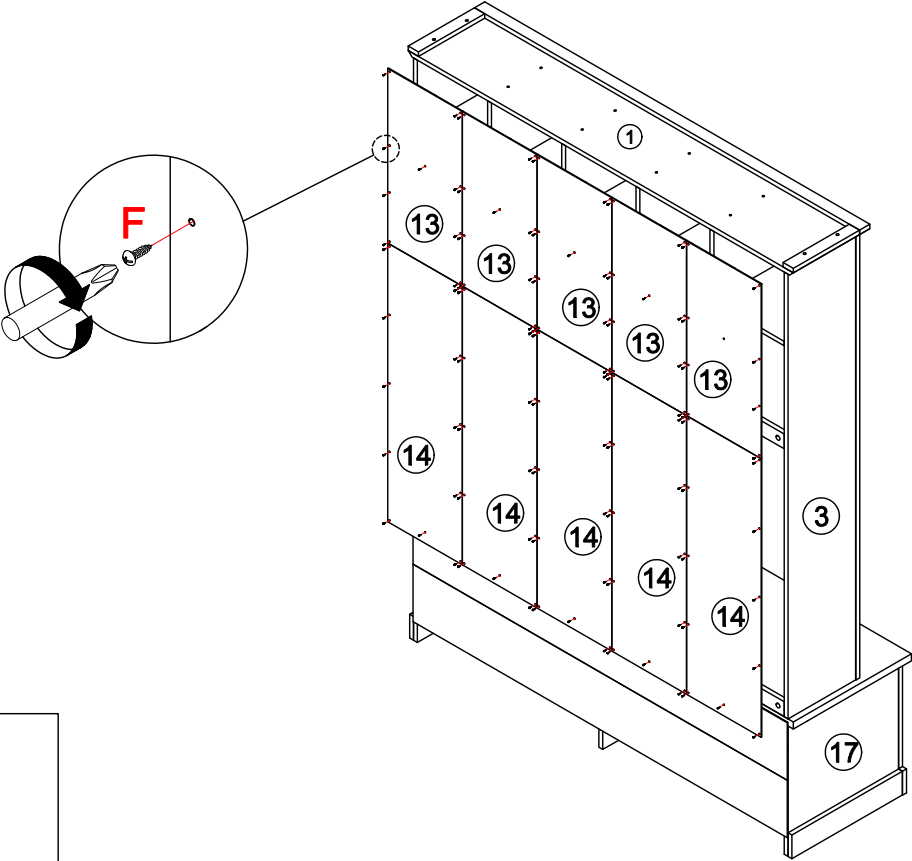


F




4*16mm Screw x 100

 STEP 21

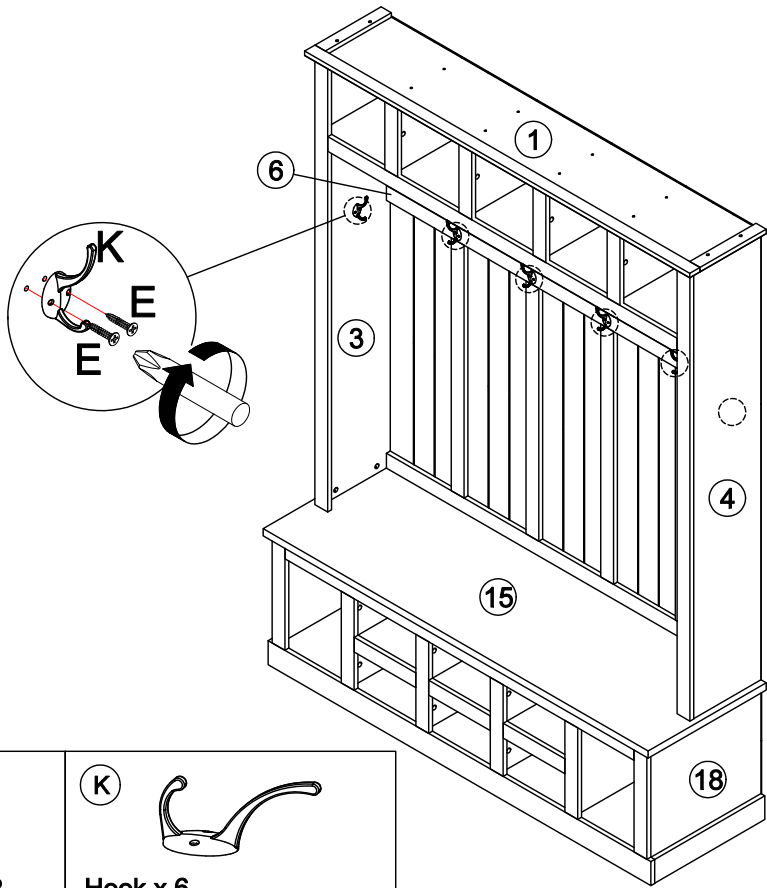


(E)  3.5*16mm Screw x 12	(K)  Hook x 6
---	--

 STEP 22

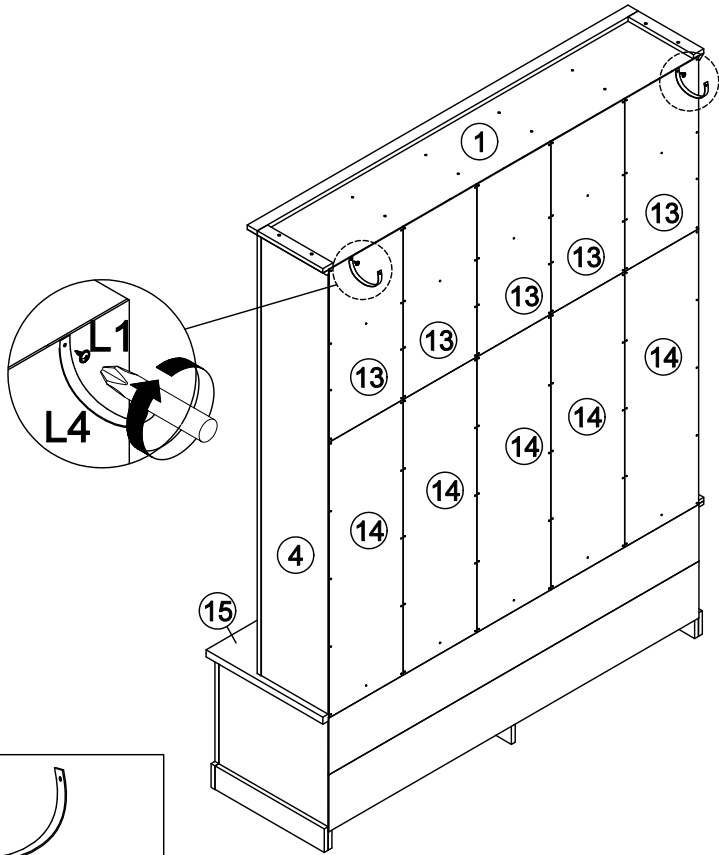

(L1)  4*12mm Screw x 2	(L4)  PVC strip x 2
--	---

 STEP 23

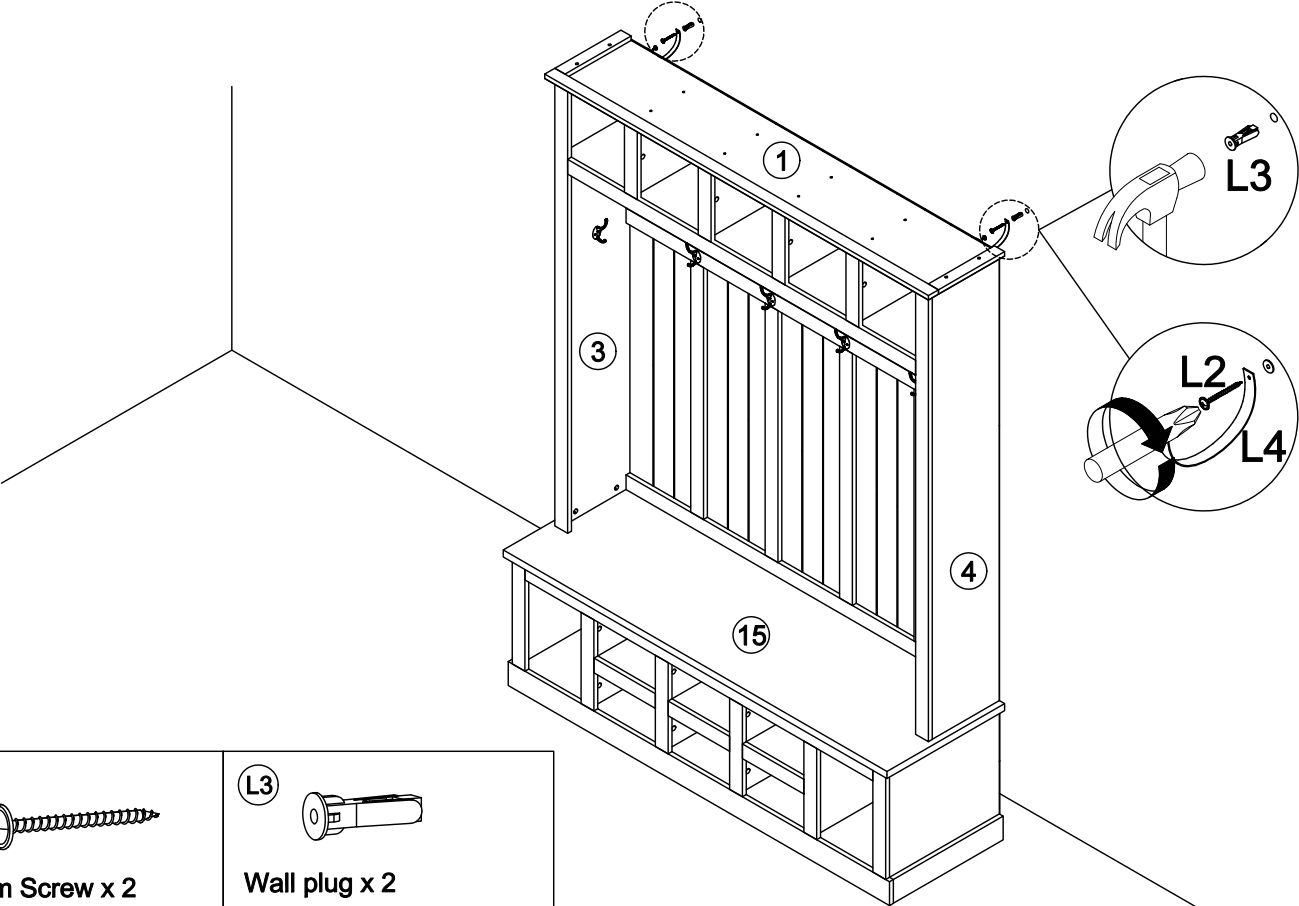

STEP 24

