 


XQ42/XQ52
V20260421

USER'S MANUAL

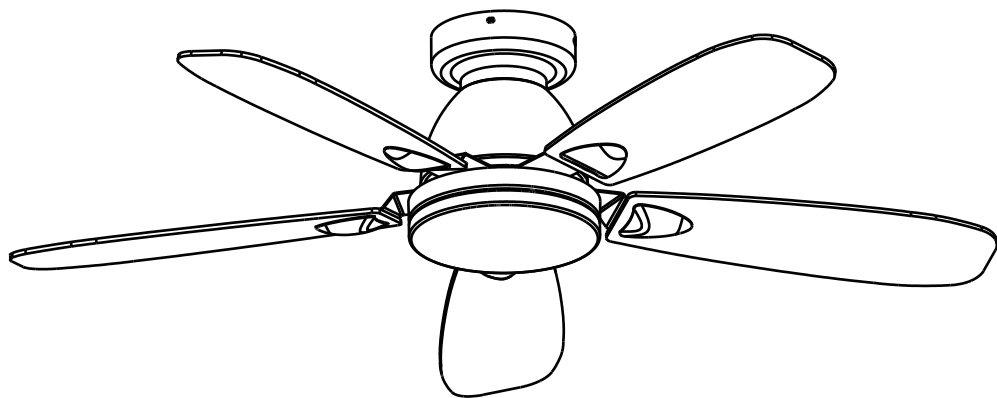

CAUTION:

Contains small parts. Keep children and pets at a safe distance to prevent accidental swallowing.

After-sales Email: support@fanlamppro.com



Scan to get support

 
Warm Tips

Wall Switch Memory:

Keep the light on >10s, then turn off, after 5s turning on, it keeps the last light condition.

Remote Control Light Memory:

Press "Light on/off" to keep the last light condition.

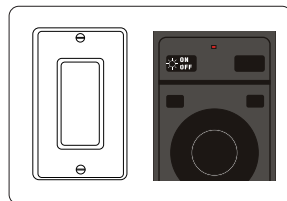

Using a full-range dimmer switch to control the fan speed will damage the fan.

WARNING!!!

To avoid fire, shock and serious personal injury, follow these instructions.

 
1. Read your user manual and safety information before installing your new fan. Review the accompanying assembly diagrams.
2. Before servicing or cleaning the unit, switch off the power at the service panel and lock it to prevent accidental power restoration. If the service disconnecting means cannot be locked, securely fasten a warning device, such as a tag, to the service panel.
3. Exercise caution around the fan and its blades when clearing, repairing, or working near it. Always turn off the power to the ceiling fan before performing any maintenance
4. Do not insert anything into the fan blades while the fan is in operation.
5. This appliance is not intended for use by young children or individuals with disabilities without supervision. Young children should be supervised to ensure they do not play with the appliance.
6. Before installing your ceiling fan, refer to the section on the proper method of wiring your fan. If you feel you lack sufficient wiring knowledge or experience, it is recommended to have your fan installed by a licensed electrician.

Fan Components


NOTE: Place the parts from the loose parts bags in a small container to keep them from being lost. If any parts are missing contact us.




● — Mounting Bracket (1)




● — Receiver (1)

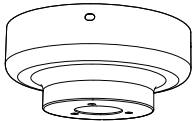 

● — Canopy (1)

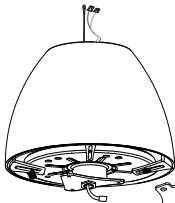 

● — Fan Motor Host (1)

 


● — Blade Arm (5)



● — Fan Blade (5)



 ● — Blade Decorative Part (5)




● — Lamp Body (1)



● — Lampshade (1)



 Remote Controller



4+1 (a)



Plastic expansion tube

2 (b)



Expansion screw

2+1 (c)



Balance kit

1 (d)



Screwdriver

17+17 (e)



Blade screw red washer

3 (f)



Wire nut

4+1 (g)



Washers

4 (h)



Self-tapping screw

2+1 (i)



J-box screw

2 Spare (j)



Arm screw

2 Spare (k)



Triangle plate screws

Energy-Saving Usage

Ceiling fan performance and energy savings rely heavily on the proper installation and use of the ceiling fan. Here are a few tips to ensure efficient product performance.

Choosing the Appropriate Mounting Location

Ceiling fans should be installed or mounted in the middle of the room and positioned at least 7 feet above the floor and 18 inches away from the walls.

If the ceiling height allows, it is recommended to install the fan 7~9 feet above the floor to achieve optimal airflow.

Turn Off When Not in the Room

If the room is unoccupied, turn off the ceiling fan to conserve energy.

Using the Ceiling Fan Year Round

Summer Season: Use the ceiling fan in the counterclockwise direction. The airflow created by the ceiling fan produces a wind-chill effect, making you feel cooler. Select a fan speed that provides a comfortable breeze; lower speeds consume less energy.

Winter Season: Reverse the motor and operate the ceiling fan at a low speed in the clockwise direction. This produces a gentle updraft, which pushes the warm air near the ceiling down into the occupied space. Remember to adjust your thermostat when using your ceiling fan. This simple step can lead to additional energy and cost savings.

 
Electrical and Structural Requirements

Your new ceiling fan will require a grounded electrical supply line of AC 110-130V/60Hz and a 15 Amp circuit. According to electrical codes, it is necessary to use a fan-rated outlet box to support the additional weight and motion associated with a ceiling fan. A fan-rated box will be clearly labeled as such and is typically designed to support ceiling fans weighing up to 70 pounds.

Fan-rated outlet boxes are available in various ratings and designs. It is essential to ensure that the rating of your ceiling fan outlet box meets the requirements for the specific ceiling fan you are installing. Please refer to the figures below for different structural configurations that can be used for mounting the outlet box.


Low-profile use (Figure 1)

A 1/2-inch deep pancake box is meant to be screwed to a joist or block. It is used if only one cable is coming into the box. It is also available in a saddle-mount configuration.

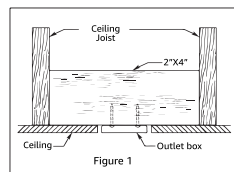


Deep-profile use (Figure 2)

 A 2-1/4" deep box can be attached to blocking between joists and is roomy enough to handle more than one cable.

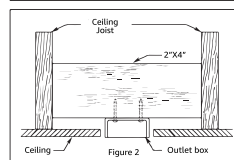

Brace Use (Figure 3)

 Paired with a deep box, this hanger is meant to span between two joists and takes the place of wooden blocking.

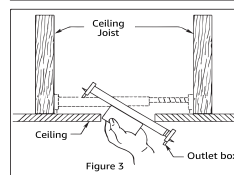

If your fan is to replace an existing light fixture, turn power off at the main fuse box and remove the existing light fixture.

 
WARNING

To ensure safety and prevent potential electrical shock, it is not sufficient to simply turn off the wall switch. Prior to wiring, make sure to turn off the electricity at the main fuse box. All wiring should be done in accordance with national and local electrical codes. Additionally, it is important to properly ground the ceiling fan as a precautionary measure against possible electrical shock. Following these guidelines will help ensure the safe installation and operation of your ceiling fan.


Do not use a variable (rheostat) wall controller or dimmer switch to operate this fan. Doing so can cause damage to the ceiling fan's remote control unit. It is recommended to only use the provided remote control.

Installation

1

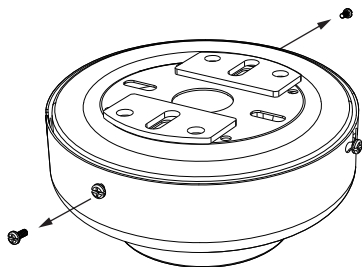


2

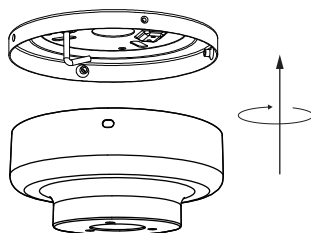 

- Take out the 2 round hole screws from canopy.
- Loosen the 2 screws and then rotate to remove the bracket.


3

 Cement ceiling

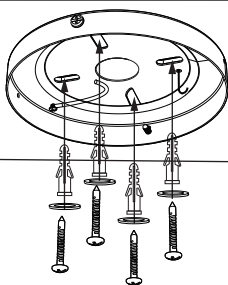

4

 
Wooden ceiling

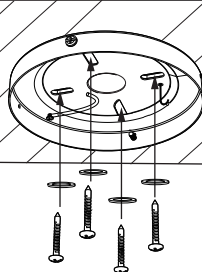


- Mount the bracket to the ceiling and use appropriate accessory screws to secure it based on the type of ceiling material.
Cement ceiling: Drill holes on the cement ceiling, then use expansion tubes and self-tapping screws for fixing.
Wood ceiling: Use self-tapping screws to drive into the wooden ceiling.

5

 Junction box

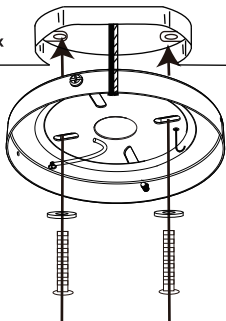


6

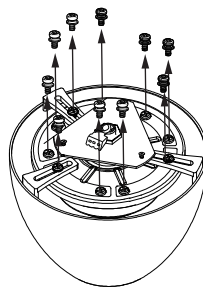 

- **Junction box:** Use j-box screw and washer to fix the bracket to the ceiling.
 (Please choose the corresponding hole size of 3 inches or 4 inches based on the dimensions of the ceiling junction box for installation.)
- Use a screwdriver to unclip the retaining clip, and then remove the 10 arm screws from the host part.


Installation

 7

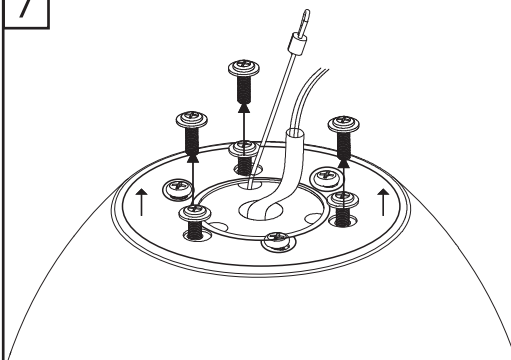


- Remove the 3 pre-installed large screws on the fan motor main unit and the sheet metal.
- Install the canopy and sheet metal onto the fan motor housing, aligning them with the holes, then tighten the 3 screws.

 8

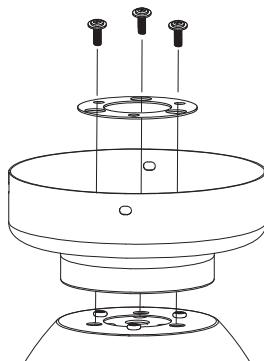


9

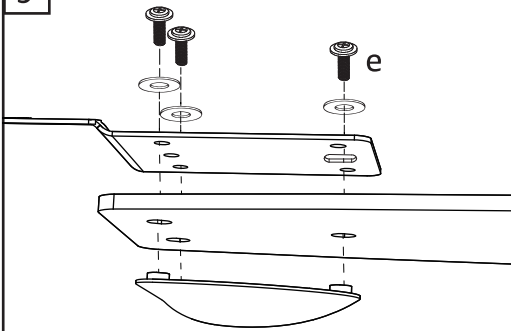 


- Attach the blade decorative part to the fan blade, then secure the blade arms (with 'UP' side facing up) using 3 screws and washers
- Secure the blade arms assembled in step 9 to the fan motor host using the screws removed in step 6. (Repeat this step for the remaining fan blades installation.)

 10

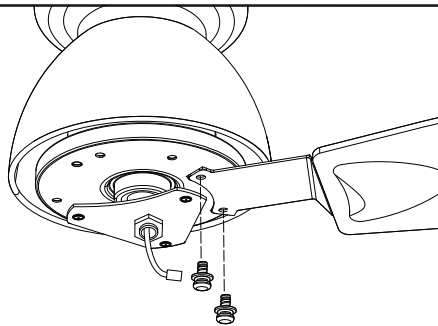


11

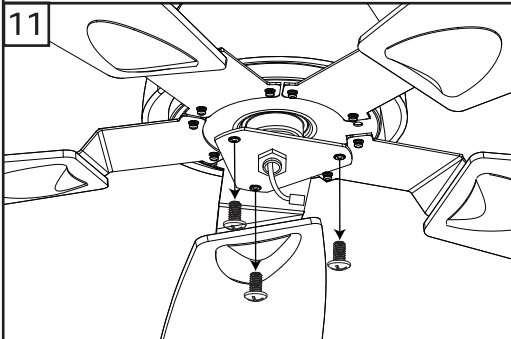 



- Remove three screws from the triangle plate on the fan motor host.
- Connect the LED board wire connector.

 12

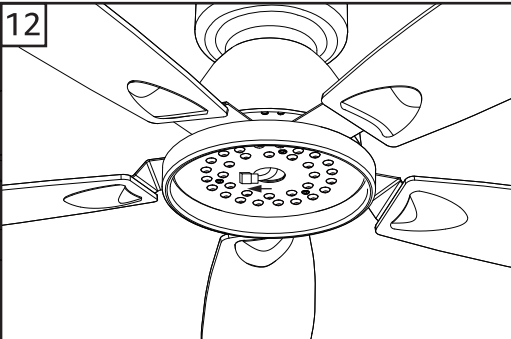


Installation

  13

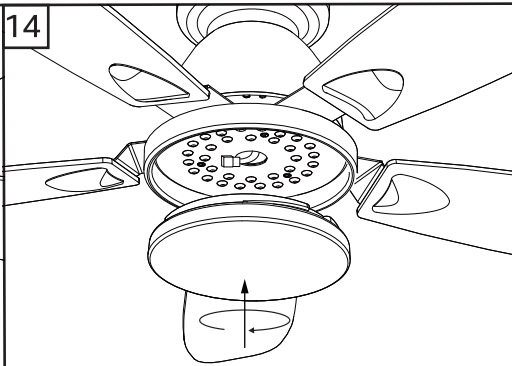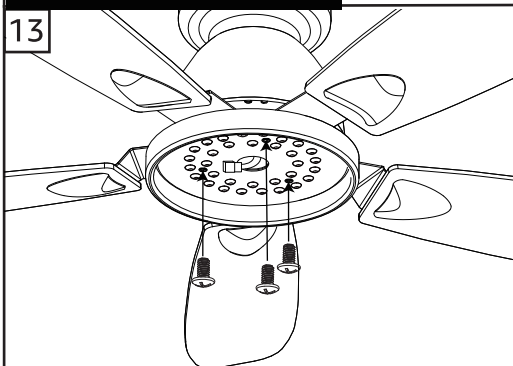


- Install the lamp body onto the main body and tighten the screws. (Use the 3 screws from step 11.)
- Locate the locking point and screw the lampshade into place by turning it upward.

 15

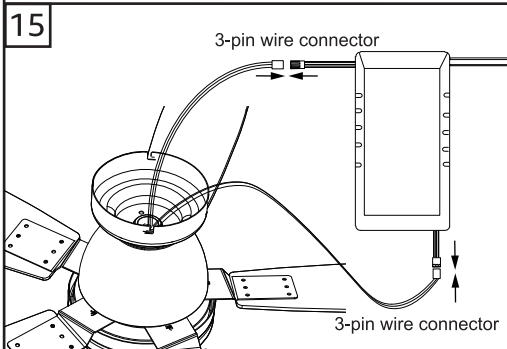

16

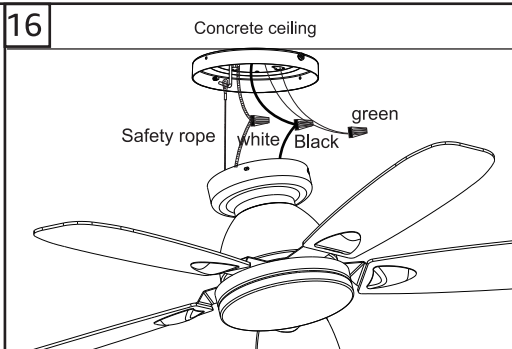 

- Connect the wires between the receiver and the fan motor: connect the 3-pin wire connector.
- Hang the safety rope on the bracket hook.

 
Wiring:

Connect the "Neutral wire" (white wire) from ceiling to the white wire.


Connect the "Live wire" (black wire) from ceiling to the black wire.

Connect the "Ground wire" (green or yellow/green or bare) from ceiling to the bare wire.

17

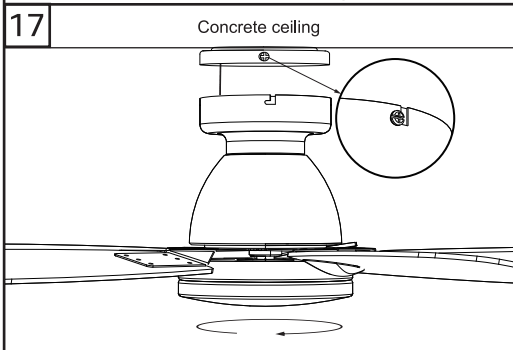

18

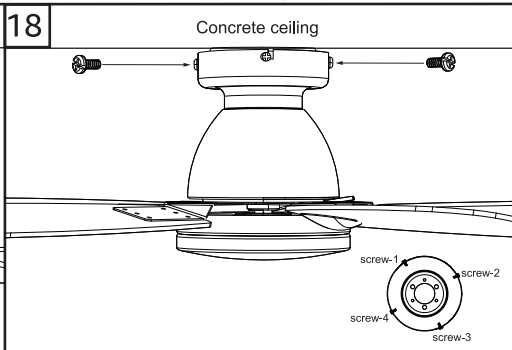 


- Align the canopy L slot to the bracket screw, rotate to certain position.
- Lock the other 2 screws and ensure that the 4 screws are tightened.

Operate Your Ceiling Fan

WARNING







 
To prevent serious injury or death, disconnect power at the circuit breaker before beginning installation.

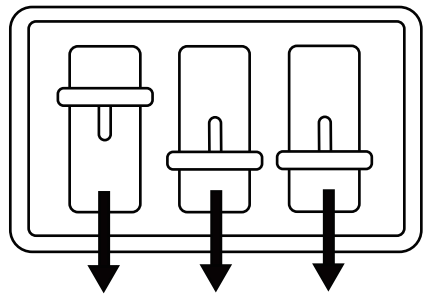

OFF

IMPORTANT

       
To prevent malfunction or damage, do not connect this device to any dimmer switch or variable-speed fan controller.

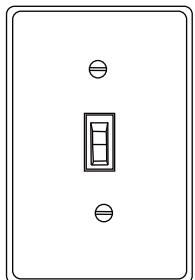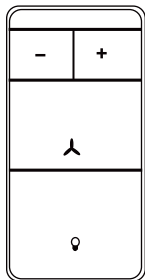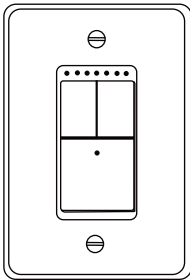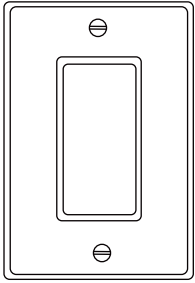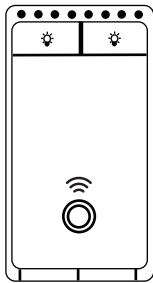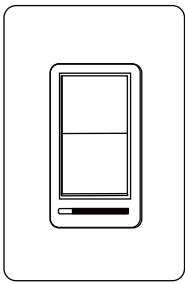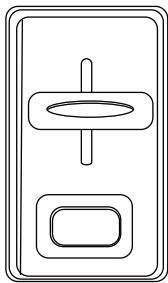

Remote Control



 Attach wall plate using the two screws provided.

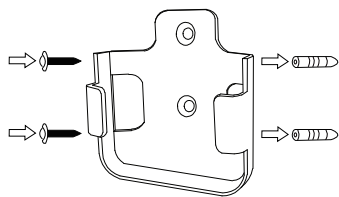

	Light on/off
	Light & fan /off
	CCT change
	Night light
	Brightness +
	Brightness -
	CCT + (cooler)
	CCT - (warmer)
	Pairing
	Forward/reverse
	All off after 2 hours
	Fan speed
	Fan speed
	Fan speed
	Natural wind
	Fan off

To operate the fan, please install 2 AAA batteries (included) in the handheld remote transmitter. If not used for extended periods of time, remove the batteries to prevent damage to the transmitter. Store the remote away from excessive temperatures and humidity.

Pairing method: (single/multiple fans)

The remote control transmitter can be used to control multiple receivers.

1. For the ceiling fan you want to pair, turn the main power switch off for at least 60s.
2. Turn on the main power switch of the ceiling fan, then immediately click **SETUP** button.
3. The light will blink or beep to indicate a successful pairing.

 
 
If the pairing process is unsuccessful, please repeat the above steps.

App Control

- **NOTE:** Scan the QR code and install the APP on your phone, or search and install "Fan Lamp Pro" from Google Play, Apple App Store, and other app stores. Make sure your phone is connected to the internet and **BLUETOOTH** enabled.



Make sure Bluetooth is enabled on your phone and the app has Bluetooth permissions.

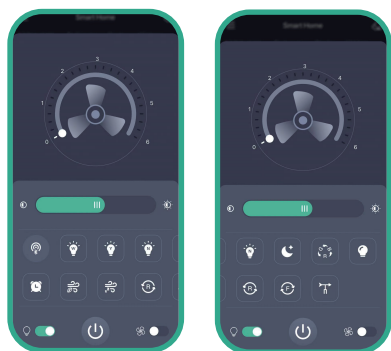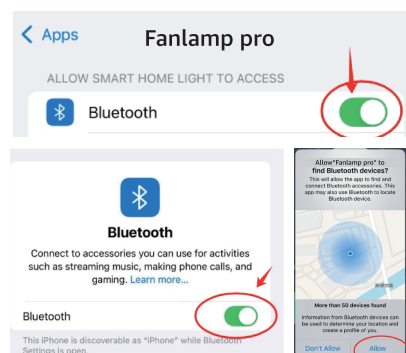


	Pair button. Click it within 5 seconds after turning on the fan from the power switch. Once the light flashes, it indicates that the fan has been successfully paired with the phone and can be controlled through the phone.
	Slide to change the fan speed
	Slide to change the brightness of the light
	Timer the fan
	Sleeping wind
	Natural wind: fan speed will change automatically when use this function
	Fan moves reversely
	Not available for this model
	Fan moves forwards
	Night light (10% brightness in neutral white)
	Quick switch for "Natural" light color
	Quick switch for "Yellow" light color
	Quick switch for "White" light color
	Not available for this model
	Not available for this model
	Turn on/off the fan

Troubleshooting

PROBLEM	SUGGESTED REMEDY
If Fan Does Not Start	1. Check main and branch circuit fuses or circuit breakers. 2. Make sure that the wall control is turned "ON" 3. Check line wire connections to fan and switch wire connections in switch housing. CAUTION: Make sure main power is turned off. 4. Make sure battery has power, change battery(2*AAA) to try again. 5. The remote controller is not paired, check Page.9 to pair. 6. The motor or receiver or remote controller is fault, contact our customer service. 7. Make sure do not connect to any dimmer or fan speed adjust switch.
If Fan Sounds Noisy	1. Make sure all screws in motor housing are snug. (not over tightened) 2. Make sure the screws which attach the fan blade bracket to the motor are tight. 3. Make sure the blade is correct installed, blade arm "UP" side up. 4. Too close to the wall, make sure the blades at least 3ft to the wall. 5. Make sure wire connectors in switch housing are not rattling against each other or against the interior wall of the switch housing. CAUTION: Make sure main power is turned off before entering switch housing. 6. DO NOT USE a Solid State variable speed control. 7. Allow "break-in" period of 24 hours. Most noises associated with a new fan will disappear after this period. 8. Make sure the ceiling bracket is screwed securely.
If Fan Wobbles	All blades are weighed and grouped by weight. The following procedures should eliminate most of the wobble. Check for wobble after each step. 1. Check that all blades are screwed firmly into motor housing. 2. Make sure that canopy and mounting bracket are tightened securely to ceiling junction box and junction box is mounted firmly to ceiling joist. 3. Interchanging two adjacent blades could redistribute the weight and possibly result in smoother operation. 4. The balancing kit should only be used if there is an unacceptable amount of fan wobble after completing all the steps:

 Troubleshooting

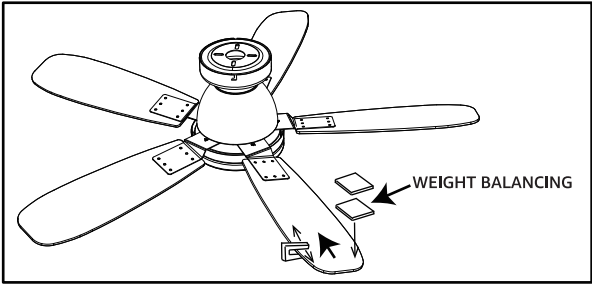PROBLEM	SUGGESTED REMEDY
If Fan Wobbles	<u>How to use balancing kit:</u> (1) Turn the fan on and set the speed control setting to a speed at which the wobble is the greatest. (2) Turn off the fan and allow it to come to a complete stop. Select one blade and place the balance clip on it, halfway between the blade holder and the blade tip on the trailing edge of the blade. (3) Turn the fan on. Note whether the wobble has increased or decreased. Turn the fan off, move the clip to another blade, and retest. Repeat this procedure on all blades, noting the blade on which the greatest improvement is achieved. (4) Move the clip back to the blade that showed the greatest improvement. Move the clip inward and outward on this blade and operate the fan to find the position where the clip gives the greatest improvement. (5) Remove the clip and install a balancing weight to the top of the blade along the centerline, near the point where the clip was positioned. (6) If the fan wobble problem has not been corrected, you can try to improve the balancing further by using the balancing clip and additional weights.  The diagram shows a ceiling fan with five blades. A balancing clip is attached to the trailing edge of one blade. To the right of the fan, there are three small rectangular weights. An arrow points from the text 'WEIGHT BALANCING' to these weights. Another arrow points from one of the weights to the top of a blade, indicating where to place the weight.
If Light Does Not Work or Flickering	1. Check for loose or disconnected wires in fan switch housing. 2. Check the wiring of receiver to the light kit. 3. Check for loose or disconnected wires in light kit, make sure connector is correct inserted. 4. Check for faulty light bulbs. (*light bulb version only) 5. There is too many ceiling fans with different control system in the same area, shut down other ceiling fansto check if still flickering. 6. DO NOT USE any dimmer.

Customer Service

30-Days Full Refund Guarantee

If you are not completely satisfied or the item isn't what you expected, just tell us within 30 days. We will give you a full refund unconditionally.

Friendly Reminder

It's better to contact us than leaving a negative shopping experience. Nothing is more important than your satisfaction, and we will do our best to serve you.

Quick Response within 12 Hours

You can contact us without any hesitation at any time of the day, and we will reply to you within 12 hours. (It would be appreciated if you could provide us with a video or pictures, if available)

2-year Warranty

Your fan light comes with a two-year warranty. If a malfunction occurs due to product quality issues, we will assist in diagnosing the problem and provide replacement parts free of charge to ensure your fan light resumes normal operation.

Contact Information



: You can contact us by sending an email to support@fanlamppro.com