 


ASSEMBLY INSTRUCTIONS

TV Stand

 
ITEM# GSI22X1

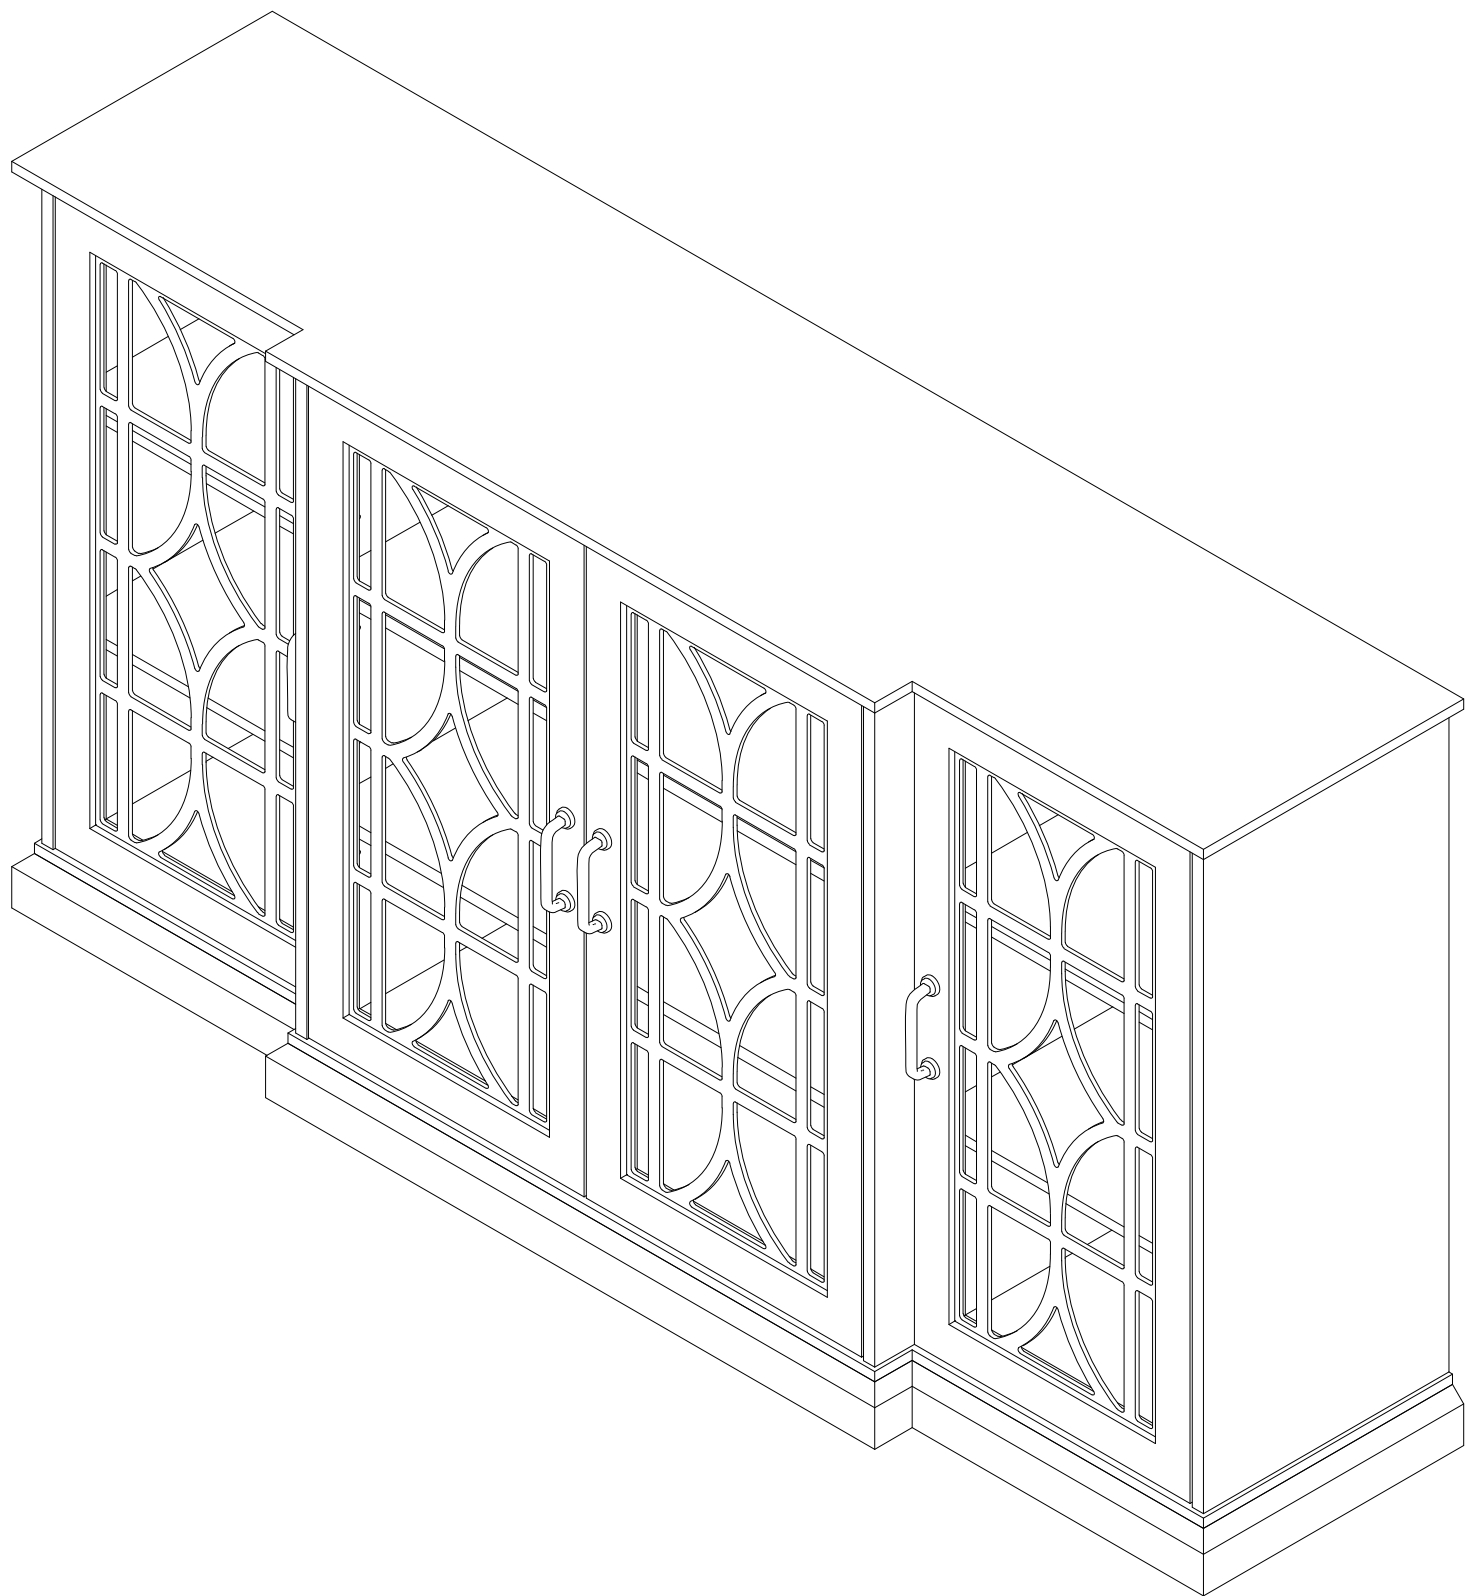


If you find any damage after opening, please be sure to take pictures of the damage and contact us. We will help you solve the problem as soon as possible.

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. A Phillips head screwdriver is required for the assembly of this product .

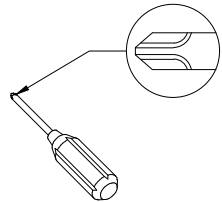

 
- VI. Power tools should not be used to assemble this product .

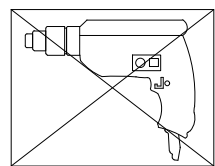

 
- VII. The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.

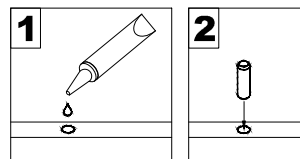

 
In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.

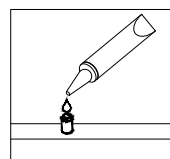

 
- VIII. Concealed hinges are three-way adjustable.

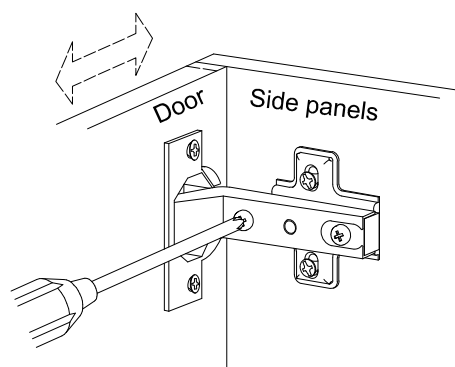

Horizontal
by screw adjustment

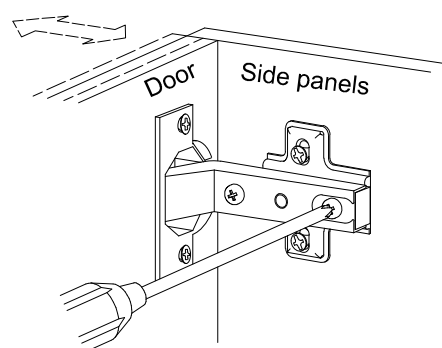 


 In-and-Out
by loosening the hinge-arm
mounting screw or via cam
adjustment

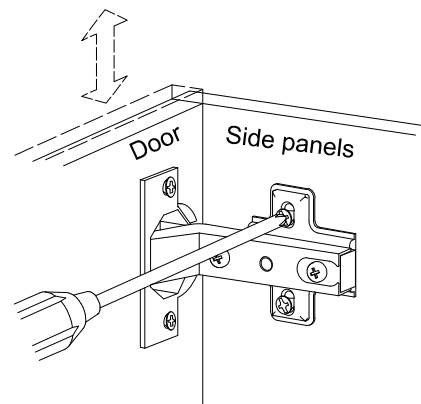


Vertical
Via slots in the mounting
plate or via cam adjustment







 
- VIII. Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

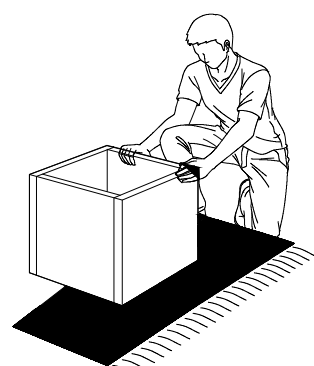


Parts List

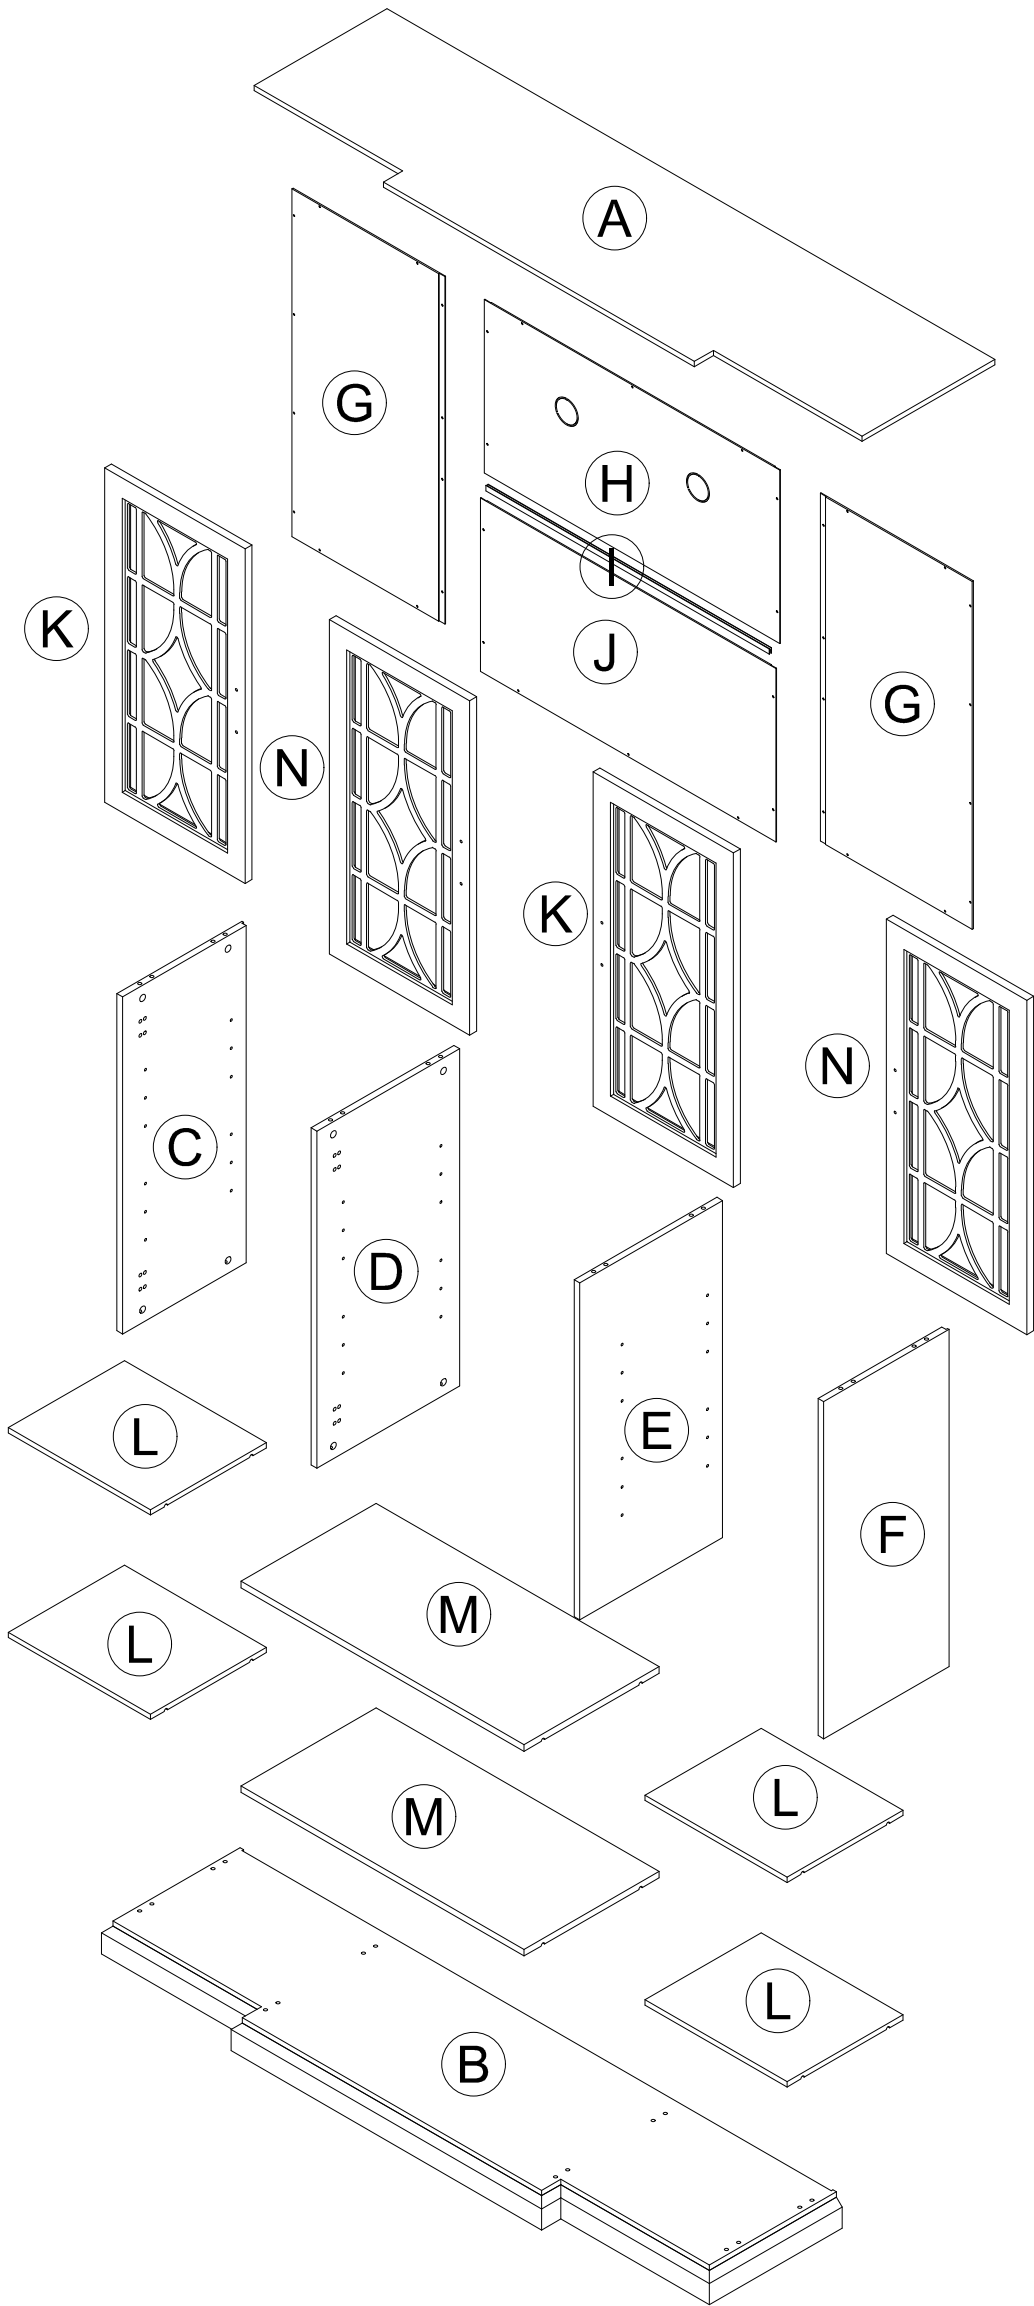 

Hardware List

       1		Ø8x30	Wooden dowel	16 pcs
2		Ø6x32	Cam bolt	16 pcs
3		Ø15x9.5	Cam lock	16 pcs
4			Sticker	16 pcs
5		Ø3x12	Screw	30 pcs
6			Shelf support pin	24 pcs
7			Handle	4 pcs
8		Ø4x18	Screw	8 pcs
9			Hinge	8 pcs
10		Ø4x12	Screw	48 pcs
11			Plastic strap	2 pcs
			Nut	2 pcs
		Ø3x16	Screw	2 pcs
		Ø4x25	Screw	2 pcs
12			Glue tube	1 pcs

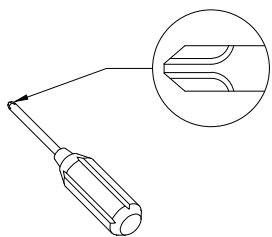 


Philips head screwdriver required for assembly
(not included)

*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*

Step 1

 
2:  8 pcs

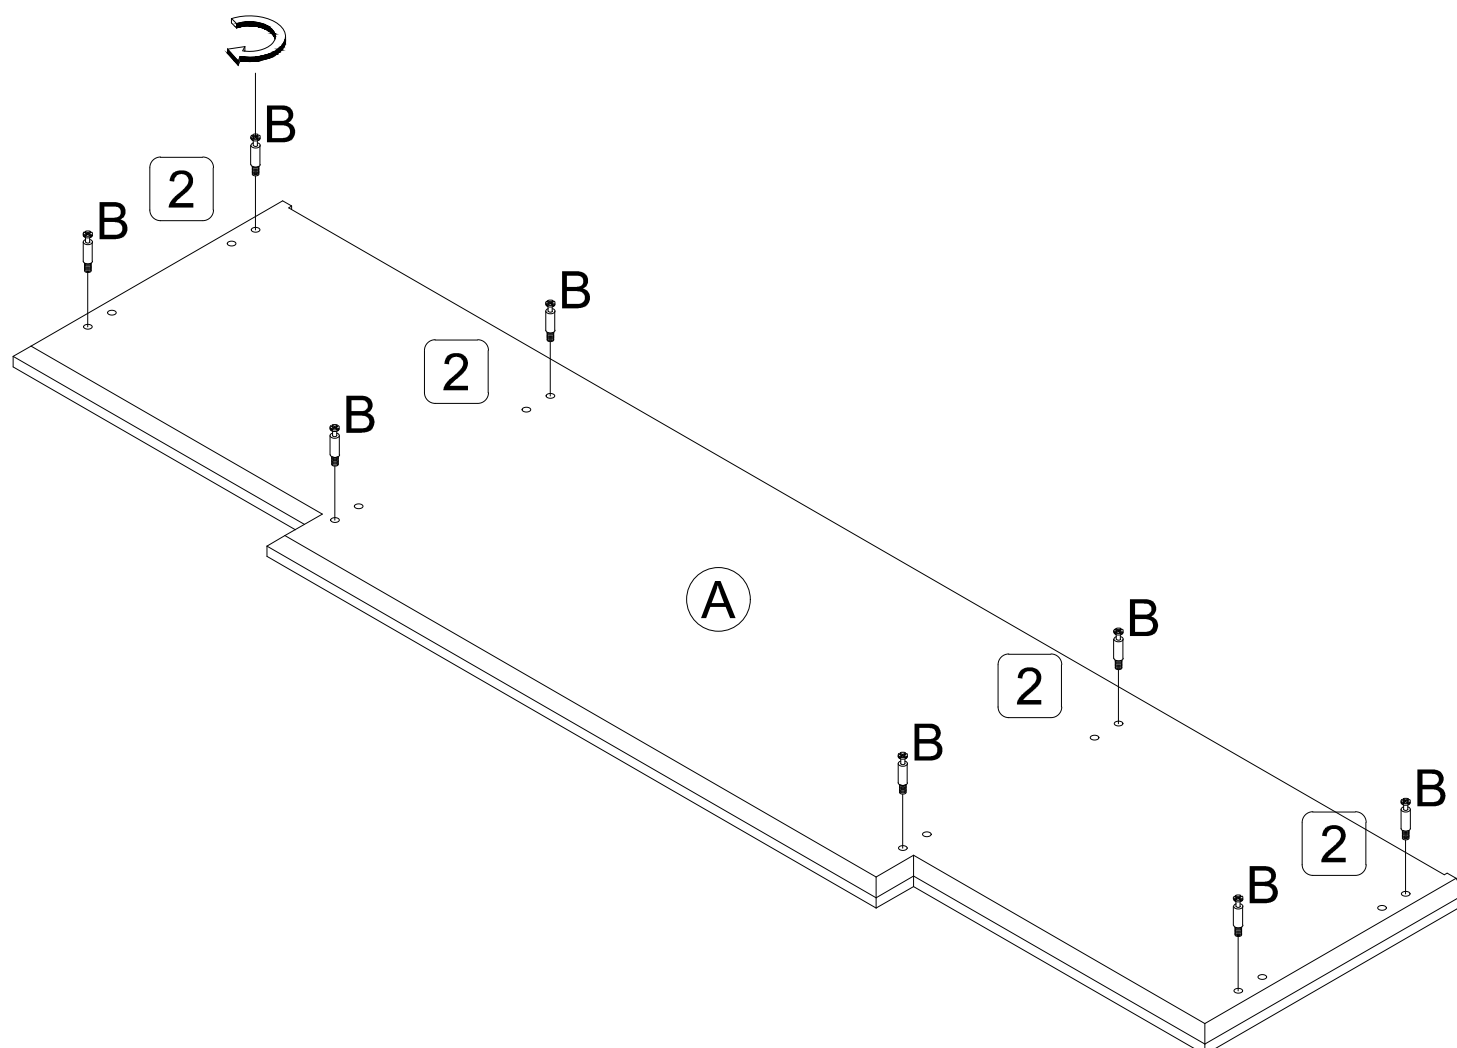

Screw cam bolts (2) into top panels (A).

Step 2




 
2:  8 pcs

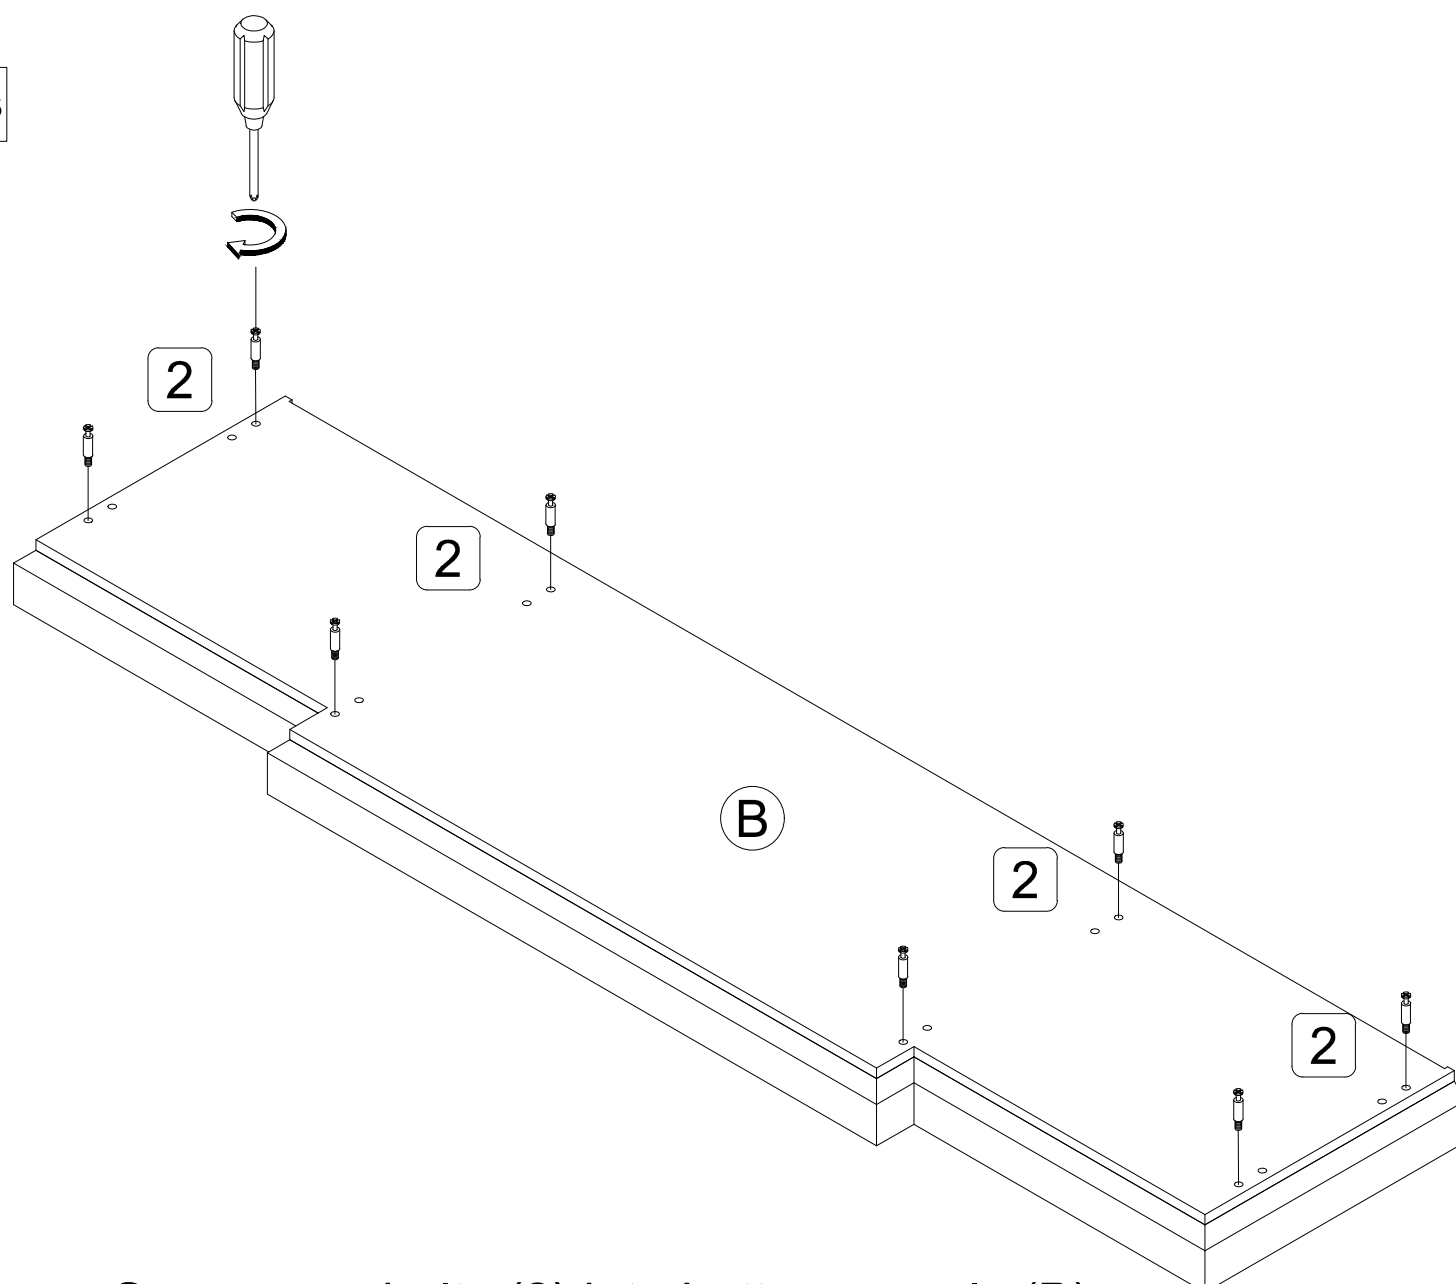

Screw cam bolts (2) into bottom panels (B).

Step 3

    
1:  16 pcs

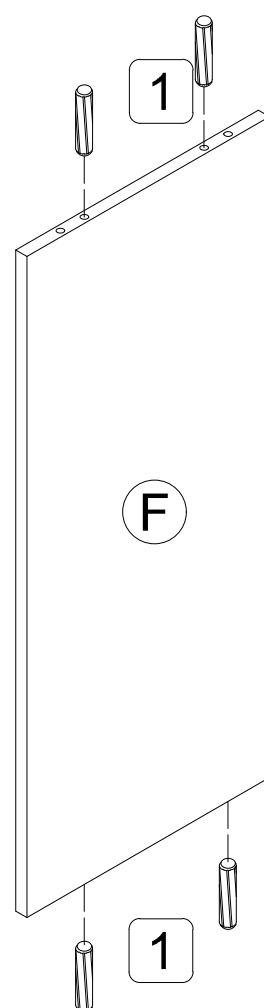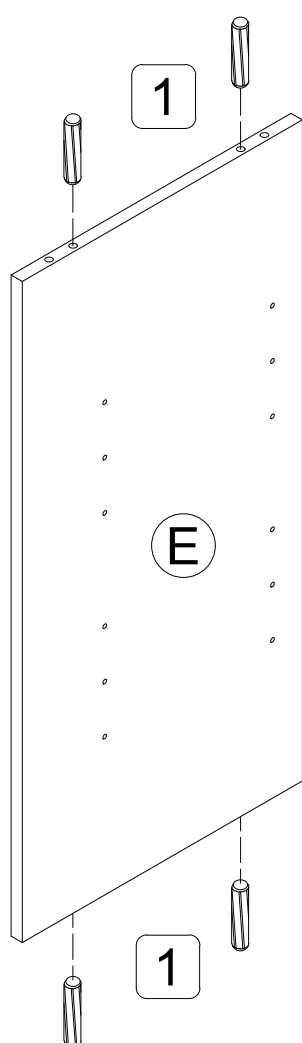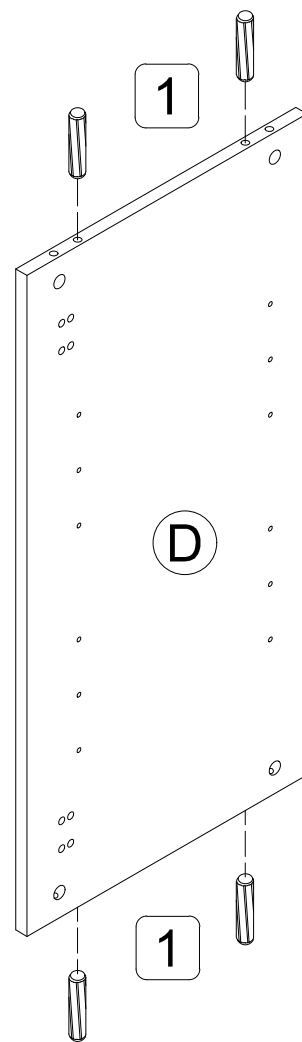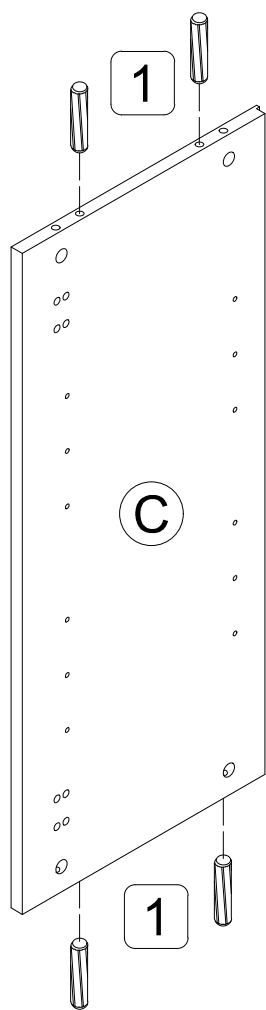


Insert wooden dowels (1) into panels (C,D,E,F).

Step 4

 3:  8 pcs

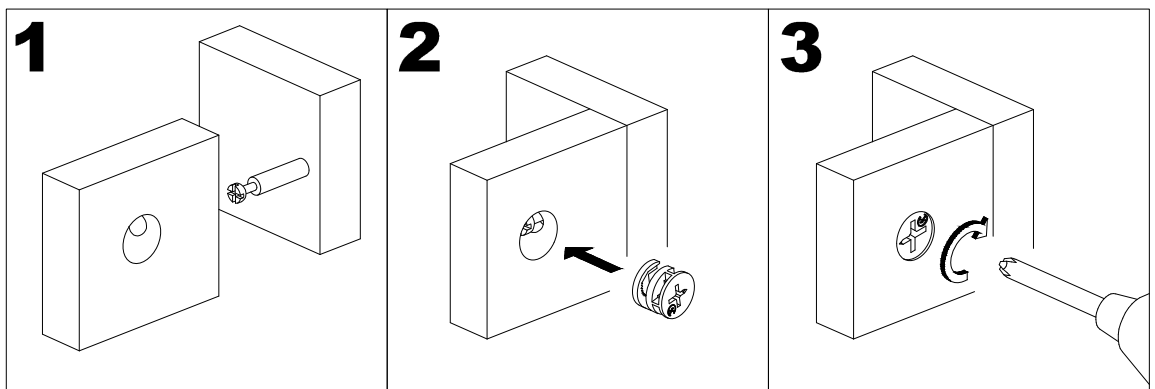

 
Note :
Please don't over-tighten the cam lock, otherwise, it will be broken.

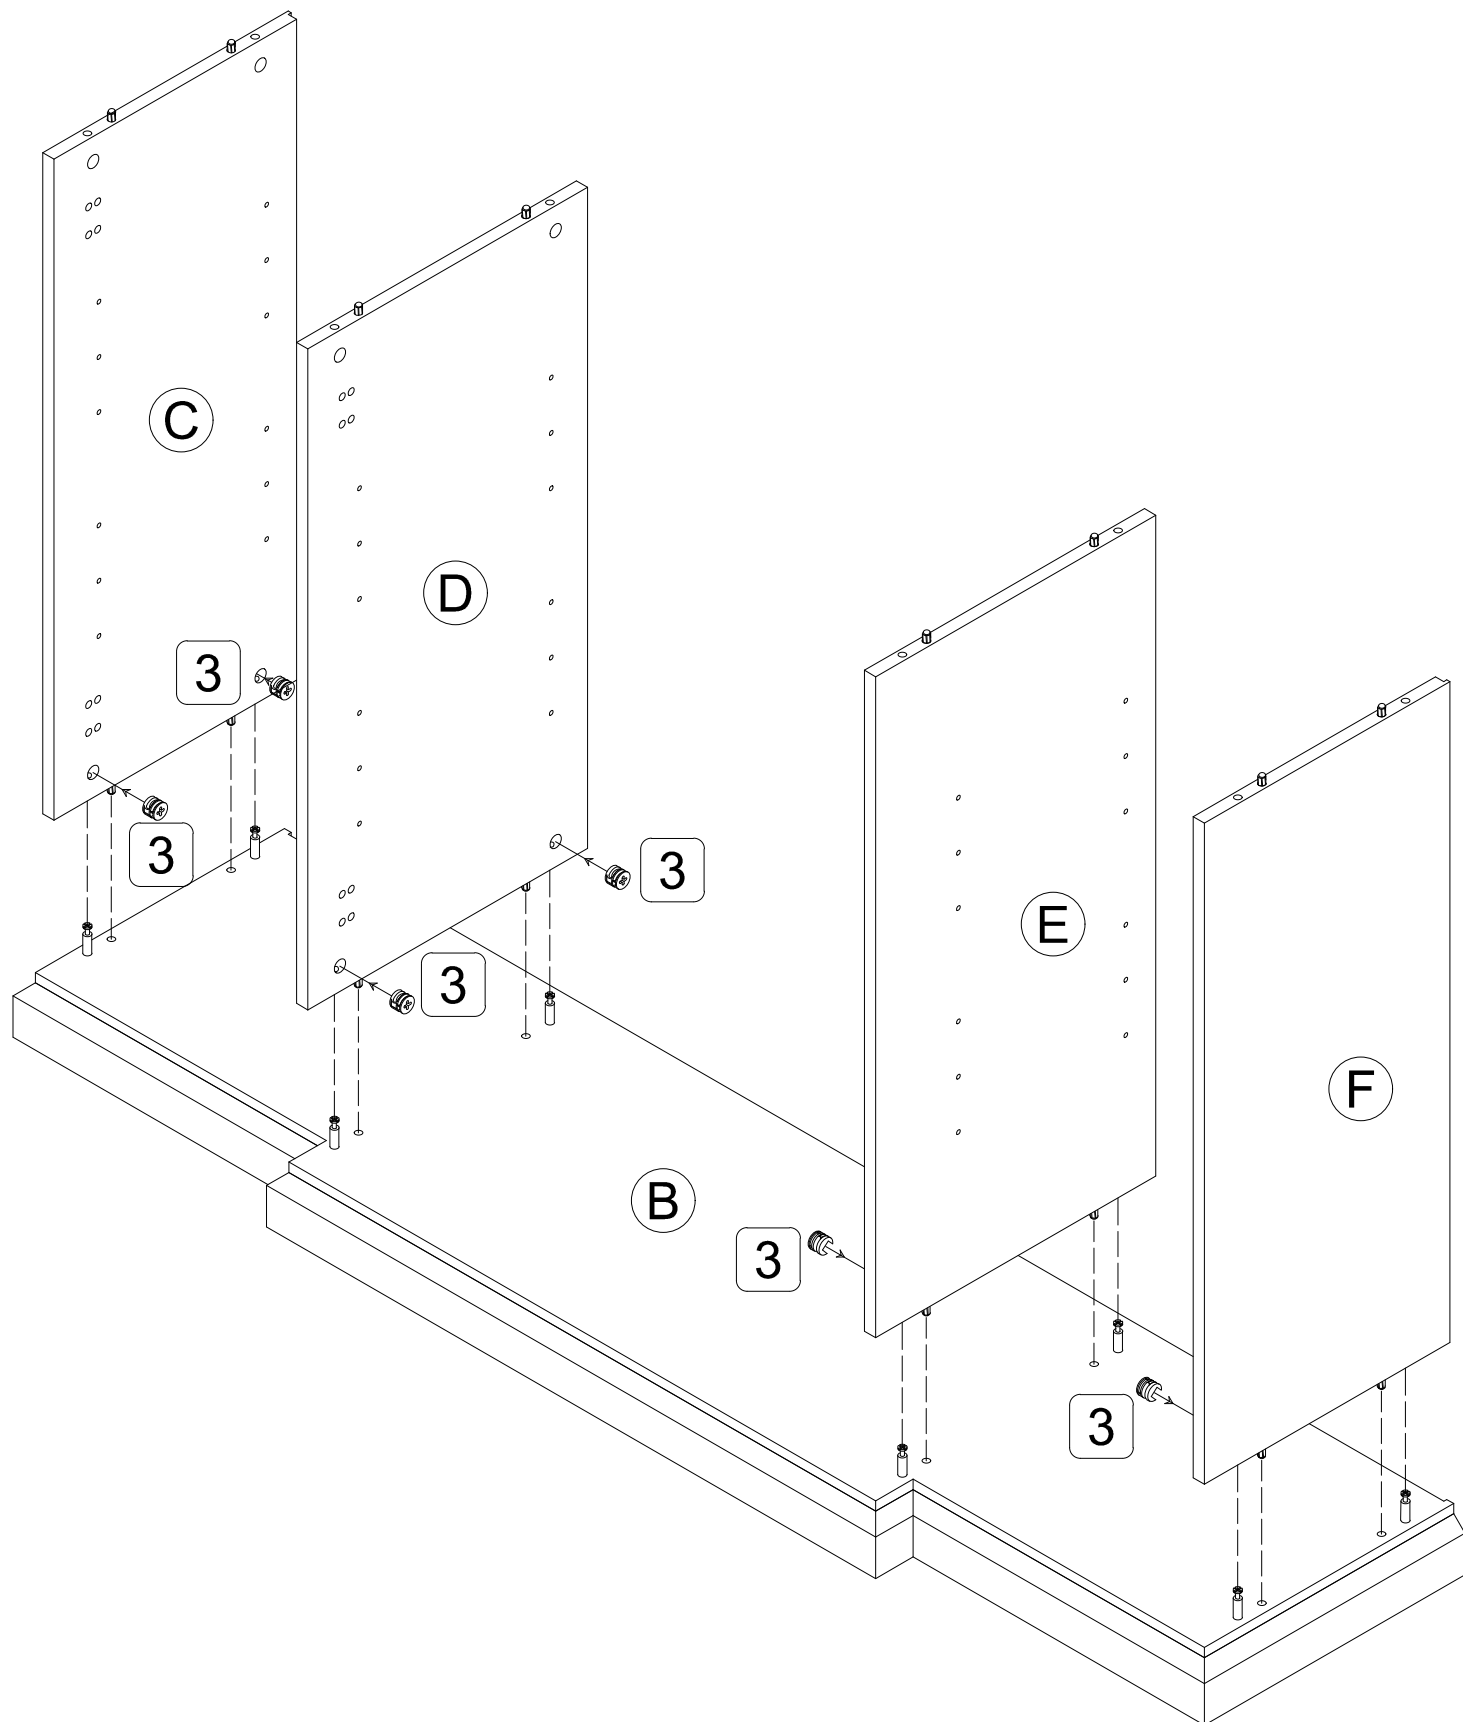


Attach panels (C,D,E,F) to bottom panel (B) using cam bolts and dowels as guides. Insert cam locks (3) into panels (C,D,E,F) and tighten with a screwdriver.

Step 5

 3:  8 pcs

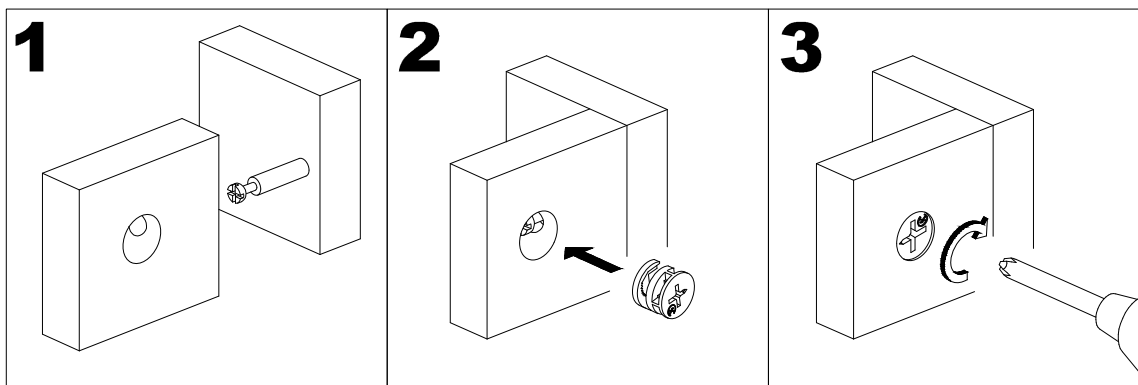

 
Note :
Please don't over-tighten the cam lock, otherwise, it will be broken.

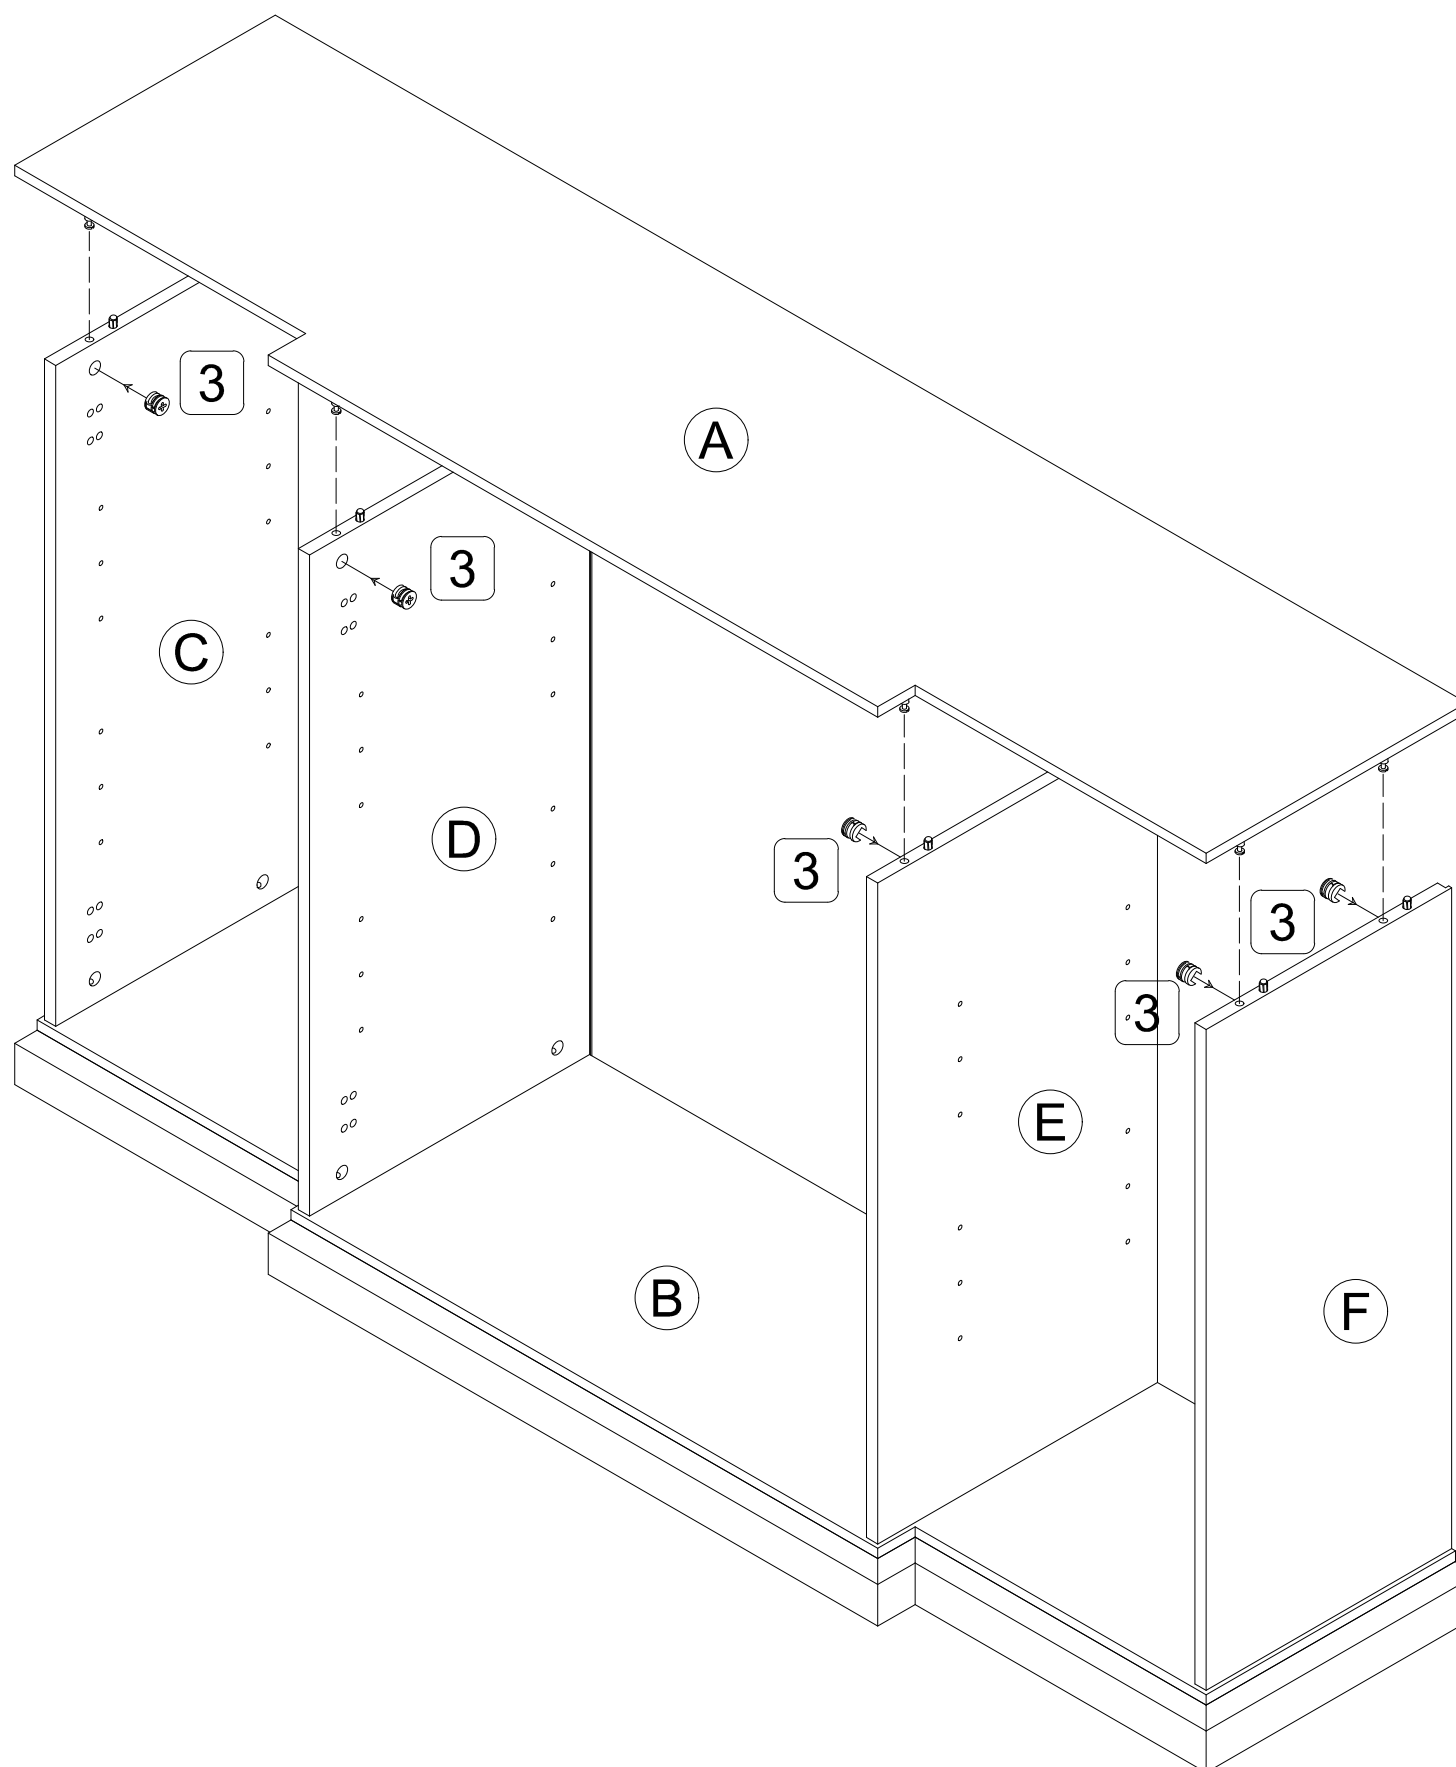

Attach top panel (A) to the assembly using cam bolts and dowels as guides. Tighten cam locks (3) with a screwdriver.

Step 6

 5:  30 pcs

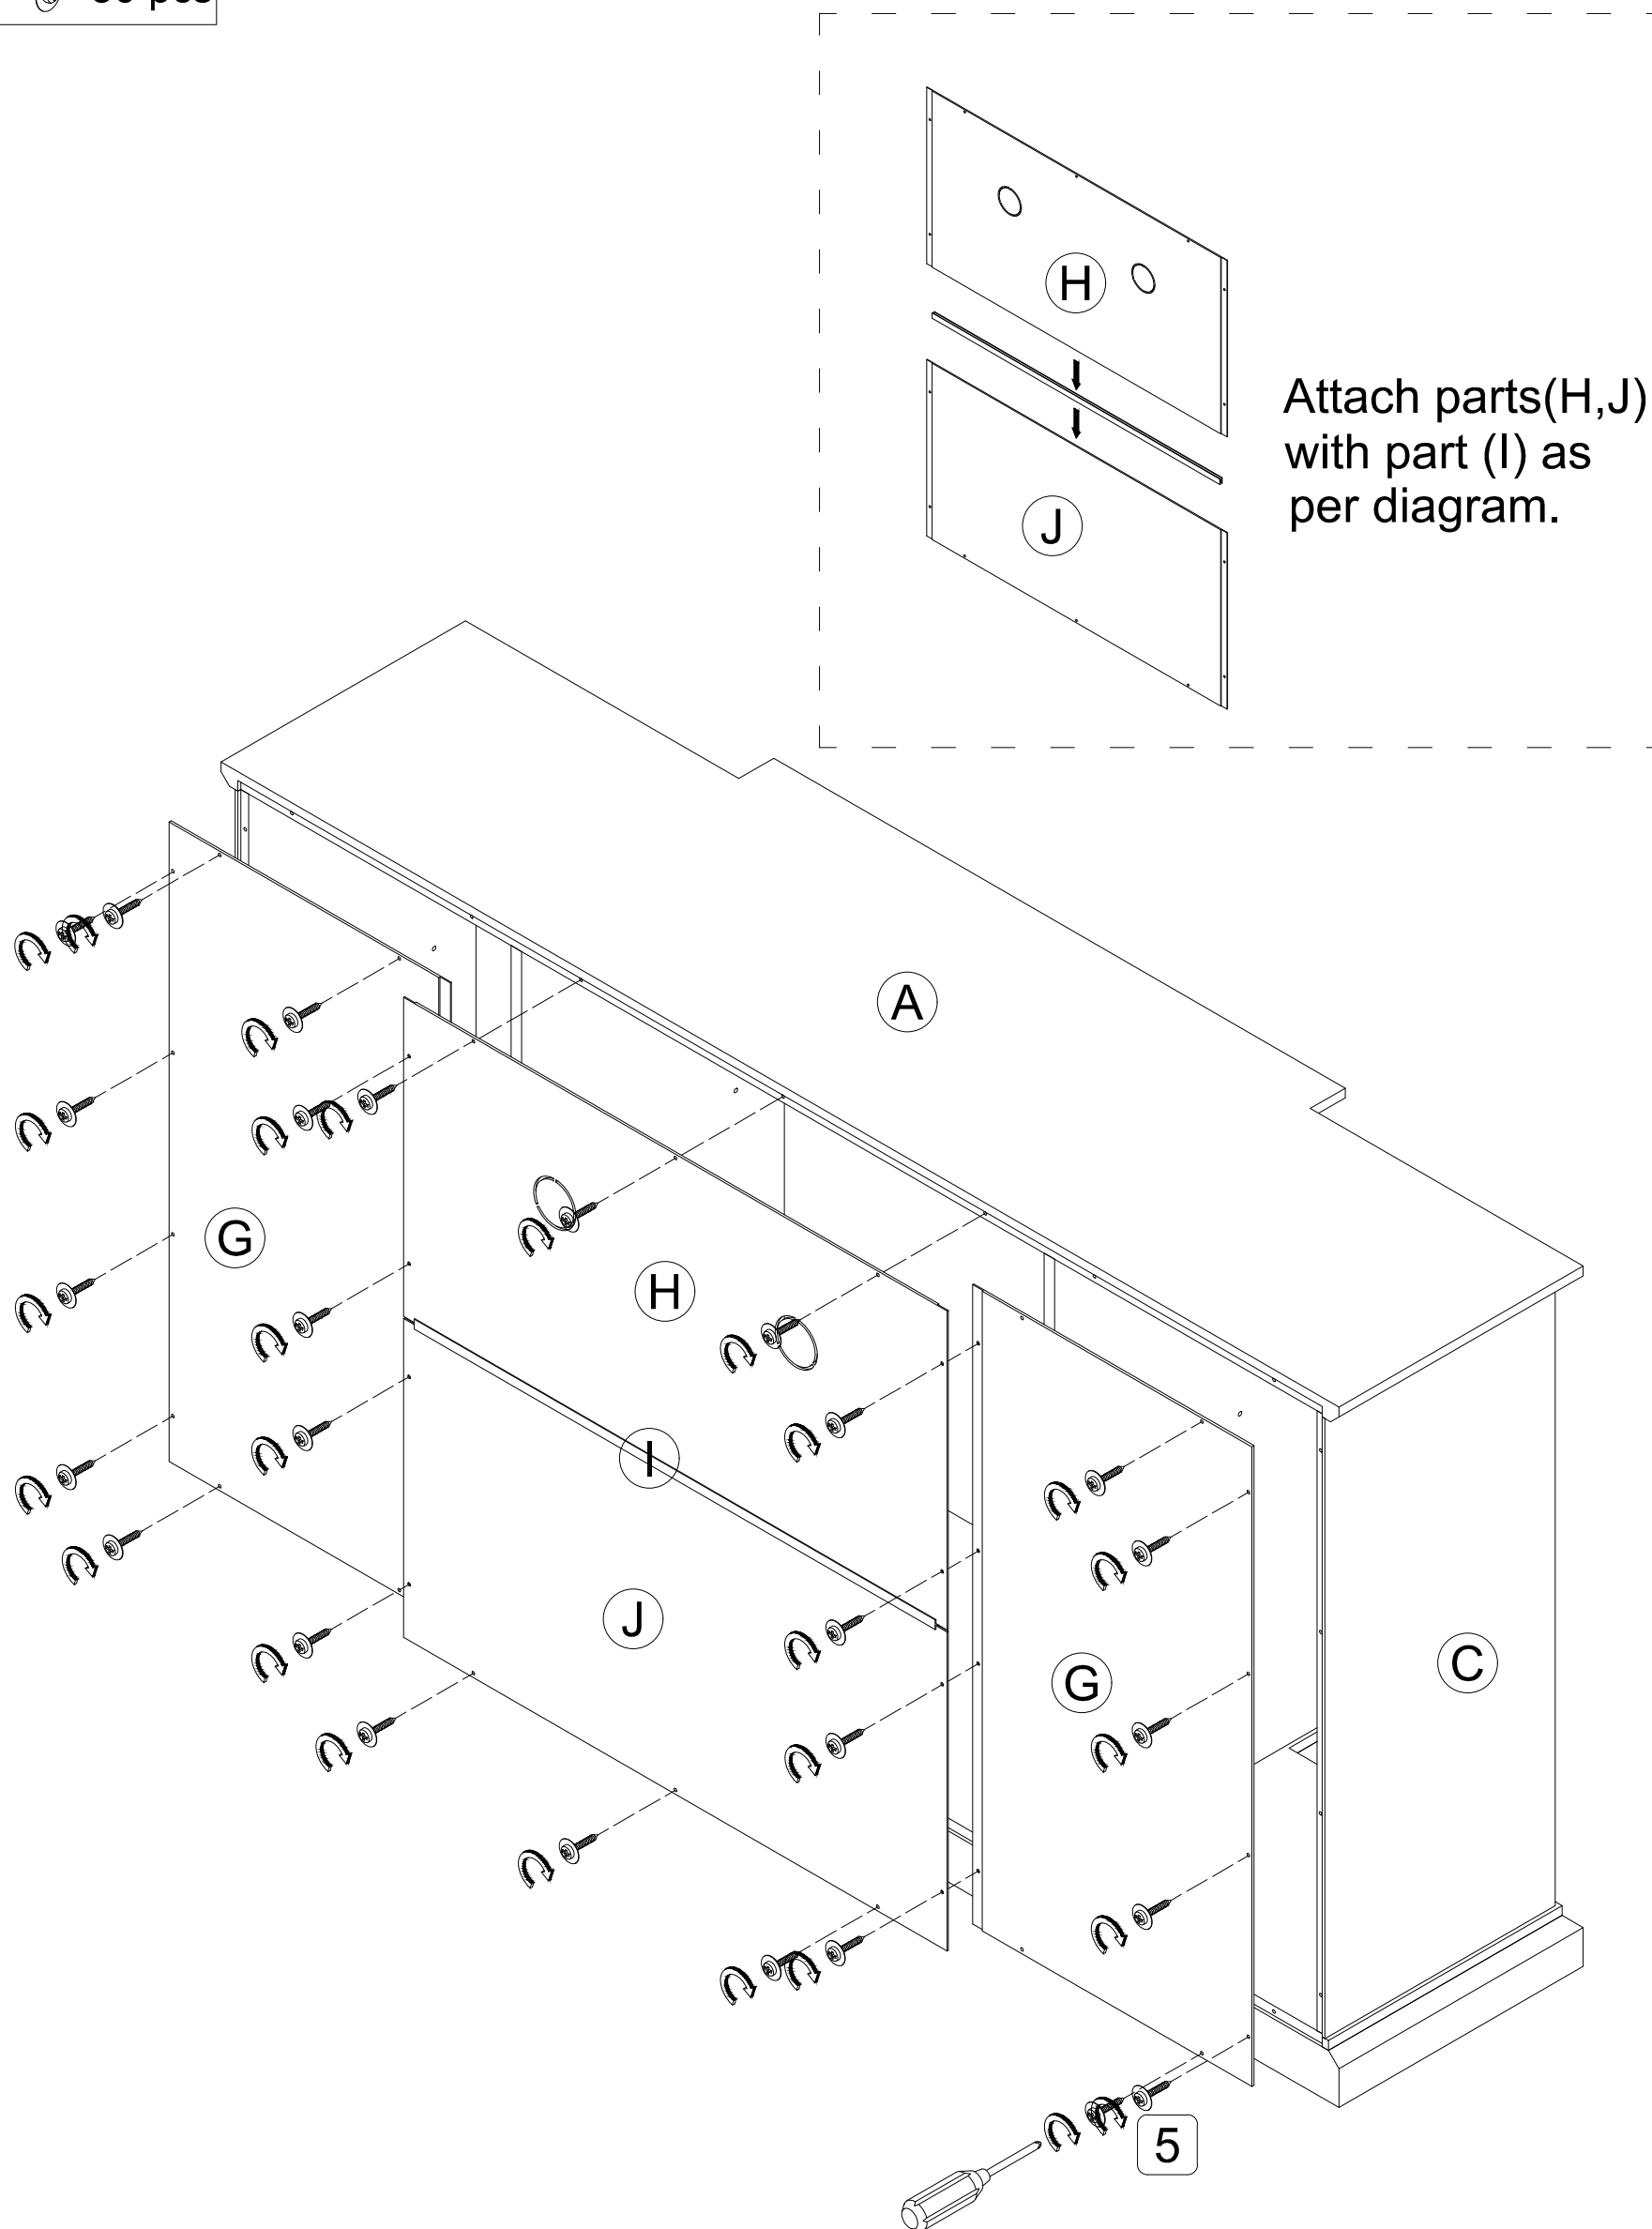


Attach back panels (G,H,I,J) to the assembly from the previous step using screws (5). Note that back panels (H,I,J) will overlap back panel (G).

Step 7


6:  24 pcs

 4:  16 pcs

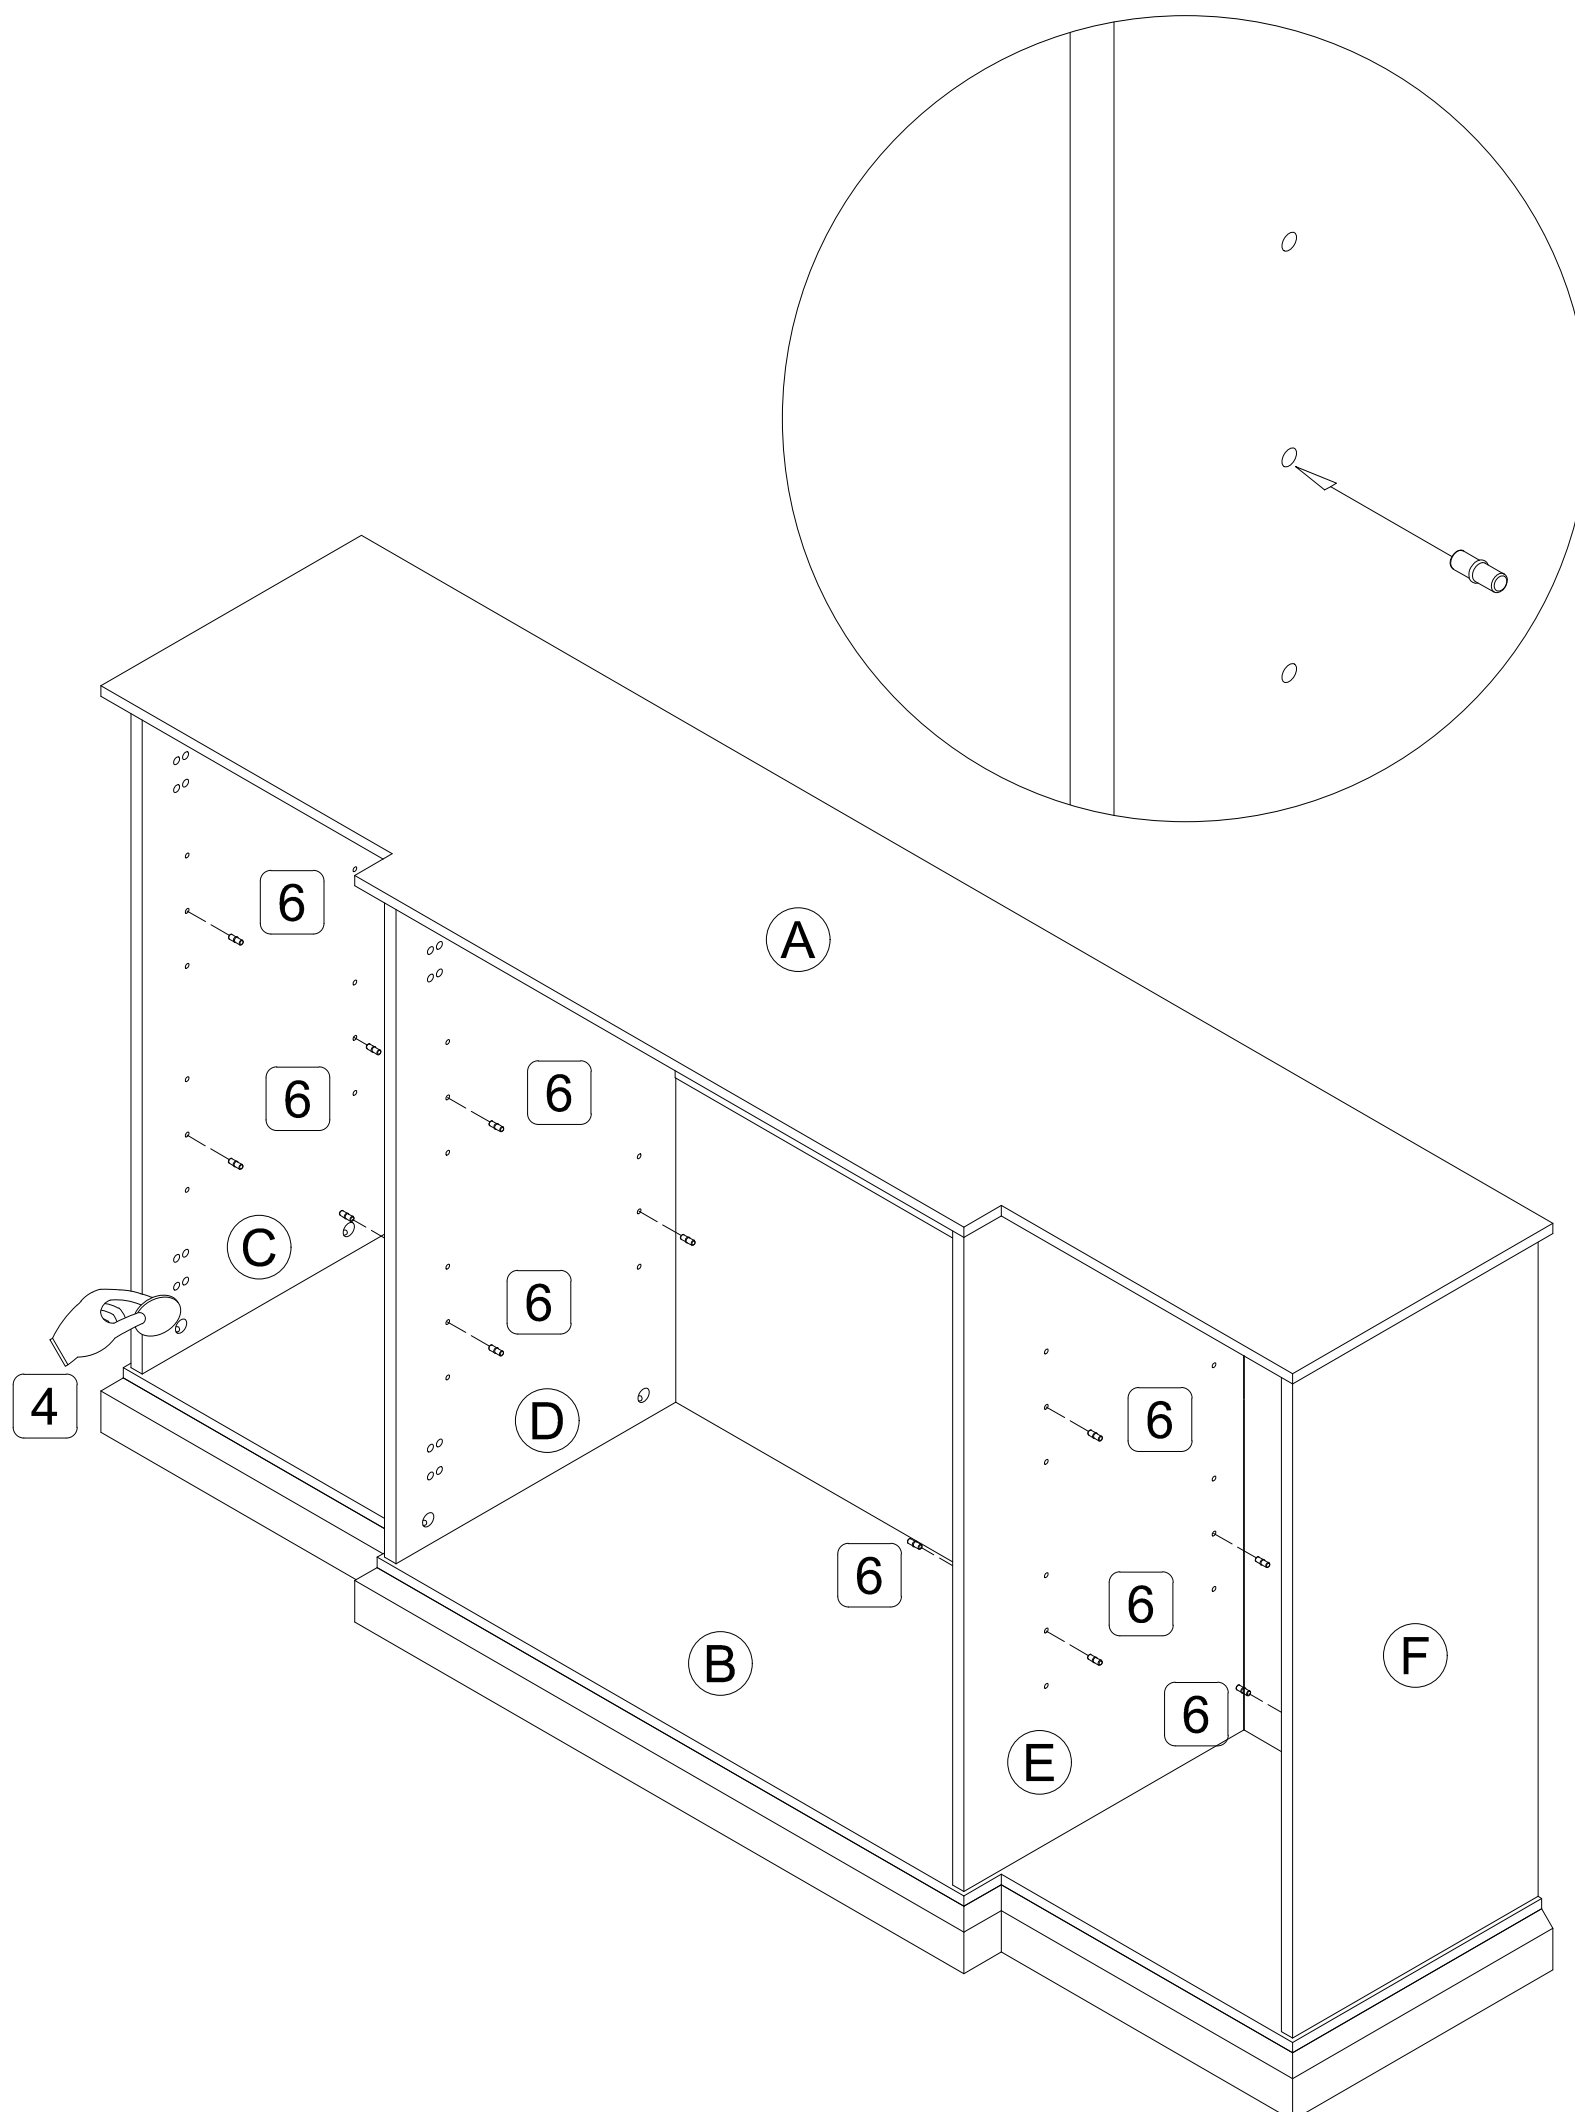

Insert shelf support pins (6) into the interior of the assembly at desired shelf heights. Place sticker (4) cover the holes.



 
Step 8

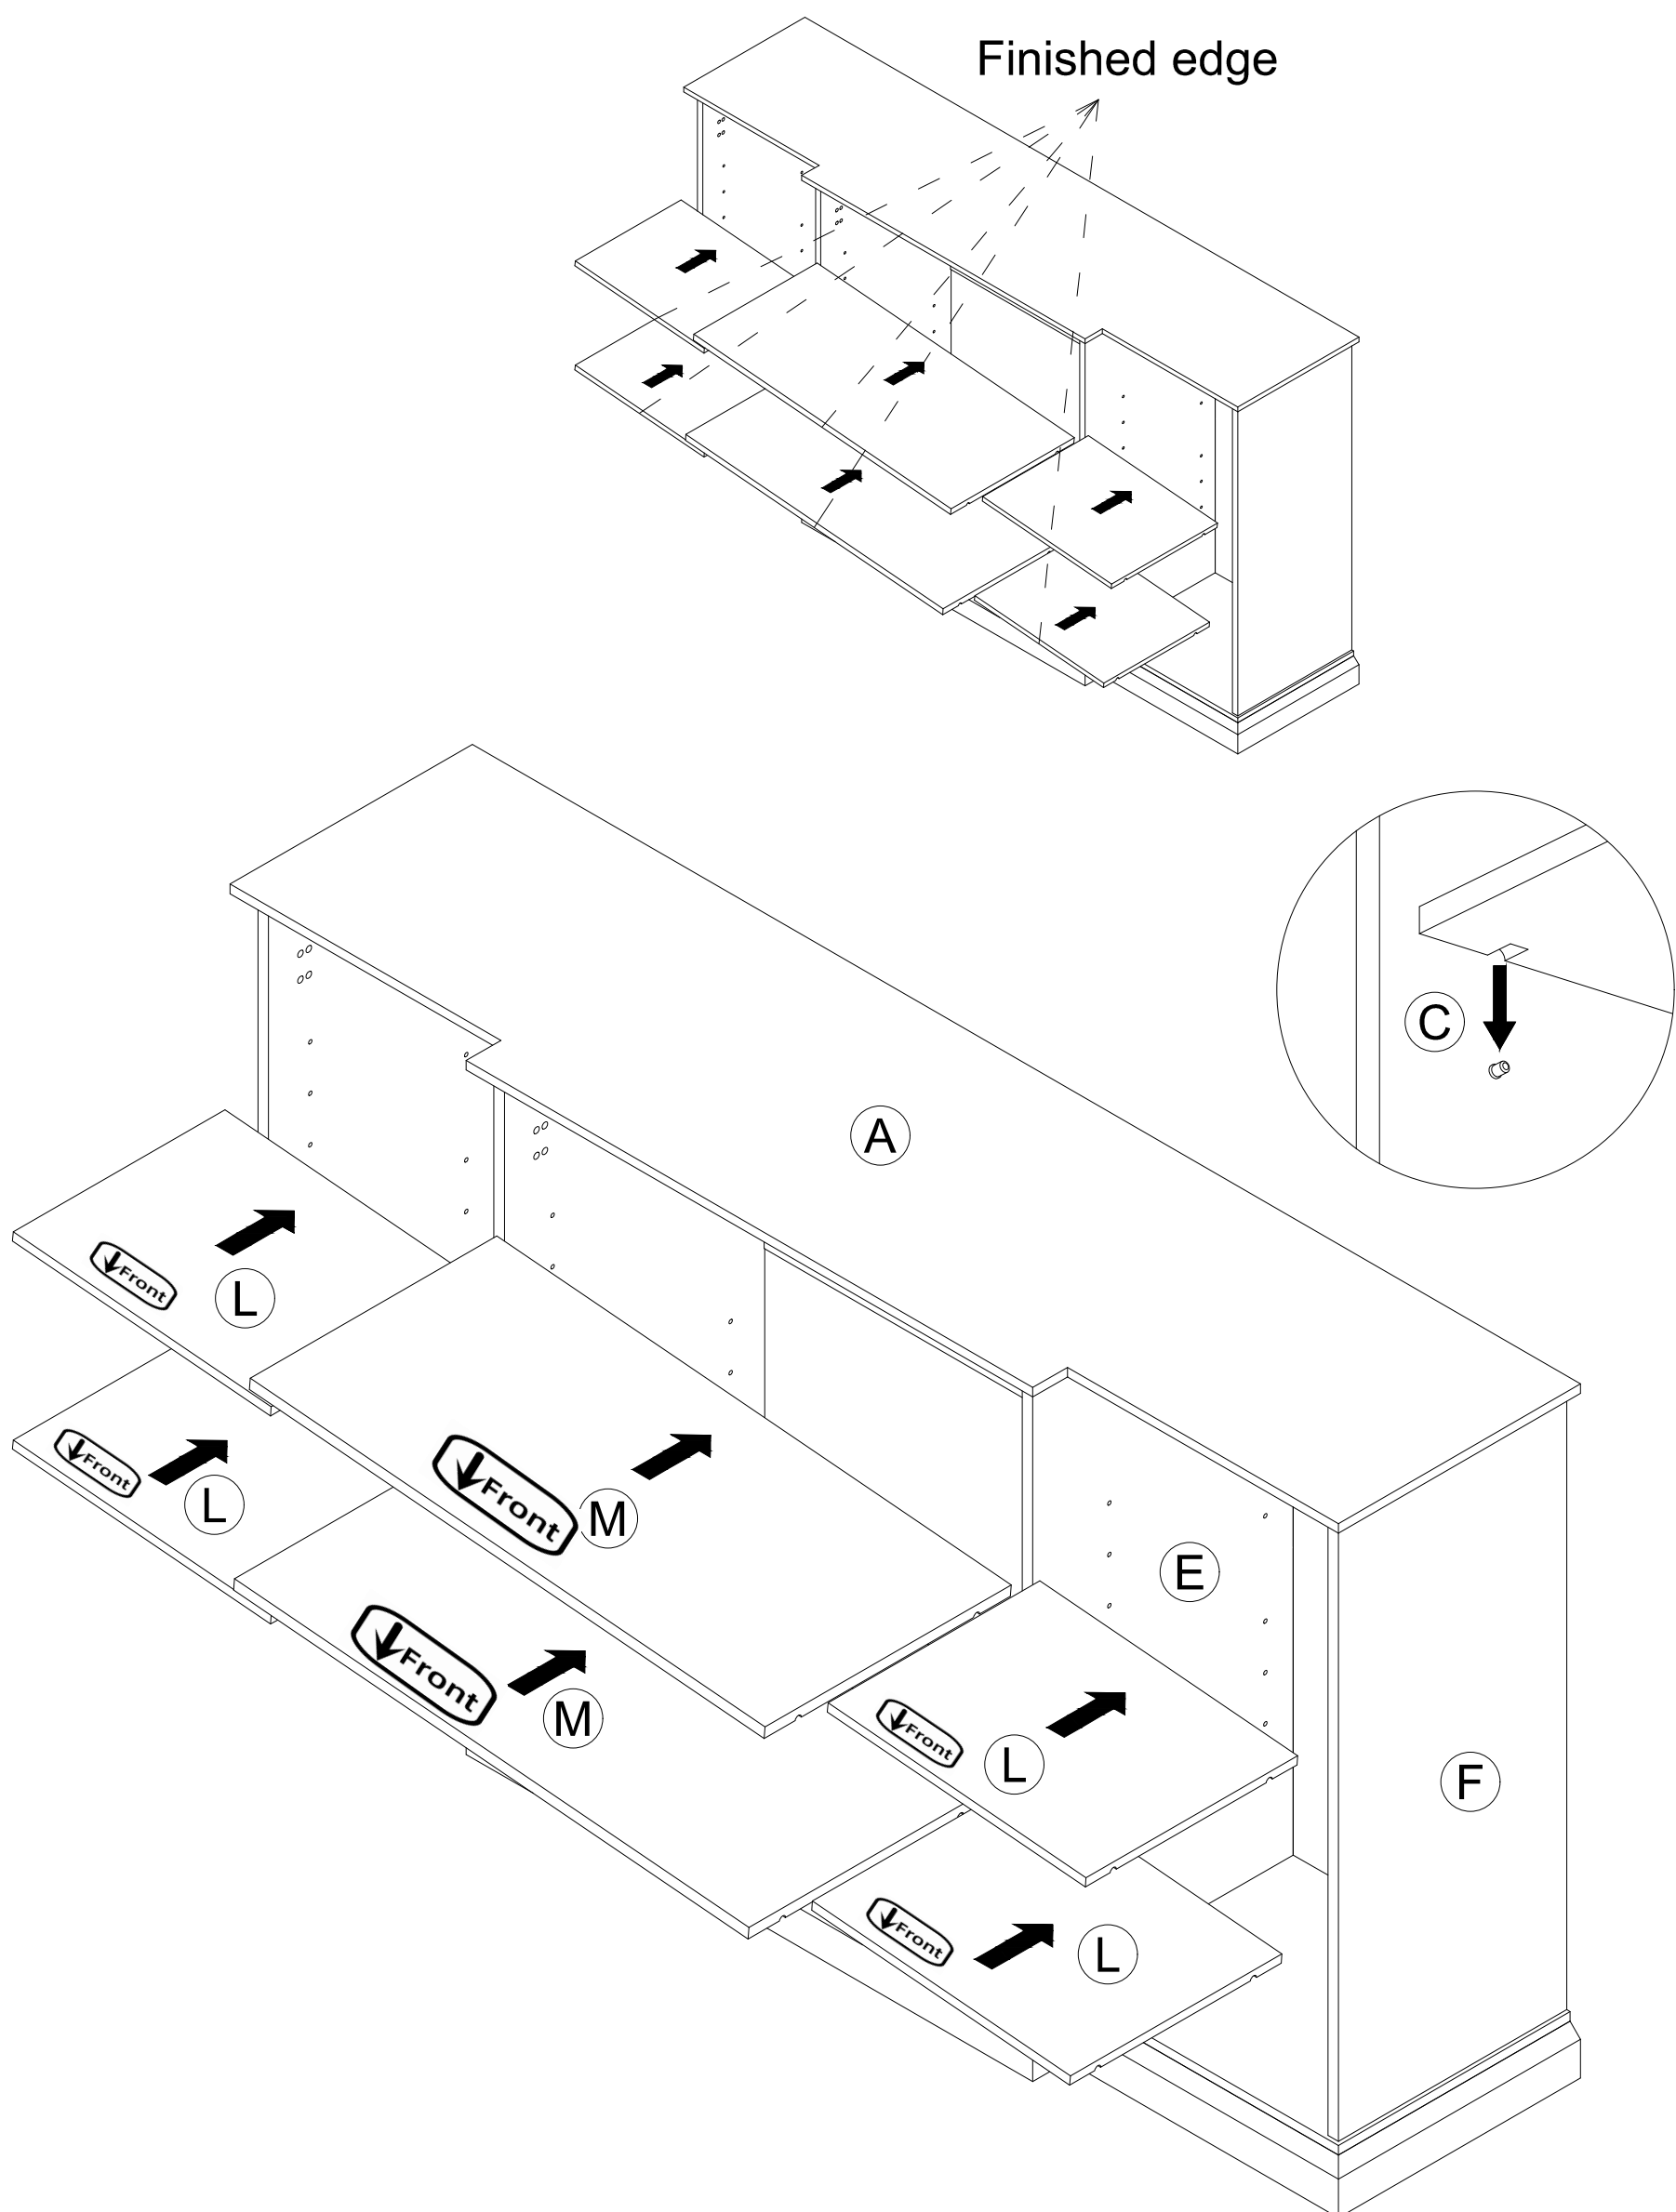

Carefully place shelves (L,M) on shelf support pins (6)

Step 9


7:		4 pcs
8:		8 pcs
9:		8 pcs
10:		48 pcs

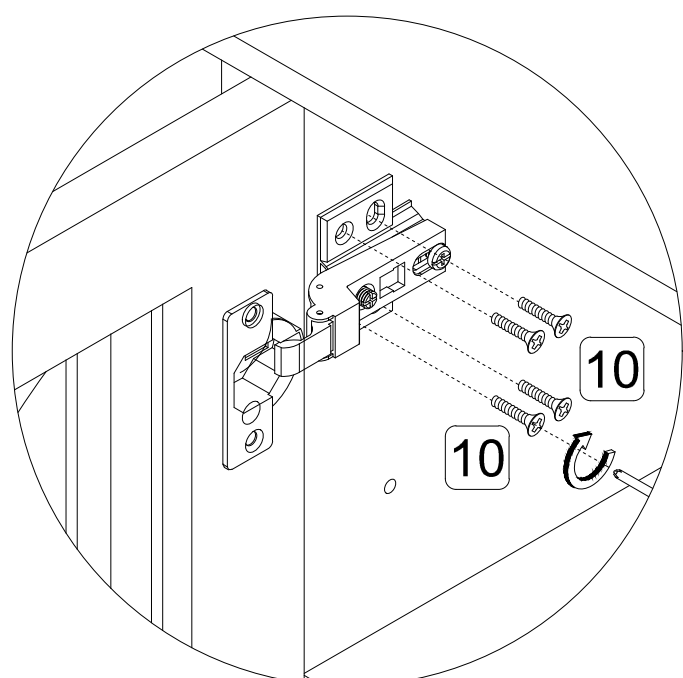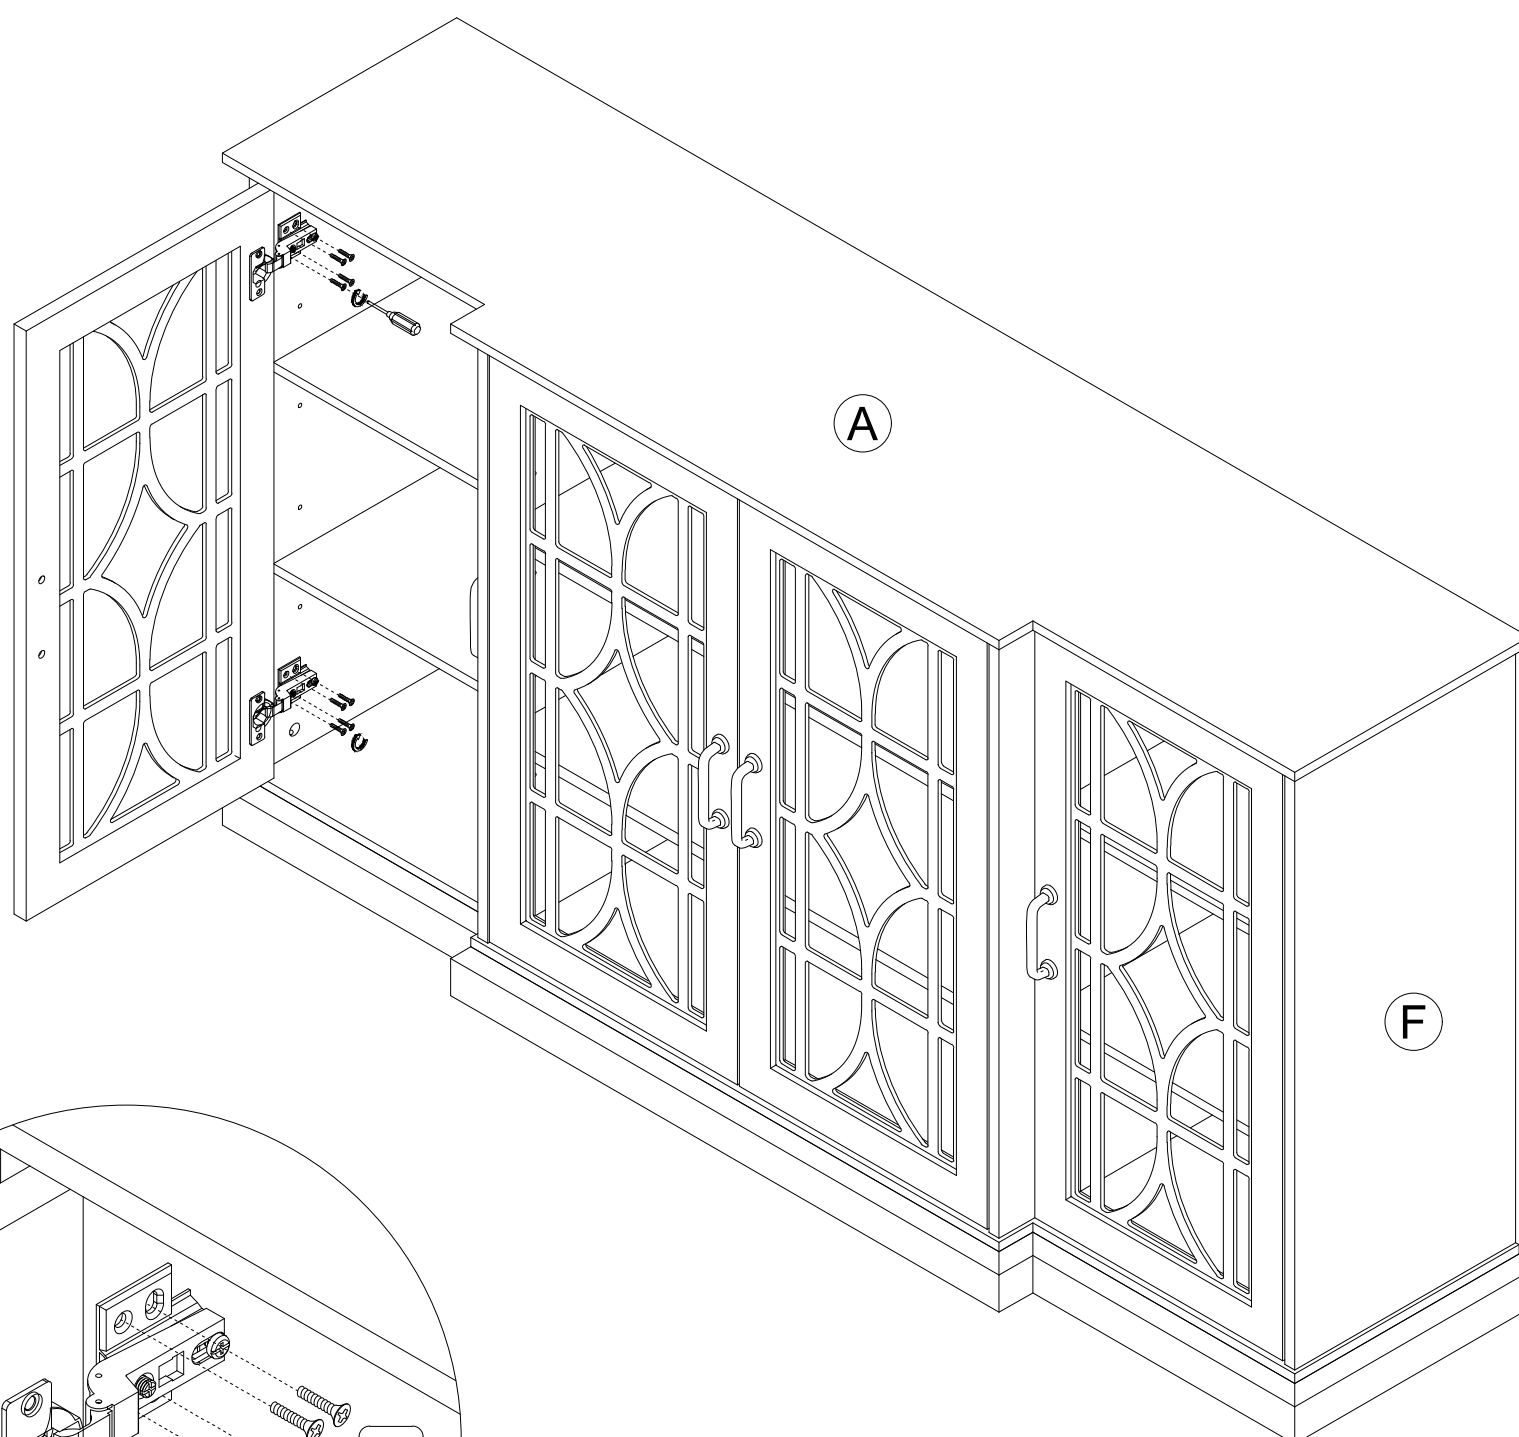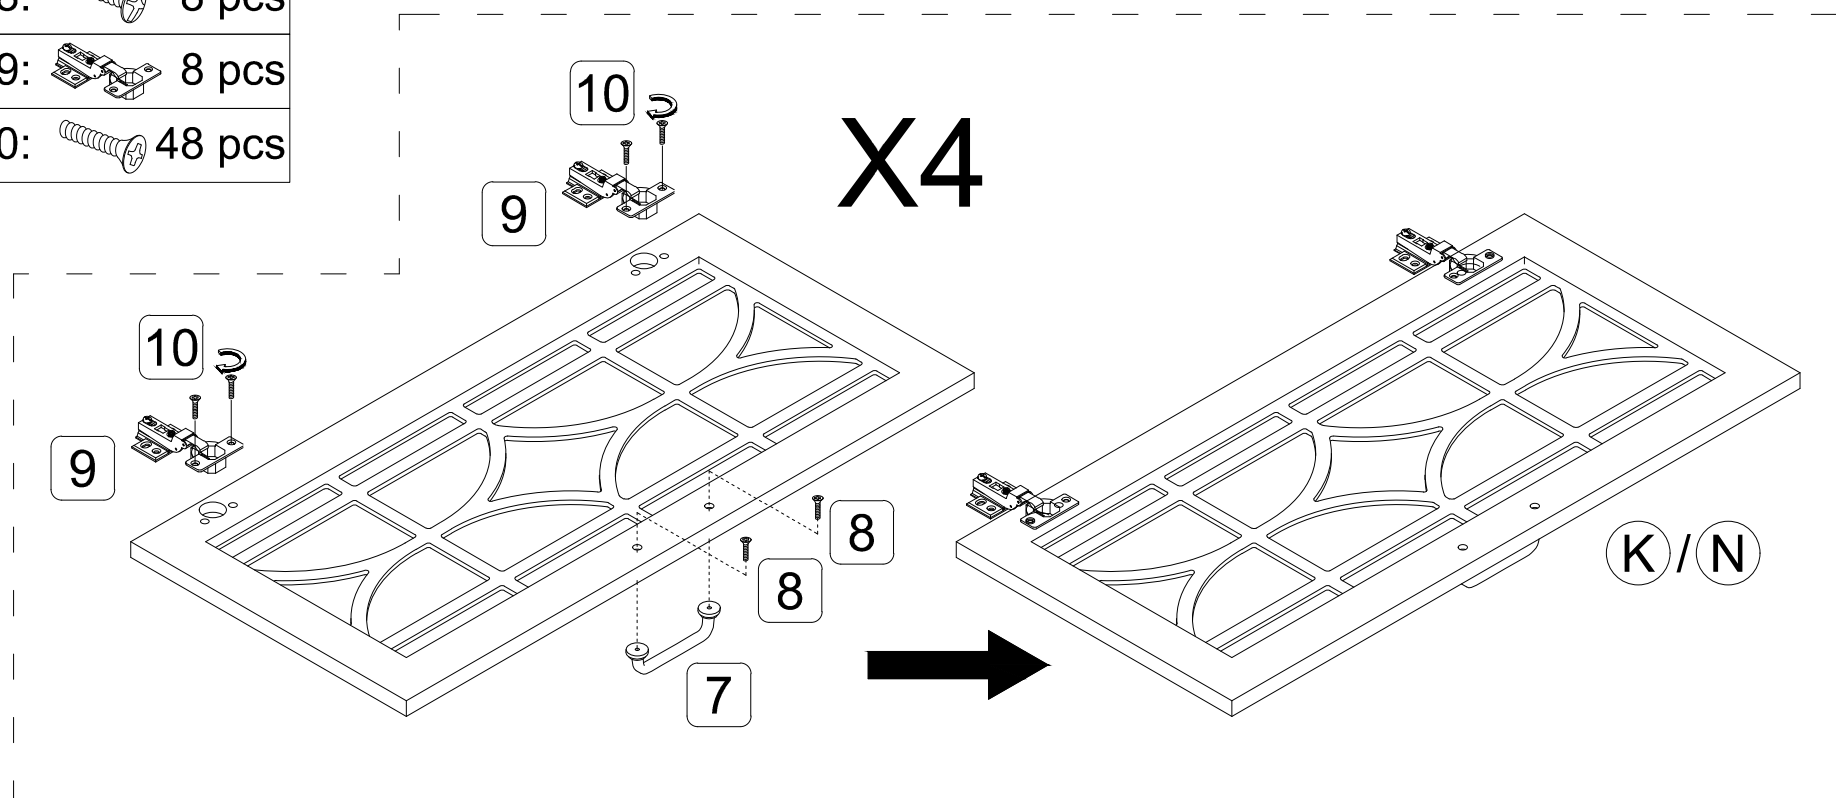   

Using bolt (10) attach hinge (9) ,Handle bolt (8) attach handle (7) into doors (K,N) with Philips head screwdriver as per diagram.


Step 10

 11A:  2 pcs

11B:  2 pcs

11C:  2 pcs

 
11D:  2 pcs

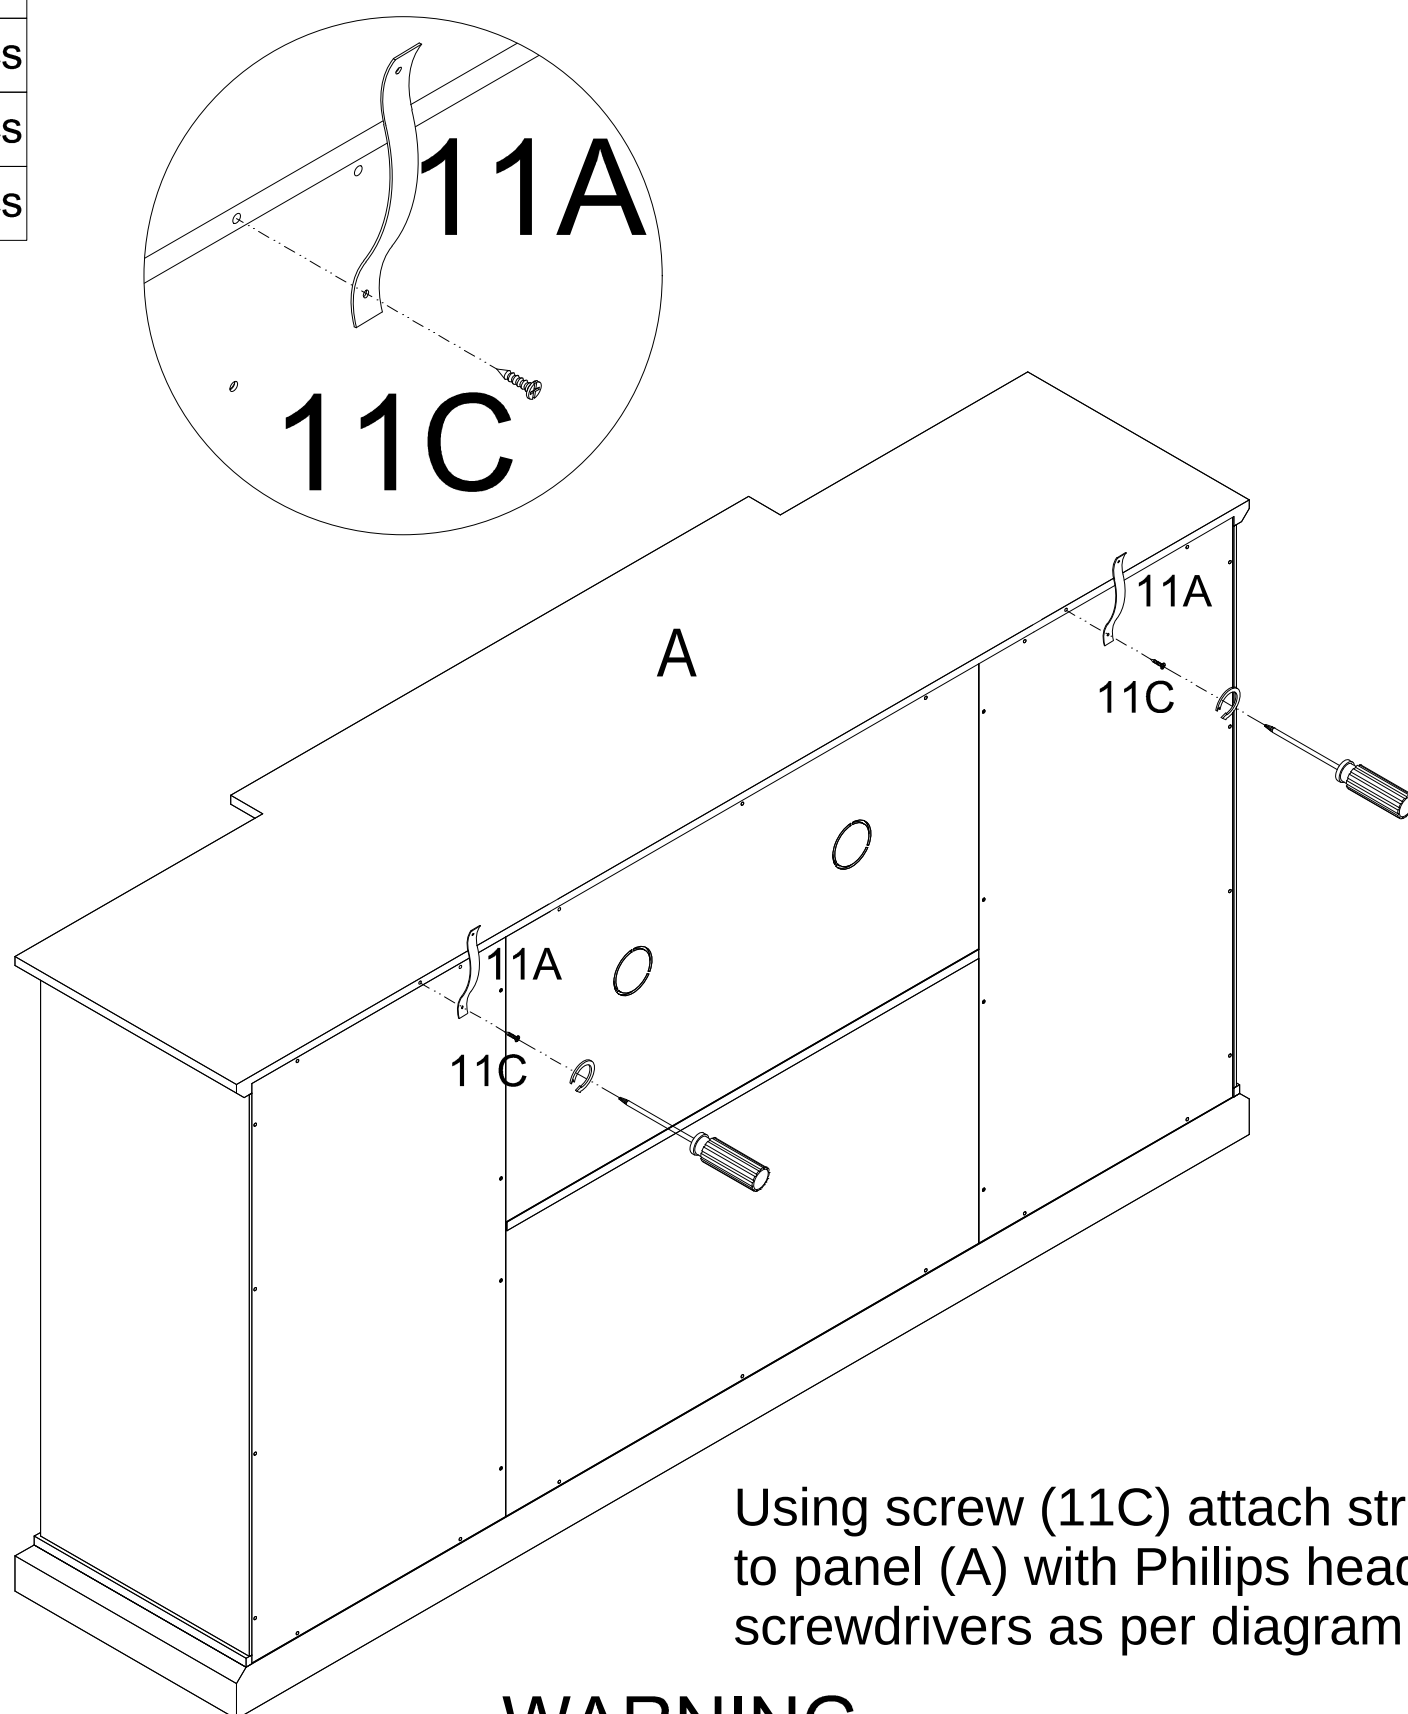

Using screw (11C) attach strap(11A) to panel (A) with Philips head screwdrivers as per diagram.


WARNING

 Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

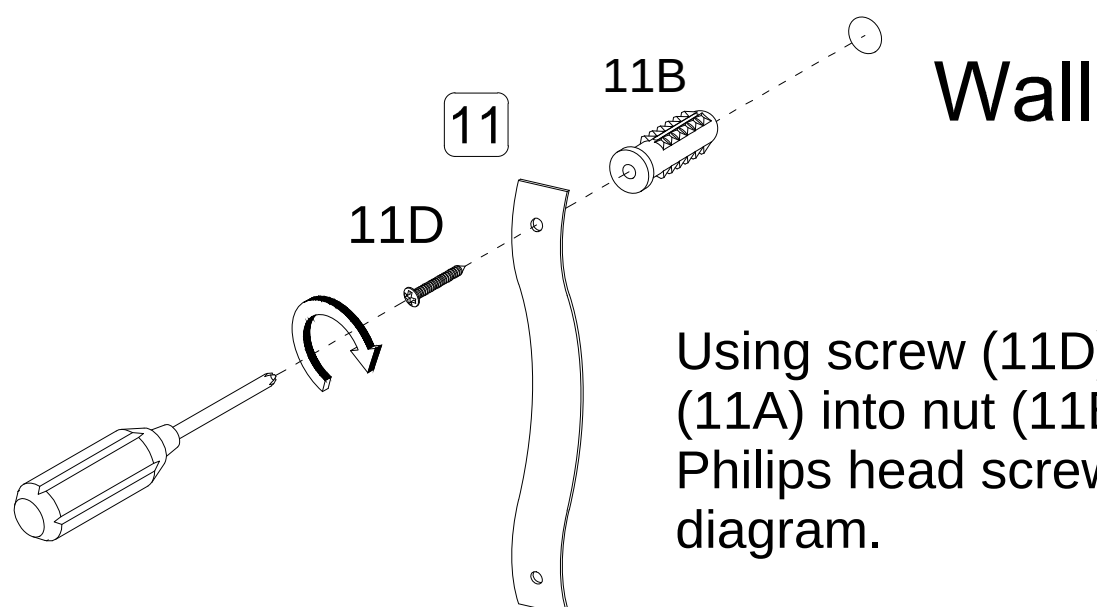

Using screw (11D) attach strap (11A) into nut (11B) to wall with Philips head screwdriver as per diagram.

 Step 11

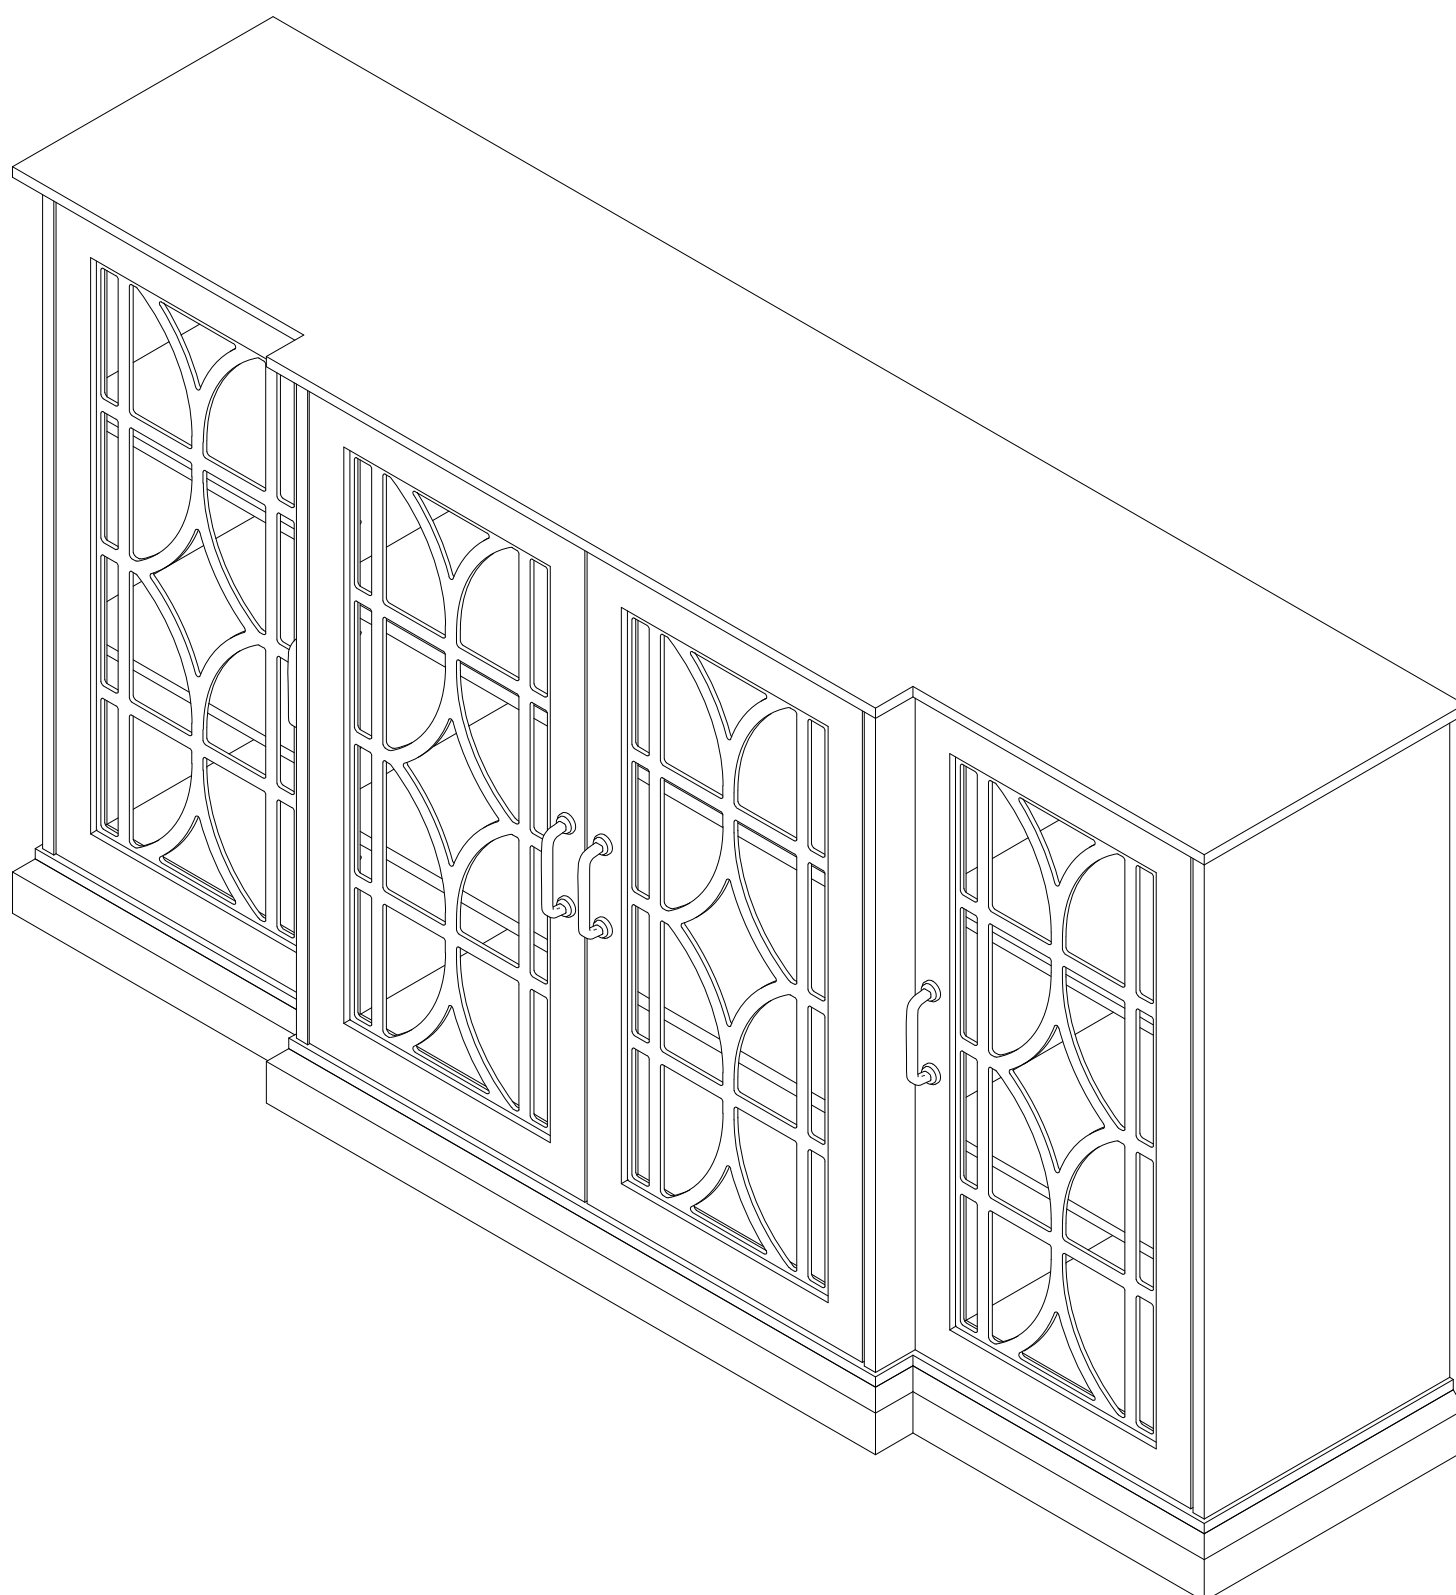

Final Assembly