


# 15" Built-In Refrigerator

## Instruction Manual

SKU: BRU-03-AZ-HM

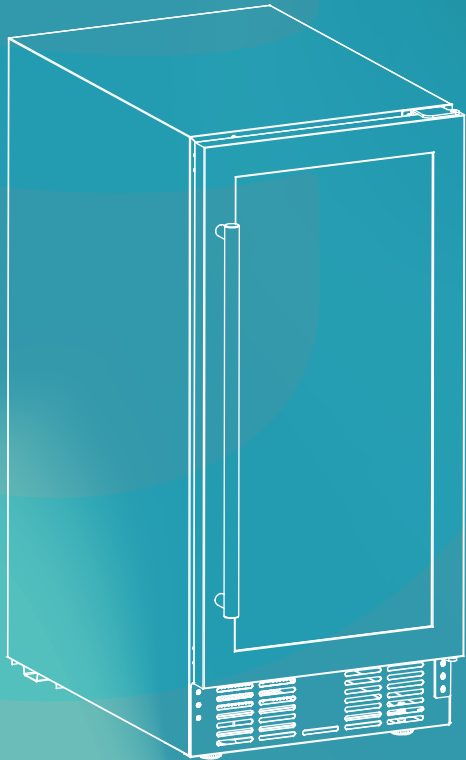

# Congratulations

Dear Customer:

Welcome to the Euhomy family. Thank you for purchasing one of our products.

Our goal is to provide you with superior service. If there is anything missing from or wrong with your order, or if you have any questions about using our ice maker, PLEASE contact us.

Email: [support@euhomy.com](mailto:support@euhomy.com)

Facebook: @Euhomy.Official

The Euhomy team is available 24/7 to address your questions, comments, and concerns. Your satisfaction is our ultimate goal. We want to make everything right so you'll share your positive experience with other shoppers on Amazon.

If you experience any problems, please send an email to [support@euhomy.com](mailto:support@euhomy.com).

Our mission:

- \* To be the most trusted appliance brand.

- \* To create practical, compact appliances that better your life.

*Be sure to register at*  
**[www.euhomy.com/register](http://www.euhomy.com/register)**  
*for updates, warranty, and other relevant information.*

# Contents

|                               |       |
|-------------------------------|-------|
| PRODUCT FEATURES              | 02    |
| BEFORE FIRST USE              | 02    |
| ENERGY-SAVING TIPS            | 02    |
| IMPORTANT SAFETY INSTRUCTIONS | 03-04 |
| INCLUDED PARTS                | 05    |
| SPECIFICATIONS                | 06    |
| OPERATING INSTRUCTIONS        | 07-09 |
| CLEANING                      | 10    |
| INSTALLATION                  | 11    |
| CARE AND MAINTENANCE          | 12-13 |
| HANDLE INSTALLATION GUIDE     | 14-15 |
| TROUBLE SHOOTING              | 16    |
| WARRANTY                      | 17    |

## I Product Features

1. Transparent glass door looks elegant and is easy to open and close.
2. Black color is attractive and versatile, and adds a luxurious quality.
3. Advanced quick-cooling system is highly energy-efficient while making little noise.
4. Wire shelves offer easy sanitation and storage convenience.
5. Touch-button control panel is user-friendly.

## I Before First Use

- Before connecting the appliance to a power supply, let the unit stand upright for 4 hours. This resting period reduces the possibility of a cooling-system malfunction due to improper handling.
- Clean your unit thoroughly before using it (see "Cleaning").
- Use the parts diagram on page 4 to insure proper positioning of internal components.

## I Energy-Saving Tips

- Keep the unit door closed as much as possible, particularly in warm and/or humid conditions.
- Maintain adequate ventilation around the back and sides of the unit.
- Allow warm wine bottles to cool to room temperature before placing them in the unit.
- Do not obstruct the front vents.

# Important Safety Instructions

**Before you use your refrigerator, you must follow basic safety precautions to reduce the risk of fire, electrical shock, and/or injury to persons or property. Before you use your refrigerator, please read this owner's manual carefully and observe the following safety tips.**

Use this appliance only for its intended purpose as described in this owner's manual.

**WARNING:** This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices, and other working environments; farmhouses; by clients in hotels, motels and other residential-type environments; bed-and-breakfasts and similar environments; catering and similar non-retail applications.

- The appliance must be correctly installed and connected to the power supply in accordance with the installation instructions before it is used (see "Installation").
- The main power supply must be properly grounded.
- This refrigerator must be positioned so that the plug is accessible. Never unplug the unit by pulling on the power cord.
- Always grasp the plug firmly and pull it straight out from the outlet.
- We do not recommend the use of an extension cord as this can negatively affect the performance of the unit. If you must use an extension cord, use a minimum size of 18 AWG and a minimum rating of 1875 watts.
- When transporting the refrigerator, keep the unit upright.
- Do not tilt the appliance beyond 45°, tip it over, or turn it upside down.
- Do not touch cold surfaces while the appliance operates, especially not with wet hands, because skin may stick to cold surfaces.
- We recommended that you set up the refrigerator away from combustible chemicals such as gas, oil, and paint. The aforementioned substances should not be stored in the refrigerator under any circumstances.
- If the unit fails to cool properly, dispose of spoiled food as needed.
- Unplug your unit before cleaning or repairing it. NOTE: If for any reason this product requires service, we strongly recommend that a certified technician perform the service. Repairs made by non-qualified personnel will void the warranty.
- Do not defrost the appliance with other electric devices (e.g., hair dryers). Never scrape the ice or frost layer with sharp tools.
- The rating plate is inside the appliance or on the outside rear or side wall.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.

# Important Safety Instructions

- Do not run the cord over carpeting or other heat insulators. Do not cover the cord. Keep the cord away from traffic areas and do not submerge it in water. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person in order to prevent a hazard. Repair or replace immediately all electrical cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion damage along its length, on the plug, or at the connector end.
- **WARNING:** Keep all ventilation openings clear of obstruction.
- **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- **WARNING:** Do not damage the refrigerant circuit.
- **WARNING:** Do not use electrical appliances inside the food-storage compartments of the appliance unless such appliances are of the type recommended by the manufacturer.
- **WARNING:** Do not operate your refrigerator in the presence of explosive fumes.
- **WARNING:** Do not light flames or start fires near the unit.

Please dispose of the appliance according to local regulations as the appliance contains flammable gas and refrigerant. Federal law states that refrigerants must be removed before disposal. It is the consumer's responsibility to comply with federal and local regulations when disposing of this product.




## Safety instructions for refrigerant

- **DANGER:** Risk of Fire or Explosion. FLAMMABLE REFRIGERANT Used. Do Not Use Mechanical Device to Defrost Refrigerator. Do Not Puncture Refrigerant Tubing.
- **DANGER:** Risk of Fire or Explosion. FLAMMABLE REFRIGERANT Used. To Be Repaired Only by Trained Service Personnel. Do Not Puncture Refrigerant Tubing.
- **CAUTION:** Risk of Fire or Explosion. FLAMMABLE REFRIGERANT Used. Consult Repair Manual/Owner's Guide Before Attempting to Service This Product. All Safety Precautions Must Be Followed.
- **CAUTION:** Risk of Fire or Explosion. Dispose of Property in Accordance With Federal or Local Regulations. Flammable Refrigerant Used.
- **CAUTION:** Risk of Fire or Explosion Due to Puncture of Refrigerant Tubing. Follow Handling Instructions Carefully. FLAMMABLE REFRIGERANT Used.

# I Included Parts

The following diagram is also applicable to the wine cooler with a left-opening door.

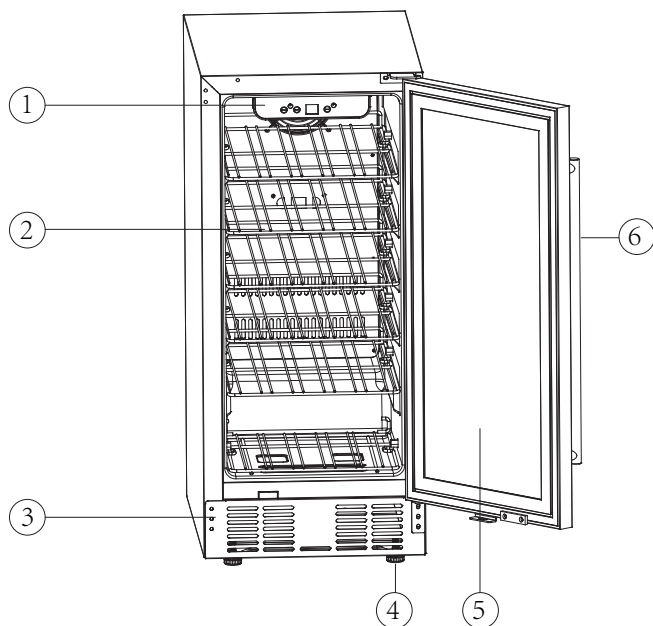

Model No.: ZX-BRUC-36-HM

- (1) Control Panel
- (2) Removable Bottle or Can Shelf
- (3) Hot-Air Vents
- (4) Adjustable Feet
- (5) Glass Door
- (6) Door Handle (Assembly Required)

# I Specifications

|                                                                 |
|-----------------------------------------------------------------|
| Product Description: Wine Cooler, Beverage Center               |
| Model No.: BRU-03-AZ-HM                                         |
| Capacity: 3.6 cu. ft.                                           |
| Electrical Rating: 115V/60Hz/0.9A                               |
| Refrigerant: R600a, 0.67 oz. (19 g)                             |
| Unit Dimensions With Feet (Inches): 15" × 22.5" × 33.8" (W×D×H) |
| Net Weight: 64.00 lb.                                           |

# I Operating Instructions

## Storing Wine Bottles or Beverage Cans

Wine bottles should be laid on the shelves in sealed containers to prevent leakage.


Do not overload the appliance.

Do not open the door unnecessarily or leave the door ajar.


Do not cover the shelves with any material (e.g., aluminum foil) as this will impede air circulation within the compartment.

Do not store explosive substances such as aerosol cans with flammable propellant in this appliance.

Please place wine bottles according to the following figure to maximize storage:

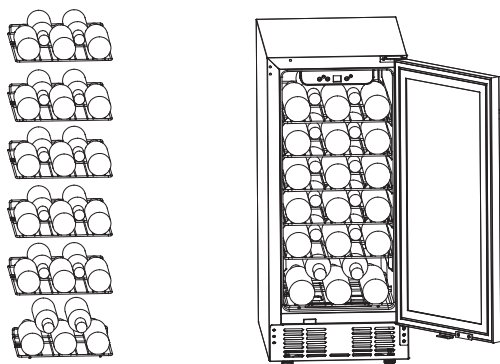

Please place canned drinks according to the following figure to maximize storage:

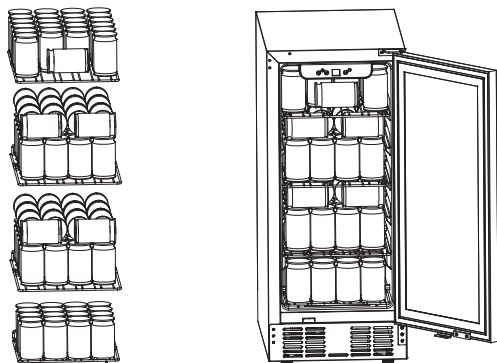

# I Operating Instructions

## Starting and Running the Unit

### Important:


If the unit is brought in from outside in the winter season, give it a few hours to warm up to room temperature before plugging it in.

After transporting or relocating the unit, please wait at least 4 hours before plugging in and operating the unit again.

- 1.Remove the packaging material.
- 2.Clean the unit thoroughly. Wipe the outside with a soft, dry cloth and the interior with a clean, moist cloth.
- 3.Connect the power cord to a standard wall outlet. Once the unit is powered, you will hear a beep, which is normal. The display on the control panel will revert to the current internal temperature.
- 4.Do not put wine or beverages into the cooler within 2 hours after first powering on.

# I Operating Instructions

## Control Panel

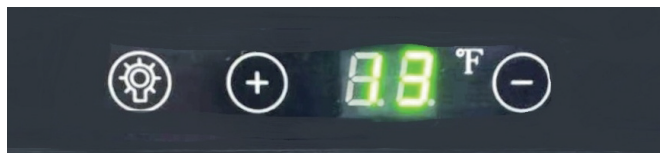

There are 3 buttons and a temperature display on the control panel. These let you operate the unit and reach your desired running temperature.

## Temperature Adjustment

Press " + " & " - " to adjust the temperature to your desired value. Each press will change the temperature 1° F.

Setting range: 36–61° F.

The default setting is 39° F.

## Interior Light Control

The unit has a built-in LED light in the cooling compartment. When you open the glass door, the LED light will turn on. Closing the door will turn off the LED light. You can also control the LED light via " ⚙️ " on the control panel. Pressing this button changes the LED light to half brightness; after the glass door is closed, the LED light will stay on. If you press " ⚙️ " again, the LED light will return to default maximum brightness and will turn off when the glass door is closed. For maximum energy efficiency, leave the light off when not viewing your stock.

Note: If you unplug the refrigerator, wait 3 to 5 minutes before restarting it. The unit may fail to operate properly if restarted too quickly.

# I Cleaning

**IMPORTANT:** Do not clean your unit with flammable fluids. The fumes can create a fire hazard or explosion.

**WARNING:** Before maintaining or cleaning the unit, be sure to unplug it first.  
DO NOT pour water onto the unit or submerge the unit in water. Water will ruin the internal electrical parts.

**Cleaners:** Never use harsh, abrasive cleaners, heavy-duty cleaners, or solvents on any surface.

**Exterior:** Wipe with a damp, sudsy cloth; rinse and dry. For stubborn stains and for periodic waxing, use silicone wax.


Refrigeration compartment: Wash shelves and other removable parts in warm, sudsy water; rinse and dry.

Wash the interior with baking soda solution (3 tablespoons to 1 quart of water) or warm, sudsy water; rinse and dry.


Magnetic door seals: Wash with warm, sudsy water.

# Installation

- This appliance can either stand alone or be built in. The front vents must not be obstructed.
- Install the unit in a convenient location away from extreme heat and cold. The unit should be far away from heat sources such as stoves, heaters, radiators, and direct sunlight. Allow sufficient clearance between the unit and any side walls so the door can open freely.
- Place the unit on a smooth, level surface that will be strong enough to support the unit when it is fully loaded. Not recommended for carpeting or other soft/uneven surfaces. To level your fridge, adjust the front feet located at the bottom of the unit.
- For under-counter installation, please see the following diagram, and leave enough space for the unit.

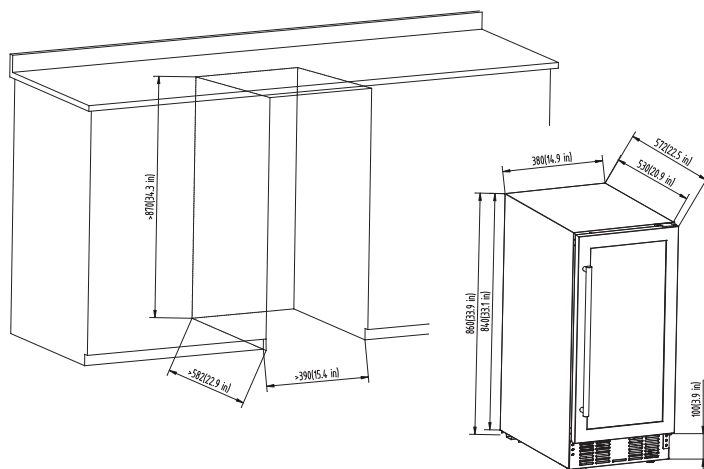

- For freestanding installation, we suggest allowing 2 inches of space between the sides and rear of the unit, and any walls. In addition, sufficient clearance (160°) should be maintained to allow the glass door to open completely.
- The appliance must be correctly connected to the power supply, 115V/60Hz, and grounded. The unit is not designed to be installed in an outside area such as a garage or a porch. Ambient temperatures below 50°F or above 90°F will hinder the performance of the appliance.

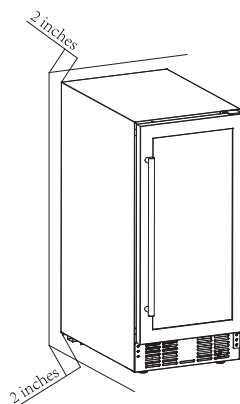

# Care And Maintenance

The unit should be cleaned on a regular basis (see "Cleaning").

- Adequate ventilation space around the unit is needed in order to attain proper performance, allow for dissipation of heat, maintain efficiency, and consume the least power. Clearance of minimum 2 inches should be maintained at the rear and sides of the unit. Most importantly, do not obstruct the front vents (see "Installation").
- Do not modify the power cord under any circumstance or allow the unit to be plugged into a non-grounded outlet. To prevent heat damage to the power cord, please ensure that it does not come close to or directly contact the compressor of the unit.
- Do not install the unit in a location where the appliance will come in contact with water or moisture, to minimize rusting of metal parts.
- The unit should not be installed near any heat source or in direct sunlight.
- When needed, the components should be replaced with like components and only by the manufacturer, its service agent, or a similarly qualified person in order to prevent a hazard and minimize the risk of ignition, and also to prevent hindering the cooling performance due to incorrect parts or improper service.

## HANDLE INSTALLATION GUIDE

**Tool needed:** Phillips screwdriver #2

### **IMPORTANT: NEVER LAY THE APPLIANCE ON ITS BACK.**


The compressor and motor components are installed at the back of the unit and may easily be damaged if the appliance is placed on its back.

**IMPORTANT:** Do not use the stainless steel handle to move or lift the unit.


# Care And Maintenance




The stainless steel handle is easily attached to the left side of the glass door with the two enclosed screws.

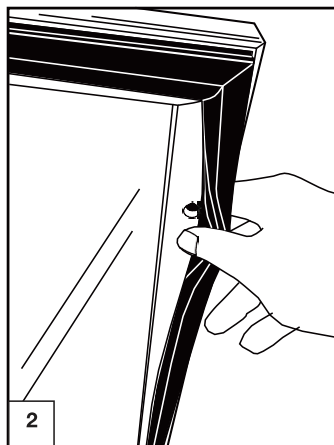

Carefully pull back the gasket from the interior door frame as indicated. Insert screws into holes on back side of door under the door gasket. Position the handle on the outside of the glass door.

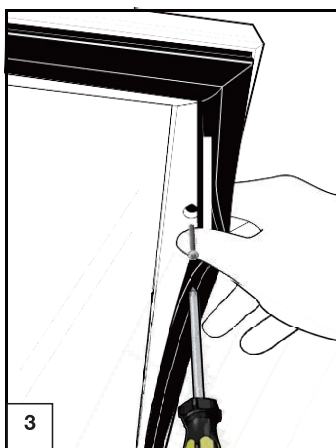


Tighten both screws until the door handle is flush with the stainless steel frame. Take care not to overtighten the screws as this may damage the handle or frame.

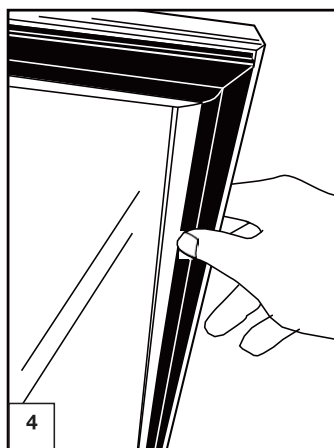


Gently press and thread the gasket back into the slot on the door frame. Ensure the gasket is properly seated prior to using the unit.

# Handle Installation Guide

1. Lay down the unit. Using a Phillips head screwdriver, loosen and remove the screws holding the bottom hinge. Then, remove the top hinge.

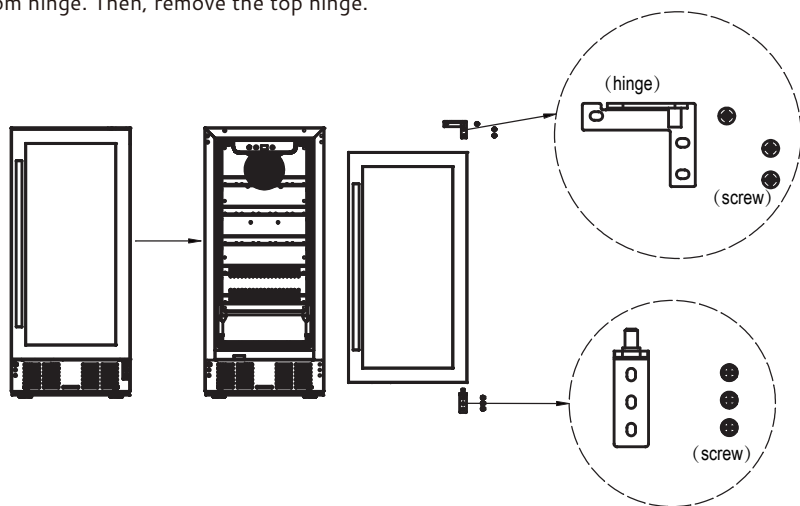


2. Take off the magnet on the door, rotate the door 180°, and reattach the magnet at the bottom right of door, in the same spot as previously.

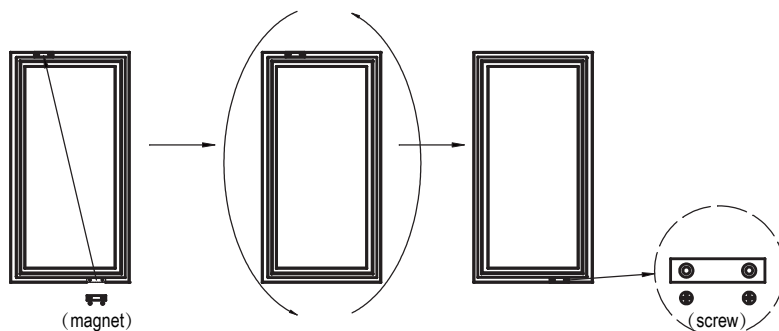

# Care And Maintenance

3.Remove the screw hole plugs from the opposite side and insert the plugs in the screw hole openings of the newly removed screws. Attach the door hinge (the relative-direction hinge included in the extra parts), re-place the door, and attach the bottom hinge.

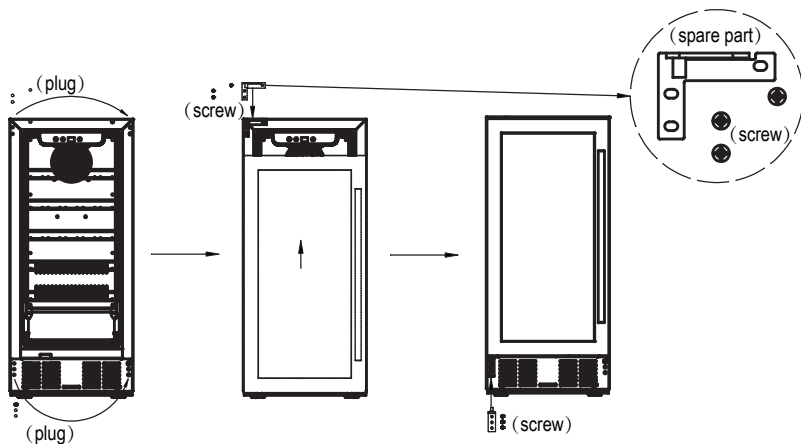

# Trouble shooting

| PROBLEM                                                                         | POSSIBLE CAUSES                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|---------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| When the fridge is not in use for a prolonged period:                           | <ul style="list-style-type: none"> <li>• Remove the plug from the outlet.</li> <li>• Remove all contents from the fridge.</li> <li>• Dry the interior and leave the door open for a few days.</li> </ul>                                                                                                                                                                                                                                                                                             |
| When the refrigerator does not work:                                            | <ul style="list-style-type: none"> <li>• Check if there is a power failure.</li> <li>• Check if the power plug is plugged into the power outlet.</li> <li>• Check that the fuse has not blown.</li> </ul>                                                                                                                                                                                                                                                                                            |
| When you wish to move the fridge:                                               | <ul style="list-style-type: none"> <li>• Secure all movable parts and contents. (Package them separately if necessary.)</li> <li>• Transport the fridge only in an upright position. Any other position may damage the compressor</li> </ul> <p>Before calling for service, please follow the checklist below, This may save</p>                                                                                                                                                                     |
| If the refrigerator seems too warm inside:                                      | <ul style="list-style-type: none"> <li>• Check to see that the door is closing properly and the door seal is not damaged.</li> <li>• Check that the interior circulation is not obstructed by having too many goods stored (i.e., the fridge is overloaded).</li> <li>• Did you store anything hot without first letting it cool to room temperature?</li> <li>• Is there sufficient clearance around all sides and above the fridge?</li> <li>• Is anything obstructing the front vents?</li> </ul> |
| When the refrigerator is cooling excessively:                                   | <ul style="list-style-type: none"> <li>• The temperature may be set too high.</li> <li>• If you place foods which contain a lot of moisture directly under the cooling outlets, they will freeze easily. This does not indicate a unit malfunction.</li> </ul>                                                                                                                                                                                                                                       |
| When the defrosting water overflows inside the refrigerator and onto the floor: | <ul style="list-style-type: none"> <li>• Check that the drain pipe and the drain hose are not clogged.</li> <li>• Check that the drain pan is housed properly.</li> </ul>                                                                                                                                                                                                                                                                                                                            |
| When condensation forms on the outside of the refrigerator:                     | <ul style="list-style-type: none"> <li>• Condensation may form on the outside when the humidity level is high, such as during a wet summer season. In this case, condensation does not indicate a problem with the machine. Simply wipe the refrigerator with a dry cloth.</li> </ul>                                                                                                                                                                                                                |
| If the fridge starts making any unusual noises:                                 | <ul style="list-style-type: none"> <li>• Is it wobbling? Re-level it and check if it now operates normally.</li> <li>• Have any objects fallen behind the fridge? If so, remove them and check if operation is now normal.</li> </ul> <p>Are any containers inside the fridge vibrating? If so, rearrange them and then check to see if operation has returned to normal.</p>                                                                                                                        |

# Warranty

We offers a limited 1-year warranty ("warranty period") on all of our products purchased new and unused from us with an original proof of purchase and where a defect has arisen, wholly or substantially, as a result of faulty manufacture, parts, or workmanship during the warranty period. The warranty does not apply where damage is caused by other factors, including without limitation:

- (a) normal wear and tear;
- (b) abuse, mishandling, accident, or failure to follow operating instructions;
- (c) exposure to liquid or infiltration of foreign particles;
- (d) servicing or modifications of the product other than by our company;

Our warranty covers all costs related to restoring the proven defective product through repair or replacement of any defective part and necessary labor so that it conforms to its original specifications. A replacement product may be provided instead of repairing a defective product. Our sole obligation under this warranty is limited to such repair or replacement. A receipt indicating the purchase date is required for any claim, so please keep all receipts in a safe place. Although greatly appreciated, the product registration is not required to activate any warranty, and product registration does not eliminate the need for the original proof of purchase. The warranty will be voided if repairs are performed by a non-authorized third party and/or if spare parts other than those provided by the Company are used.

You may also arrange for service after the warranty expires, at an additional cost. These are our general terms for warranty service, but we always urge our customers to reach out to us with any issue, regardless of warranty terms. If you have an issue with our products, please contact us ([support@euhomy.com](mailto:support@euhomy.com)), and we will do our best to resolve it for you.

# EÜHOMY

# Live the *cool life*



Email: [support@euhomy.com](mailto:support@euhomy.com)



Facebook: [@Euhomy.Official](https://www.facebook.com/Euhomy.Official)