

PACKAGE CONTENTS

⚠ WARNING

Do not connect the pressure washer to a power supply until it is fully assembled. To avoid accidental starting and possible serious injury, only connect a power supply when the pressure washer is ready for use.

REMOVING CARTON CONTENTS

⚠ WARNING

This product requires assembly. Do not attempt to operate this product if any items in the **INCLUDED LIST** are already assembled when you remove the carton contents. These items are not assembled by the manufacturer and should require customer assembly. Using an improperly assembled product can be hazardous and could result in serious personal injury.

- Carefully remove the carton contents.
- Inspect the carton contents. Confirm that **all** the items in the **INCLUDED LIST** are present and undamaged.
- Recycle or dispose of the packaging materials properly.

INCLUDED LIST	
ITEM	QUANTITY
Pressure washer	1
Spray gun	1
Lance	1
Nozzle	2
High pressure hose	1
Low pressure soap applicator	1
Handle	1
Mount	3
Screw	4
Wheel	2
Turbo	1

INSTALLATION INSTRUCTIONS

INSTALLING THE HANDLE AND MOUNTS

See Figure 4.

- Slide the latch on the mount (B) to the frame of the pressure washer.
- Repeat for the other mount (C).
- Slide the handle (A) to the frame of the pressure washer.

See Figure 5.

- Attach the mount (B) to the frame of the pressure washer and secure with screws (A).
- Secure the handle to the frame with the screws (A).

INSTALLING THE WHEELS

See Figure 6.

- Attach the wheel (A) to the frame of the pressure washer.

NOTE:

Be sure that the wheel is secure. The wheel will click into place when secured to the frame.

