

INSTALLATION INSTRUCTIONS

Before Using the Wine Fridge


- Remove the exterior and interior packing to check and make sure you have all the following parts:
 - 5* Wire Shelves With Wooden Front
 - 2*Keys
 - 1*Stainless Steel Handle
 - 1* Instruction Manual
 - 1* L-Shaped Screwdriver
- Before connecting the wine fridge to the power source for the first time, please keep it upright for at least 24-36 hours.
- It will reduce the possibility of a malfunction in the cooling system from handling during transportation. It is suggested to put the wine fridge in a cool and ventilated place, which will greatly improve the cooling performance.
- Use a soft cloth to clean the interior surface with lukewarm water.
- Install the handle on the left side of the door. If you need to change the direction of the door, please refer to the instructions for changing the direction of the door in the manual.

Installation of the Wine Cooler

- This appliance is designed to be for free standing or built-in installed (fully recessed). Place your product on a floor that is strong enough to support it when it is fully loaded. To level the product, adjust the front leveling legs at the bottom of the unit.
- Please locate the product away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Due to direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Extreme cold ambient temperatures may also cause the unit not to perform properly. Don't install in a location where the temperature will fall below 60°F (16°C). Avoid locating the unit in a moist area.
- For best performance, it is recommended that you install the appliance in a location with an ambient temperature between 72°-78°F. If the ambient temperature is above or below recommended temperatures, the performance of the unit may be affected.

Built-in Instructions

- For built-in installation, leave a ¼" (6 mm) space on each side and at the top of the wine cooler to ensure proper air circulation to cool the compressor and condenser. Also, be sure to not obstruct the front exhaust vent with any objects as this may affect the unit from performing properly.

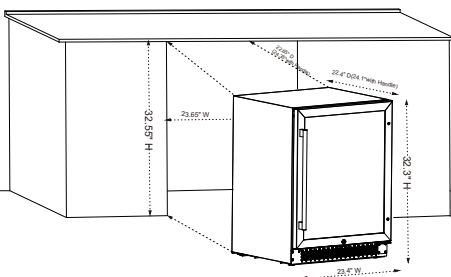

Freestanding Instructions

- For freestanding installation, 5 inch (127mm) of space between the back and sides of the appliance is suggested, which allows the proper air circulation to cool the compressor and condenser.

Cabinet opening dimensions

- Minimum Width: 23.65" (60.1 cm)
- Minimum Depth: 22.65" (57.6 cm)
- Minimum Height: 32.55" (82.7 cm)