










 


USER MANUAL B0930S

WOODBIDGE®

Remote Control Illustration

REAR/MOVE 	STOP/HOLD TO ECO 	+	^	WATER TEMP. 	AIR SPEED 	HALF FLUSH 	OPEN/CLOSE SEAT 
FRONT/MOVE 	DRY/DRYER TEMP. 	-	v	SEAT TEMP. 	FOAM CLEANER 	FULL FLUSH 	OPEN/CLOSE LID 
PRESSURE		POSITION					

Remote Control Instructions

Thank you for choosing our product. Please read the instructions carefully before installation and keep it available for future maintenance or reference.

Customer Service Phone: 562-229-0088. (Monday - Friday 9 AM - 5 PM Pacific Time)
Or Email: help@woodbridgebath.com

Content

Installation preparation

01. Remote control installation	01
02. Battery installation	01

Usage instruction


01. Remote control illustration	02
02. Rear/Front washing	03
03. Drying/Dryer temperature	04
04. Water pressure adjustment	04
05. Nozzle and air outlet position adjustment	04
06. Energy saving	05
07. Water temperature adjustment	05
08. Seat temperature adjustment	05
09. Night light	05
10. Drying air speed adjustment	06
11. Foam setting	06
12. Half flush/Full flush	06
13. Open the lid by remote control	07
14. User code	07
15. Other operations	07

Installation Preparation

Remote control installation


Remote control holder installation 1:

 1. Drill two 6mm (15/64") diameter holes in the wall at a distance of about 130.7mm, (5-9/64") a depth of about 35mm (1-3/8").
2. Remove the double-sided adhesive tape on the back of the holder.
3. Install an anchor in each of the holes, stick the holder to the wall and secure with screws and then stick the patch with tape.

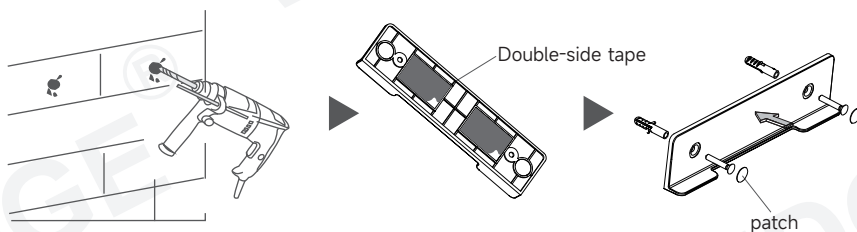


Remote control holder installation 2:

 1. Clean and dry the pre-installation area of the holder.
2. Remove the double-sided adhesive tape on the back of the holder.
3. Stick the holder to the wall horizontally and then stick the patch with tape.

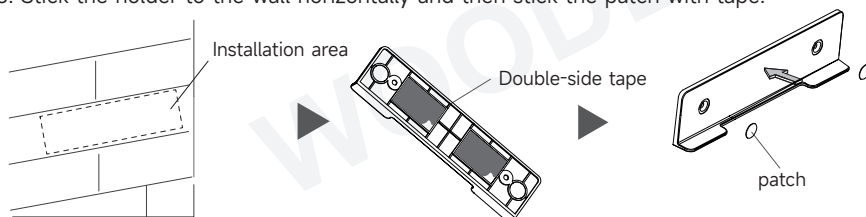

Battery installation

 1. Insert batteries into the remote control.
2. Put the remote control to the holder.

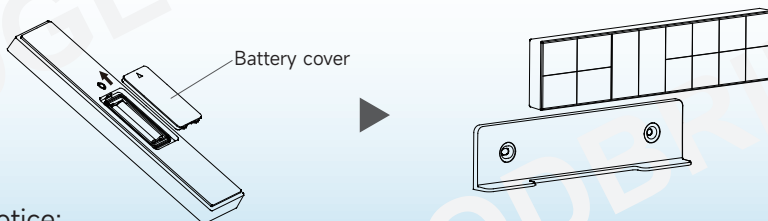


Notice:

1. Please ensure the remote control is within reach when a person is on the seat.
2. Do not install and use the product in damp places such as shower room or wet room.
3. Do not place the product in a place where it is easily exposed to water.

Usage Instruction

 Remote control illustration

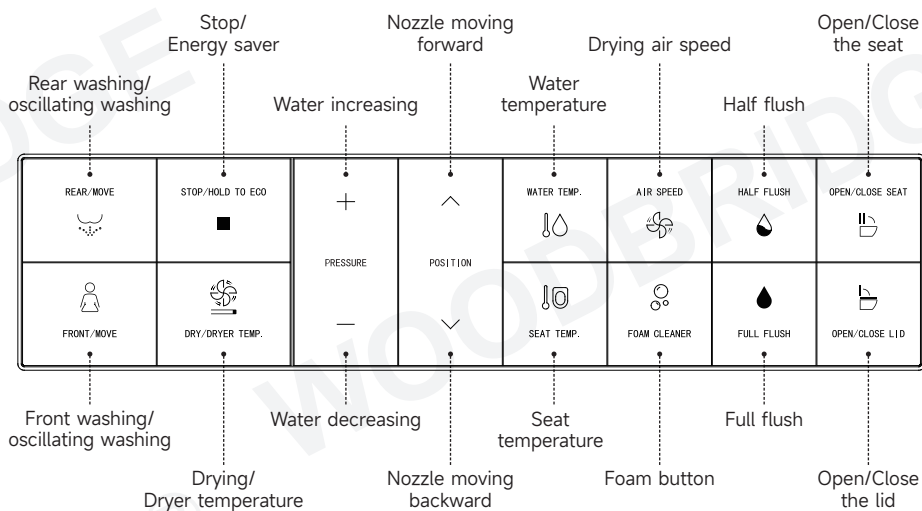

Usage Instruction

Notice :


- Only when the user is seated and the buzzer beeps can the functions of front/rear washing and drying be activated.
- Please sit backward on the seat for correct washing position and to avoid splashing.
- The nozzle will continue to spray for 1-2 seconds after user stands up during washing, so please press "STOP" button before standing up.

REAR|MOVE




- Press " " button, the indicator light is on showing current water temperature level, it starts rear washing. Press again " " button to shift to oscillating washing (nozzle moves forward and backward to expand washing area). The washing will stop automatically after one cycle, and it will stop immediately if the user presses " ■ " button.

FRONT|MOVE

 


  
- Press " " button, the indicator light is on showing current water temperature level, it starts front washing. Press again " " button to shift to oscillating washing (nozzle moves forward and backward to expand washing area). The washing will stop automatically after one cycle, and it will stop immediately if the user presses " ■ " button.

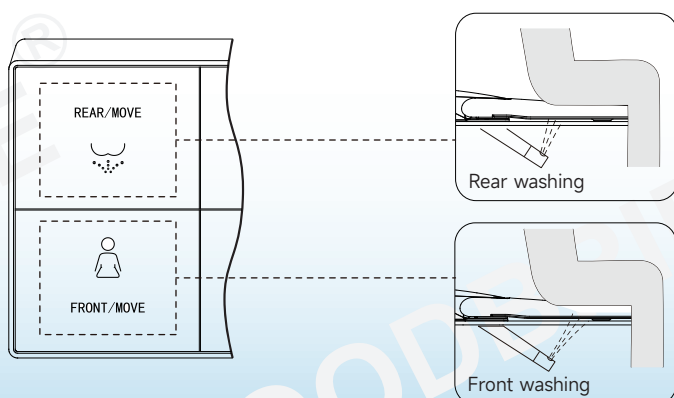


 
 
Usage Instruction


DRY|DRYER TEMP



① Short press "  " button, the indicator light is on, showing current air temperature, the strong warm air will blow out, and the movement function will be turned on by default. The drying will automatically stop after one cycle or when user departs.

② Under drying, short press "  " button to adjust the air temperature, the indicator light is on to show the air temperature, when the indicator light is off, it is at level 0 (room temperature gear), and the adjustment is 0-5 levels in turn cycle.

 ③ Under drying, short press the button of air outlet position "  " and "  ", the indicator light will be on, showing the current position of the air outlet, and the position of the air outlet can be adjusted within 5 levels.

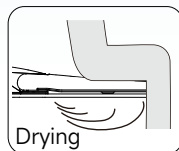

○ ○ ○ ○ ○

Room
temperature

● ○ ○ ○ ○

Level 1

● ● ○ ○ ○

Level 2

● ● ● ○ ○

Level 3

● ● ● ● ○

Level 4



● ● ● ● ●


Level 5

Water pressure adjustment

- Press " + " or " - " button when it is under function of rear washing or front washing, the indicator light is on showing current water volume level, and water volume can be adjusted.

Nozzle and air outlet position adjustment

 - Short press "  ", "  " button when it is under rear washing, front washing or drying mode. The indicator light will be on showing current nozzle position, and the nozzle or air outlet position can be adjusted within 5 levels to move forward and backward.

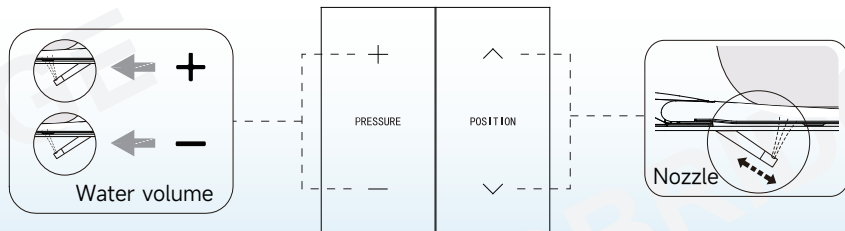

Usage Instruction

Energy saving



① Long press " ■ " button to enter energy saving mode, and the buzzer will beep once.

② Long press " ■ " button again to exit energy saving mode, and the buzzer will beep twice.

· Under energy saving mode, seat temperature is set to Level 1 for energy saving. (Note: If the seat temperature before energy saving is neutral, then it will be neutral as well.)

Remark

Energy saving mode will be suspended and the product will enter functional mode if the seat is used. The seat starts to heat immediately (without turning off the seat temperature), and the energy saving mode is restored once the seat is no longer being used.

Water temperature adjustment



· Short press " 🔧 " button to adjust the water temperature between 0-5 level. The indicator light is on showing water temperature level. When the indicator is off, the temperature is at Level 0 (room temperature) .

○ ○ ○ ○ ○

Room

temperature

● ○ ○ ○ ○

Level 1

● ● ○ ○ ○

Level 2

● ● ● ○ ○

Level 3

● ● ● ● ○

Level 4

● ● ● ● ●

Level 5

Seat temperature adjustment



· Short press " 🔧 " button to adjust the seat temperature between 0-5 level. The indicator light is on showing seat temperature level. When the indicator is off, the temperature is at Level 0 (room temperature) .

○ ○ ○ ○ ○

Room

temperature

● ○ ○ ○ ○

Level 1

● ● ○ ○ ○

Level 2

● ● ● ○ ○

Level 3

● ● ● ● ○

Level 4

● ● ● ● ●

Level 5

Night light

① Night light adjustment: Long press " 🔧 " button to turn on/turn off night light.



② Intelligent mode: Long press " 🔧 " button to enter into intelligent mode (Night light will be on or off by detecting the lightness of surroundings). If the product is on intelligent mode, long press " 🔧 " button to exit intelligent mode. (Factory setting: intelligent mode)

Usage Instruction

Drying air speed adjustment

AIR SPEED

 
 


 



- ① Under drying, short press "  " button to switch the wind speed level, and the adjustment is cycled in sequence from 1 to 3 levels.
- ② Long press "  " button to turn on/off the drying movement function.

Foam setting





FOAM CLEANER

- ① Short press "  " button to activate the foam shield function.
 - ② Long press "  " button to turn on pumping quickly until the foam comes out and then release it. (Note: This operation is only used when the toilet has just been installed or the foam agent is used up, and the foam agent is added again. The use of the rest of the time will cause foam agent to be wasted.)
 - ③ Press "  " button first, then press "  " button to turn on the automatic foaming function, and the buzzer will beep once.
 - ④ Press "  " button again and press "  " button to turn off the automatic foaming function, and the buzzer will beep twice.
- After the automatic foaming function is on, when it is detected that the user is sitting, the foam shield function will be turned on automatically. (The automatic foaming function is turned off by default)

Half flush/Full flush



HALF FLUSH



 
- ① Short press "  " button, the toilet starts half-flush.
- ② Short press "  " button, the toilet starts full-flush.



FULL FLUSH

- ③ Long press "  " button to turn on the auto flush function, and the buzzer will beep once.
- ④ Long press "  " button again to turn off the auto flush function, and the buzzer will beep twice.

· When the auto flush function is turned on, toilet will automatically flush after detecting user leaves the seat.

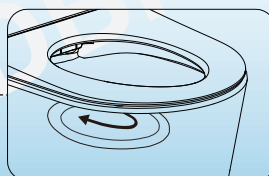

Usage Instruction


Open the lid by remote control




① Short press "  " button to open or close the lid.

② Short press "  " button to open or close the seat.





③ Long press "  " button to turn on the auto opening function, and the buzzer will beep once.

④ Long press the "  " button again to turn off the auto opening function, and the buzzer will beep twice.

User code

· Radio frequency remote control

① Shut off the power supply of toilet.



② Press and hold "  " button, then press "  " button, the indicator light will flash.

③ Re-connect the power plug and press "reset" button.

④ The indicator stops flashing and stays on for 2 seconds, indicating that the remote control and the toilet are matched successfully. It beeps once when the self-inspection completes. Then the remote control is ready for use.



Other operations

Quiet mode

· Press and hold the "  " button and press the "  " button to turn on/off quite mode.

Automatic pre-wet function



① Press "  " button first, then press the "  " button to turn on the auto pre-wet function, and the buzzer will beep once.

② Press "  " button again, and press the "  " button to turn off the auto pre-wet function, and the buzzer will beep twice.

· After the auto pre-wet function is turned on, when it is detected that the user is sitting, the ceramic pre-wet function will be activated.



Usage Instruction

Auto deodorization

- ① Press " ■ " button, and press "  " button to turn on the auto deodorization function, and the buzzer will beep once.
- ② Press " ■ " button again, and press "  " button to turn off the auto deodorization function, and the buzzer will beep twice.

- Under auto deodorization, the deodorization function will be on when it is detected that the user is seated, and it will automatically stop when the user leaves the seat.
- Under drying, the deodorization function is turned off. (The auto deodorization function is turned on by default when the power is on every time.)

Foot sensor function

- ① Long press "  " button to turn on the foot sensor, and the buzzer will beep once.
 - ② Long press "  " button again to turn off the foot sensor, and the buzzer will beep twice.
- In the seated state, the foot sensor is invalid.

Remark:

- The buzzer will "BEEP" once when the user presses one button indicating that the main unit receives the signal and conduct the operation accordingly. If the buzzer doesn't sound, it means the main unit doesn't receive the signal, please adjust the remote control direction and repress the button.
- In case of power cut during nozzle spraying, the wand cannot be retracted, please wait until the power is restored. In case of a power cut for a long period, please push the wand softly back by hand. Do not push hard, to avoid damage to wand and electrical machine.





Thank you for using WoodBridge products!

Customer Service Phone: 562-229-0088. (Monday - Friday 9 AM - 5 PM Pacific Time)

Or Email: help@woodbridgebath.com

ASVFAF0321024A-1.0

www.woodbridgebath.com