



Harbor Breeze® is a registered trademark of LF, LLC. All rights reserved.

ATTACH YOUR RECEIPT HERE

Serial Number \_\_\_\_\_  
Purchase Date \_\_\_\_\_

**Questions?** Call our customer service department at 1-800-643-0067, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

SAFETY INFORMATION

Read instructions completely before installing the remote.


**⚠ WARNING:** If the color of the household supply wires is different than what is referred to in the instructions below, a professional electrician should determine proper wiring.

CAUTION:

- Do not install in damp locations. For indoor use only.
- Do not use with fans that have integrated remote controls.
- Be sure the outlet box is properly grounded or that a green or bare (ground) wire is present.
- This unit is intended to control a ceiling fan with electrical source of AC 110/120V, 60Hz.
- To reduce the risk of fire or electric shock, do NOT use a full-range dimmer switch to control the fan speed.
- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


ASSEMBLY INSTRUCTIONS

1. Use existing pull chains on the desired fan to set fan speed to high and to turn the light on.

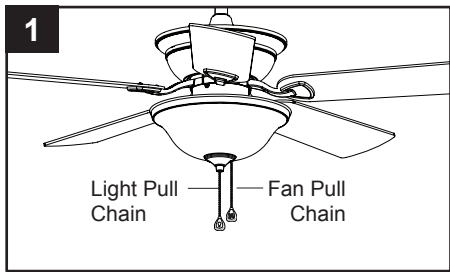


2. Turn off circuit breakers and wall switch to the fan.

**⚠ DANGER:** Failure to disconnect power supply prior to installation may result in serious injury or death.

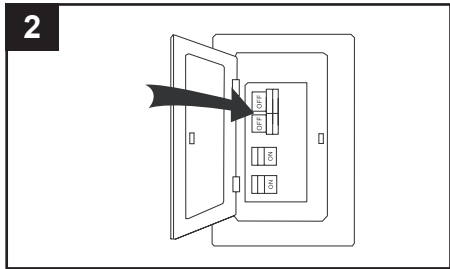


3. Lower the canopy of the previously assembled fan and insert receiver (E). **Note:** If installing the remote in a new fan, insert the receiver (E) in the mounting bracket before wiring the fan; wire the fan according to these instructions, then continue fan assembly as directed in the fan's instruction manual.

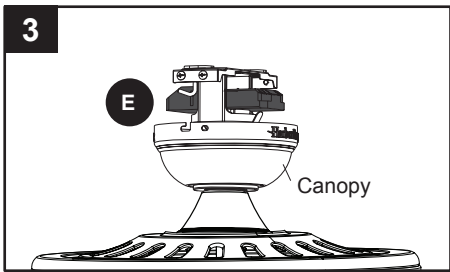


4. Disconnect existing wire connections, then secure all wire connections with wire connectors (F) and push-on connectors (D) according to diagram and these steps:


- Connect the Blue wire with white label from the receiver (E) to the Blue fan wire.
- Connect the Black wire with white label from the receiver (E) to the Black fan wire.
- Connect the White wire with white label from the receiver (E) to the White fan wire.
- Connect the Red wire with red label from the receiver (E) to the Black (hot/power) supply wire.
- Connect the White wire with red label from the receiver (E) to the White (neutral) supply wire.

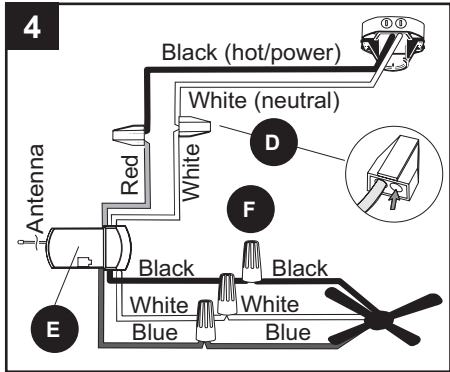


5. Wrap electrical tape (not included) around each wire connector (F) down to the wire. Then, push wire connections into the outlet box. Place the Green and White wire connections on the opposite side of the outlet box from the Black and Blue wire connections.

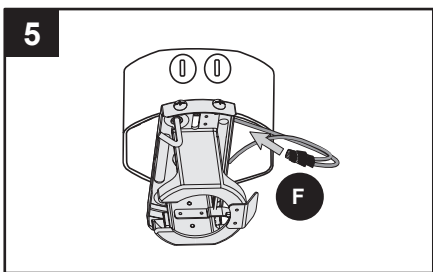


6. Reinstall the canopy.

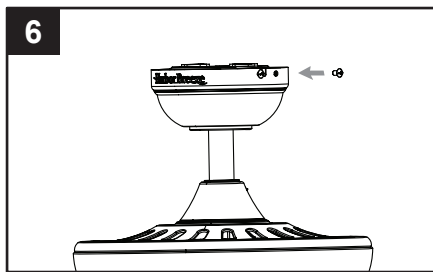

7. Turn on power supply and wall switch to the fan. Then, remove the battery cover from the back of the remote (A) and install two AAA batteries (C). Replace the battery cover and press the high button to ensure the LED indicator illuminates and the fan turns on.

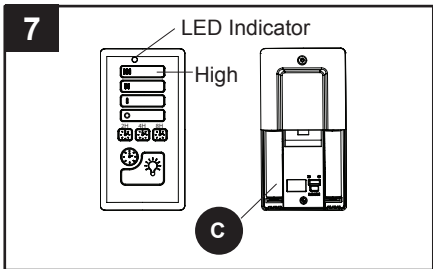

8. If desired, the wall bracket (B) can be attached to a wall using the mounting screws (G). Then rest the remote (A) in the wall bracket (B) for easy storage.

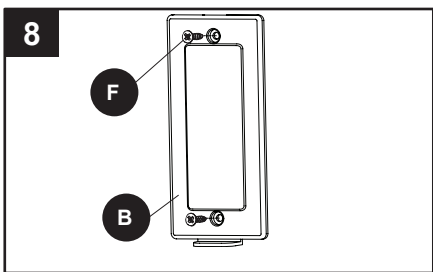

9. To control the remote via Bluetooth®, download the Fan Smart Sync app for your smartphone. Load the app and follow the in-app instructions in order to sync with the remote.



OPERATING INSTRUCTIONS

1. To operate the fan using the remote (A), press and release the following buttons:

**High** - Turns fan on high speed.

**Medium** - Turns fan on medium speed.

**Low** - Turns fan on low speed.

**Fan Off** - Turns fan off.

**Walk Away Light Delay™** - Tap Delay once to turn fan light off after 1 minute. **Note:** Light blinks to confirm that Walk Away Light Delay is active. Press any other button to cancel.

**Timer** - Press desired timer button (2, 4 or 8 hour). Fan light (if applicable) to confirm timer is active. Press fan off to cancel timer.

**Light Control** -


**Incandescent Bulbs** - Press Light Control to turn lights off and on. Press and hold Light Control to dim or brighten the lights.

**CFL** - Turns the lights on and off. **Note:** The dimmer function does not work with CFL.

**Home Shield™** - Press and hold Light Control and Delay buttons for 3 seconds. Lights cycle on for 5-20 minutes and off for 60 minutes, simulating occupancy. Cycle repeats continuously until any other button is pushed to discontinue Home Shield mode.

**D/O** - Switch should be set to "O" for CFLs, which disables the dimming function. Flip to "D" for incandescent and other dimmable bulbs.

**Learn** - Syncs remote control to receiver. The remote was synced at the factory. Should it become necessary to re-sync the remote, turn off the main power, then turn it back on. Within 30 seconds, use a small screwdriver to press and hold the learn button on the remote for 3 seconds. The fan will turn on and light (if applicable) will blink three times, signaling a successful synchronization.

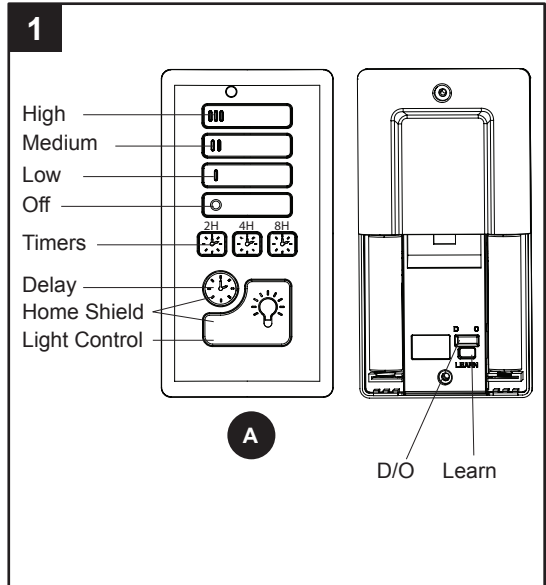

XXXXXXX