 




## **CERAMIC COOKTOP Instruction Manual**

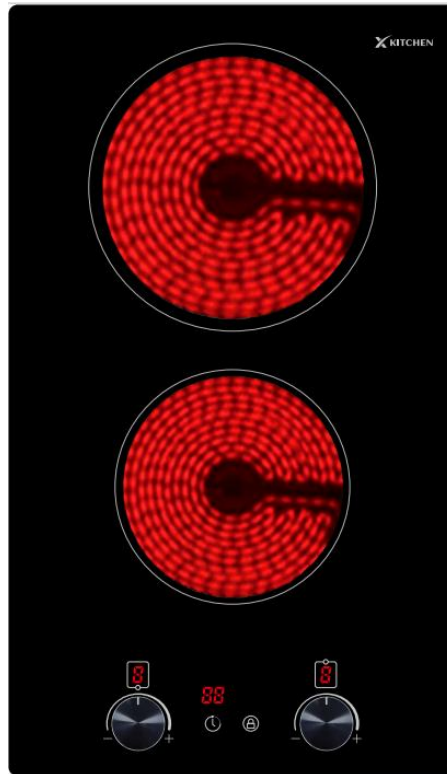

Model Name: LT2V-60

Product size : 510x295 mm

Built in size : 493x273 mm

Voltage : 120V , 50/60 Hz.

Power (total): 1800W

Customer Service

Call: 1 - 888 907 5060(Toll Free)

Business Hours: 9 AM-5 PM, Mon-Fri

Email: [service@xkitchen.store](mailto:service@xkitchen.store)

# CONTENTS

SAFTY INSTRUCTIONS.....	3
INSTALLATION.....	4
INSTRUCTION FOR USE.....	5-6
CLEANING.....	7
USE OF COOKWARE.....	8-9

## General safety regulations

The product you have purchased corresponds to the latest state of technology and the accepted safety regulations, still, there are potential risks. Only operate the hotplate in an immaculate condition and observe these operating instructions!

Use the appliance for its intended purpose only.

### Important:

In order to prevent possible injuries or electric shock, please observe the following:

- Do not plug with wet hands.
- Do not plug into a socket in which several other appliances were plugged in.
- Do not use if the plug cord is damaged or the power plug does not fit the socket safely.
- Do not modify the parts, or repair the stove by yourself.
- Do not use the stove near flame or wet places.
- Do not use it where children can easily touch the stove, or allow children to use it by themselves.
- Do not place on unstable surfaces.
- Do not move the stove when the pot or the pan is on it.
- Do not heat an empty pot or overheat the pot.
- Do not place metallic objects such as knives, forks, spoons, lids, cans, aluminum foils, etc. on the top plate.
- Ensure there is sufficient space around the stove.
- Do not use the stove on the carpet or tablecloth (vinyl) or any other low-heat-resistant article.
- Do not place paper between the pot or the pan and the stove. The paper may get burnt.
- If the surface is cracked, please switch off and contact the service center immediately.
- Do not block the exhaust system under and on the sides of the stove.
- Do not touch the top plate immediately after removing the pot or the pan, as the top plate will still be very hot.
- Do not place the stove close to objects, that are affected by magnets, e.g.: radios, televisions, automatic-banking cards, and cassette tapes.
- Only professional technicians should replace the power cord.
- If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Warning: Children should be supervised to ensure that they do not play with the appliance.




**CAUTION! The surface remains hot after use!**

**Do not touch the top plate right after removing the pot or the pan,  
as the top plate will still be very hot.**

# INSTALLATION

After unpacking the product, check for any damage during transport. In case of problems, please take a photo of your broken stove and a photo of the tracking number label on the package. And a photo of the damaged box. Contact customer support.


For built-in dimensions and installation instructions, see in below figures

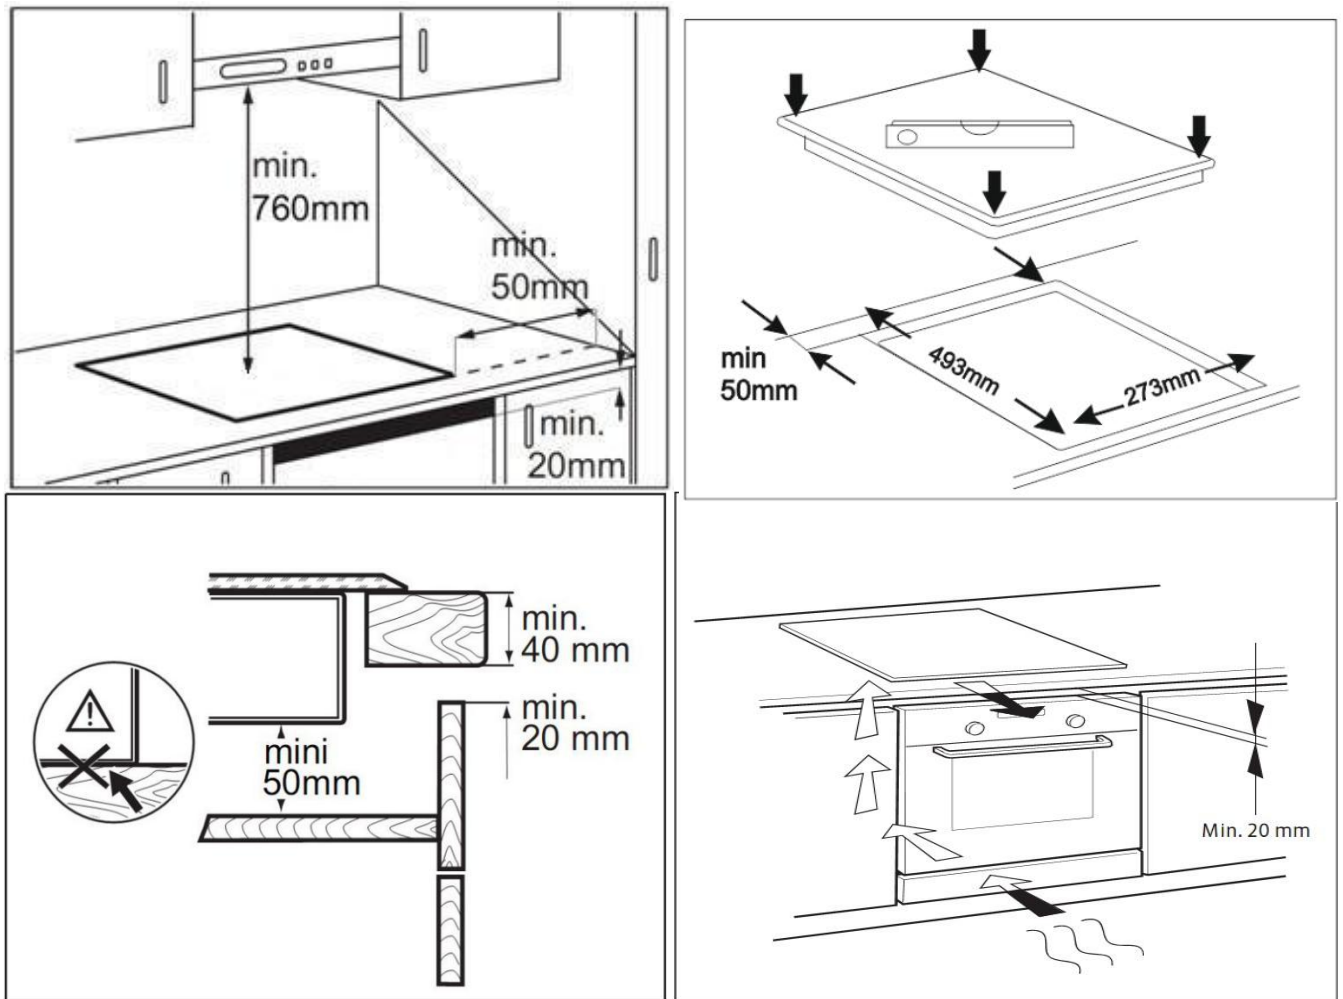

- The distance between the underside of the appliance and the separator panel must respect the dimensions given in the figure (mini. 50mm).
- In order to ensure the correct operation of the stove, do not obstruct the minimum required clearance (min. 20 mm) on the worktop for airflow out.
- If an undertop oven is installed, make sure the oven is equipped with a cooling system.
- Do not install the stove above a dishwasher or washing machine, so that the electronic circuits do not come into contact with steam or moisture which could damage them.

## Equipment commissioning

- Prior to connecting the stove, check whether the voltage indicated on the type plate corresponds to the voltage supply in your home. A wrong connection may lead to grave damage to the stove and injury to persons.
- The hotplate's surface consists of temperature-resistant ceramics. In case of damage, even if this concerns only a small tear, disconnect the device from the power supply immediately and contact customer service.
- We recommend not placing any metal kitchen utensils, cookware, pan lids, knives, or other metal objects on the hotplate. These may heat up when the stove is turned on.
- Do not place any magnetic objects like credit cards, cassettes, etc. on the glass surface while the stove is in operation.
- In order to avoid overheating, do not place any aluminum foil or metal plates on the stove.
- Do not insert any objects like wires or tools into the ventilation slots. Attention: this may cause electric shocks.
- Do not touch the hot surface of the ceramic field. Please note: the hotplate does not heat up itself during cooking, but the temperature of the cookware heats up the hotplate!
- Do not heat up any unopened tins on the hotplate. A heated tin could explode; therefore remove the lid under all circumstances beforehand.

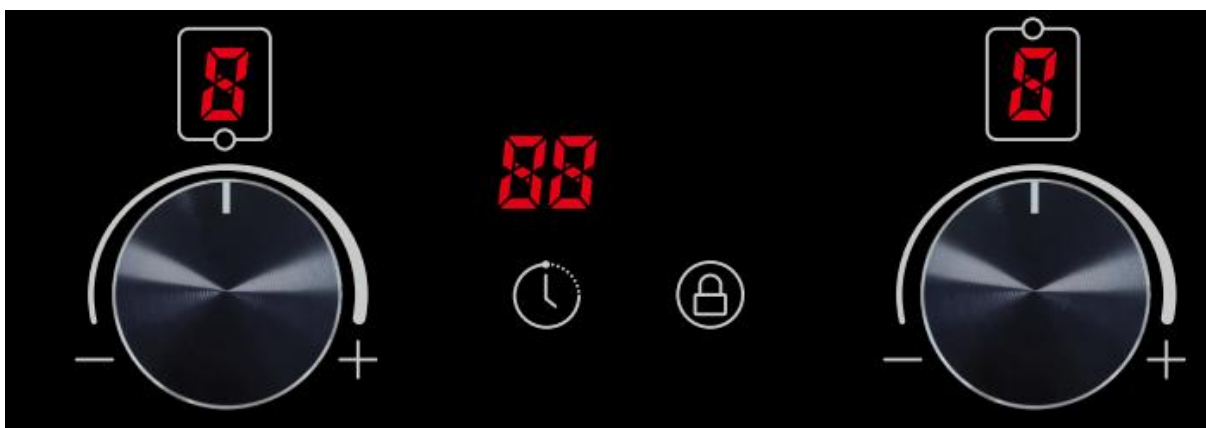

## Operating

Place suitable cookware onto the cooker plate, and connect the plug to a suitable socket.

The operation of both zones is the same.

### Power

To heat up, turn the knob clockwise to the desired position, adjustment is continuous so that the appliance also operates at any intermediate value.



Turn the knob for the front cooking zone. The power level is based on the number shown on the display. Front cooking zone up to max **900W**.



Turn the knob for the rear cooking zone. The power level is based on the number shown on the display. Rear cooking zone up to max **1500W**.

When two burners work at the same time, the maximum total power is 1800W.

## Timer



The timer can be used to set a cooking time of up to 99 minutes (1 hour and 39 minutes) for all cooking areas. Select the cooking area to use with the timer, press the button with the clock symbol, and then use the knob to set the desired cooking time.

When a small dot appears in the lower right corner of the stove display, it signifies the commencement of timing. The timing stove can be switched by pressing the timer button. Multiple stove burners can be timed simultaneously, and small dots and timers are displayed alternately.

Once the set time has passed, a sound signal will sound and the hob will automatically close.

To disable the timer, you can turn the knob to code 00 or keep touching the clock for 3 seconds.

During the timing period, you can press the knob to adjust power levels.

## Key Lock (Childlock)



To ensure the safety of children, the ceramic hob is fitted with an interlock system.

Lock: keep touching the “Inter lock” key for 3 seconds; the stove will go to “Interlock” mode, the timer will show “LO” and the rest of the keys are disabled.

Unlock: keep touching the lock key for 3 seconds and the hob will return to normal working.

After activating the child lock, the rotating gear becomes unresponsive. However, it can be forcefully shut down by long-pressing the knob.

## Residual heat indicator:

When the stove has been operating for a period of time, there will be some residual heat.

The residual heat indicator LED (Hot) warns for each cooking zone separately and shows "H".

## Safety systems

To protect the electronic components from overheating, the control unit will automatically switch off the nearest hotplate and display the letter "H" if excessive heat is detected. The hotplate can be reactivated once the electronic unit temperature returns to normal.

Each hotplate is equipped with an internal temperature limiter that will shut off the hotplate if the radiant surface becomes excessively heated.

If any cracks appear on the radiant surface, immediately disconnect the hob from the power source. Do not use any part of the cooktop until a new radiant surface has been properly installed.

## Auto switch off

The cooktop will automatically switch off in the following situations: if no cooking time is set, if the hob has been left on without any operation, or if there has been no activity for two hours.


## Cleaning and maintenance

- Disconnect the plug and wait until the stove is cooled down completely. Clean after every use.
- If the pots/pans are used without being cleaned, discoloration or cooked on stains may occur.
- Do not use benzene, thinner, scrubbing brush, or polishing powder to clean the cooker.
- Do not use any flammable, acidic, or alkaline materials or substances near the cooktop, as this may reduce the service life of the device and lead to deflagration when the device is turned on.
- To clean the panel, please use dishwashing detergent and a damp cloth.
- Use a vacuum cleaner to suck up dirt from the air intake and exhaust vent.
- Never let water over this stove (Water getting inside may cause a malfunction).

Clean the glass surface frequently,


when it is cool. Never use abrasive products or pads.

Clean with a damp cloth and soapy water.


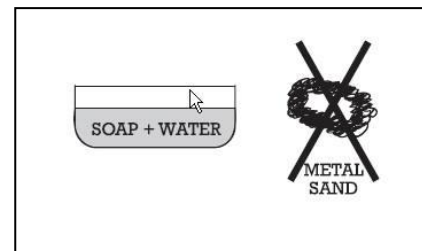


Once a week, clean thoroughly with the detergent that preserve and protect the electric ceramic cooktop.

Scrape off stuck on stuck dirt with a scraper.

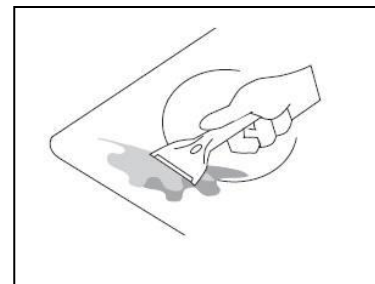


If sugar (or sugary matter) or plastic is accidentally burnt on the cooktop, remove it at once with the scraper while still hot. Otherwise, it may leave a permanent mark.

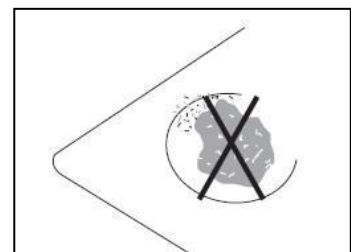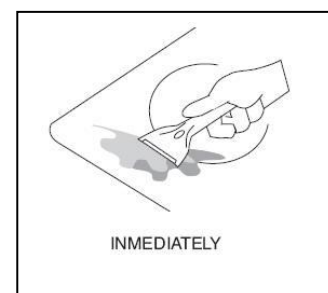


Do not use the cooktop as a work desktop. Be particularly careful with dirt or dust from vegetables, cleaning powders, etc. which may scratch the surface when pans are slid over it.

## Use of Cookware

Most stainless steel, enamel, iron, ceramic and copper pans can be used on the electric ceramic stove.

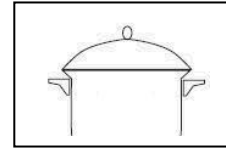


Recommended is cookware with Sandwich / capsulated bottom.

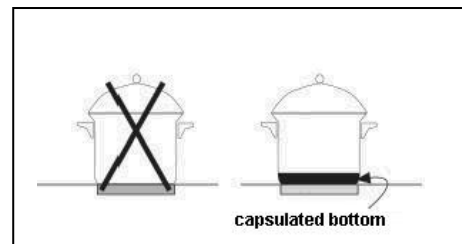


Hotplates should not be switched on without a pan on top.

The base of the pan should be flat and dry.

Pans that have been used on gas cookers are not normally completely flat and absorb heat badly.

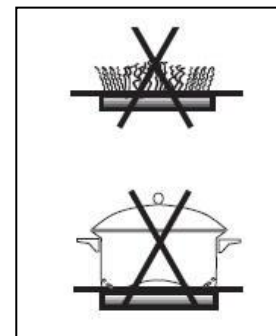


Make sure that the diameter of the pan is at least that of the hotplate.

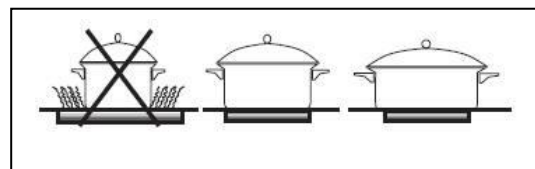




Avoid dragging pans over the radiant glass surface, as it may get scratched.

Always lift the pan.

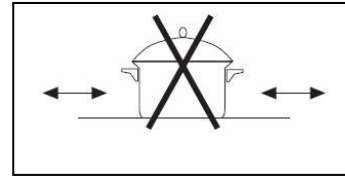

Never use tin foil or plastic containers. They may melt and fuse permanently with the radiant glass surface.

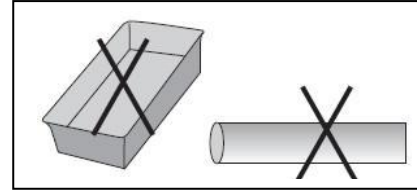

## Customer Service

Call: 1 - 888 907 5060(Toll Free)

Business Hours: 9 AM-5 PM, Mon-Fri

Email: [service@xkitchen.store](mailto:service@xkitchen.store)