# Installation Instruction

Item No: 8350-4H

**WARNING:** To avoid risk of electrical shock, be sure to shut off power while installing or servicing this fixture.

#### STEP 1--UNPACK

- 1. Carefully unpack your new fixture and lay out all the parts on a clear surface.
- 2. The bag includes acrylic bead strings as followings:

A[4pcs], B[8pcs], C[1pc], D[28pcs], E[6pcs], F[5pcs] as shown on the right

#### STEP2--CHANDELIER ASSEMBLY

- 1. Tube(K2) into coupling(J) in clockwise.
- 2. Hook the acrylic bead string(A) between top disk and each arms' disk;
  - Hook the acrylic bead string(B) between each arm's disk.
- 3. Hook the acrylic bead string(C) under the bottom disk.
- 4. Hook the acrylic bead string(D) on the ring of each arm.
  - Hook the acrylic bead string(D) on each disk.
- 5. Hook the acrylic bead string(E) on the bottom bowl.
  - Hook the acrylic bead string(F) on the bottom disk.
- Insert the Candlestick(N) onto socket and install E12 bulb(not included) into socket.

# There are 2 ways to install this chandelier:

- Portable Wire STEP 3
- Hardwire STEP 4

**NOTE:** FOR HARDWIRE INSTALLATION WE ADVISE CALLING A QUALIFIED ELECTRICIAN WHEN MAKING THE WIRE CONNECTIONS TO THE JUNCTION BOX.

# 3. PORTABLE WIRE INSTALLATION

**NOTE:** Cute off the fixture copper ground wire

**CAUTION:** DO NOT install on a radiant heating ceiling

 
**CAUTION:** The hooks are to engage the chain only and not the electrical wire.


### FOR PLASTER OR PLASTER BOARD CEILINGS

- 1. Drill a hole in the ceiling to the same diameter as the closed flaps of the included toggle bolt assembly (A).
- 2. Insert flaps and bolt into the ceiling with the toggle bolt protruding through the ceiling, lock the assembly by threading on the hook as shown.
- 3. Drape your chain to the second hook or let it hang straight.

## FOR WOOD OR ACOUSTIC BOARD CEILINGS - MINIMUM THICKNESS IS 1-1/2 INCH

- 1. Select a place on the ceiling where a wood beam exists.
- 2. Thread the steel screw (B) into hook (C).
- 3. Screw the assembly into the wood beam.
- 4. Drape your chain to second hook or let it hang straight.



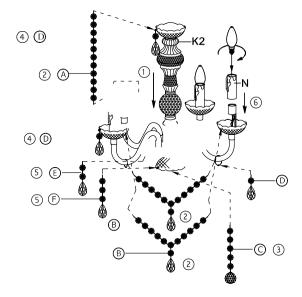





### HOOK THE CHANDELIER ASSEMBLY TO THE CHAIN

- 1. Open the lock link (K1) provided, connect to the fixture loop (J) and chain link and close the lock link (K1).
- 2. One chain and wire are arranged, plug the wire plug into household electrical outlet.

# CHAIN CHAIN

## **IMPORTANT SAFETY INFORMATION:**

This portable fixture has a polarized plug (one blade is wider than the other.) As a safety feature, this plug will fit a polarized outlet only one way. If the plug does not fit fully in the outlet reverse the plug. If it still does not fit contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted. Do not attempt to disable this safety feature.

 
# 4. FIXED WIRE INSTALLATION

NOTE: IT IS ADVISED TO CONTACT A QUALIFIED ELECTRICIAN FOR THIS STEP.

- 1. Thread nipple (C) into loop (F) until snug.
- 2. Thread other end of nipple (C) with loop attached into crossbar (D) until snug.
- 3. Place lock washer (B) over end of nipple protruding through crossbar and thread the thread hex nut (A) onto nipple until tight.
- 4. Take this crossbar assembly and mount to ceiling junction box with junction box threads (E), tighten thread securely with screwdriver.
- 5. Open the lock link (K1) provided, connect to the fixture loop (J) and chain link and close the lock link (K1).
- 6. Lace the fixture wires through the chain. Slip loop collar (H) over the chain. Then do the same with the canopy (G).
- 7. Open the end link (K) of the chain and hand the fixture on the loop (F) and close the link (K).
- 8. Cut the wire plug off, feed the fixture wires through the loop (F) and nipple (C) and pull until taut.
- 9. Connect fixture wire to the wire from the junction box with wire connectors as below.

#### WIRE CONNECTION:

- 1. Connect smooth wire to the black house wire with wire connectors.
- 2. Ribbed wire to the white house wire with wire connectors.
- Fixture ground wire to the supply ground wire with wire connectors or the fixture ground wire from the fixture to the green ground screw on the mounting bracket.
- 10. Push canopy (G) up against ceiling and secure with loop collar (H).



Note: 120V/60W

Install the bulb into the socket. BULB(S) NOT INCLUDED Installation is now complete. Turn on power.

