
 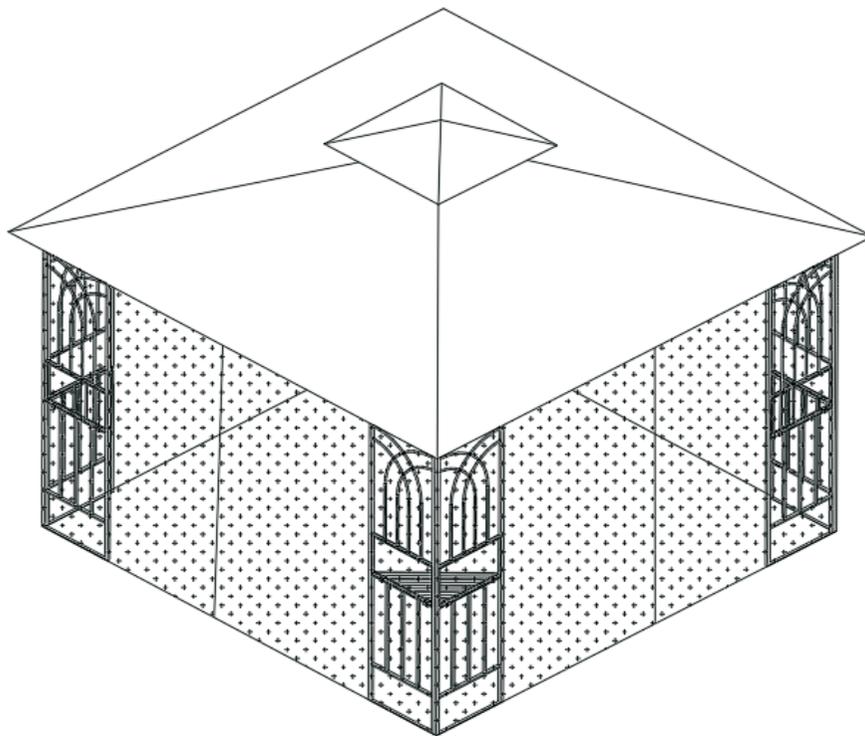

 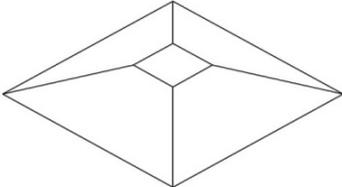
 



INSTRUCTION MANUAL




Parts list

			
A x 4PCS	B x 4PCS	C x 8PCS	
			
		DX4PCS	
			
		E x 4PCS	
			
F x 4PCS	G x 4PCS	H x 4PCS	I x 1PC
			
J x 8PCS	K x 16PCS M6x25mm	L x 32PCS M6x27mm	M x 12PCS M6x45mm
			
N x 1PC		O x 1PC	P x 8PCS
			
		Q x 4PCS	R x 1PC
			
S x 1PC	Tx4PCS	Ux4PCS	


STEP 1

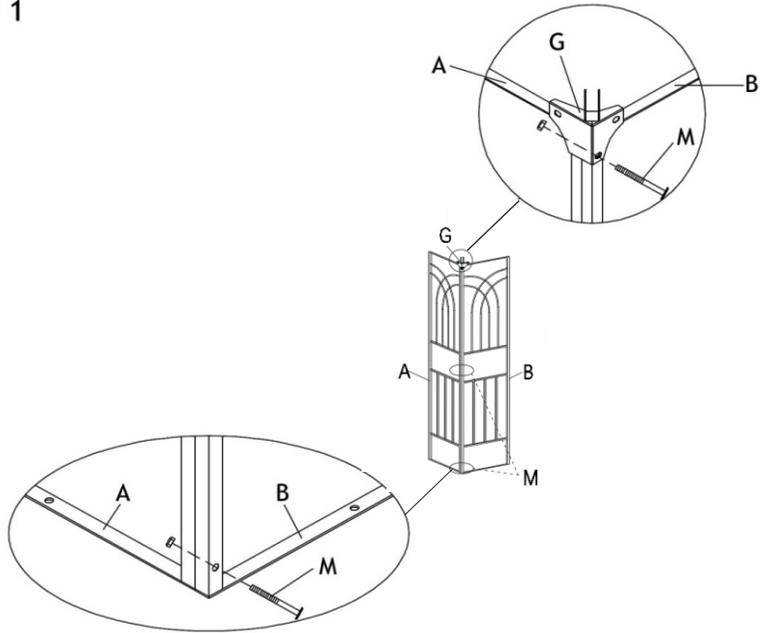


STEP 3

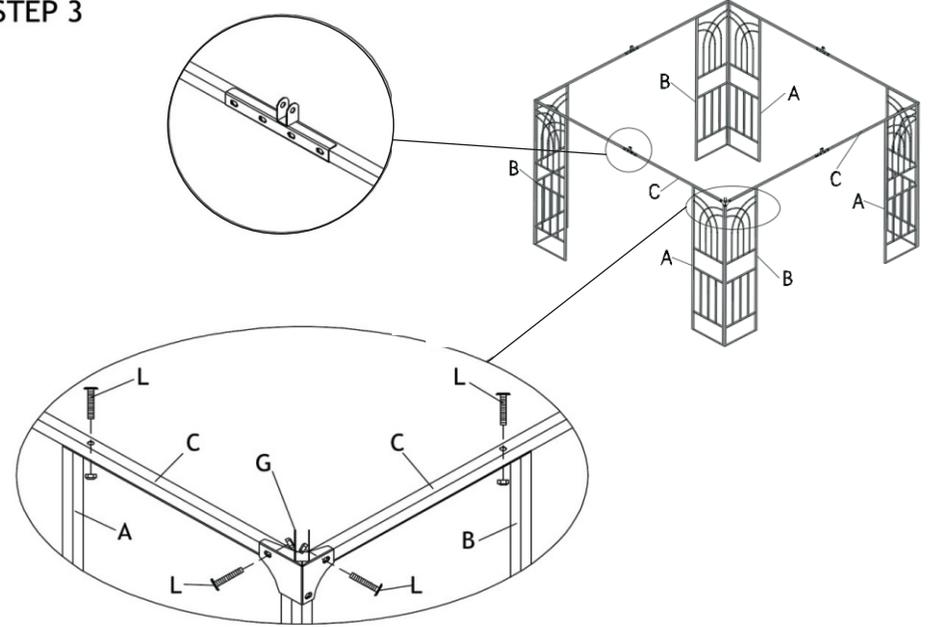


STEP 2

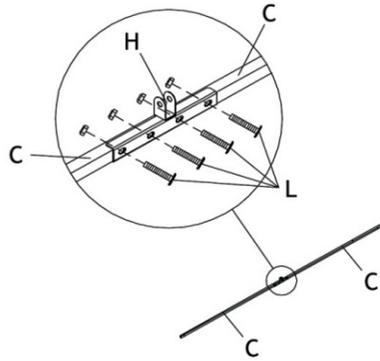


STEP 4

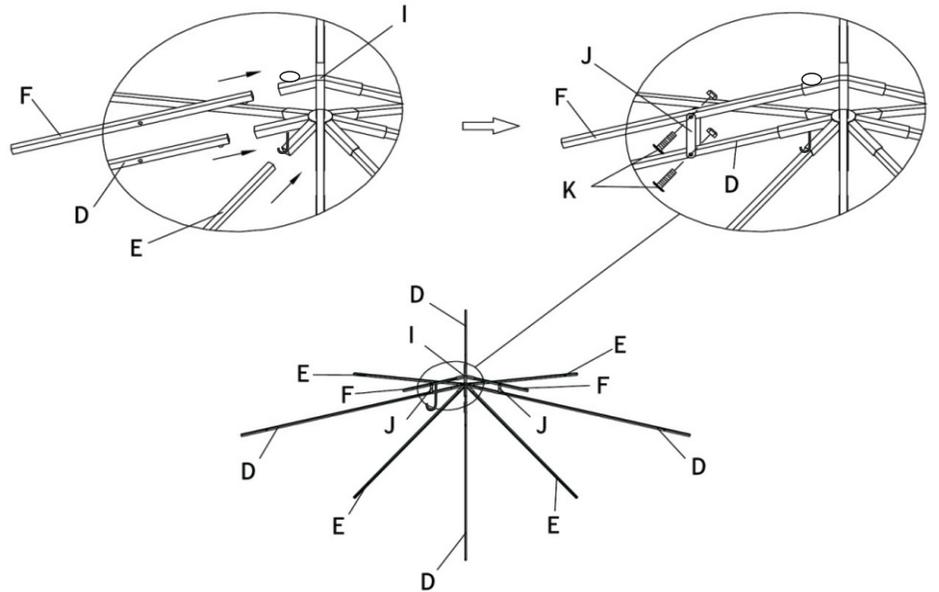

STEP 5

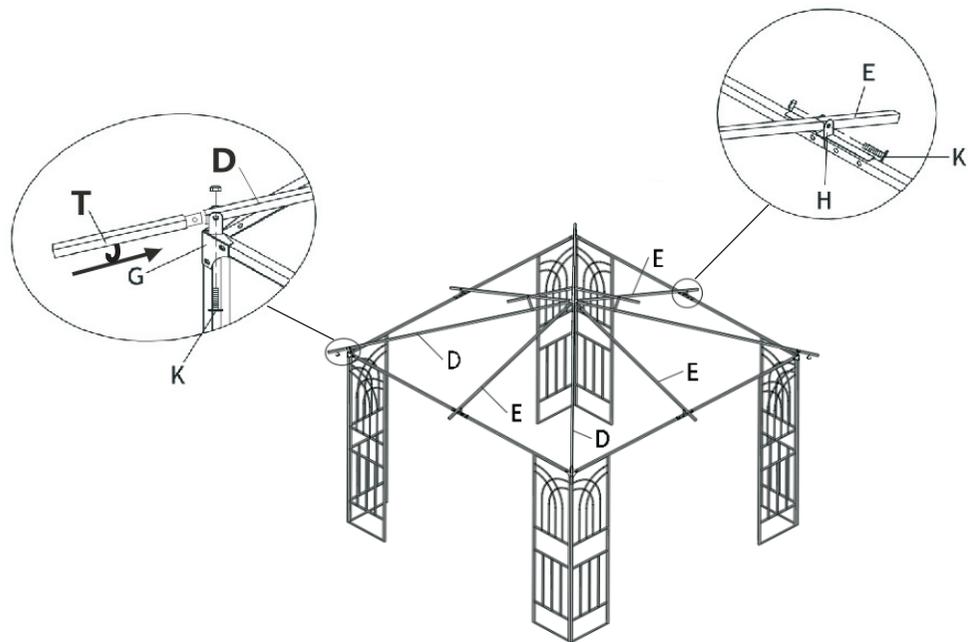

STEP 7

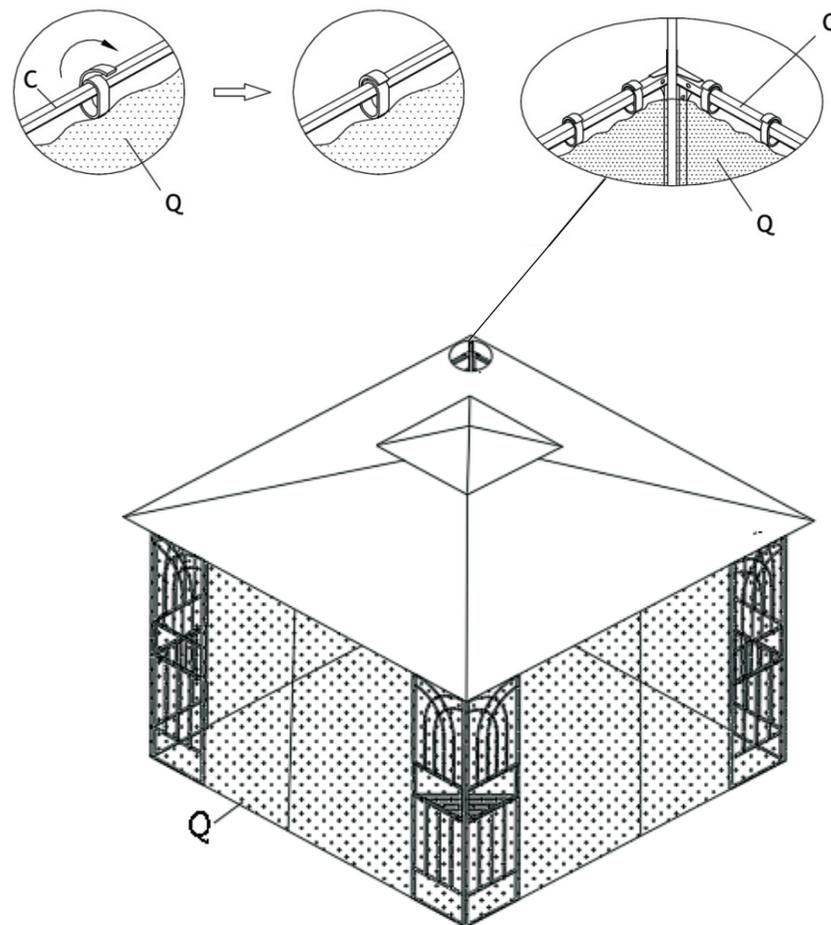

STEP 6

