 


品牌
Electactic
产品类别
立式冰柜
包材类别
说明书
产品型号
BD-88C
设计师
罗子滢
日期
20260331
更新履历

技术要求：
1. 颜色：单黑印刷
2. 尺寸：A5
此页为技术页，第二页开始印刷制作。

HOUSEHOLD FREEZER

USER MANUAL

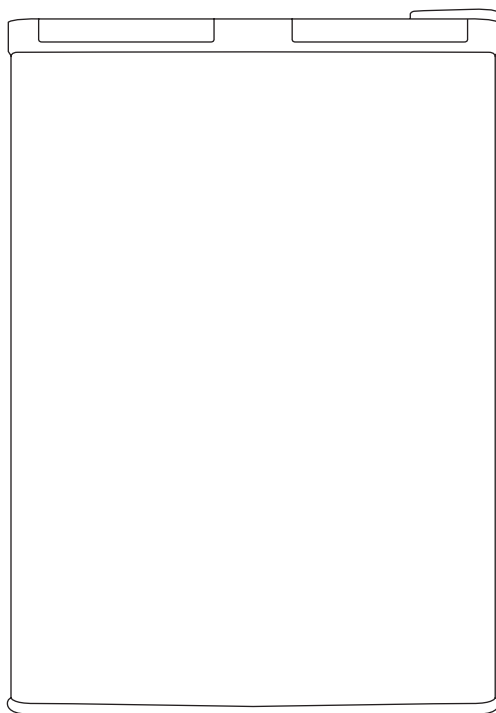

Model No.: BD-88C

Read this booklet thoroughly before using and save it for future reference



Scan the QR code to
watch the product videos



Web: www.electacticshop.com



Email: service@electacticshop.com



Tel: 888-698-2504

CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	1
PRODUCT OVERVIEW	3
BEFORE FIRST USE	4
OPERATION INSTRUCTION	6
CLEANING & MAINTENANCE	7
TROUBLESHOOTING	9

IMPORTANT SAFETY INSTRUCTIONS

Read all of the instructions before using this appliance. When using this appliance, always exercise basic safety precautions, including the following:

- Use this appliance only for its intended purpose as described in this use and care guide.
- This freezer must be properly installed in accordance with the installation instructions before it is used.
- Never unplug your freezer by pulling on the power cord. Always grasp the plug firmly and pull it straight out from the outlet.
- Repair or replace all electric service cords that have become frayed or otherwise damaged immediately. Do not use a cord that shows cracks or abrasion damage along its length, the plug or the connector end.
- Unplug your freezer before cleaning or before making any repairs.

Note: If for any reason this product requires service, we strongly recommend that a certified technician performs the service.

- Do not use any electrical device or sharp instrument to defrost your freezer.
- If your old freezer is no longer in use, we recommend removing the doors. This will reduce the possibility of danger to children.
- After your freezer is in operation, do not touch the cold surfaces in the freezer compartment, particularly when hands are damp or wet. Skin may adhere to these extremely cold surfaces.
- Do not refreeze foods, which have been thawed completely. The United States Department of Agriculture in Home and Garden Bulletin No.69 reads: "...You may safely refreeze frozen foods that have thawed if they still contain ice crystals or if they are still cold-below 40°F."

"...Thawed ground meats, poultry, or fish that have any off-odor or off-color should not be refrozen and should not be eaten. Thawed ice cream should be discarded. If the odor or color of any food is poor or questionable, discard it. The food may be dangerous to eat."

"...Even partial thawing and re-freezing reduce the eating quality of foods, particularly fruits, vegetables, and prepared foods. The eating quality of red meats is affected less than that of many other foods. Use refrozen foods as soon as possible, to save as much of their eating quality as you can."

 
- This freezer is not designed to be recessed or installed in an enclosed cabinet. It is designed for freestanding installation only.
- Do not operate your freezer in the presence of explosive fumes.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

IMPORTANT SAFETY INSTRUCTIONS

-  **WARNING:** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
-  **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
-  **WARNING:** Do not damage the refrigerant circuit.
-  **WARNING:** Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
-  **DANGER:** Risk of child entrapment. Before you throw away your old freezer:
 1. Take off the doors.
 2. Leave the shelves in place so that children may not easily climb inside.

SAVE THESE INSTRUCTIONS

PRODUCT OVERVIEW

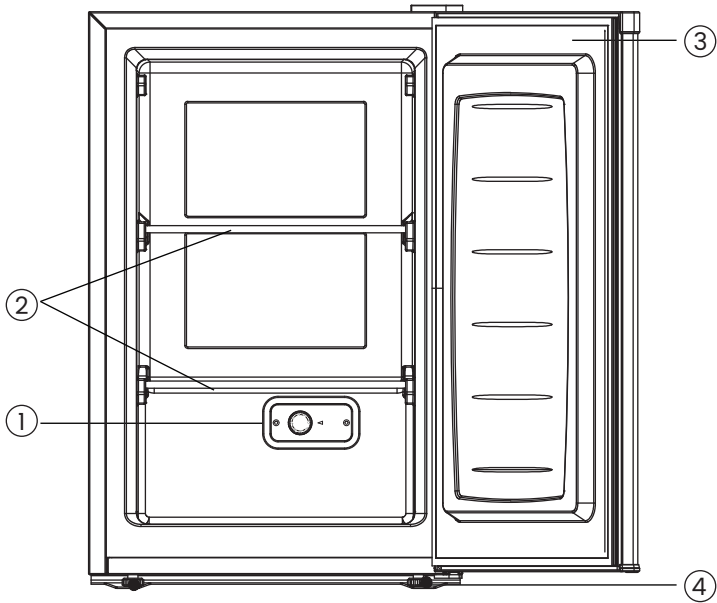

①	Temperature Control Knob
②	Removable Shelves
③	Freezer Door
④	Leveling Legs

BEFORE FIRST USE

Unpacking Your Freezer

- Remove all packaging material. This includes the foam base and all adhesive tape holding the freezer accessories inside and outside.
- Inspect and remove any remains of packing, tape or printed materials before powering on the freezer.

Adjusting Your Freezer

- Your freezer is designed for freestanding installation only. It should not be recessed or built-in.
- Place the freezer on a surface strong enough to support it fully loaded.
- When moving the freezer, never tilt it more than a 45-degree angle. This could damage the compressor and the sealed system.
- If the freezer is tilted let it stand in an upright position for at least 4 hours prior to plugging in. This is to allow the refrigerant to settle.
- Place the freezer in its proper position and ensure it is level. The unit is equipped with two leveling legs located at the front bottom. Adjust the legs as needed to stabilize the freezer and ensure the door closes properly.
- Plug the freezer into a 115V / 15A grounded electrical outlet.

Proper Air Circulation

- To assure your freezer works at the maximum efficiency it was designed for, you should install it in a location where there is proper air circulation, plumbing and electrical connections.
- The following are recommended clearances around the freezer:
Sides.....4" (102mm)
Back..... 4" (102mm)
Top..... 4" (102mm)

BEFORE FIRST USE

Food Storage Information


- Frozen food:
 - a. Wipe containers before storing to avoid spills.
 - b. Allow hot food to cool before placing it in the freezer. This helps prevent unnecessary energy consumption.
 - c. When storing meats, keep them in their original packaging or rewrap as necessary.
 - d. Proper freezer storage requires appropriate packaging. All foods must be stored in packages that do not allow air or moisture to enter or escape. Improper storage may result in odor and taste transfer and may cause food to dry out.
 - e. Follow package or container instructions for proper storage.
 - f. Packaging recommendations include:
 - Plastic containers with airtight lids
 - Heavy-duty aluminum foil
 - Plastic wrap (saran film)
 - Self-sealing plastic bags
 - g. Do not refreeze thawed foods.
 - h. It is recommended to mark the freezing date on the packaging.
- These are some suggestions for safe storage:

TV Dinners	3 - 4 Months
Fresh Shrimp, scallops, crawfish	3 - 6 Months
Hamburger & stew meats	3 - 4 Months
Ground Turkey, veal, pork	3 - 4 Months
Chops	4 - 6 Months
Steaks	6 - 12 Months
Chicken or turkey, whole	1 Year

OPERATION INSTRUCTION

Temperature Control Knob

 - Set the desired temperature using the temperature control knob. The settings range from 1 (warmest) to 7 (coldest). To stop cooling, turn the knob to 0.
- For initial use, set the knob to “4” and place food inside the freezer. The unit will automatically maintain this temperature. Allow the freezer to operate for 24 hours before adjusting to your preferred setting.

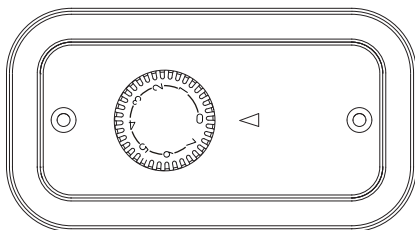


Control Panel
Varies by Model

Note:

1. If the freezer is unplugged or there is a power outage, wait at least 5 minutes before plugging it back in.
2. During operation, you may hear sounds such as gurgling, bubbling, or slight vibrations, which are caused by refrigerant circulating through the cooling system. A clicking sound may also occur when the thermostat cycles on and off. These are normal operating sounds.

Door Alignment

 - Remove the top hinge cover using a flat-head screwdriver. Gently lift from the rear of the hinge and slide it forward.
- Loosen the top hinge screws using a Phillips-head screwdriver.
- Adjust the door or insert a spacer, then tighten the screws.
- Replace the top hinge cover by aligning the rear of the cover with the rear of the hinge. Press firmly on the front of the cover until it snaps into place.

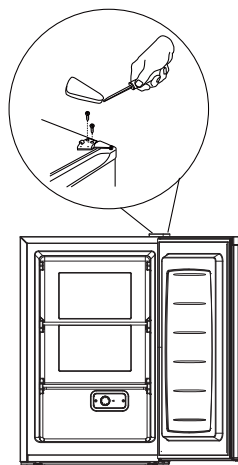

CLEANING & MAINTENANCE

WARNING

To avoid electric shock always unplug your freezer before cleaning. Ignoring this warning may result in death or injury.

WARNING

Before using cleaning products, always read and follow manufacturer's instructions and warnings to avoid personal injury or product damage.

Cleaning

1. General

- Prepare a cleaning solution of 3-4 tablespoons of baking soda mixed with warm water. Use sponge or soft cloth, dampened with the cleaning solution, to wipe down your freezer.
- Rinse with clean warm water and dry with a soft cloth.
- Do not use harsh chemicals, abrasives, ammonia, chlorine bleach, concentrated detergents, solvents or metal scouring pads. SOME of these chemicals may dissolve, damage and/or discolor your freezer.

2. Door gaskets

- Clean door gaskets every three months according to general instructions. Gaskets must be kept clean and pliable to assure a proper seal.
- Petroleum jelly applied lightly on the hinge side of gaskets will keep the gasket pliable and assure a good seal.

CLEANING & MAINTENANCE

Maintenance

1. Manual Defrosting

For best performance, the freezer should be defrosted when frost buildup reaches 1/4 to 1/2 inch thick. To manually defrost your freezer, follow the steps below:

- Turn the temperature control knob to “0” and unplug the freezer.
- Remove all food and place it in corrugated boxes, insulated bags, picnic coolers, or similar containers. Use towels or newspapers for additional insulation if needed.
- Remove the drain plug (on models so equipped).
- Leave the door open and allow the frost inside the freezer to melt naturally.

Remove large pieces of frost before they fully melt.

- As water accumulates at the bottom, use a sponge to absorb excess water to prevent overflow.
- After defrosting, clean the interior with a solution of baking soda and water. Rinse and dry thoroughly.
- Replace the drain cap (on models so equipped). Return the drain tube to its original position and reinstall the grille.
- Plug in the freezer, set the temperature control knob back to the normal position, and return the food to the freezer.

2. Power interruptions

Occasionally there may be power interruptions due to thunderstorms or other causes. Remove the power cord from AC outlet when a power outage occurs. When power has been restored, re-plug power cord to AC outlet. If outage is for a prolonged period, inspect and discard spoiled or thawed food in freezer. Clean freezer before reusing.

3. Vacation and moving care

For long vacations or absences, empty food from freezer, move the temperature DIAL to the OFF position and clean the door gaskets according to “Cleaning” section. Prop doors open, so air can circulate inside. When moving always move the freezer vertically. Do not move with the unit lying down. Possible damage to the sealed system could occur.

WARNING

If outage is for a prolonged period, inspect and discard spoiled or thawed food in freezer. Clean freezer before reusing.

TROUBLESHOOTING

If the following conditions occur, please consult the troubleshooting before requesting for customer service.

Problem	Solution
Freezer does not operate.	1. Check if temperature control knob is not in the "0" position. 2. Check if freezer is plugged in. 3. Check if there is power at the AC outlet, by checking the circuit breaker. 4. Wait for 30–40 minutes to see whether freezer will start compressor cycle must be complete to operate.
Food temperature appears too warm.	1. Frequent door openings. 2. Allow time for recently added warm food to reach freezer temperature. 3. Check gaskets for proper seal. 4. Clean condenser coils (for models with exposed condenser coils). 5. Adjust temperature control to colder setting.
Food temperature appears too cold.	If temperature control setting is too cold, adjust to a warmer setting and allow several hours for temperature to adjust.
Compressor runs too frequently.	1. This may be normal to maintain constant temperature during high temperature and humid days. 2. Door may have been opened frequently or for an extended period of time. 3. Check gasket for proper seal. 4. Check to see if doors are completely closed. 5. Check freezer compartment for blockage from frozen food packages, containers, etc.
Freezer has an odor.	1. Interior needs cleaning. 2. Foods improperly wrapped or sealed are giving off odors.

ROWAN ELECTRIC APPLIANCE LLC

**8:30am–5:30pm P.S.T.
Monday to Friday**