


# DREO

## Oil-filled Heater OH712

### USER MANUAL

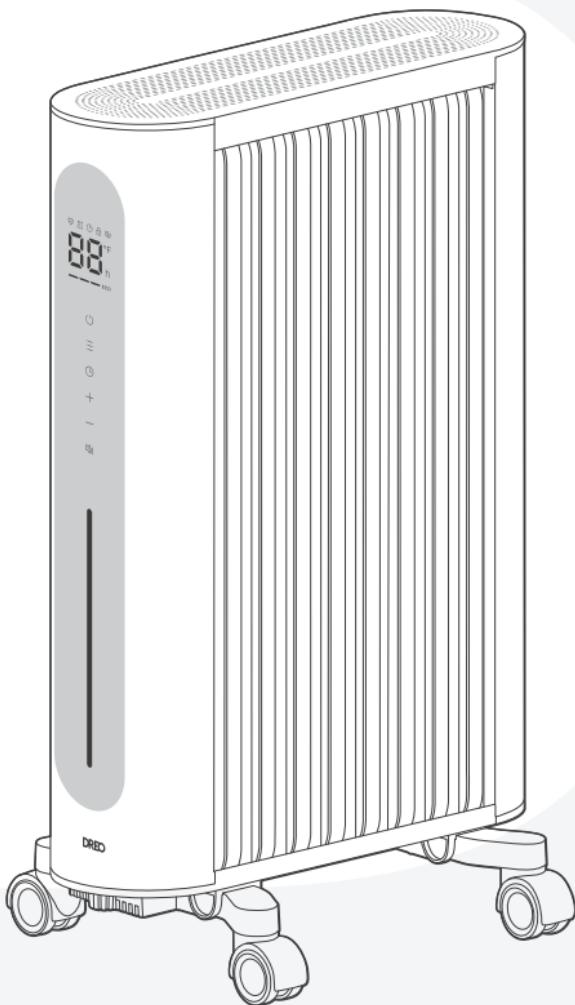

” ”

# Thanks for Choosing DREO!

Your support means the world to us. We hope you enjoy our product as much as we did creating it.

# CONTENTS

**01**

**IMPORTANT  
SAFETY INSTRUCTIONS**

**1-4**  

---

**02**

**ASSEMBLING YOUR  
HEATER**

**5-6**  

---

**03**

**KNOWING  
YOUR HEATER**

**7**  

---

**04**

**USING YOUR HEATER**

**8-11**  

---

**05**

**CLEANING AND  
MAINTENANCE**

**12**  

---

**06**

**TROUBLESHOOTING**

**13-14**  

---

**07**

**DREO CUSTOMER CARE**

**15-16**  

---

# IMPORTANT SAFETY INSTRUCTIONS

01



When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:



**Do not** cover the heater while in operation.

**Do not** use the Oil-filled heater near flammables and combustibles.

## GENERAL SAFETY

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
3. Use the handle to move this heater.
4. Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
5. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
6. The output of this heater may vary and its temperature may become hot enough to burn exposed skin. Use of this heater is not recommended for persons with a high sensitivity to heat or an inability to react to avoid burns.
7. Do not attempt to modify or repair the product by yourself. Doing so could void the warranty and cause damage or personal injury. Only a repair technician may disassemble or repair this product.
8. Make sure that no pieces of polystyrene or other packaging material have been left between elements of the appliance. It may be necessary to pass over the appliance with a vacuum cleaner.
9. If the machine is not working as it should, has received a sharp blow, has been dropped, damaged, left outdoors, or dropped into water, do not use and contact Customer Support.
10. There may be a trace of smoke or odor when the unit is first operated. This indicates that a drop of oil fell on the heating coil during the manufacturing process. It will quickly evaporate and should not re-occur.

## LOCATION SAFETY

1. Do not use outdoors.
2. Ensure the heater is on a stable, secure surface to eliminate the potential of tipping it over.
3. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
4. A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
5. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
6. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.



## ELECTRICITY SAFETY

1. Always unplug heater when not in use.
2. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. discard heater, or return to authorized service facility for examination and/or repair.
3. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
4. To disconnect heater, turn controls to off, then remove plug from outlet.
5. Always plug heaters directly into a wall outlet/receptacle.
6. Never use with an extension cord or relocatable power tap (outlet/power strip).
7. If there is a loose fit between the plug and the socket or the plug becomes very hot, the socket may need to be replaced. Check with a qualified electrician to replace the socket.
8. It is normal for the plug and cord to feel warm to the touch.
9. A plug or cord which becomes hot to the touch or becomes distorted in shape may be result of a worn electrical outlet. Worn outlets or receptacles should be replaced prior to further use of the heater. Plugging the heater into a worn outlet / receptacle may result in overheating of the power cord or fire.
10. This appliance has a polarized plug (one prong is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized plug. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to rig this safety feature.
11. Hyperthermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater and seek medical attention.

12. To avoid excessive room temperatures which can cause hyperthermia: DO NOT leave product running unattended in a confined space around infants, or individuals with reduced physical, sensory, or mental capabilities.
13. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
14. **CAUTION** - High temperature, keep electrical cords, drapery, and other furnishings at least 3 feet (0.9m) from the front of the heater and away from the side and rear.  
**WARNING - Risk of Hyperthermia.**

## Safety Plug

This unit is equipped with Dreo's **FortPlug™** restorable overheat protection to prevent fire accidents.

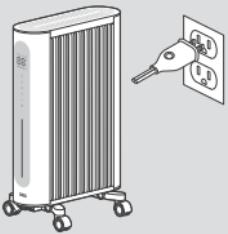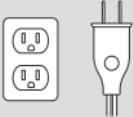	<p>When the area around the power plug switch overheats, the protection will cut off the heating power to prevent overheating or fire.</p>
	<p>When activated, the screen will show PP and power indicator will start <b>flashing</b>. <b>Note: The machine will not be operational until power is restored to normal.</b></p>
	<p>After the plug overheat protection takes effect, please unplug the heater and make sure that:</p> <ul style="list-style-type: none"> <li>- The current is greater than 15A.</li> <li>- The socket is not loose or has aged.</li> <li>- The outlet is not shared with other appliances.</li> <li>- The heater is not plugged through a extension cord.</li> <li>- The plug is not bent or damaged.</li> <li>- The power cord is not tied or pressed by other objects.</li> </ul> <p>Check your Quick Start Guide for detailed safety instructions.</p>
	<p>After confirming that the above risks are not present, wait for the plug temperature to cool (at least 5 minutes), then plug it. If the overheat plug protection is repeatedly triggered, it is recommended to use another outlet, or contact Dreo customer service.</p>
	<p><b>Caution:</b> To prevent electric shock, please match the wide blade of the plug with the wide slot insert.</p>



## WARNING - Risk of Heat Stroke (Hyperthermia)

Hyperthermia can result in death in infants or others  
Use caution to avoid overheating individuals  
Read and follow all instructions before use

# FOR HOUSEHOLD USE ONLY READ AND SAVE THESE INSTRUCTIONS

### Gentle Reminder:




Check the appliance regularly and refer to TROUBLESHOOTING or contact our customer support if it shows any of the following signs:

- Power cord or plug is damaged.
- Loud noise, unusual smell or excessive heat.

### Specifications

Model No.	DR-HSH012
Rated Power	1500W
Input	120V~ 60Hz
Battery Type	AAA

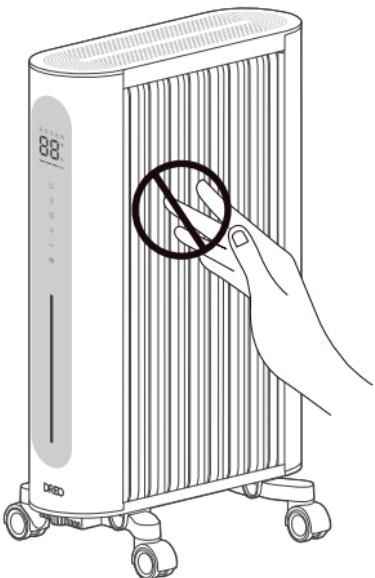



### HOT SURFACE

THE HEATER CAN BE VERY HOT ON DURING USE.  
ONLY THE FRONT PANEL AND HANDLE ARE SAFE TO TOUCH DURING USE.

# ASSEMBLING YOUR HEATER



# 02

## Package Contents

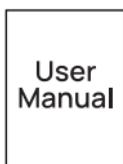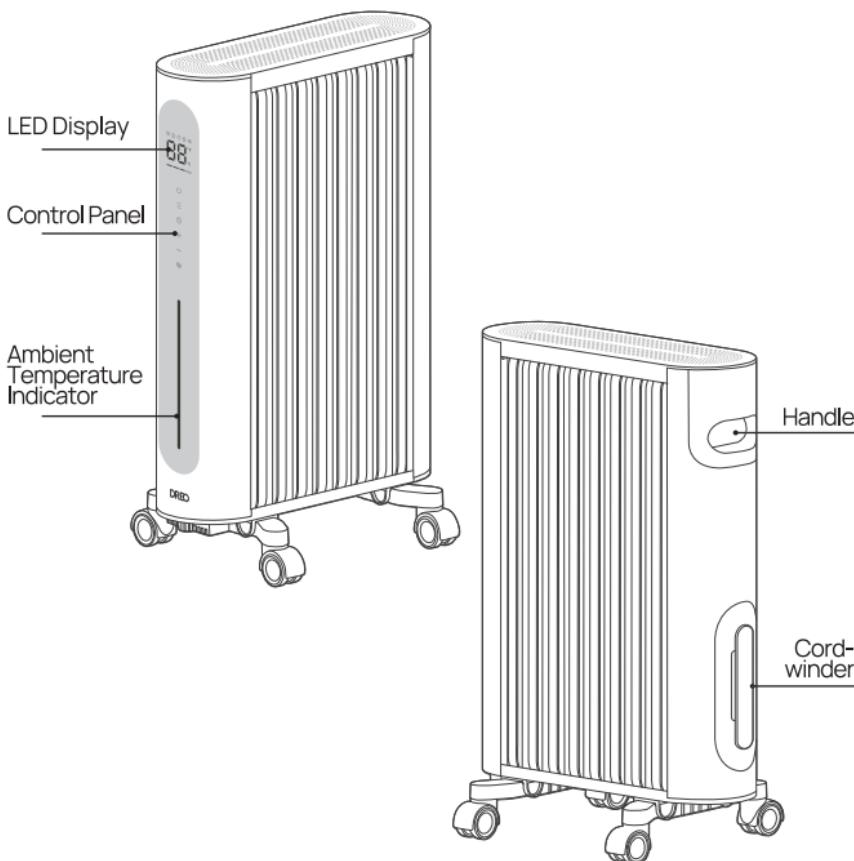

# Assembly Instructions

When using the appliance for the first time, remove the wraps and attach the parts by following the steps below.

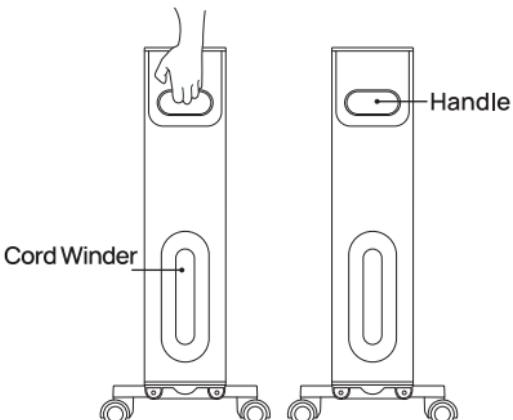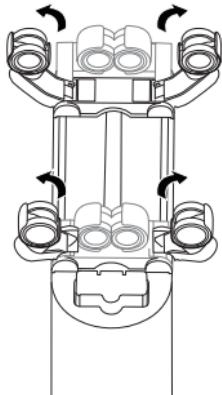

1. Place the heater upside down and unfold all the casters.

2. Set the heater upright. Unwrap the power cord around the cord winder. Use the rear handle to move to the desired location.

## WARNING



### Tip-over hazard.

Do not operate without the casters properly installed.



### Fire hazard.

Operate the heater in the upright position only. Any other position can cause damage to this heater and even a fire hazard.




### Burn hazard.

Unplug and allow the heater to cool before using the handle to move the heater.


# KNOWING YOUR HEATER

03


## Getting the Most Out of Your Heater

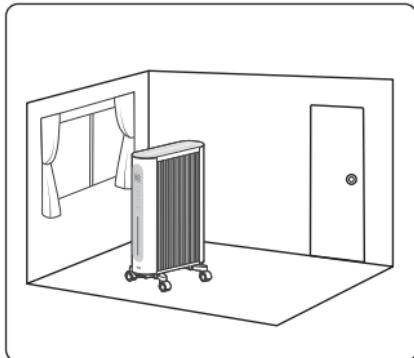

1. Put the heater by the window to block the penetration of cold air from outside.

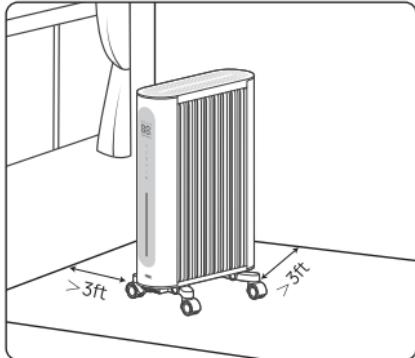


2. Keep curtains and other furniture at least 3 ft / 1m away from the heater.

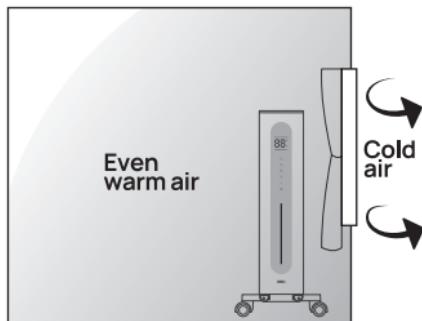

### What to Do

Put it by the window to get even warm air.

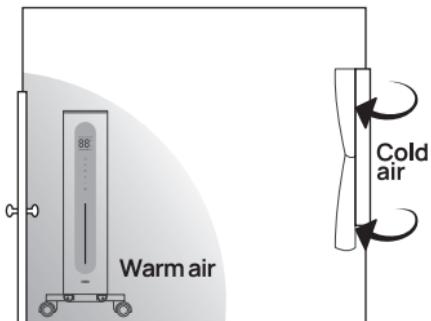

### What Not to Do

If you put it near the door, cold air invades and warm air escapes easily.

# USING YOUR HEATER

# 04

## Initial Usage Guidelines:

Upon initial use of the appliance, ensure to operate it at maximum power for a minimum of two hours. Throughout this period, it is advisable to adequately ventilate the room to dissipate any initial odors emitted by the appliance, commonly associated with its newness. Please note that it is entirely normal for the appliance to produce occasional "creaking" sounds during its inaugural operation.

## Control Panel



### Power On/ Off

Touch to turn the heater on or off.

**Note:**

When the heater is plugged into the electric outlet, the power indicator will light in red.



### Mode Settings

Touch to cycle through **ECO** and modes.



Three heating levels:

H1(600W), H2(900W), H3(1500W).

The display will show H1, H2 or H3 accordingly:



H1 - Low heat mode



H2 - Medium heat mode



H3 - High heat mode

### ECO

The heater will automatically select its optimal heating power, depending on the difference between the set temperature (41-95°F) and ambient temperature.

**Note:**

- When the ambient temperature drops below the set temperature, the heater will adjust the power depending on the difference between the two temperatures.
- In ECO mode, the heater will turn off automatically when the set temperature has been reached.
- If your heater turns off frequently, please raise the set temperature or switch to Power Heat mode.



### Timer

1. When the heater is on/off, touch to set a timer (0-24h). After the timer ends, the heater will turn off/on automatically.
2. To cancel, set the timer to "—" hour.



### Heat Level/ Temperature / Timer Hour

In Power Heat mode, touch  $+$  or  $-$  to adjust the heating level.

In ECO mode, touch  $+$  or  $-$  to adjust the set temperature.

In Timer mode, touch  $+$  or  $-$  to set the timer between (0-24h).

### Mute

Touch to turn the button sounds on/off.

### Child Lock

Long press and  $-$  to activate/deactivate Child Lock Function.

## LED Display



Plugged in



Heat Indicator



Mute



ECO

ECO Mode



88 °F  
h

— ECO —



Timer



Child Lock



Heat Level

88

Heat Level / Set Temperature / Timer Hour

**Note:** During heating, the display will light up the Heat Indicator

# Ambient Temperature Indicator



Besides the LED display, your new oil-filled heater comes with an additional LED indicator that lets you see the ambient temperature condition even from far away.

## More Features

### Memory Function

The heater will remember its last settings (temperatures, working modes) once turned on again.

### Defrost Mode

To prevent freezing conditions, you can set up your target temperature above 41°F in ECO mode, this will allow the heater to heat up in high heat mode whenever temperatures fall below the target.

### Overheat Protection

When the heater overheats, it will stop heating automatically with the error code "FF" on the display.

### Display Auto Turn Off


Long press and for 3 seconds to turn on/off auto dimming of the LED display & the Ambient Temperature Indicator.

In low light conditions, the display and ambient temperature indicator light will automatically turn off after 10 seconds if no action is taken.

### Tip-Over Protection

For your safety, when the heater is tipped over, it will shut off automatically. To restore it, place it back up and wait for the indicator to light on to turn the heater on.

## Remote Control

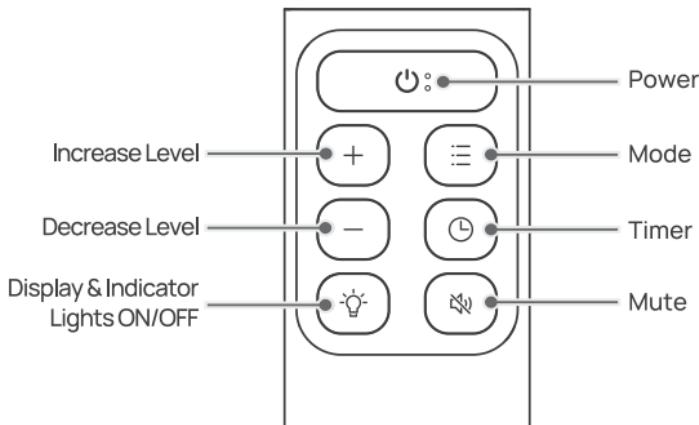


## Battery Replacement

1. Remove the battery cover in the direction indicated by the arrow.
2. Replace with two new AAA 1.5V batteries. Make sure that the positive(+) and negative(-) terminals are positioned correctly.
3. Push the battery cover back into place.



### **WARNING**

- Replace with new batteries of the same type when replacement is required.
- Remove the batteries when the remote control is unused for long period of time.
- Do not attempt to dismantle the batteries.
- Do not dispose the batteries in fire, batteries may explode or leak.
- Chemical burn hazard. Keep batteries away from children.
- Do not mix old and new batteries and Do not mix alkaline, standard (carbon-zinc) or rechargeable (ni-cad, ni-mh, etc.) batteries.

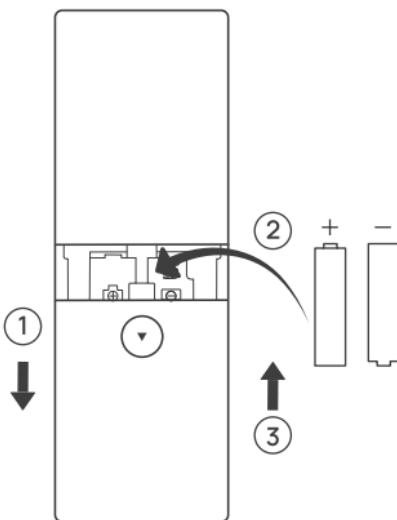

# CLEANING AND MAINTENANCE

# 05

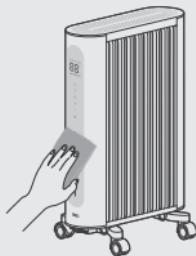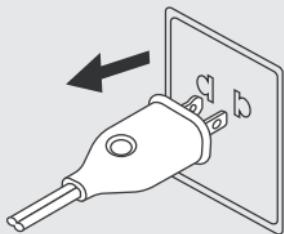

Always turn off and unplug before cleaning.

## Outer Surface

Use a soft, dry cloth to gently wipe clean the outer surface.



## ATTENTION



DO NOT unscrew the unit.



DO NOT use cleaning agents.



DO NOT use abrasive scrubbers.



Fire or electrical shock hazard. DO NOT immerse the main unit in water. NEVER allow water to get inside the heater.



Except for cleaning, any servicing should be performed by an authorized service representative.



Store in a cool, dry area and keep the cable out of high-traffic areas to avoid tripping hazards.

# TROUBLESHOOTING

# 06

Problem	Possible Causes	Solution
Malfunction codes on LED display	FF - Overheat Protection	Unplug and wait for it to cool down before plugging again.
	E1 - Temperature sensor open circuit	Unplug it from the power source and contact Customer Support.
	E2 - Temperature sensor short circuit	Unplug it from the power source and contact Customer Support.
Heater does not start/ The heater suddenly stops during heating.	The heater was tipped over.	Place the heater back on a flat, level and stable surface and wait for the  indicator to light to turn the heater on.
	The heater surpassed the Overheat protection.	Unplug the heater and allow it to cool before plugging it back again.
		Remove any objects on or near the heater.

Heater does not start/ The heater suddenly stops during heating.	No power is passing through the unit.	Ensure that your circuit breaker or fuse is working properly.
	In ECO mode, the set temperature is lower than the ambient temperature.	Ensure that the temperature is set to be higher than the ambient temperature.
The heater doesn't raise temperature	Temperature raises too slowly	This heater uses convection, which may take longer, but allows it to deliver heat uniformly without making air too dry. You can use the timer function to heat your room beforehand (see instructions on page 9.).
	Only heats a small area.	This heater is not recommended for open areas or outdoor use.
	ECO mode doesn't reach my target temperature.	If you are farther away from your heater, you can raise the target temperature or switch to Power Heat mode.
	In ECO mode, the heater will turn off heating automatically when the set temperature has been reached.	This is normal. If your heater turns off frequently, please raise the set temperature or switch to Power Heat mode.

If your problem is not listed or still persists, contact our Customer Support (see page 16).

# DREO CUSTOMER CARE

07

## 12-MONTH LIMITED WARRANTY

### What is Covered

DREO warrants to you that your product will be free from original defects in materials and workmanship for a period of twelve (12) months from the date of your purchase, when you use your product for intended purposes in accordance with this User Manual.

Please retain your proof of purchase. If you do not retain your proof of purchase, your warranty will start two (2) months from the date of manufacture printed on your product label.

### What is Not Covered

This limited warranty only applies to the original purchaser of your product and is non-transferable. This warranty is only valid if your product is used in the country in which you originally purchased it. In addition, this warranty will not apply, and DREO will not be liable for any costs, damages, or repairs, in connection with any of the following:

- Accidents or use of your product with inappropriate force;
- Damage or destruction caused by wrong voltage or unstable electric current;
- Normal wear and tear;
- Careless operation or handling, misuse, abuse, neglect, and/or failure to maintain or use your product in accordance with this User Manual;
- Any partially or completely altered, modified and/or dismantled products;
- Reduction in battery discharge time due to battery age or use (as applicable);
- Products with altered or removed serial numbers;
- Clearing any blockages from the product;
- Purchases from retailers and distributors not authorized by DREO to sell this product;
- Defects caused by or resulting from damages from shipping or handling by any third party not authorized by DREO to ship or handle your product; or
- Defects caused by or resulting from repairs, service, improper maintenance, or alteration to your product or any of its components by anyone other than a repair person authorized by DREO.

Any service and customer support that DREO provides to you under this limited warranty will not extend the duration of this limited warranty.

### Warranty Limitations and Exclusions

ANY IMPLIED WARRANTIES RELATING TO YOUR PRODUCT, INCLUDING BUT NOT LIMITED TO THE WARRANTY OF MERCHANTABILITY AND THE WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THE LIMITED WARRANTY SET FORTH ABOVE AND ARE OTHERWISE DISCLAIMED.

THIS LIMITED WARRANTY SHALL BE THE SOLE REMEDY OF THE PURCHASER OR USER OF THE PRODUCT, AND DREO SHALL NOT BE LIABLE FOR AN ALLEGEDLY DEFECTIVE OR DAMAGED PRODUCT EXCEPT TO REPAIR OR REPLACE IT IN ACCORDANCE WITH THIS LIMITED WARRANTY. DREO WILL NOT BE LIABLE FOR SPECIAL, INCIDENTAL, INDIRECT, CONTINGENT, OR CONSEQUENTIAL DAMAGES OR LOSSES OF ANY NATURE THAT YOU MAY INCUR IN CONNECTION WITH YOUR PURCHASE OR USE OF YOUR PRODUCT.

Some jurisdictions do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights, and you also may have other rights which vary from jurisdiction to jurisdiction.

## Limited Remedies

If your product fails because of an original defect in material and/or workmanship during the warranty period, DREO will repair or replace (in DREO's sole discretion) your product.

To obtain warranty service on your product, contact us at support@dreo.com or at (888) 290-1688 (available from Monday-Friday, 9:00 AM-5:00 PM PST/PDT) for further instructions.

**IN THE EVENT OF AN ORIGINAL DEFECT IN MATERIAL AND/OR WORKMANSHIP, TO THE EXTENT PERMITTED BY LAW, THE REMEDIES SET FORTH IMMEDIATELY ABOVE ARE YOUR SOLE AND EXCLUSIVE REMEDIES.**

## FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Please note that changes or modifications of this product is not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Model No.: DR-HSH012  
Rev\_1.2\_EN

## We're Here to Help!

-  (888) 290-1688 (Mon-Fri, 9:00 am-5:00 pm PST/PDT)
-  [www.dreo.com](http://www.dreo.com)
-  [support@dreo.com](mailto:support@dreo.com)



[www.dreo.com](http://www.dreo.com)

## Looking for help?

Contact us to get expert support.



[support@dreo.com](mailto:support@dreo.com)



[\(888\) 290-1688](tel:(888)290-1688)



[www.dreo.com](http://www.dreo.com)

Mon - Fri, 9:00 am-5:00 pm PST/PDT