




26 in. Curb Ramp Owners Manual

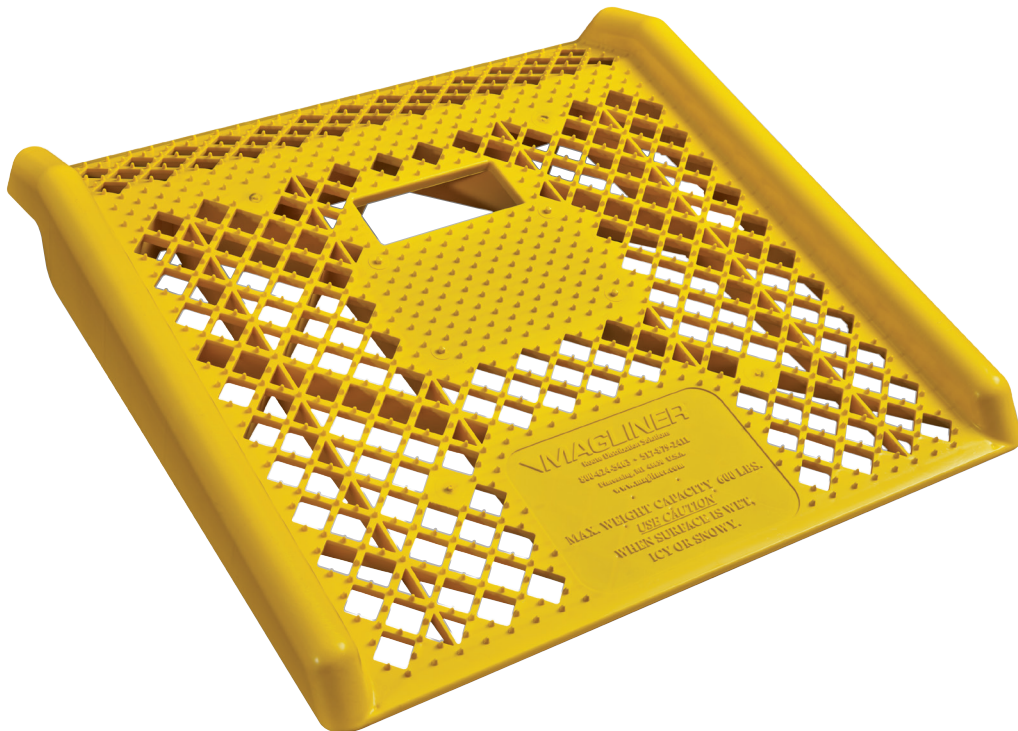

Please note this ramp is not meant for wheel chairs/ people moving devices or motorized products. For use with hand truck and curb, only. Designed to be used with curbs 8" and lower.



Table of Contents

Introduction, General Safety Instructions3

Using the Curb Ramp4

Inspection / Maintenance Checklist.....5



Thank you for using the Magliner Curb Ramp. Please read this manual thoroughly to become familiar with the safe operation and maintenance of the Curb Ramp.

General Safety Instructions

- Before using your Curb Ramp:
 - Carefully read this entire manual
 - Check for any broken or missing traction points on the surface of the Curb Ramp. If traction between the curb ramp surface and footwear is diminished, replace the Curb Ramp.
 - If you see a Curb Ramp in need of repair, replace it immediately. Never use a Curb Ramp that is not in proper working order. If you use a broken Curb Ramp, you risk damaging the delivery and more importantly you risk injuring yourself.
 - Do not exceed the weight capacity limit for the Curb Ramp as specified in this manual
- At the delivery:
 - Walk your path looking for obstructions, cracks, holes and uneven surfaces
 - Look for any vehicle or foot traffic
 - Note blind corners, doors and curbs
 - Take time to walk the delivery path. Be prepared for areas that could pose a problem while you deliver and try to avoid them altogether, even if it means a few extra steps.
 - Keep your eyes on the path

Use the Curb Ramp only as specified in this manual

Using the Curb Ramp



Directions for Use

1. Make sure the top of the curb and the surface in front of the curb are flat.
2. Place Curb Ramp against curb with height up to maximum service height (8").
3. The top of the Curb Ramp should lie flat on the top of the curb.
4. The bottom of the Curb Ramp should lie flat on the ground.
5. Carefully push the loaded hand truck up the ramp.

Curb Ramp Capacity and Weight

The Curb Ramp usable width is 24". Overall width and length is 27". The Curb Ramp can service up to 8" curbs.

The Curb Ramp capacity is 600 lbs. and weighs 9 lbs.

Inspection Date: _____ Customer Location: _____

Inspector's Name: _____

Area	Description	Method of Inspection	Normal Condition	Findings Pass or Fail	Timing	Notes
General Inspection	Curb Ramp shows no sign of diminished traction points	Visual inspection	<ul style="list-style-type: none"> • Check for any broken or missing traction points on the surface of the Curb Ramp • If traction between the Curb Ramp surface and footwear is diminished, replace the Curb Ramp 		Daily	
General Inspection	Check for any cracks or other damages	Visual inspection	<ul style="list-style-type: none"> • Curb Ramp should not have any cracks • Replace Curb Ramp as needed 		Daily	
General Inspection	Walk surface should be clean	Visual inspection	<ul style="list-style-type: none"> • Wipe down all surfaces, taking care to remove any debris buildup on top and bottom of Curb Ramp's walk surface 		Daily	

MAGLINE® INC.
1205 West Cedar Street
Standish, Michigan 48658
1-800-MAGLINE (624-5463)
Email: customerservice@magliner.com
www.magliner.com