 


A305-71 MASSAGE CHAIR

Operation Instructions

SAVE THESE INSTRUCTIONS

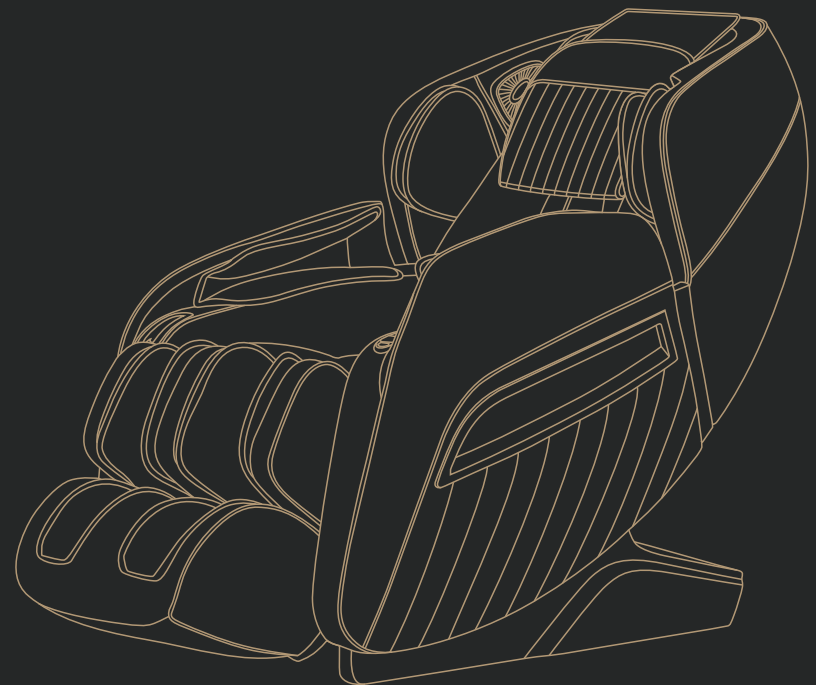

Thank for your purchasing this product. Before your use it ,Please read the Operation instructions carefully for the correct usage of this product , especially the important safety warnings. Keep the operation instructions properly for future reference.

Note: Our company reserves the right to change and explain the design of the product. If there is some difference between the product function in market circulation and the description in the instructions, it is a normal update of the product without prior notice. The specific product function and color are subject to the actual product.

CONTENTS

Before use

Safety precautions	02-04
Installation parts	05
Place massage chair	06-07
Before use	08-09
Product structure	10-15

Usage method

Operation Instructions	16-21
End massage	21

Maintain



Cleaning and Maintenance	22
--------------------------	----

Important

Troubleshooting	23
Product Specifications	24

Safety Precautions Must be followed


- Please read all relevant instructions carefully before use.
- The precautions indicated here will help you use this product safely and correctly.
- In order to clearly indicate the degree of harm and damage, the precautions are divided into "Warning" and "Caution" that may be caused by incorrect use. Both of them are important for safety and must be followed.

 Warning	Indicates that serious injury or death may result from improper use.
 Caution	Indicates that misuse may cause minor injury or property damage.

- Please pay attention to the symbols in front of each safety precaution.


 Forbidden	Absolutely Prohibition.
--	-------------------------

Following people should not use massage chair


 Forbidden	<ul style="list-style-type: none"> • The device is not intended for use by persons (including children) with physical disabilities, sensory or neurological impairments or who lack experience and common sense, unless they are supervised and instructed in the use of the device by those responsible for their safety. Children must be supervised to ensure they do not play with instruments. • Osteoporosis patients. • Patients with heart disease or wearing electronic medical devices such as a pacemaker. • People with fever. • Pregnant or menstruating women. • People who are injured or have a skin disease. • When unsupervised, any children are under the age of 14 and those unconscious are not allowed to use this product. • People who are told by their physicians to have rest or who feel unwell. • People whose bodies are wet are forbidden to use this product. • This product has a hot surface. Persons insensitive to heat must pay attention when using this product. • If the power cord is damaged, in order to avoid danger, it must be replaced by a professional from the manufacturer, its maintenance department or similar department.
--	--

Safety Precautions Must be followed


Important safety warnings

 Warnings	<ul style="list-style-type: none"> • Keep children away from movable parts of this product. • Use the well-grounded power supply unit suitable for this product. • Pull out the plug after use or before cleaning to avoid any physical injury or damage to the product. • Use this appliance as instructed in the manual. • Do not use any parts or accessories which are not recommended. • Do not use this product outdoors. • Please read the Operation Instructions carefully before operation. • Never use this product for any other purpose not listed herein. • 20 minutes of usage each time is recommended. • Do not use this product if the cover or leather is broken or damaged. • Do not drop anything into this product. • Never fall asleep while using this product. • Do not use this product if you are drunk or feel unwell. • Do not use this product within one hour after a meal. • Do not use this product with excessive force to avoid any injury.
---	--

Safety precautions

 Caution	<ul style="list-style-type: none"> • Check the voltage if meets the specifications for this appliance. • Do not plug or unplug the power plug with wet hands. • Keep dry, do not let water flow into this appliance to avoid electric shock or cause damage. • Do not pull the power cord when plugging or unplugging it. Rough handling is forbidden. • Do not damage the wire or modify the circuit of this product. • Never use a wet cloth to clean live parts such as the power switch, plug, etc. • Be away from this product in case of power failure to avoid any injury if power is restored suddenly. • Stop using this product at once while it works abnormal, and consult your local supplier. • Stop using this product if you feel unwell, and consult your health care practitioner.
--	---



Storage conditions

 Caution	<ul style="list-style-type: none"> • Storage room temperature: 5 °C to 40 °C. • Relative humidity (RH) between 20% and 80%; free of corrosive gases, and a well-ventilated room.
--	--



Product Care and Maintenance	
<p>Caution</p>	<ul style="list-style-type: none"> • This appliance may only be repaired by a service center designated by the manufacturer. Users cannot disassemble or repair it by themselves. • Remember to turn off the main power switch after use. • Do not use this product if the power socket becomes loose. • If this product will be left unused for a long period of time, it is necessary to roll up the power cord of this product and store this product in a dry and dust-free environment. • Do not store this product at a high temperature or near open flame. Avoid prolonged exposure to direct sunshine. • Please clean this product with dry cloth. Never use thinner, benzene or alcohol. • The mechanism of this appliance were specially designed and manufactured and don't require special maintenance. • Do not use a sharp object to stab at this product. • Do not roll or pull this product on any uneven ground. Instead, it should be lifted before moving. • Please use this product intermittently. Do not keep it working continuously for a long period of time.
Operating environment	
<p>Caution</p>	<ul style="list-style-type: none"> • Do not use this product in a very moist environment such as the bathroom. • Do not use this product in any heavily-dusty or caustic environment. • Do not use this product in a small space or a place without good ventilation.
Solutions to ordinary malfunctions	
<p>Caution</p>	<ul style="list-style-type: none"> • If the motor sounds during operation of this product, this is the normal operation sound. • If the controller cannot work normally, check whether the plug and the power socket are connected reliably, and whether the power switch is turned on. • If the rated working time is over, this appliance will automatically activate the power-off button; If this product keeps operating for a long period of time, the temperature protector will stop this product automatically. The product can be used again after half an hour.

Calf installation instructions

  1. After connecting the wires and the air hose between the legrest and the massage chair, remove the cable ties and insert the connecting part into the seat (Figure 1).
2. Place the round tubes on the left and right sides of the legrest onto the legrest support (Figure 2).

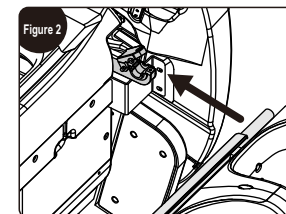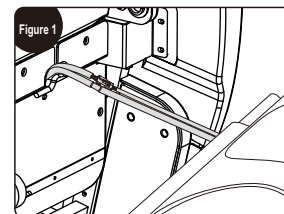

  3. Next, turn the legrest fixing cover over to cover the round tubes on both sides of the legrest (Figure 3).
4. Fasten the legrest to the massage chair with two M4 screws (one on each side). Check whether there is any abnormality during turning up and down, or any tube, cable or wire is folded. If everything is OK, the legrest is installed (Figure 4).

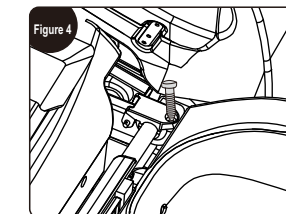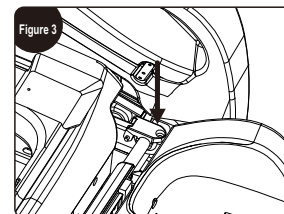


Place massage chair

Installation placement

Make sure there is enough space for the massage chair can be tilted at least 10 cm.

 
Do not expose the massage chair directly to high temperature environment due to sunlight (such as: in front of heating equipment), and place it to where can avoid high temperature and direct sunlight. It is recommended to lay a soft cushion for long-term use in a designated location. When laying the cushion, the size of the cushion should be enough to cover. Keep the range where the machine touches the floor and the range where your feet touch the floor.

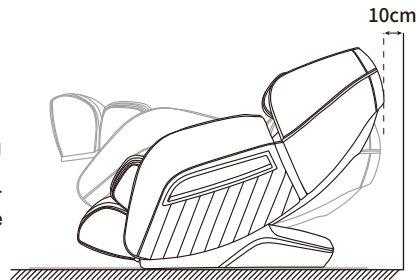

Product lift instruction

Require team work to lift and move the chair to avoid injury.

 1. Please lift the massage chair to move it on vulnerable ground such as wooden floor.
2. When moving on a similar wooden floor, it is recommended to lift it. Avoid damage to the casters. When the floor is lifted and moved to the designated position, be careful to keep your hands out of the way to avoid injury, and be careful of your feet being crushed. Do not let go of the unit until the unit is completely flat, the floor may be damaged, therefore, it is recommended to place mats, etc. on the floor.

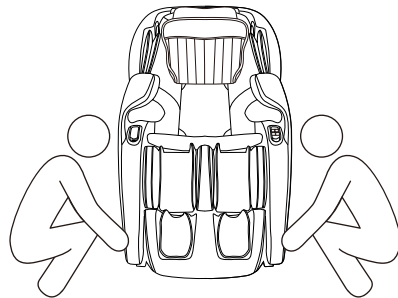


Place massage chair

Move method

Use the rear casters to move the massage chair. Move the chair by tilting it down and backward about 45° as shown in the diagram.



NOTE: Excessive force to tilt will cause the chair to tip over completely and product damage.

 1. Before moving, please shut down the machine properly to reset the whole machine, and then cut off the power.
2. Please keep the chair vacant when moving. (People, pets or clutter will not be able to stay on the chair.)
3. When moving, do not cross a drop barrier higher than 2mm or a gap greater than 5mm.
4. When using casters to move this product, single continuous movement is not supported; if the distance exceeds 50 meters, please make this product move slowly and evenly.

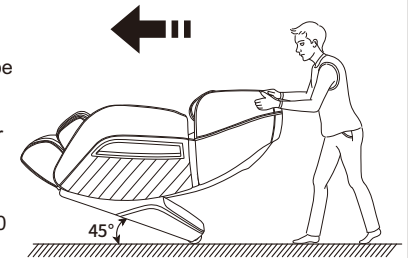

How to disassemble and use headrest cushion and backrest cushion

  
Using a headrest cushion can reduce the intensity of kneading massage on the neck and shoulders, and you can decide whether to use a headrest cushion according to your needs (recommended to use a headrest cushion). The backrest cushion and the backrest are connected by a zipper (1), and the headrest cushion and the backrest cushion are connected by a zipper (2).

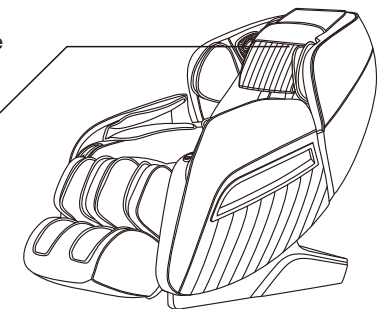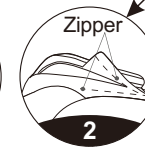

Before use


Check around

 Make sure that there are no people, pets and other objects around the unit.

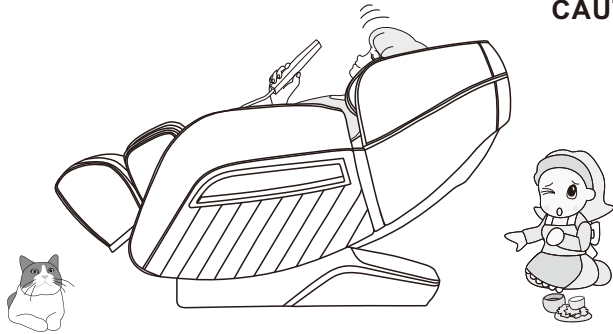

Make sure there are no foreign objects in the gaps of the machine

 
Before massaging, make sure that no foreign objects are caught in the legs, feet, etc.
Under no circumstances allow hands, feet, and head to penetrate into the area between the lower leg mechanism and main body, or the area between the armrest and the capsule.
Under no circumstances should hands, feet, or head sink under the fabric or leather covering of the massage area.

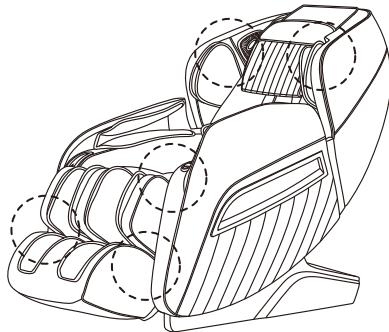


Before use

Turn on the power

 
CAUTION

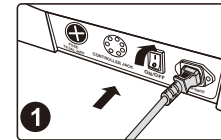

1 Plug in power cord

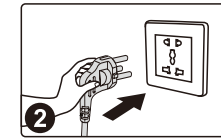 

2 Schematic diagram of power on

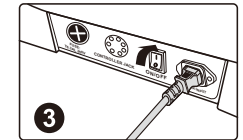 


3 Turn on the power switch ("I" position)



- Please check whether the power cord and power plug are damaged before use.
- Please supply power to this product in accordance with the working power requirements of this product's calibration.
- It is strictly forbidden to use a power supply other than the nominal power supply of this product.
- It is strictly forbidden to connect various power conversion devices to supply power to this product without authorization.


Product structure

 Description of Components

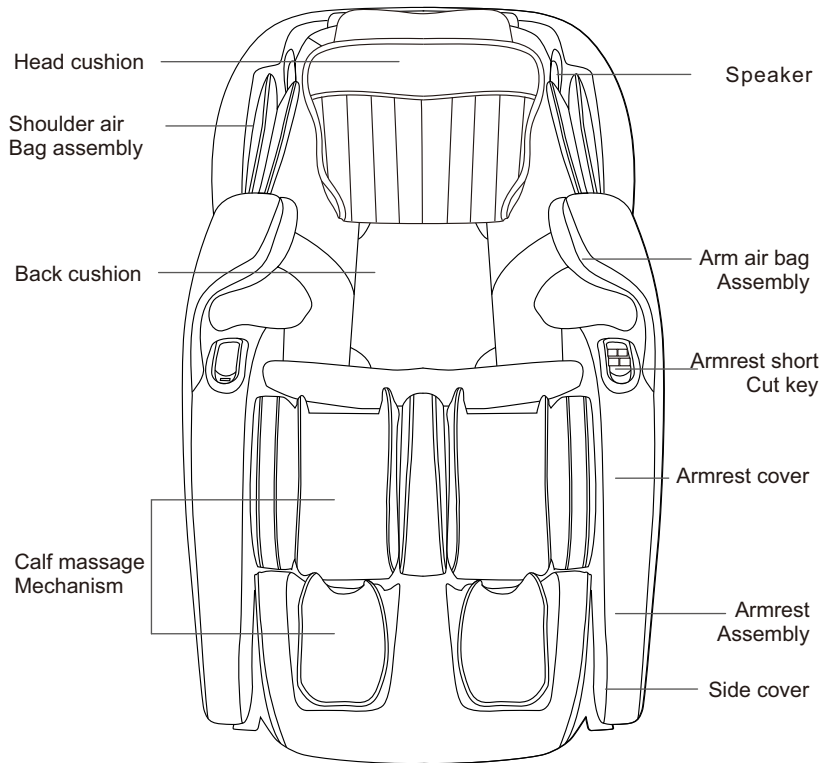


Product structure

Schematic view of functional distribution

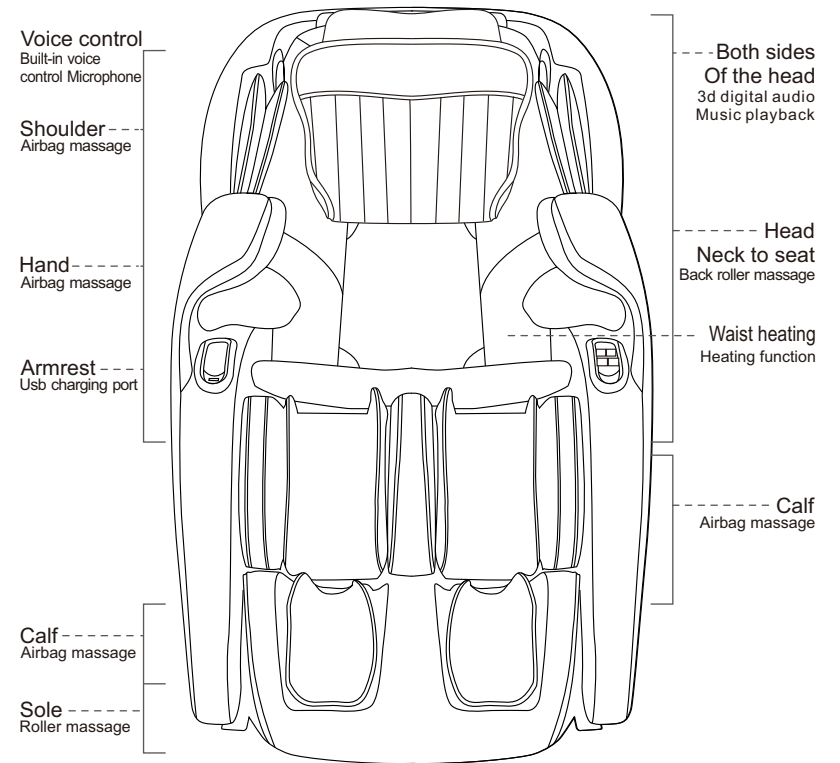 

Product structure

 1.Remote controller keys instruction

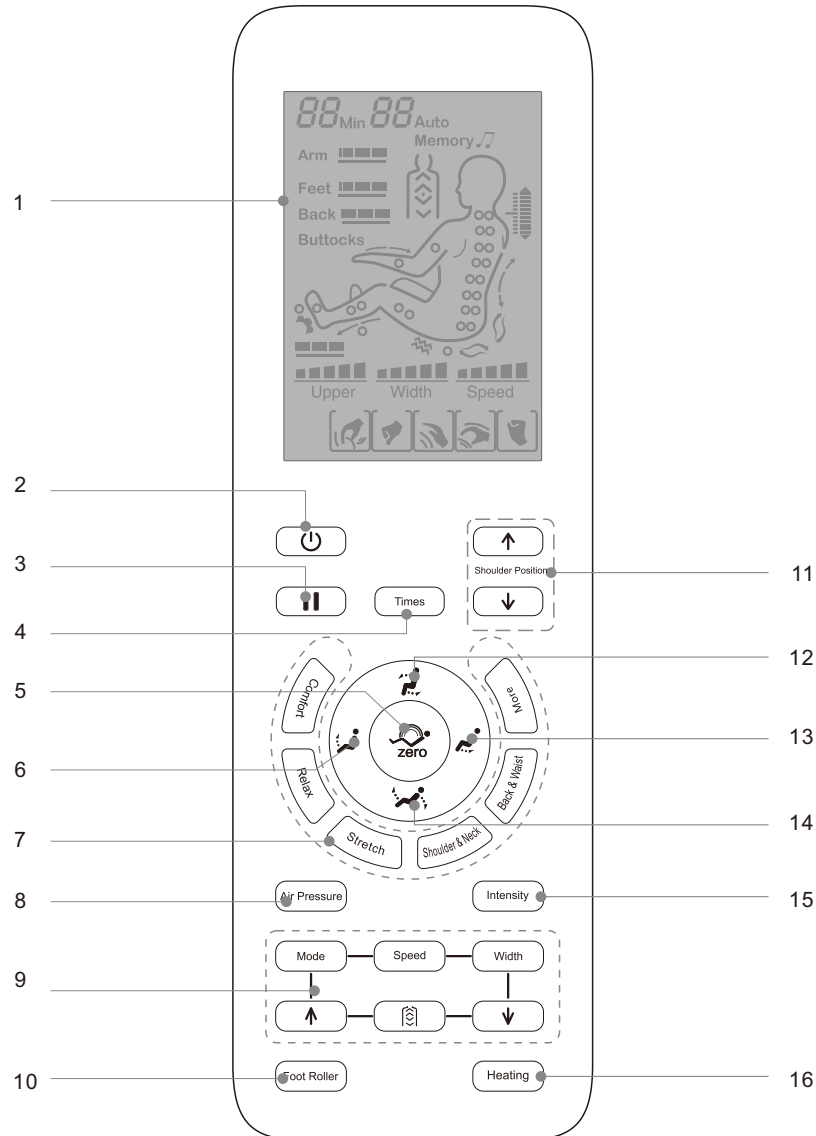


Product structure

- 1.LCD:
 - Display all massage functions.
- 2.Power switch:
 - Turn on or off all massage functions.
- 3.Pause/start key:
 - Pause or run all massage functions.
- 4.Timing key:
 - Timing adjustment.
- 5Automatic lying key:
 - There are three automatic lying modes, which can automatically switch according to your own needs.
- 6.Legrest up key:
 - Adjust the legrest up function.
- 7Automatic massage key:
 - Please refer to Page 11 of this manual for details.
- 8.Air pressure mode key:
 - Turn on/off air pressure massage function. (Please refer to Page 12 of this manual for details.)
- 9.Manual massage key:
 - Please refer to Page 12 of this manual for details.
- 10.Foot roller key:
 - Please refer to Page 12 of this manual for details.
- 11.Shoulder adjustment key:
 - Manual adjustment of the shoulder position for Shiatsu massage point.
- 12.Seat up key:
 - Adjust the sitting posture and rise.
- 13.Legrest down key:
 - Adjust the legrest down function.
- 14.Seat down key:
 - Adjust sitting posture to lie down.
- 15.Air pressure intensity key:
 - Adjust air pressure intensity function.
- 16.Heat key:
 - Turn on/off the heating massage function.

Product structure

2.Introduction to Armrest Shortcut Keys

 Left armrest

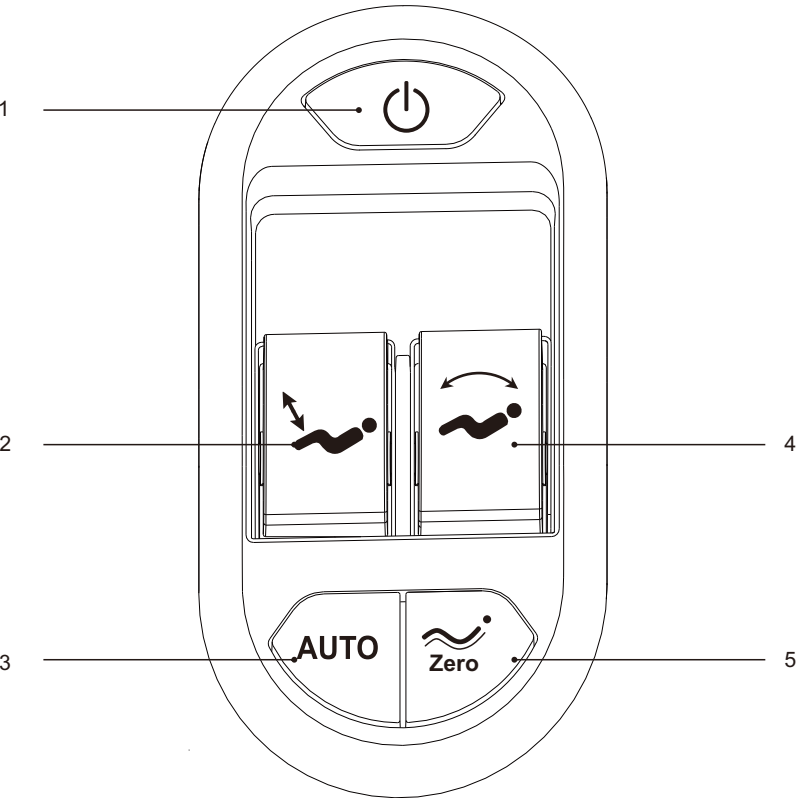


- 1. ON/OFF Key: Short press this key to turn ON/OFF the massage.
- 2. Legrest Up/Down key: press it to make the legrest move upward/downward.
- 3. AUTO Key: press it to switch the automatic massage function.
- 4. Backrest adjustment key: the back rest keeping lifting or recline.
- 5. Zero Gravity Key: short press to adjust the angle of Zero Gravity; Long press for 3 seconds to turn on or off the voice control mode.

Product structure

Function	Description
	Power button: press it to turn on or off all massage functions.
	Backrest up: the back rest keeping lifting when pressing this key, and black rest stopped lifting once release the key.
	Backrest down key: the back rest keeping reclining when lift this key, and black rest stopped reclining once release the key.
	Zero-gravity key: After this key is pressed, the positions of the legrest and the backrest can be automatically adjusted to the positions for zero gravity. There are three levels of zero-gravity modes, which can be switched. Long press for 3 seconds to turn on or off the voice control mode.
	Legrest up button: Pull the button to make the legrest rise slowly. Release it to stop such action.
	Legrest down button: Press the button to make the legrest move downward slowly. Release it to stop such action.
AUTO	Automatic mode key: Press it to switch among those automatic massage functions.



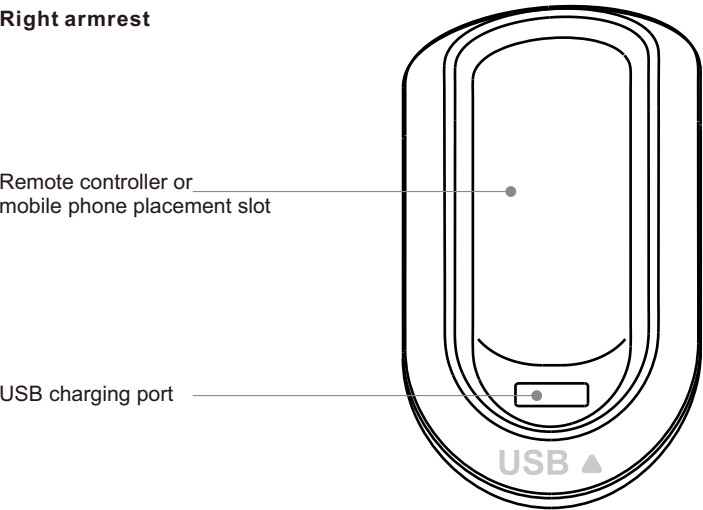 

Right armrest

 


Operation Instructions

3.Start massage

- ①.Press the power button to start the massage, the default is relax massage.
- ②.Automatic angle adjustment (you can press any key to skip)
- ③.Automatic human shoulder position detection, keep the sitting posture fit with the massage chair (you can press any key to skip).
- ④.Shoulder position fine-tuning, if the detected position deviates from the actual shoulder position, adjust it to the appropriate position through the up and down key of the shoulder position (or you can press any key to skip), there are 11 shoulder positions in total. If there is no adjustment within 10 seconds, it will enter into the massage function.
Note: Automatic function can be selected during startup. Repeated selection of the same automatic function can skip the startup process and directly massage.



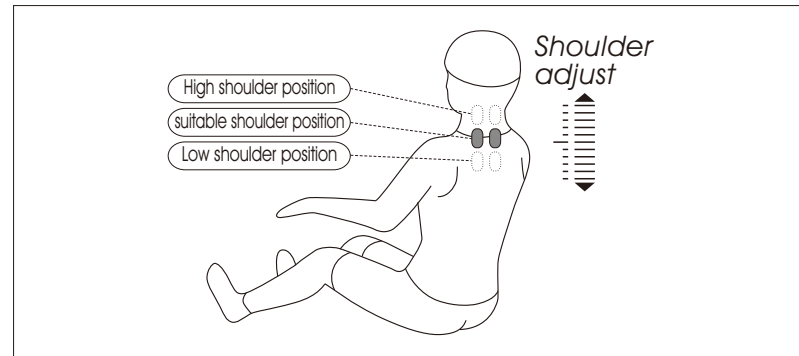



Button	Description	Display
	Move the massage balls upward to a suitable shoulder position.	
	Move the massage balls downward to a suitable shoulder position.	



During the detection of shoulder position and massage finger pressure point (the hand controller screen displays the shoulder position adjustment icon and hears the "Didi" of the hand controller. At the same time, press the up and down buttons of the shoulder position to adjust the shoulder position).

















Operation Instructions

· Automatic massage









Function	Button	Description	Display
Automatic massage		Comfort: The most comfortable massage experience.	F1 Auto
		Easy: Gentle and comfortable deep massage to relieve your body fatigue and relax the body.	F2 Auto
		Stretch : Calf frame and backrest frame to rise and fall , stretch or traction on the leg and waist, effectively relieve fatigue and restore vitality.	F3 Auto
		Shoulder & Neck: Focus on the shoulder and neck massage.	F4 Auto
		Back & Waist: Focus on the back and waist massage.	F5 Auto
		Full body massage: Through the full body muscle massage, quickly awaken all functions of the body, and start a new day	A1 Auto
		Spine massage: Massage the cervical vertebra, spine and coccyx all over the body ,to achieve the effect of spine correction and stretching.	A2 Auto
		Fatigue recovery: improve the fatigue and soreness of the whole body, relax the back and limbs to improve microcirculation, and quickly relieve fatigue.	A3 Auto
		Meridians massage: Stimulate the circulation of the blood and cause the muscles and joints to relax; quickly improve the body's microcirculation and enhance your immunity.	A4 Auto
		Beautiful buttock massage: Effective massage on the buttocks and thighs to shape the body and reduce the accumulation of excess body fat.	A5 Auto
		Sleep peacefully massage: Through the massage for the twelve major acupoints for healthcare, it helps the body to adjust balance, quickly improve your sleep and sleep quality.	A6 Auto
		Full air pressure: Focus on the full-body airbag massage to achieve full relaxation and deep massage of the body and fully relieve the fatigue and pain from your body.	A7 Auto

Operation Instructions

 

• Manual massage for the upper body

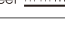Function	Button	Massage ball adjustment	Display
Mode		Shiatsu: speed, width	
		Kneading: speed	
		Tapping: speed, width	
		Simultaneous kneading and Tapping: speed, width	
		Knocking: speed, width	
Speed		5 speed levels adjustable	
Width		3 width levels adjustable	
Back stretch		Fixed position massage	
		Local round-trip massage in a small area	
		Complete round trip massage	
		Massage position adjustment (In the fixed point and local modes, the massage position can be adjusted.)	Manipulator UP
			Manipulator DOWN

• Airbag massage



Function	Button	Description	Display
Air pressure Mode		Full air pressure: airbag massage on the arms, legs and feet.	Arm  Feet 
		Arms: airbag massage on the arms.	Arm 
		Legs: airbag massage on the legs and feet.	Feet 
intensity		Adjustable among three levels.	Arm  Feet 

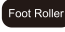 • Foot roller massage



Function	Button	Description	Display
Foot roller		Press this button to turn on or of the foot roller massage, and it is equipped with four states: off, weak, medium and strong.	

Operation Instructions






• Heat massage

Function	Button	Description	Display
Heat		Press this button to turn on or off the farinfrared thermo therapy of the back and calf, and it will warm after 3 minutes.	


• Pause/start massage button

Function	Button	Description	Display
Pause/start		Press this button during massage, and all the massage actions will be suspended at once (i.e. the massage chair will turn off after 20min). Then press this button again to restore all the previous massage actions.	

• Lying angle adjustment

Function	Button	Description
Up key		Press this button. The backrest will slowly rise, and the legrest will slowly move downward. Beeps can be heard until it reaches the top. Press this button again during sitting up. Such action will stop immediately.
Lying key		Press this button. The backrest will slowly move downward, and the legrest will slowly rise. Beeps can be heard until it reaches the bottom. Press this button again during lying. Such action will stop immediately.
Legrest up		Press this button. The legrest will slowly rise. Beeps can be heard until it reaches the top. Release this button to stop adjustment.
Legrest down		Press this button. The legrest will slowly move downward. Beeps can be heard until it reaches the bottom. Release this button to stop adjustment.
Automatic lying		Press this button every time to switch to an automatic lying mode. There are three modes in total for switching.

• Other manual functions

Function	Button	Description	Display
Timing		This button is used for time adjustment. After it is pressed every time, the duration will increase by 5 minutes. The total duration cannot exceed 30 minutes; otherwise, such setting will return to the minimum time value.	20min

Operation Instructions

4.Voice Control Mode

- When the massage chair is turned on or in standby mode, the sound "Hi Alice" or "Hey Alice" will be produced to enable the voice control function.
- Press at least 3 seconds zero-gravity key on the armrest (on/off Voice Control mode).
- After such function is enabled successfully, the massage chair will reply "I am here". At this moment, once a corresponding voice control entry to be implemented is given within six seconds, the corresponding voice control function can be performed after a reply is received from the massage chair; if no correct voice control entry is given within six seconds, the voice control function automatically will be off automatically and needs to be enabled again.
- Note: When using the voice control function, the speech speed should not be too fast, and the voice commands should be issued according to the voice control entries. After each successful use of the voice-activated entry, it is recommended to give out the voice command after 1-2 seconds.

Voice Control Entry		
Entry: "Hi Alice" or "Hey Alice". Answer: I am here.		
No.	Voice control entry	Answer entry
1	Massage on	Answer: Ok, massage on
2	Massage close	Answer: Ok, massage close
3	Comfort Massage	Answer: Ok, comfort massage
4	Relax massage	Answer: Ok, relax massage
5	Full body massage	Answer: Ok, full body massage
6	Neck and shoulder massage	Answer: Ok, neck and shoulder massage
7	Back and waist massage	Answer: Ok, back and waist massage
8	Stretch massage	Answer: Ok, stretch massage
9	Open the air pressure	Answer: Ok, open the air pressure
10	Close the air pressure	Answer: Ok, close the air pressure
11	Up the seat position	Answer: Ok, up the seat position
12	Down the seat position	Answer: Ok, down the seat position
13	Change the other mode	Answer: Ok, change the other mode
14	Go little down	Answer: Ok, go little down
15	Go little up	Answer: Ok, go little up

Note: commands 14 and 15 can only be used after command 13.

 
Operation Instructions

5.Operation Instructions for Bluetooth Speaker Play


- Enter the smart device main menu. Open "Settings" and select the "Bluetooth" option. Open "Bluetooth", and Bluetooth will automatically "Search for a New Bluetooth Device".
- The smart device will search for the corresponding Bluetooth model (e.g. IMCM-XXXX). Click the "Match" button. If you are asked whether to match with the device, you just select "Match" to complete matching.
- Turn on "Music Player" in the smart device and select the song to play.

6.End message


- During the massage process, press the power key off remote to immediately turn off all massage functions, the backrest and leg rest will reset, or when the massage time expires, it will automatically turn off all massage functions, but the backrest and leg rest will not reset.
- Shut off the power supply of this product, as shown in the attached figure (Power Shut-off Diagram of the Product).

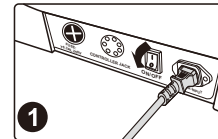

 Turn off the power switch ("0" position)

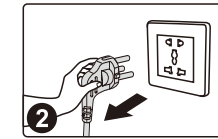

Schematic diagram of pulling out the power plug

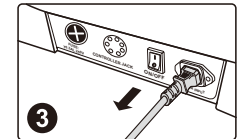 

Remove the product connection power cord

Cleaning and Maintenance

Cleaning synthetic leather and plastic parts

Wipe the leather with a soft, dry cloth.

- Do not use chemicals such as thinner, gasoline, alcohol, etc. to clean the unit.
- When using commercially available leather care products (rags), please follow the instructions for use.
- If the PU leather is particularly dirty, wipe it by the following methods.
 - ① Immerse a soft cloth in water or hot water containing 3% to 5% neutral detergent, then wring it out thoroughly.
 - ② Use the above soft cloth to wipe the leather surface.
 - ③ Wipe off the cleaning solution with a cloth soaked in clean water and thoroughly wrung out.
 - ④ Wipe with a wrung soft cloth.
 - ⑤ Let it air dry naturally.
- When it is difficult to remove stains, please immerse commercially available melamine foam in neutral detergent, and then wipe the machine with it.
- Do not use a hair dryer to dry the surface.
- As the color of the fabric will stain the surface of the PU leather, be careful when wiping the chair with denim and colored fabrics.
- Do not keep these parts in contact with plastic for a long time, as this will cause discoloration.
- PU leather may be discolored, so when using hair dye, please cover the touched part with a towel.



Troubleshooting

Fault	When the calf mechanism or the backrest reaches a certain position, press the corresponding adjustment button and it will no longer change, and a continuous "beep, beep" sound will be emitted.
Solution	Due to product structure design and ergonomic requirements, this product has a limited protection design for the limit state of attitude adjustment. At the same time, a reminder sound will sound when the limit is reached.

Fault	The function does not work or some functions do not work after the machine is turned on.
Solution	After the machine is turned on by pressing the switch key, it is necessary to manually select an automatic massage program or other working state. If it is not operated, the machine will automatically shut down after 20 minutes. If the manual operation mode is selected, the functions that are not selected may be disabled, and the working mode needs to be manually set in the manual mode.

Fault	The machine makes a leather rubbing sound when adjusting its posture.
Solution	This product adopts high-grade anti-corrosion leather that meets environmental protection requirements. Due to the inherent characteristics of leather materials, there will be a normal slight noise when rubbing at the relative movement, which is a normal phenomenon. Note: If you hear fabric or leather tearing sound when the machine is running, please stop using it immediately and seek professional maintenance.

Fault	The massage wheel did not reach the shoulders or neck.
Solution	If the head does not touch the head cushion or the back does not touch the backrest, the shoulder position may be lower than the actual position during the body shape detection process. Sit in the deepest position of the seat, rest your head on the headrest, and start over from the beginning.

Fault	The unit is damaged. The power cord or power plug is abnormally hot.
Solution	To prevent accidents, be sure to contact an authorized service center.

Please feel free to contact the designated service personnel for any questions or doubts about this product.

Product Specification

Model: SL-A305
Configure: 71
Name: Massage Chair
Rated voltage: 110-120V~ 60Hz ☐
220-240V~ 50Hz/60Hz ☐
Rated power: 120W
Rated time: 20Min
Safety structure: Class I

Material description: PVC, PA, steel parts, electric and electron components

MATERIAL	PU	LEATHER	CLOTH	WOOD