INSTALLATION INSTRUCTIONS

MEL-23100W www.maxximastyle.com

To avoid fire, shock, or death. Disconnect power at circuit breaker or fuse before the installation. Wear gloves to prevent cuts/abrasions from sharp edges when removing from carton,handling, and maintaining this fixture.

SAFETY:

This fixture must be wired in accordance with the National Electric Code and applicable local codes or ordinance.

If you are unfamiliar with proper electrical wiring connections, please consult a qualified electrician.

To insure personal safety, proper grounding is required.

IMPORTANT:

Read all instructions carefully before attempting installation.

TOOLS REQUIRED:



Product size:



LIGHT FIXTURE SPECIFICATION:

Input Voltage: 120V AC Input Frequency: 60 Hz Rated Power: 23W

WARRANTY:

Maxxima extends a 5 year limited warranty to the original purchase that the products listed are free from defects in material and/or workmanship only. Maxxima will replace any warranted product to the original consumer/purchaser if the product fails because of defects due to workmanship and/or materials within the limited warranty period. Limited warranty is not transferable and applies to the original installation of the Maxxima product. This offer does not constitute in any way a product guarantee and Maxxima does not hereby assume any obligation whatsoever beyond sending a free replacement product.



| 1 | Outlet box |
|----|-------------------------------|
| 2 | Cross bar bracket |
| 3 | Black supply wire |
| 4 | Twist-on wire nuts connectors |
| 5 | Black fixture wire |
| 6 | 8-32*15 machine tapping screw |
| 7 | M4*14 machine tapping screw |
| 8 | White supply wire |
| 9 | House ground wire (Green) |
| 10 | Fixture ground wire (Green) |
| 11 | White fixture wire |
| 12 | M4*7 hand nuts |
| 13 | Back plate |

INSTALLATIONS:

- 1. Turn off power at the corresponding circuit breaker.
- 2. Carefully disconnect and remove the old light fixture.
- 3. Locate and pull out the supply wires (#3#8#9) from the outlet box (#1).
- 4. Install the cross bar (#2) on the outlet box (#1) by using the machine tapping screw (#6).Avoid pressing the wires (#3#8#9).
- 5. Make the wiring connections by using twist-on wire nuts (#4).Do not leave bare conductors exposed.

Connect the white fixture wire (#11) to the white supply wire (#8)

Connect the black fixture wire (#5) to the black supply wire (#3)

Connect the green fixture ground wire (#10) to the green ground wire (#9). If you don't have a green ground wire, please consult a qualified electrician.

- 6. Adjust the upper cross bar (#2) to be in a horizontal position.
- 7. Insert the M4*14 machine tapping screw (#7) through the hole in the back plate (#13) of the fixture, and tighten by using the M4*7 hand nuts (#12).