



Ceiling Fan With Light

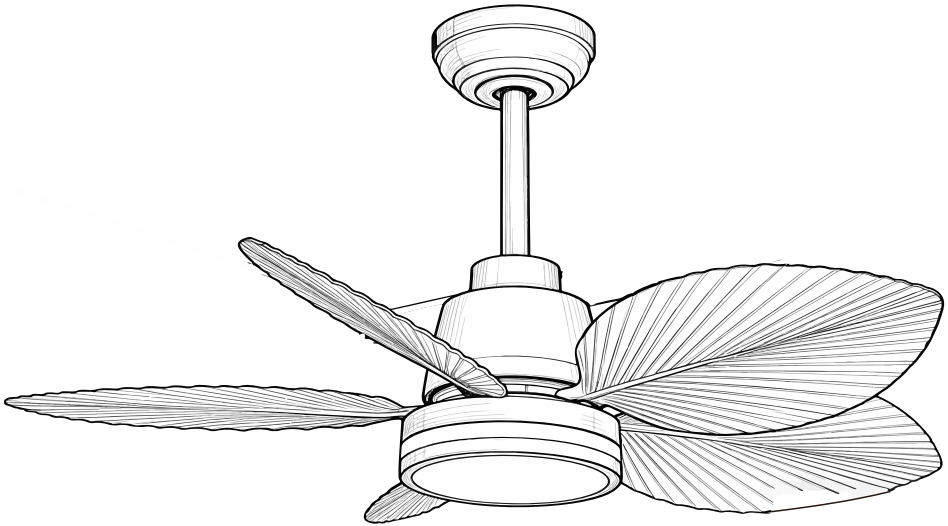

(1) Required Tools

- Phillips Head Screwdriver
- Flat Head Screwdriver
- Adjustable Pliers or Wrench
- Step Ladder
- Wire Strippers/Cutters
- Electrical Tape
- Impact Drill

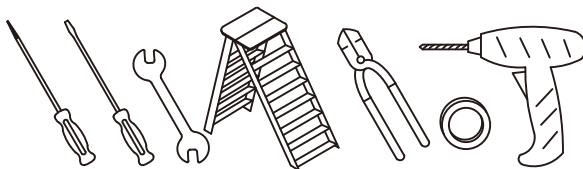


WARNING

- (1). To avoid the risk of electric shock, ensure the power is turned off at the main fuse box before wiring. Installation must be performed by a licensed electrician.
- (2). This fan is not compatible with dimmer switches or variable-speed solid-state wall controls.

Maintenance

- (1). It is recommended to inspect all connecting parts at least once a year- including the mounting bracket, downrod fasteners, and fan blades -to ensure they are secure and functioning properly.
- (2). Clean the fan blades regularly to maintain performance and reduce dust buildup.
- (3). The motor bearings are pre-lubricated with grease. Do not apply additional oil or lubricants to the motor.

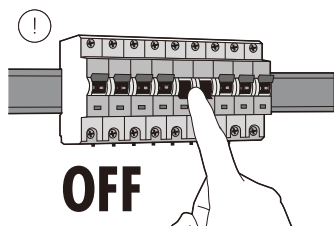


1B: Wear protective gloves during installation.


1A: Turn OFF the power at the main fuse or circuit breaker before installation.

(2) Mounting Bracket Installation


a:Masonry/
Concrete / Brick

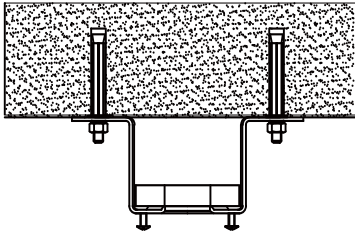

b:wood

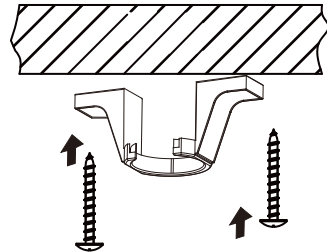


c:Outlet box

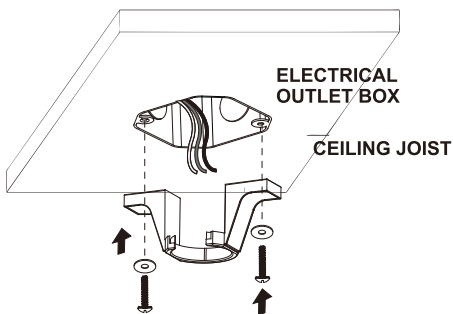

Choose different screws for installation based on the different materials of the roof.

(3) Replacement of Downrod

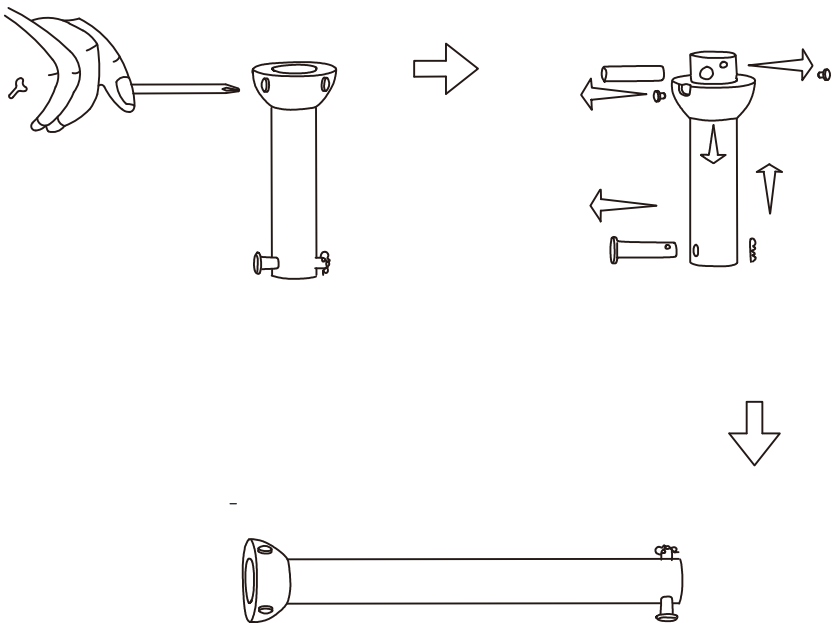


- Before installation, select the appropriate downrod length based on your ceiling height. Replace the standard downrod according to the diagram below.

(4) Mounting The Fan Assembly



Hanger stuck point" → "Mounting Bracket Tab"

Hanging ball slot" → "Downrod Ball Slot"

Hanging ball card slot stuck hanger stuck point → Align the downrod ball slot with the mounting bracket tab

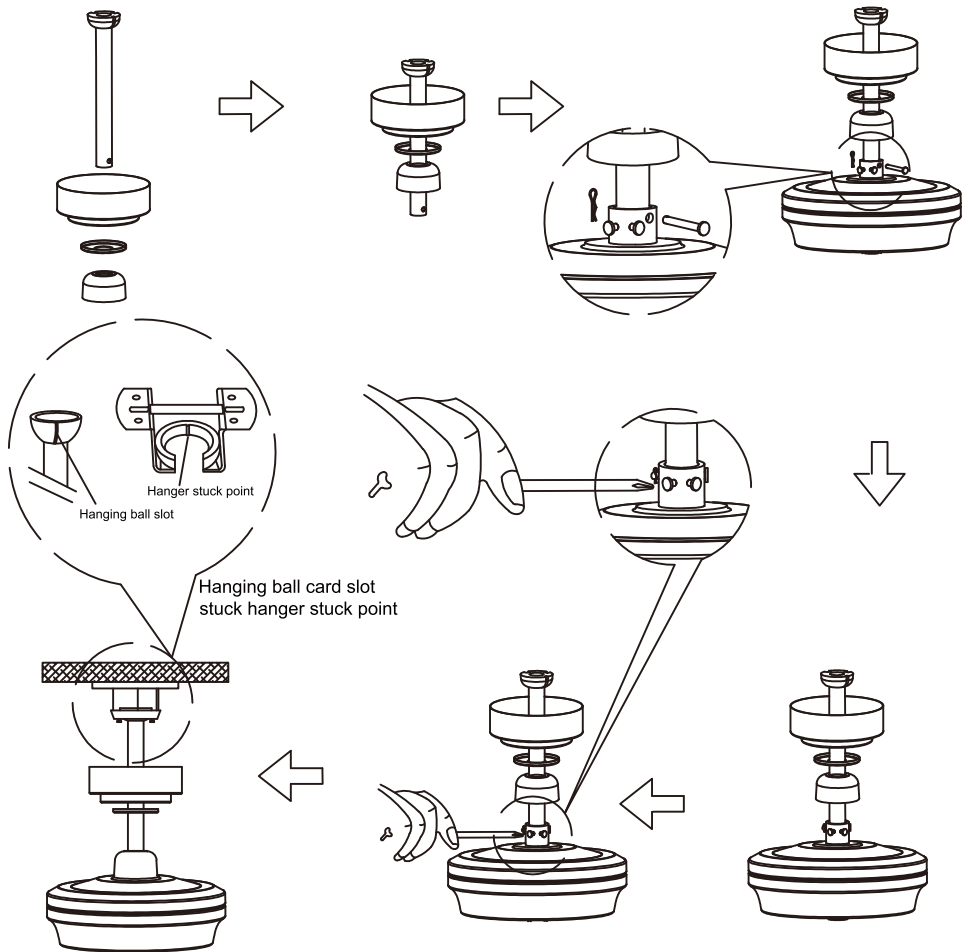


the ceiling fan with a light is installed as follows.

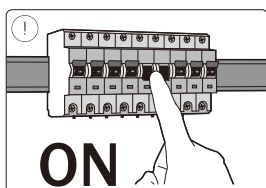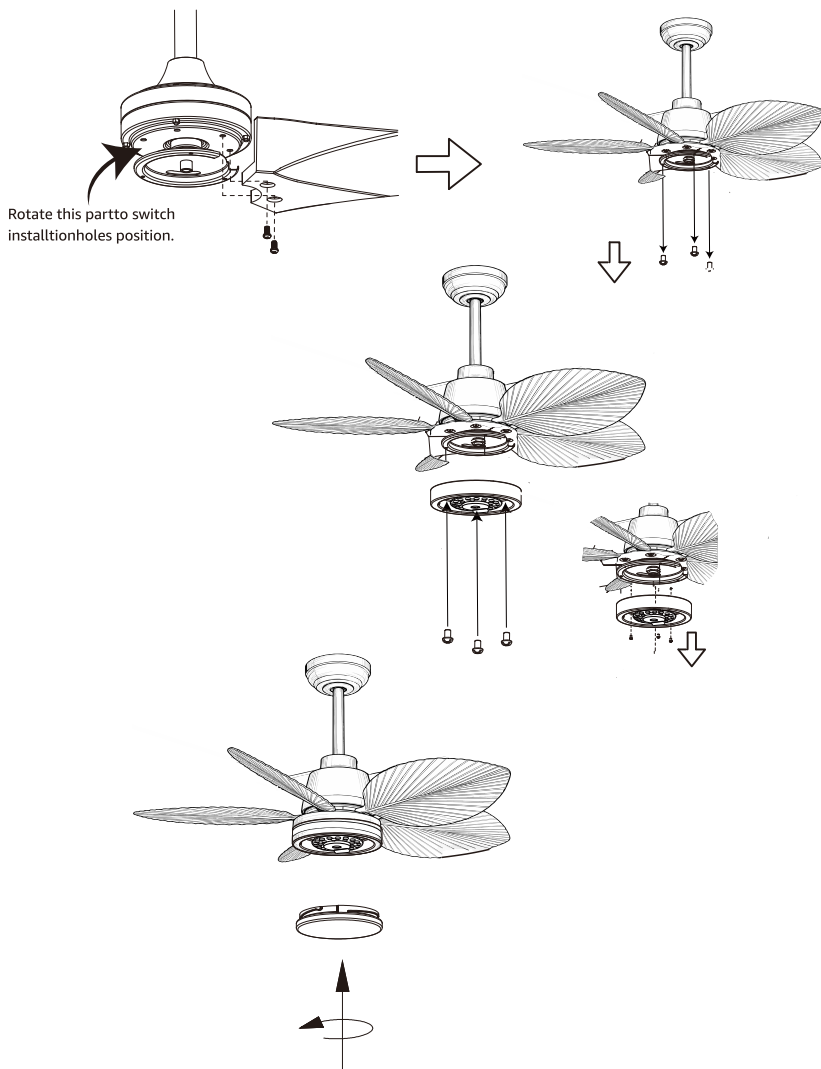

Make sure the installation is correct before turning on the power.

BLDC Fan Light Remote Control Manual

2.4Ghz frequency control can adjust color temperature and brightness

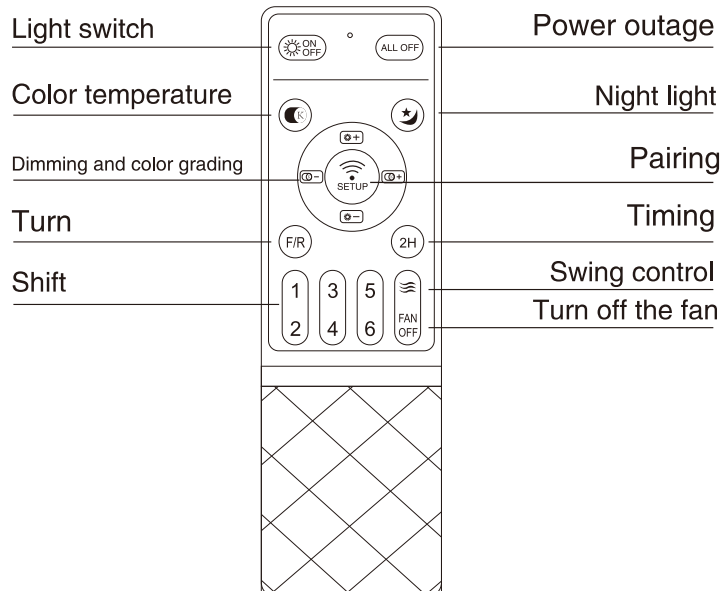

Battery model

7#1.5V*2

Match code: After power on, press the code matching key for a short time within 5 seconds, and the light flashes twice. The code matching is successful.

Clear code: After power on, press and hold lamp switch for 3 seconds within 5 seconds. Clear code is successful.

PS: When the remote controller cannot be controlled effectively, please check the battery. When not in use for a long time, please take out the battery.



Scan Download App