


Cantilever Parasols

Assembly Instructions

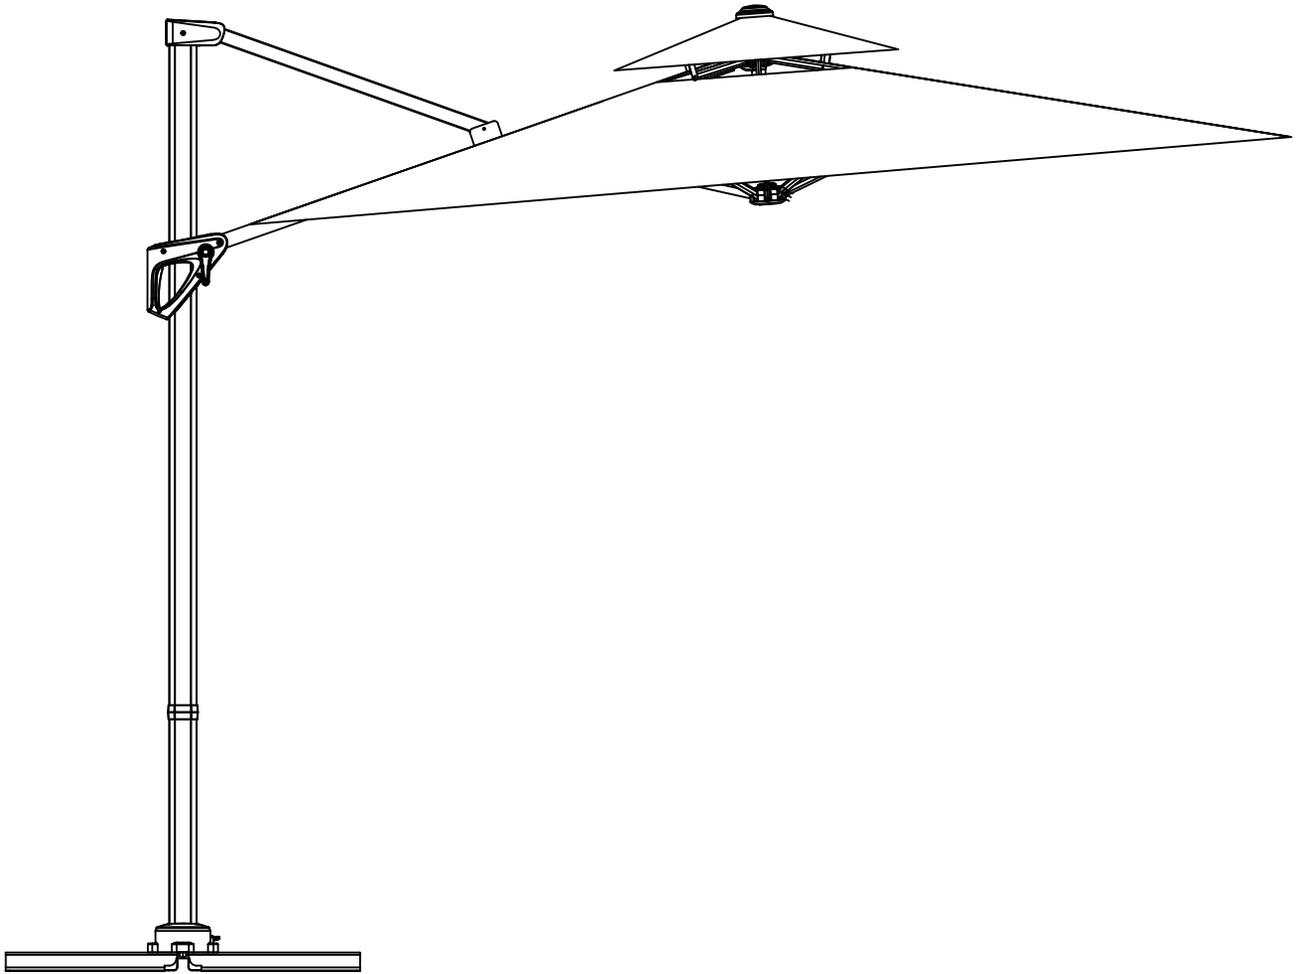

KINDLY NOTICE - Please read these instructions carefully before starting assembly

HASSEL-FREE WARRANTY

We proudly provide 1-YEAR warranty, if there is any questions with the products, please feel free to contact with us.

 Email: patio@homeselecting.com





2 PERSON ASSEMBLY



Around 5 MIN ASSEMBLY

Cantilever Parasols

If you have any issue with our products, such as missing parts, please email: patio@homeselecting.com

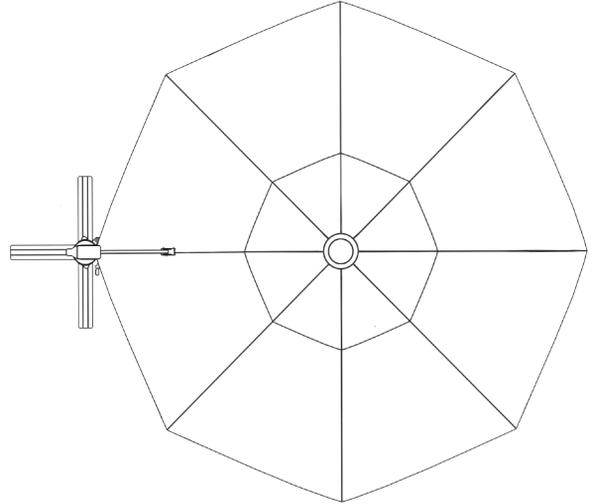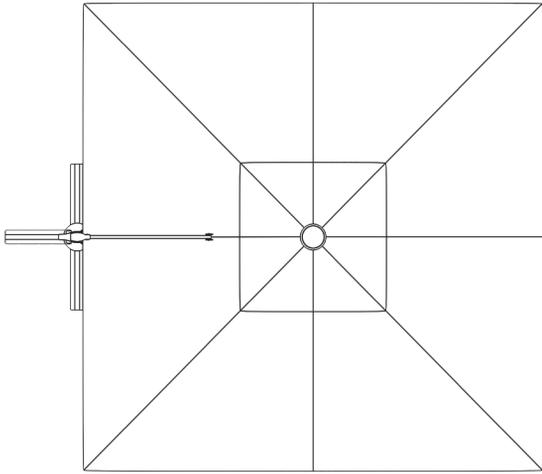

A014-507-109/A014-512-010/A014-513-011/A014-511-013



Scan the QR code for assembly videos

Contents

Safety Instructions	4
Care & Maintenance	4
Parts List	5
Assembly	6
After sale	10

Cantilever Parasols

If you have any issue with our products, such as missing parts, please email: patio@homeselecting.com

Usage Tips

Note Please retain these instructions for future reference

Please check all screws and knobs before use, Please read and understand this entire manual before attempting to assemble or install the product.

Recommended two people work together to install this product, children should not engage in the operation.

Every 3 months, check all screws and knobs make sure they are tightened

During the initial assembly, do not tighten all the screws until fully assembled

Please place the umbrella on a even and horizontal ground.

Note that some parts are heavy and have sharp edges, so you should pay attention to your hands being scratched when you take them

If any parts are broken, damaged, or missing, please do not attempt to assemble this product, please contact our customer service online

Umbrella base weights are not included. Do not use this umbrella without umbrella base weights.

Do not use umbrella in inclement weather, such as snow, heavy rain, thunderstorms, or strong wind.

Close the canopy when umbrella is not in use.

To further protect the umbrella, please use umbrella cover after close it.

Care & Maintain

If the umbrella encounters a humid environment, it needs to be dried in a sunny or naturally ventilated environment

Store in a dry place during the off season.

Keep the umbrella away from fire or heat sources.

Our umbrellas are suitable for home and leisure places such as courtyards, gardens, swimming pools, etc.

Fabric Care

To spot clean, use mild soap with lukewarm water, rinse, and air dry.

 
 
 
 
Do not clean with bleach or solvents.

In order to extend service life of your new patio umbrella, we customized the patio umbrella cover for each outdoor umbrella, we recommend you to cover and store the umbrella at night or during extreme weather conditions.

Parts List

If you have any issue with our products, such as missing parts, please email: patio@homeselecting.com

Pasts required


PART	QTY	VUE	PART	QTY	VUE
L	1		A	1	
B	1		C	1	
D	1		E	4	 (M8X15)
F	4	 (M8X20)	G	8	 (Ø8)
H	1		I	1	 (M8)
J	1		K	1	
M	1		N	1	

Assembly

If you have any issue with our products, such as missing parts, please email: patio@homeselecting.com


Step1

- 1) Place Part A (Upper Crossbar) onto Part B (Lower Crossbar), aligning the mounting holes as shown.
- 2) Secure Part D (Foot Pedal) to the crossbars using the screws (Part F). Tighten firmly.

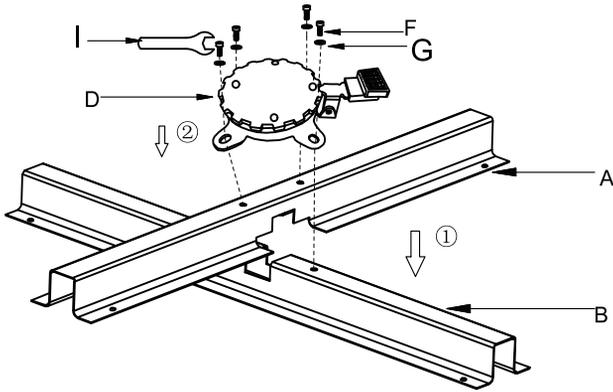


Step2

- Put Part C (Support Shaft) on Part D (Foot Pedal). Secure it using the screws (Part E) and washers (Part G), and tighten firmly. Next, place Part H (Foot Pedal Cover) over the assembly. Finally, install Part N (Plastic Part) on top.
- (NOTE:Weighted base NOT included)**

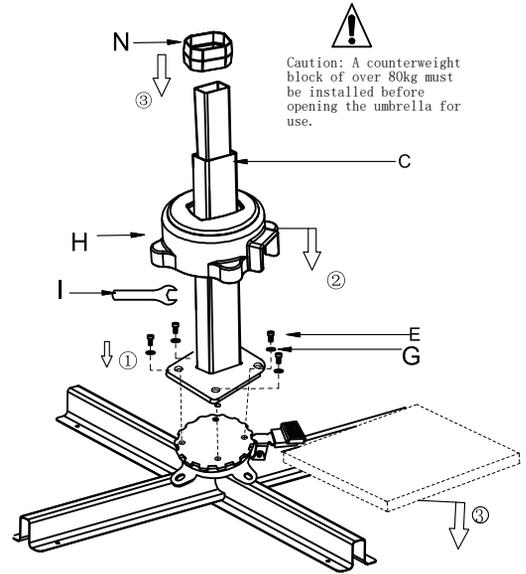


Step3

- Insert Part L (Umbrella) into the support shaft. Align the holes, then secure it by tightening the knob (Part J)

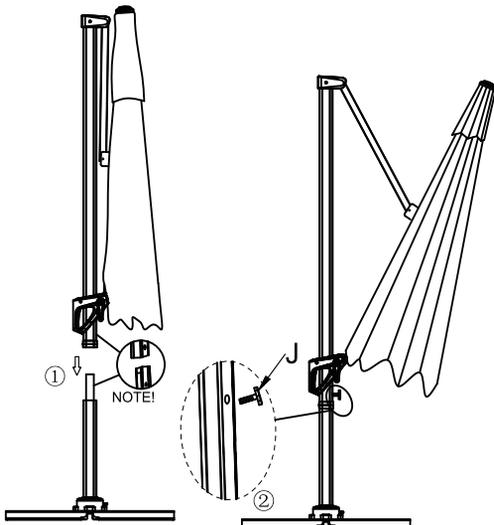

Step4

- Press the wrench/handle inward and push the umbrella upward to your preferred height(Five height designed). Release the handle/wrench to lock the umbrella in place and then turn the crank handle to fully open the umbrella

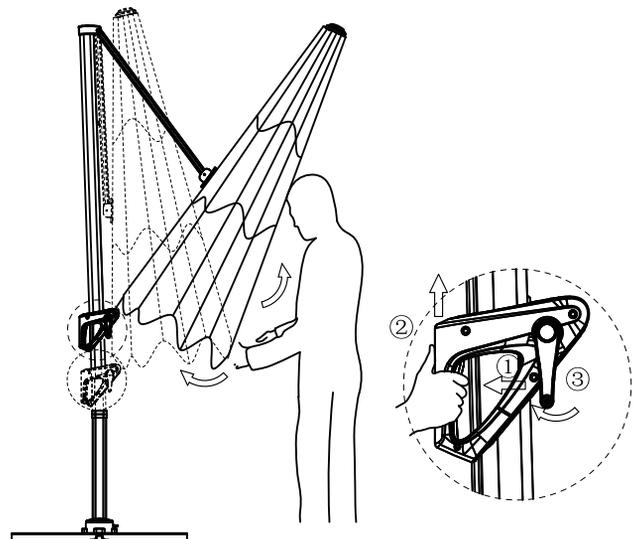


Assembly

If you have any issue with our products, such as missing parts, please email: patio@homeselecting.com


Step5

The umbrella can rotate 360°. Step on the foot pedal to rotate the umbrella to the desired position.

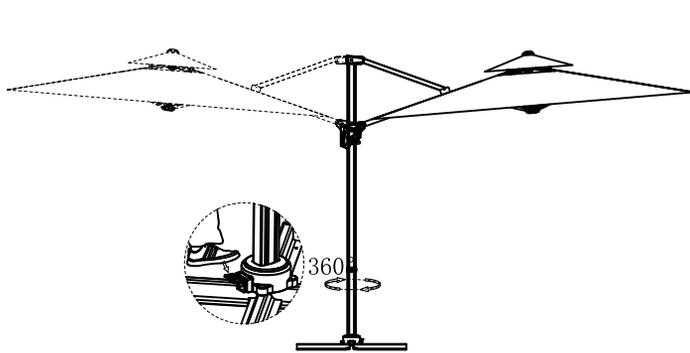


Step6

Press the wrench/handle inward, then pull up or push down on the handle at the same time to adjust the height. (Five heights designed)

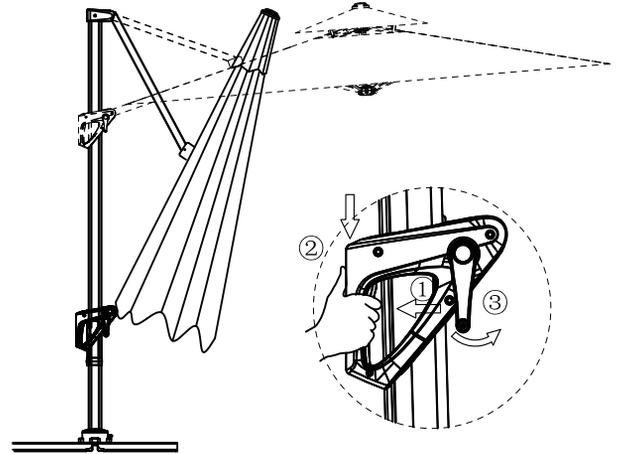


Step7

When the umbrella is not in use:
Turn the crank handle counterclockwise to close the umbrella.
Press the wrench/handle and push the umbrella downward.
Secure the canopy using the Velcro strap.

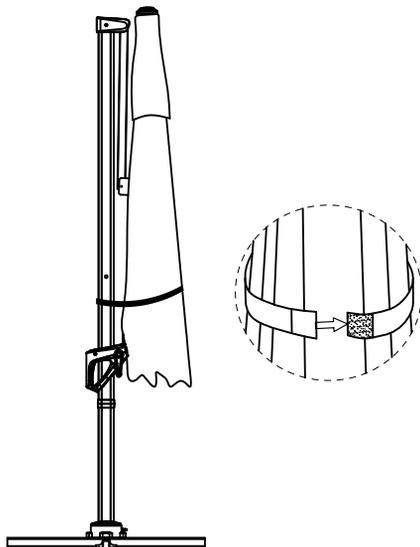

Step8

Cover for storage: Unfold the support rod and insert it into the canopy cover. Use the support rod to lift the cover and place it over the umbrella.

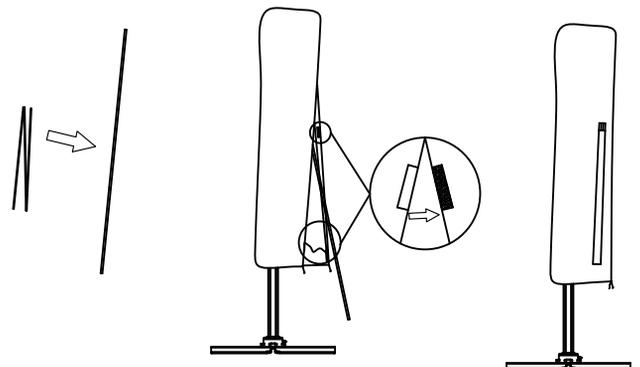



WARRANTY

Outdoor umbrella
1-year Warranty Program

For a period of one (1) years after date of purchase, the Manufacturer will either repair or replace defective components in accordance with this Limited Warranty. This warranty is between the Manufacturer and the original purchaser and is valid only when accompanied by the original purchaser's sales receipt showing original date of purchase and location of purchase. Replacements under this warranty revert back to the date of original purchase for future warranty

The manufacturer or its authorized dealer can accept or reject warranty claims based on its findings. This warranty applies in normal residential use only and is not intended for commercial use. The Manufacturer can make substitutions as required of materials, components, and sub-components of comparable value and utility. This warranty is limited to product repair or replacement (to be determined solely by the Manufacturer). Warranty return is limited to only the single affected component.

This limited warranty covers only manufacturing defects and does not cover normal wear and tear, damage due to acts of nature (such as, but not limited to freezing or high winds), abuse or misuse, including chemical damage from suntan oil or other chemicals, exposure to extreme heat or cold, abrasion or excessive weight. This product is intended to be used in standard installations only. This warranty is void if the product is not used for its intended purpose. The Manufacturer disclaims liability for any aspect of installation and any inconvenience caused by a defective part of a component

Certain items are not covered by this warranty. These include, but are not limited to the following:

1. Components subjected to abuse, including abuse intended to simulate failure
2. Damages caused by retailer, shipper or installation error (such as scratches, dents, tears, chips, etc.)
3. Any part that only shows normal wear and tear on the surface, including debris, scratches, or material stretching and stitching.
4. Tears, punctures, scratches or any damage caused by improper installation or use.
5. Damage to frames/welds resulting from improper assembly or exposure to water and/or sub-freezing temperatures is not covered.
6. The fading caused by other external forces on the umbrella cloth surface is not included.

**** If you need after-sales service, please provide the original purchase record and a brief description of the problem. Please also provide your email address or mobile number***