 


ASSEMBLY INSTRUCTION

DINING TABLE

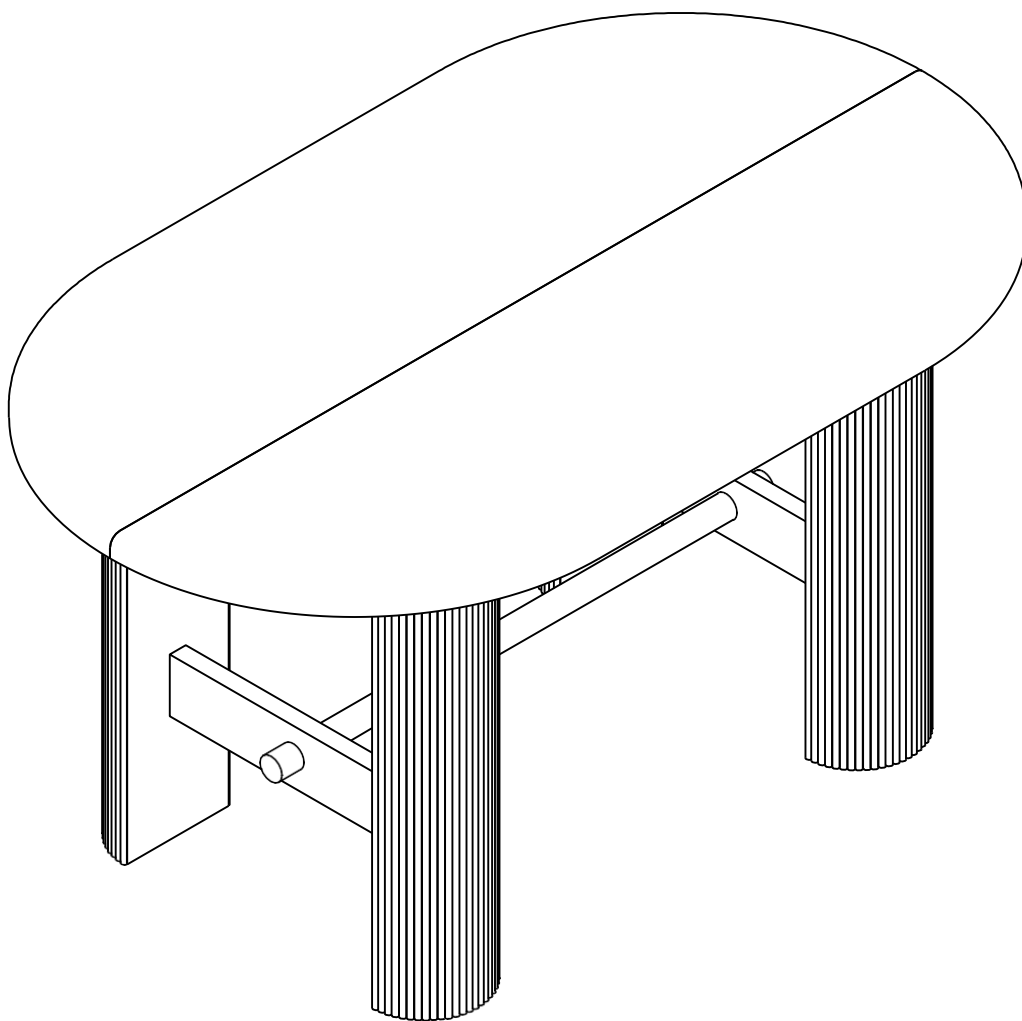 


N715P487120







IMPORTANT NOTE:

- 1: PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.**
- 2: BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.**
- 3: DO NOT TIGHTEN BOLTS UNTIL THE TABLE IS FULLY SET - UP.**

Detail View

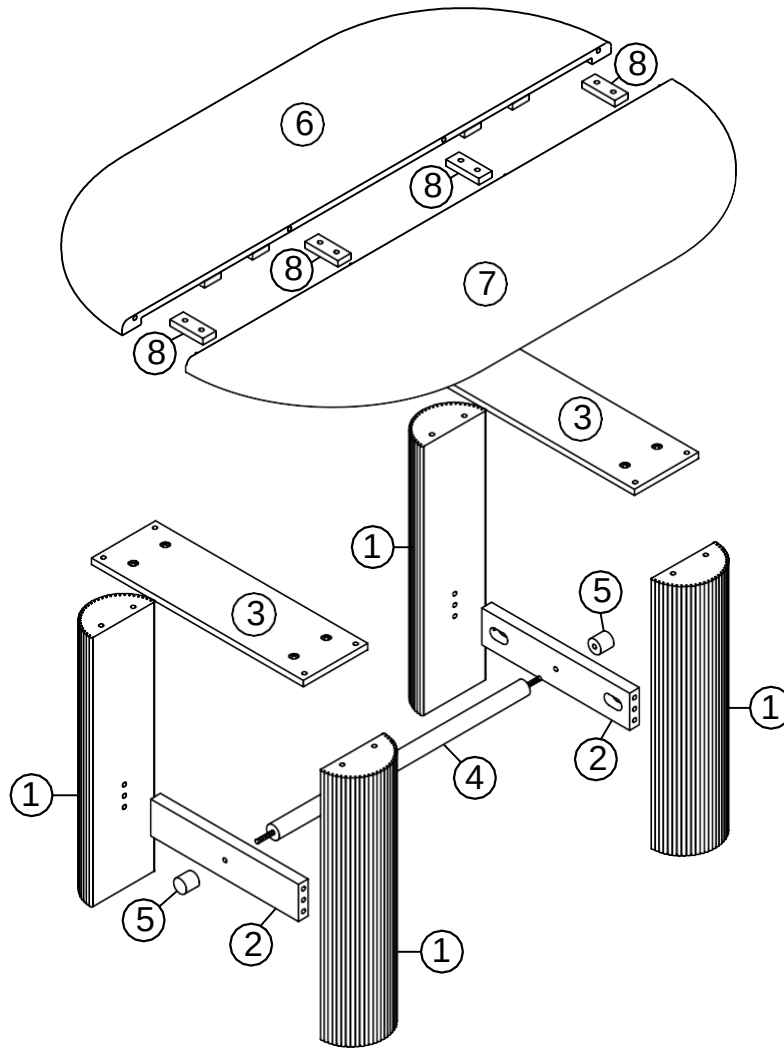


Part List

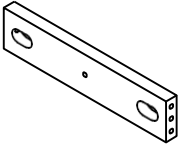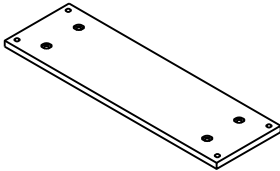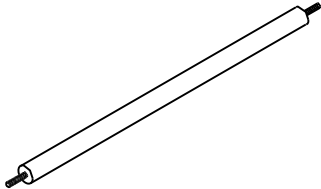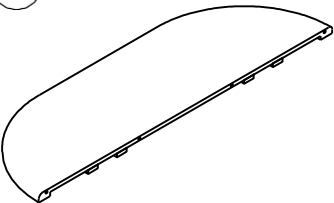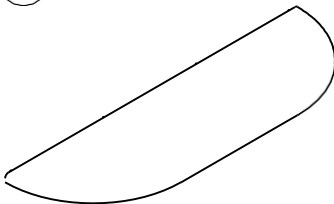      			
LEGS TABLE (4 pcs)	SUPPORT LEGS - BOTTOM (2 pcs)	SUPPORT LEGS - TOP (2 pcs)	SUPPORT LEGS - CENTER (1 pc)
			
TOP SUPPORT CENTER (2 pcs)	TOP HALF TABLE (1 pc)	TOP HALF TABLE (1 pc)	SUPPORT TABLE TOP (4 pcs)

Hardware List


A  5/16"x40 mm BOLT (20 pcs)	B  1/4"x30 mm BOLT (8 pcs)	C  5/16"x11 mm FLAT WASHER (28 pcs)
D  5/16"x19 mm FLAT WASHER (20pcs)	E  ARC WASHER (4 pcs)	F  4x58mm ALLEN KEY (1 pc)
G  Ø10x30 mm WOOD DOWEL (8 pcs)		

 STEP 1:

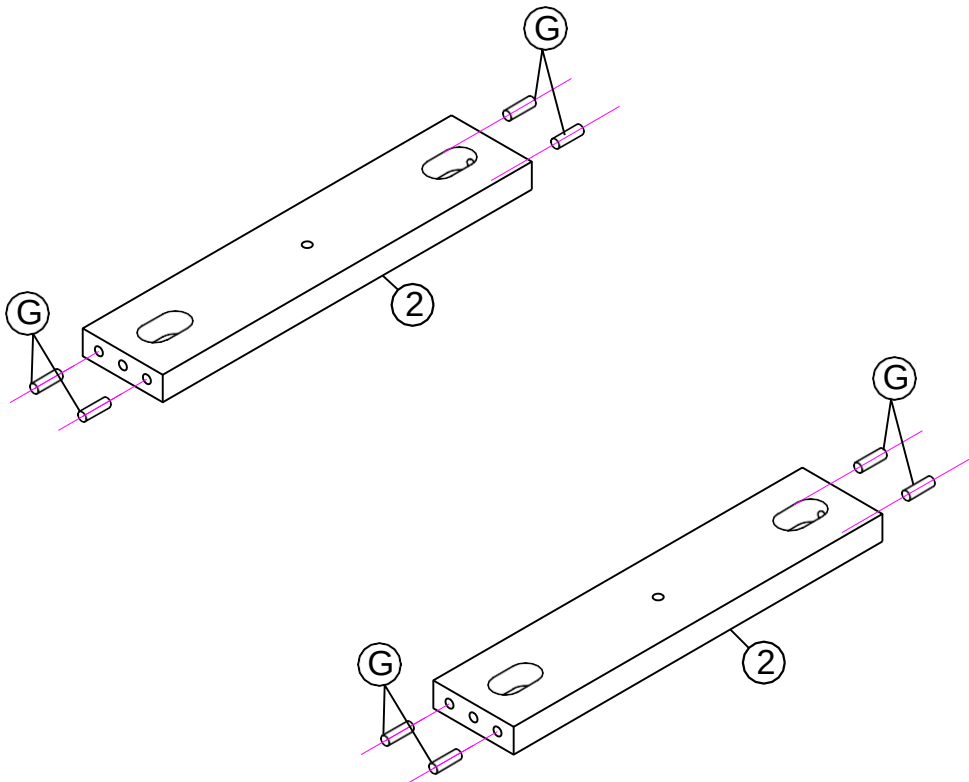


G 
8 pcs

 
STEP 2:

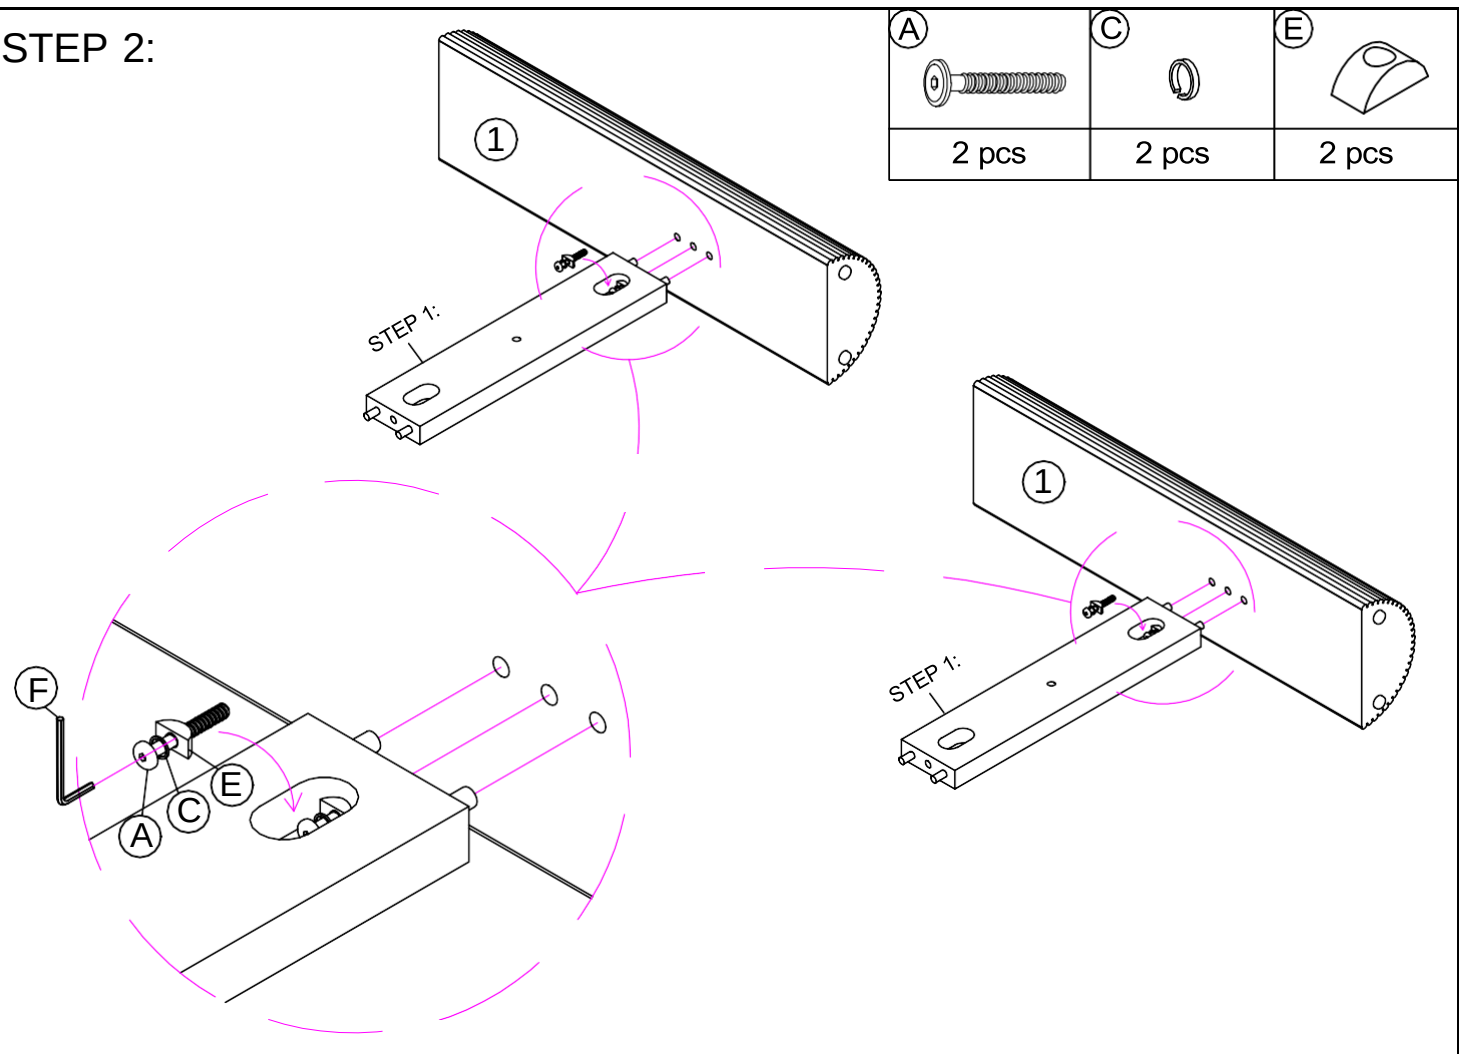

 
STEP 3:

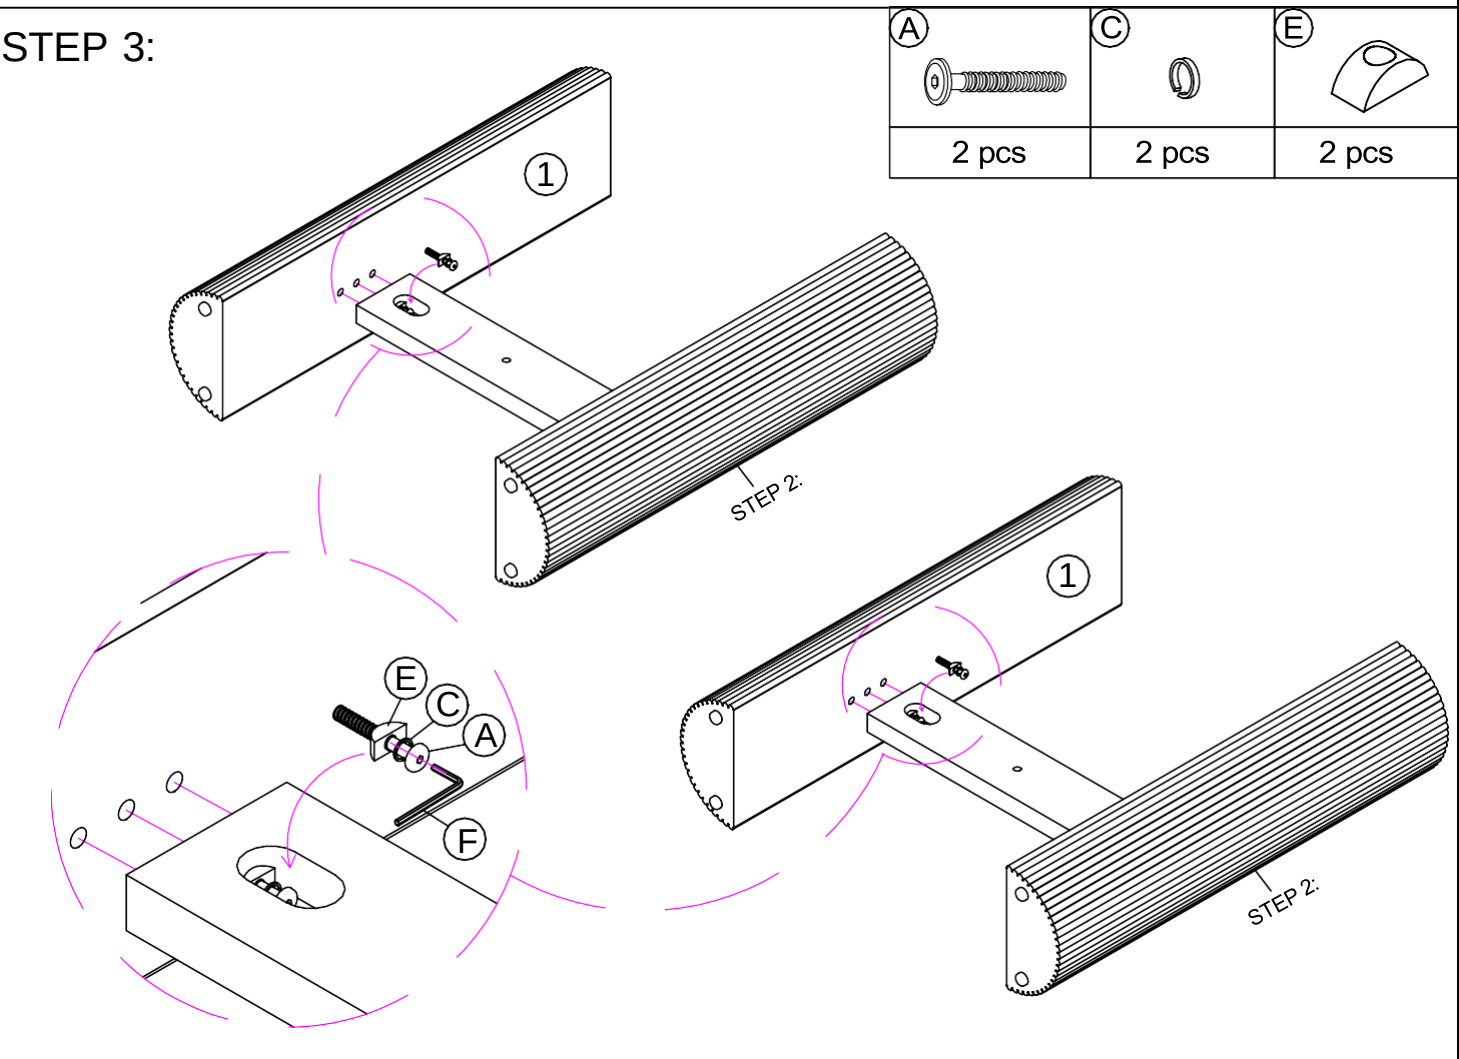

 
STEP 4:

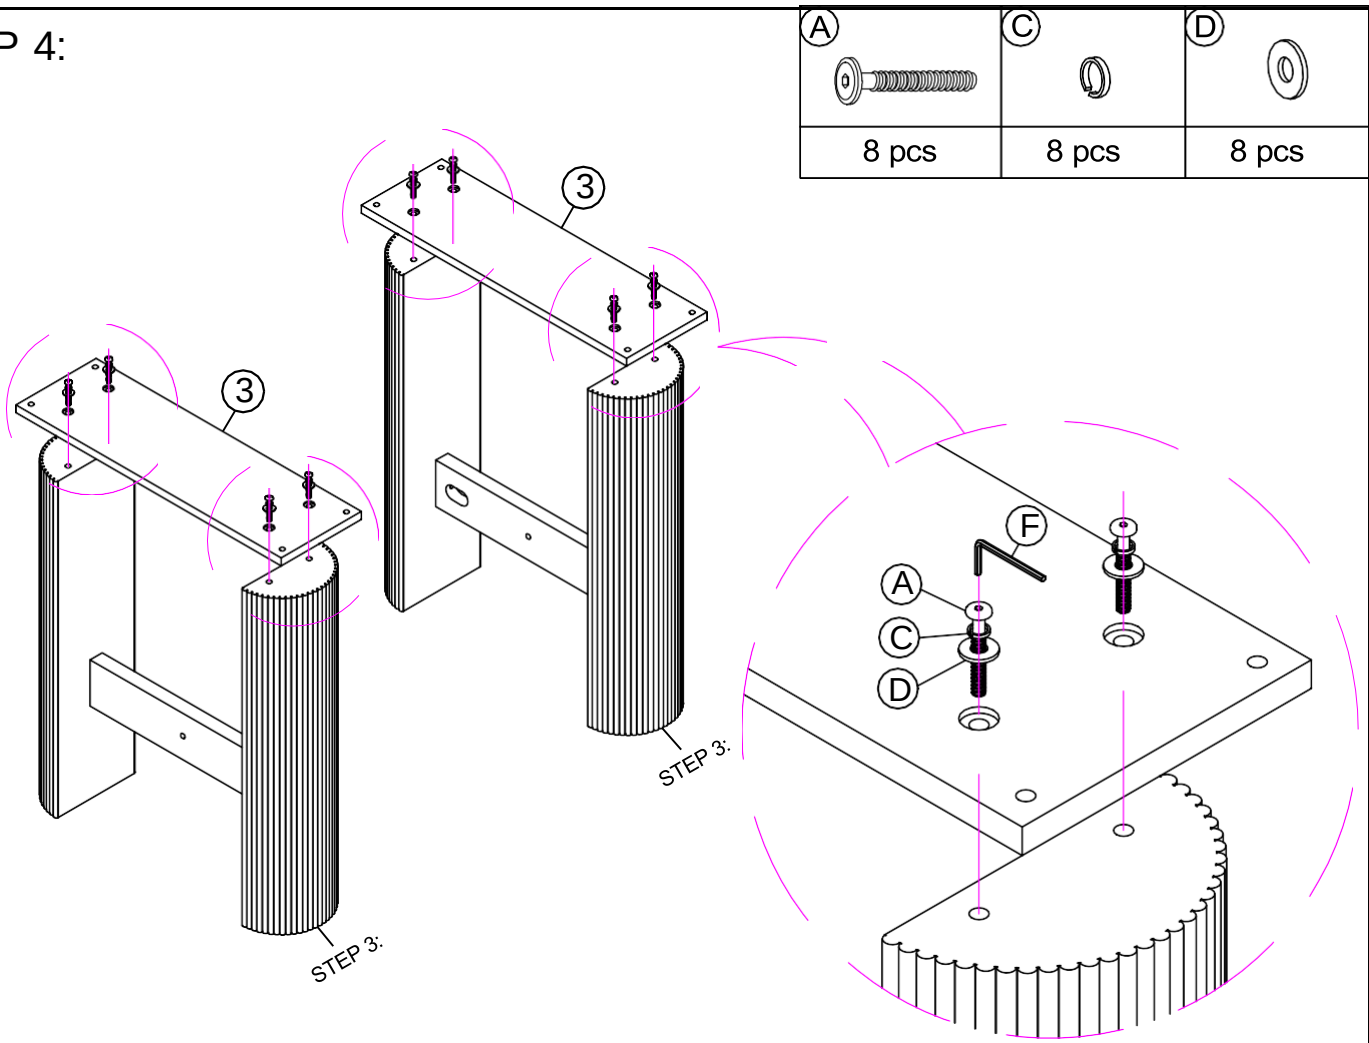

 
STEP 5:

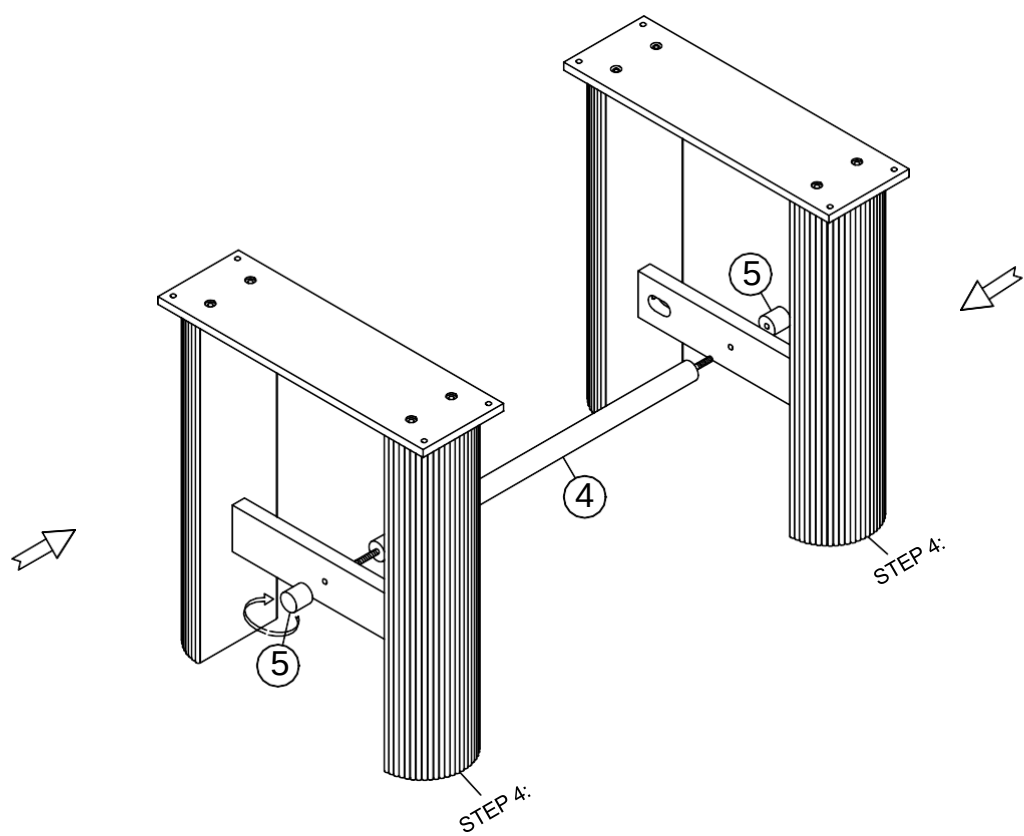

 
STEP 6:

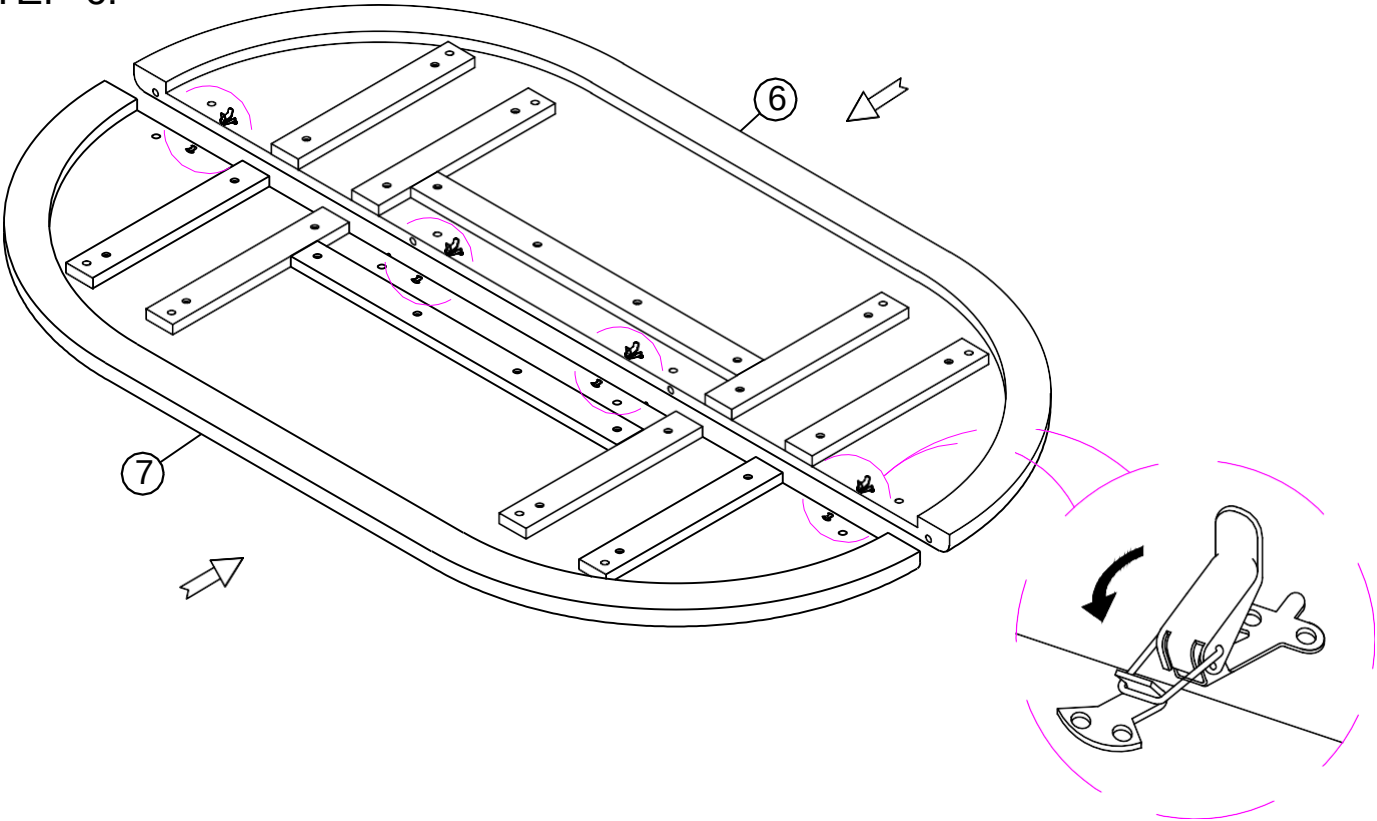

 STEP 7:

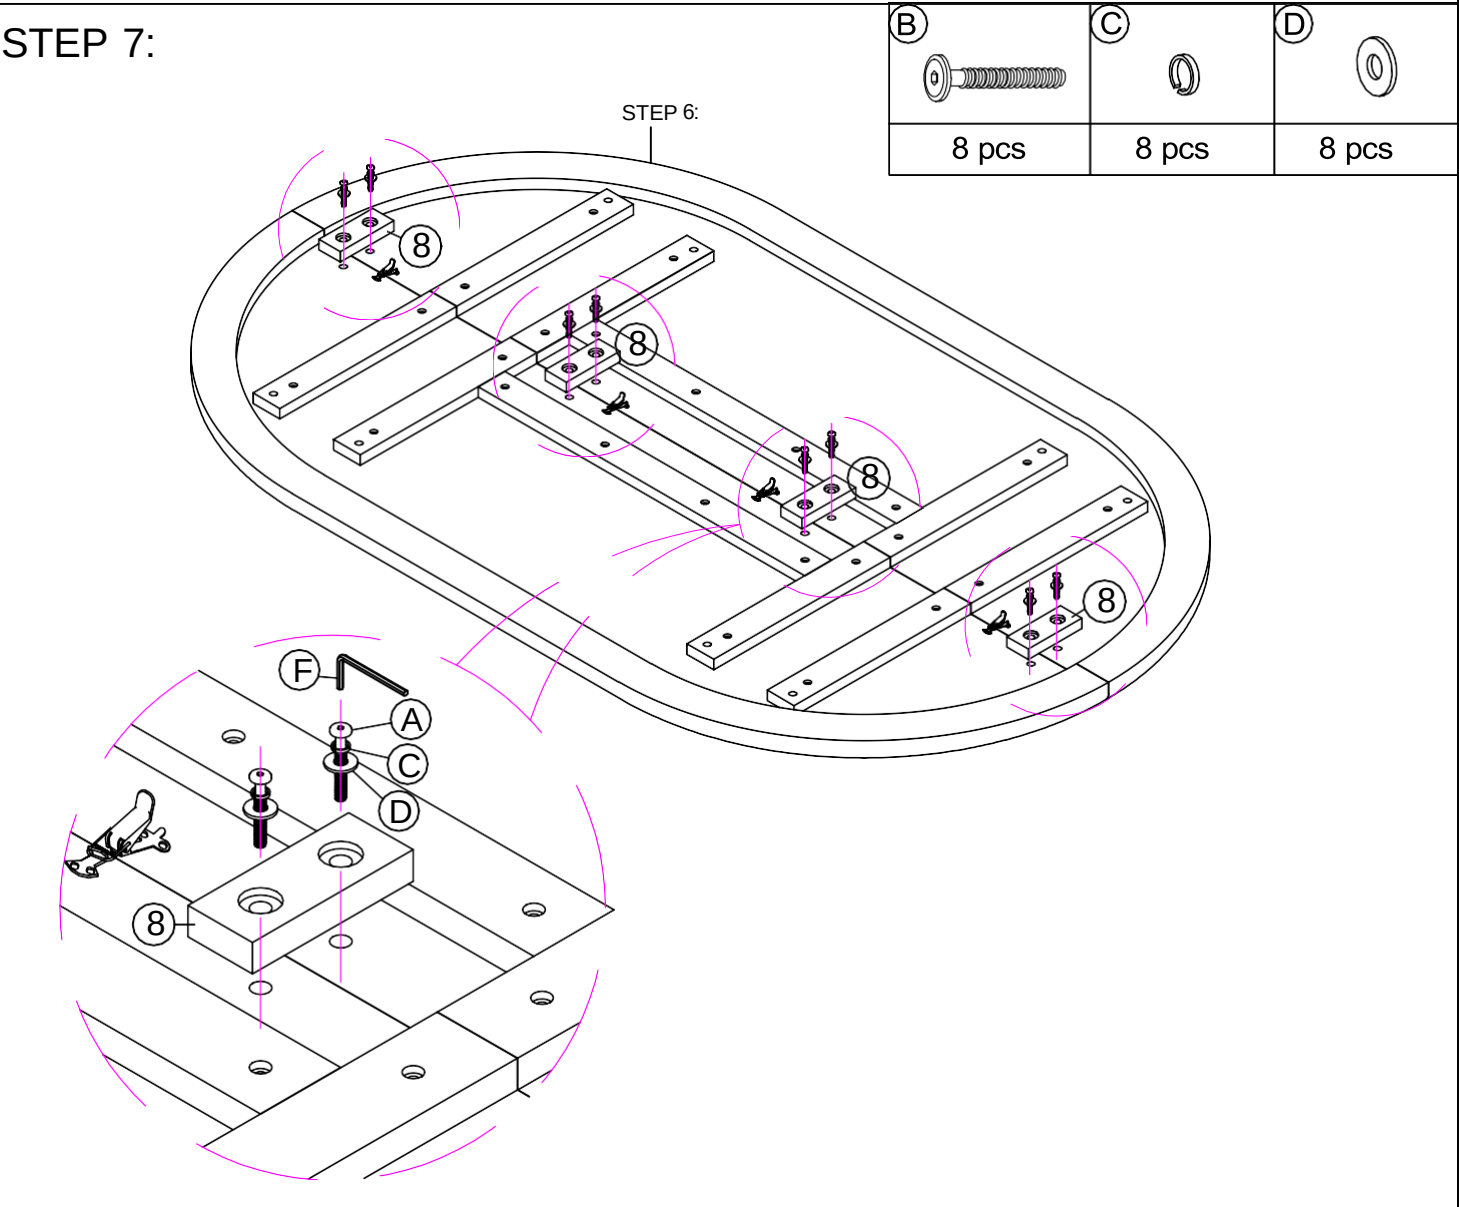

 STEP 8:

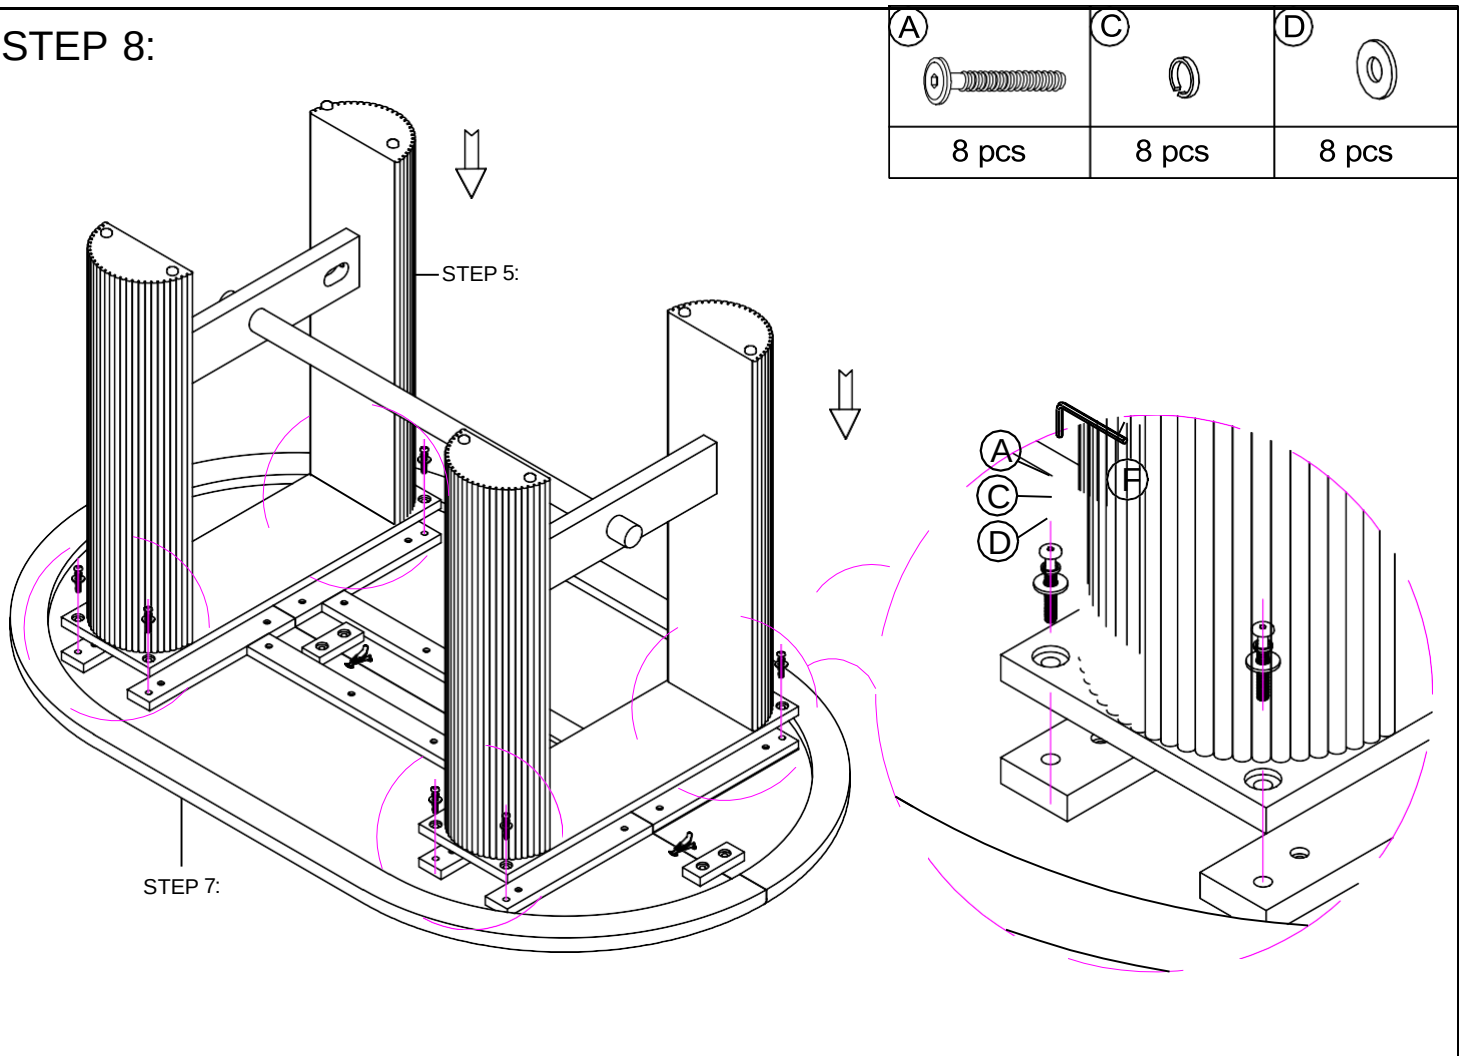

FULLY

