

Pre-Installation Light kit fitter assembly Fan-Motor assembly imes1PCS Light kit fitter assemlly $\times 1$ PCS LED $\times 1$ PCS lamp shade $\times 1PCS$ Blade X 3PCS Canopy X 1PCS Coupling cover X 1PCS Slide - on mounting bracket 4.92 inch Ball/downrod (inside canopy) X 1PCS assembly X 1PCS 9.84 inch Ball/downrod assembly X 1PCS Parts Kit Plastic wire nut Mounting screws (not to scale) Blade attachment screw

Hardware not shown to actual size.




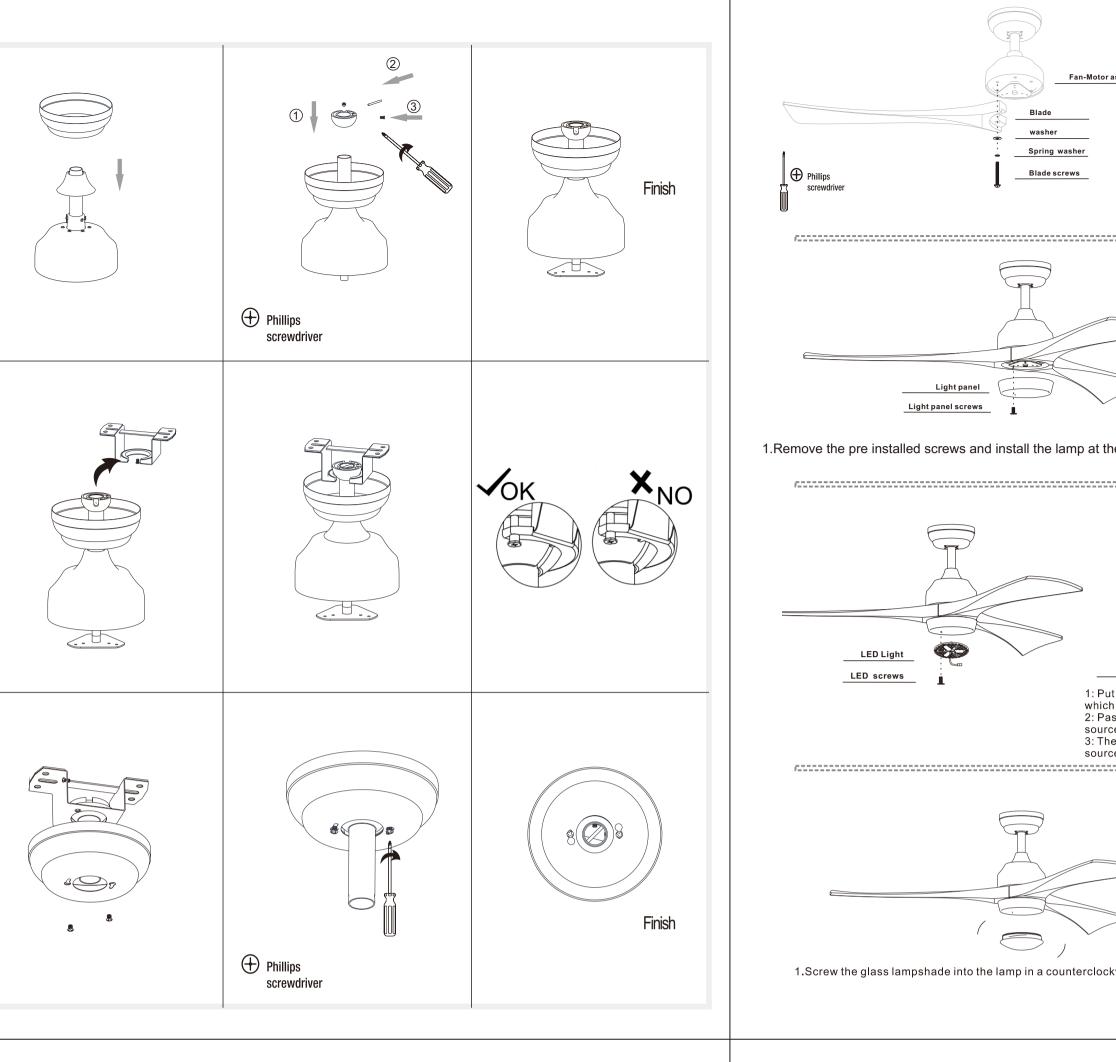

Fastening the blade arms to the motor

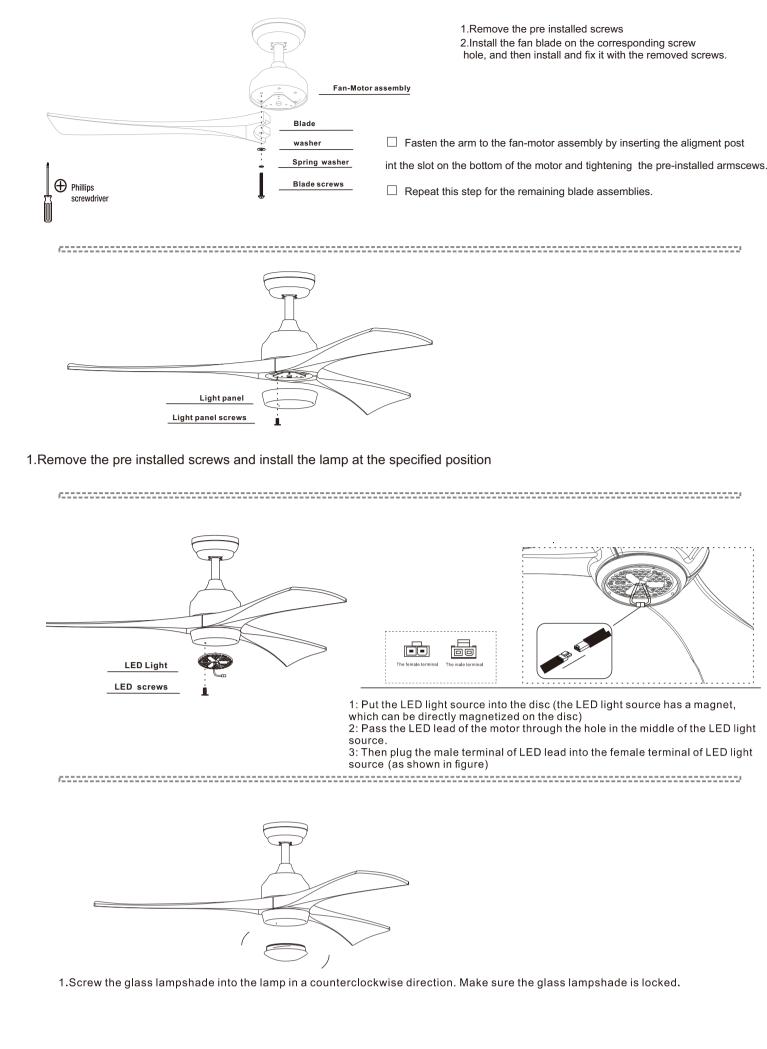

CONCRETE CEILING

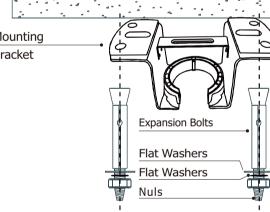

For concrete ceiling, use the percussion bit with diameter 8mm to drill holes according to the length of expansion screws. Then use the attached expansion screws to fix the hanging bracket onto the ceiling (selection is made according to actual requirements of the customers).

STEP 1 A-CONCRETE CEILING


SWITCH OFF THE ELECTRICAL MAINS AT THE CIRCUIT BREAKER FUSE BOX. 1)Use the Mounting Bracket as a guide, mark the spots where the 4 Expansion Bolts will be drilled.

52-INCH DEROCATE CEILING FAN

USE AND CARE GUIDE

2)Remove the Mounting Bracket , drill 2 holes and insert 2 Expansion Bolts into the concrete ceiling, install the mounting bracket and secure with Flat Washers, Spring Washers and Nuts.



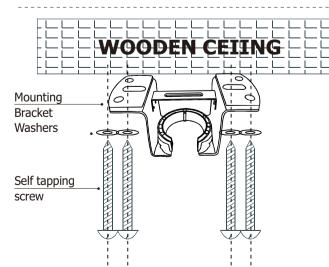

STEP 2 A-WOODEN CEILING

For wooden ceiling, use wood screw to drill on the wooden beam or the "junction box" to fix the hanging bracket(selection is made according to actual requirements of the customers)


SWITCH OFF THE ELECTRICAL MAINS AT THE CIRCUIT BREAKER FUSE BOX.

1) Use the Mounting Bracket as a guide, mark the spots where the 4 Self Tapping Screws will be drilled.

2) Remove the Mounting Bracket , drill 4 holes for 3MM diameter, install the mounting bracket onto wooden ceillng with the 4Self Tapping Screws &Washers

Install downrod assembly

NOTE

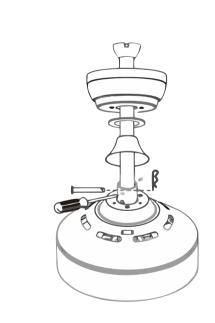

- ☐ Carefuly feed the molor wires up though the downrod
- ☐ Align the holes and replace hanger pin and locking pin.
- ☐ Tighten the two colar setscrews.
- ☐ Slip coupling cover, canopy coverand canopy onto the downrod.

Hang the fan



☐ Lift the fan motor assembly up to the mounting bracket and seat the hanger ball in the mounting bracket socket. Rotate the fan motor assembly until the check groove drops into the registration slot and seats firmly. The downrod should not rotate if the is done correctly

Install canopy




- ☐ Ensure the loosened screws is inserted into the key holes on the mounting bracket.
- ☐ Carefully raise the canopy up to the mounting bracket.Rotate the canopy clockwise.
- and tightening the screw previously loosened ☐ Place the canopy cover (if applicable)and rotate the canopy cover clockwise until it locks into position.

☐ Secure the canopy by replacing the screws previously removed

Making the electrical connections

Install downrod assembly

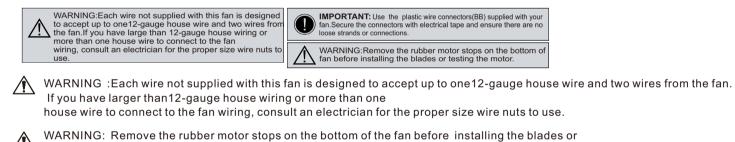


IMPORTANT: Use the plastic wire connectors(BB) supplied with your fan. Secure

the connectors with electrical tape and ensure there are no loose strands or

From CEILING FAN Red FOR MOTOR(FAN) Gray FOR MOTOR(FAN) Brown FOR MOTOR(FAN) BIUE FOR MOTOR(LIGHT) WHITE FOR MOTOR(LIGHT) push into

Install remote control

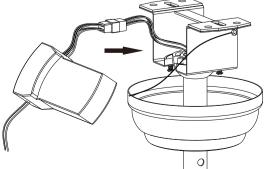


1. Carefully push the canopy to the bottom of the mounting bracket, make two sliding holes aligned to the two prominent screws on the mounting bracket, and then turn clockwise 2. Push the canopy ring to the bottom of the canopy, slide the inner holes aligned to the two prominent screws

on the mounting bracket again, and turn the canopy ring

clockwise until tight.

Preparing for mounting

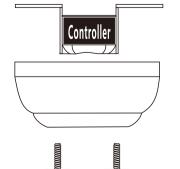

1:Remove the mounting bracket from the canopy by loosening the two canopy screws located in the L shaped slots. 2:Remove and save the two canopy screws in the round holes. This will enable you to remove the mountingbracket

LIGHT MUST BE KEPT AT THE ON POSITION

FAN MUST BE KEPT AT THE HIGH SPEED

Use of remote control

REMOTE CONTROL MANUAL

FUNCTION INSTRUCTIONS:

- Natural wind
- → Fan off
- Light on
- Mute
- Light off

Note · · Remote control pairing: Turn off main power for one minute; Turn on power, within 10 seconds, press * Fan off button(⊕) until hearing "beebee" sound, paring successful!

If the remote control is not working...

- 1.Please check if the batteries installed correctly.
- 2.Exclude using same kind of remote controls nearby.
- 3. Please check if the main power within the rated power.

