P. L. C.

PRJSM1006



Manual Pull-Down Projector Screens

PROJECTOR SCREEN USER MANUAL

PRJSM1006 - 100" -INCH PRJSM9406 - 84" -INCH


PRJSM7206 - 72" -INCH

INSTALLATION:

Install the screen in an area that can be easily viewed by anyone sitting in the room. Make sure it is the desired position, angle, and location of the screen before installing it. The screen will be used for a long time if you place it in the right area. This projector screen can be installed on the wall or ceiling (optional).


WALL SCREEN

Place the projector on the wall and make sure it is level; mark the two rings with a pencil so you know where to put the nails. Once you have the nail positioning correct, Hammer the nails in the wall (practice caution) in the places where you marked with the pencil; then hang the projector.

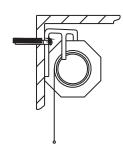

CEILING SCREEN

 When you are hanging the projector on the ceiling, follow the same steps for the wall. It is important to know what you are nailing into; make sure it has enough support to handle the weight of the projector.



Note: Make sure that you install the projector screen with enough height that the entire screen can be pulled down. After you used the screen, please check the fabric of the screen for dust and dirt. If it has any, please clean it with a soft brush.

INSTRUCTIONS:

- **1. Open screen:** This projector screen has a self-locking mechanism. Simply pull down the screen to your desired location and then release softly. Once you release the screen, it will start to pull up slightly and then lock itself into position. You are ready to project on to the screen.
- **2. Close screen:** When you wish to close the screen, pull the screen down slowly- at this point you will hear/feel the self-locking mechanism release. You can then slowly release the screen (keeping your hand on it) and smoothly guide it back into its position.

