

SYMMONS® Origins®

the smart choice™

Origins Trim Series

Origins Trim Series with TA-10 Flow Control Spindle & T-12A Cap Assembly Installation & Operation Instructions

Model Numbers

TRIM ONLY

9600-P-TRM
Shower Valve Trim

9600-PLR-TRM
Shower Valve Trim

9601-P-TRM
Shower Trim

9601-PLR-TRM
Shower Trim

9602-P-TRM
Tub/Shower Trim

9602-PLR-TRM
Tub/Shower Trim

9603-P-TRM
Hand Shower Trim

9603-PLR-TRM
Hand Shower Trim

9604-P-TRM
Tub/Hand Shower Trim

9604-PLR-TRM
Tub/Hand Shower Trim

9605-P-TRM
Shower/Hand Shower Trim

9605-PLR-TRM
Shower/Hand Shower Trim

9606-P-TRM
Tub/Shower/Hand Shower Trim

9606-PLR-TRM
Tub/Shower/Hand Shower Trim

TRIM, TA-10, T-12A

9600PTRMTC
Shower Valve Trim

9600PLRTRMTC
Shower Valve Trim

9601PTRMTC
Shower Trim

9601PLRTRMTC
Shower Trim

9602PTRMTC
Tub/Shower Trim

9602PLRTRMTC
Tub/Shower Trim

9603PTRMTC
Hand Shower Trim

9603PLRTRMTC
Hand Shower Trim

9604PTRMTC
Tub/Hand Shower Trim

9604PLRTRMTC
Tub/Hand Shower Trim

9605PTRMTC
Shower/Hand Shower Trim

9605PLRTRMTC
Shower/Hand Shower Trim

9606PTRMTC
Tub/Shower/Hand Shower Trim

9606PLRTRMTC
Tub/Shower/Hand Shower Trim



Compliance

• ASME A112.18.1/CSA B125.1



Warranty

Limited Lifetime - to the original end purchaser in consumer/residential installations.
5 Years - for industrial/commercial installations.
 Refer to www.symmons.com/warranty for complete warranty information.
 Go to www.symmons.com/register to register your Symmons product.



9600-P-TRM
9600PTRMTC



9600-PLR-TRM
9600PLRTRMTC



9601-P-TRM
9601PTRMTC



 
 
9601-PLR-TRM
9601PLRTRMTC




9602-P-TRM
9602PTRMTC




9602-PLR-TRM
9602PLRTRMTC




9603-P-TRM
9603PTRMTC

 


9603-PLR-TRM
9603PLRTRMTC

 


9604-P-TRM
9604PTRMTC

 

9604-PLR-TRM
9604PLRTRMTC

 


9605-P-TRM
9605PTRMTC

 

9605-PLR-TRM
9605PLRTRMTC



 
9606-P-TRM
9606PTRMTC




9606-PLR-TRM
9606PLRTRMTC

1. Recommended Tools

FIGURE 1

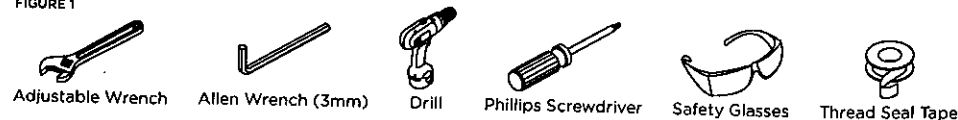

2. Dimensions

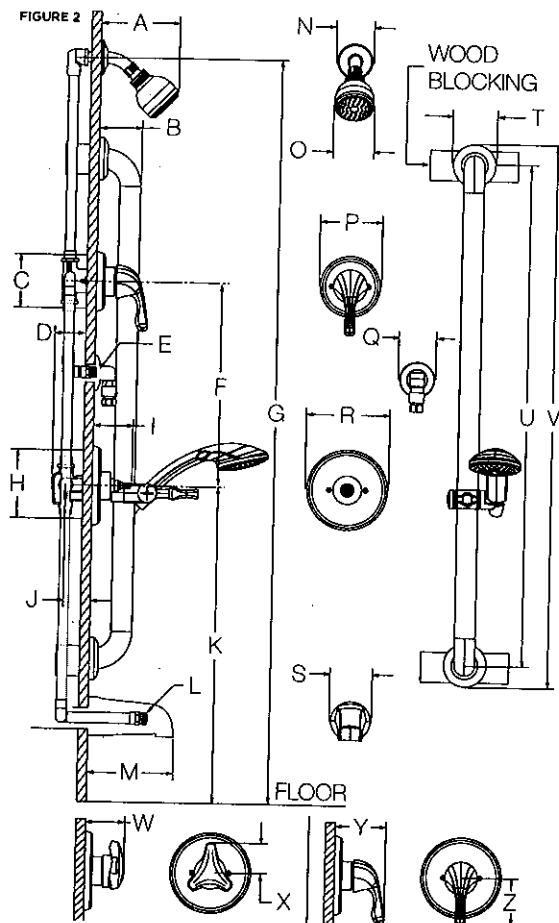

| Measurements | |
|--------------|---|
| A | 6-3/8", 162 mm |
| B | 3", 76 mm |
| C | Diverter Valve Hole Size Min. Ø 3", 76 mm Max. Ø 3-1/4", 83 mm |
| D | 3 1/2", 89 mm |
| E | Male 1/2" NPT fitting must protrude 3/8" from finished wall |
| F | Ref. 10", 254 mm |
| G | Ref. 77", 1956 mm |
| H | Shower Valve Hole Size Min. Ø 3", 76 mm Max. Ø 4", 102 mm |
| I | 2-7/8", 73 mm |
| J | Rough-in 2-3/8" ± 1/2", 60 mm ± 13 mm |
| K | 9600, 9601, 9603, 9605: Ref. 42", 1067 mm 9602, 9604, 9606: Ref. 32", 813 mm |
| L | Male 1/2" NPT fitting must protrude 4" from finished wall |
| M | 5-1/2", 140 mm |
| N | Ø 2-1/2", 64 mm |
| O | Ø 2-3/4", 70 mm |
| P | Ø 4-1/4", 108 mm |
| Q | Ø 2-1/2", 64 mm |
| R | Ø 5-3/4", 146 mm |
| S | Ø 2-1/2", 64 mm |
| T | Ø 3-1/8", 79 mm |
| U | 36", 914 mm |
| V | 39", 991 mm |
| W | 2-7/8", 73 mm |
| X | 2-1/8", 54 mm |
| Y | 3-5/8", 92 mm |
| Z | 3-3/8", 86 mm |

Notes:

- 1) Valve body and piping not included and shown as reference only.
- 2) Plaster shield (p/n T-176) for dry wall, plaster or other type walls 1/2" or greater.
- 3) All dimensions measured from nominal rough-in (see J as reference).
- 4) Dimensions subject to change without notice.

3. Parts Breakdown (Model Numbers Ending in TRMTC)

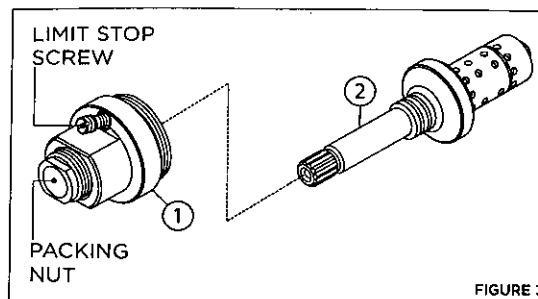


FIGURE 3

| Replacement Parts | | |
|-------------------|----------------------|-------------|
| Item | Description | Part Number |
| 1 | Cap Assy. | T-12A |
| 2 | Flow Control Spindle | TA-10 |

IMPORTANT: Model numbers ending in **TRMTC** coordinate with Temptrol pressure balancing valve: ordered with Test Cap. The Test Cap is used to allow pressurization of system. **Do not remove** test cap from valve during wall construction, installation of valve or pressurization of system.

⚠ WARNINGS:

1. Test cap rated for pressure testing up to 200 psi maximum. **DO NOT** exceed 200 psi while pressure testing valve body.
2. Do not expose valve with test cap to heat for longer than 2 minutes when soldering copper tubing. Doing so may damage the internal components of the valve and will void the product warranty.
3. Ensure test cap is re-torqued to 30 lb-ft after soldering valve body.

4. Installation - Remove Test Cap (Model Numbers Ending in TRMTC)

Flow control spindle (TA-10) and cap assembly (T-12A) will come factory assembled for all model numbers ending in **TRMTC**. When ready to remove Test Cap and install trim, follow the instructions below:

- 1) Check for leaks around the valve assembly and all pipe fittings.
- 2) Remove test cap from valve (FIGURE 4.1).
- 3) If system is dirty, flush valve.
- 4) Thread flow control spindle and cap assembly into valve body. Turn clockwise to secure to valve (FIGURE 4.2).

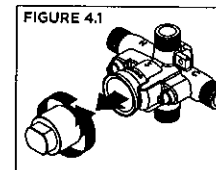


FIGURE 4.1

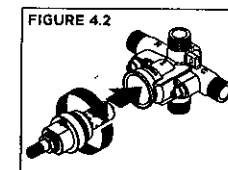


FIGURE 4.2

5. Installation - Adjust Packing Nut (Model Numbers Ending in TRMTC)

- 1) Turn hot and cold supplies on. Valve will not operate unless both hot and cold water supply pressures are on.
- 2) Place handle over flow control spindle.
- 3) Tighten packing nut for positive frictional resistance as handle is rotated from shut-off position across adjustment range.

6. Installation - Setting Limit Stop Screw (Model Numbers Ending in TRMTC)


The temperature limit stop screw limits valve handle from being turned to maximum position resulting in excessive hot water discharge temperatures.

⚠ WARNING: Failure to adjust limit stop screw properly may result in serious scalding.

- 1) Turn hot and cold supplies on. Valve will not operate unless both hot and cold water supply pressures are on.
- 2) Place handle on flow control spindle and open valve to maximum desired temperature.
- 3) Turn limit stop screw clockwise until it seats.

7. Parts Breakdown

FIGURE 7

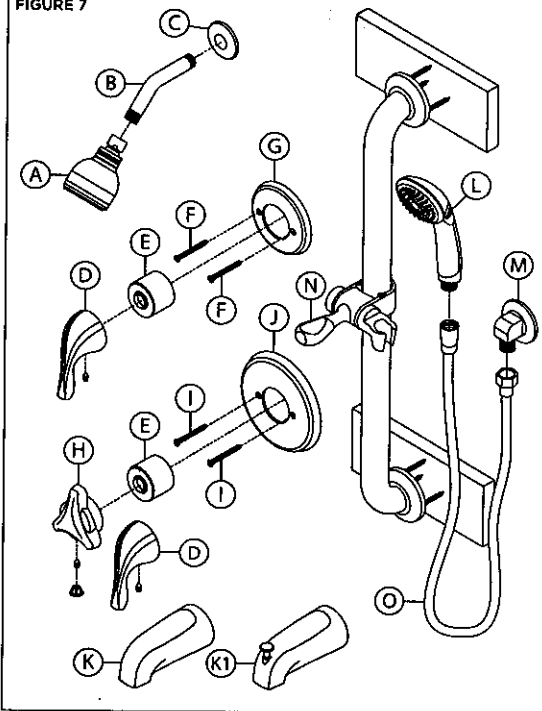

| Replacement Parts | | |
|-------------------|-----------------------------|---------------------------------|
| Item | Description | Part Number |
| A | Showerhead | 4-141 |
| B | Shower Arm | 300S |
| C | Flange | |
| D | 'PLR' Handle | RTS-063 |
| E | Dome Cover | T-19 |
| F | Diverter Escutcheon | 96-66-DIV-ESC |
| G | Screws | |
| H | 'P' Handle | RTS-061 |
| I | Shower Escutcheon Screws | Standard (P): 9600-P-ESC |
| J | | Brass (P): 9600-P-B-ESC |
| | | Standard (PLR): 9600-PLR-ESC |
| | | Brass (PLR): 9600-PLR-B-ESC |
| K | Tub Spout | 060 |
| K1 | Diverter Tub Spout | 054 |
| L | Hand Shower | ADACHS |
| M | Wall Elbow | 40A |
| N | Slide Mechanism | FP-SM6 |
| O | 60" Hose | RTS-045 |

Notes:

- 1) Append appropriate suffix for premium finish.
- 2) Append appropriate flow rate to showerhead or hand shower for low flow.
- 3) Apply a bead of silicone around the perimeter of all shower trim installed flush to the finished wall. Leave opening on bottom of escutcheons for weep hole.
- 4) Apply plumber tape to all threaded connections.



*Order in-line vacuum breaker (EF-109) for hand shower systems without dual checks.

8. Installation - Shower Valve Trim

- 1) Secure large shower escutcheon to Temptrol pressure balancing valve using mounting screws (FIGURE 8.1).
- 2) Install dome cover by turning clockwise (FIGURE 8.2).
- 3) Install 'P' handle to shower valve. Secure with set screw. Install plug button (FIGURE 8.3).
- 4) Install 'PLR' handle to shower valve. Secure with set screw (FIGURE 8.4).

FIGURE 8.1

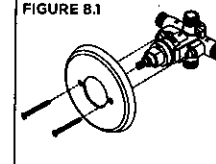


FIGURE 8.2

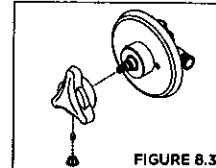
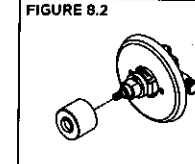


FIGURE 8.3

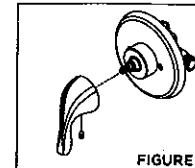


FIGURE 8.4

9. Installation - Diverter Valve Trim

- 1) Secure small diverter escutcheon to Symmons diverter valve using mounting screws (FIGURE 9.1).
- 2) Install dome cover by turning clockwise (FIGURE 9.2).
- 3) Install handle to diverter valve. Secure with set screw (FIGURE 9.3).

FIGURE 9.1

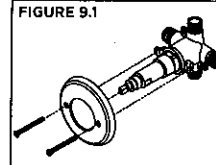


FIGURE 9.2


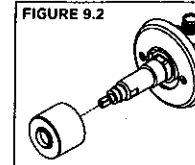


FIGURE 9.3

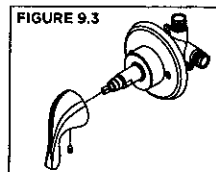

10. Installation - Showerhead & Tub Spout

- 1) Attach arm and flange to shower pipe. Turn clockwise to tighten (FIGURE 10.1).
- 2) Install showerhead to shower arm. Turn clockwise to tighten (FIGURE 10.2).
- 3) Install tub spout to stub out pipe. Turn clockwise to tighten (FIGURE 10.3).

FIGURE 10.1

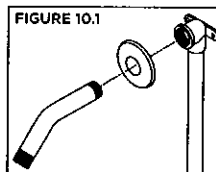


FIGURE 10.2











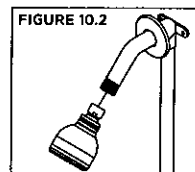


FIGURE 10.3

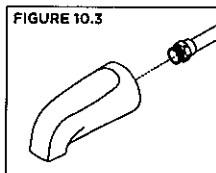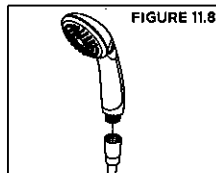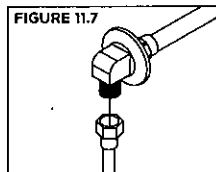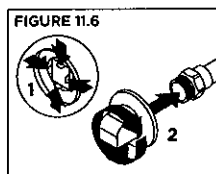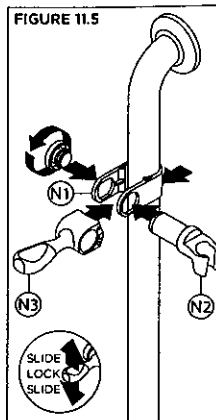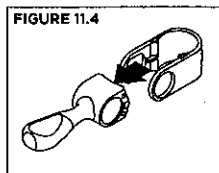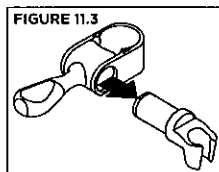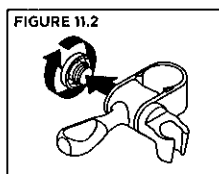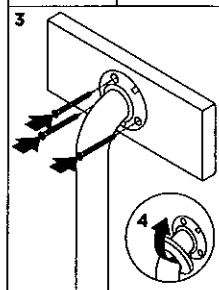




11. Installation - Slide Bar Assembly

- 1) Remove slide bar ends from slide bar flanges. Using flanges as a guide, drill 1/8" pilot holes into studs or wood blocking. With slide bar in position, secure to wall using screws. Attach slide bar ends to bar flanges (FIGURE 11.1).
- 2) Remove screw cap from slide mechanism (FIGURE 11.2).
- 3) Remove wand holder from slide mechanism (FIGURE 11.3).
- 4) Remove lever handle from slide mechanism (FIGURE 11.4).
- 5) Install slide mechanism components to slide bar following STEPS 11.2 - 11.4 in reverse. Flat edge on (N1) and (N2) must be aligned. Arrows on (N1) and (N3) identify bottom side (FIGURE 11.5).
Note: Adjust screw cap for ease of movement of slide assembly.
- 6) Press tabs on wall elbow flange. Install wall elbow to pipe fitting. Turn clockwise to secure (FIGURE 11.6).
- 7) Attach small end of hand shower hose to wall elbow. Turn clockwise to tighten (FIGURE 11.7).
- 8) Attach large end of hand shower hose to hand shower wand. Turn clockwise to tighten (FIGURE 11.8).

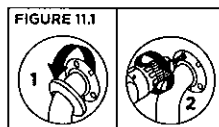

12. Operation (Temperature Control)




- 1) Turn shower handle counter-clockwise approximately 1/4 turn to put valve in cold position (FIGURE 12.1).
- 2) Turn shower handle counter-clockwise approximately 1/2 turn to put valve in warm position (FIGURE 12.2).
- 3) Turn shower handle counter-clockwise approximately 3/4 turn to put valve in hot position (FIGURE 12.3).

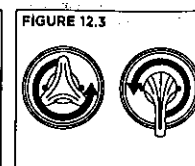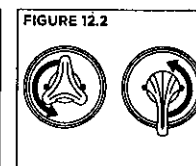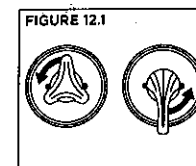

13. Operation (Dual Outlet Diverter Control)







Note: Additional handle positions for same output are illustrated.

- 1) Cartridge is factory set to divert to function 1 (FIGURE 13.1).
- 2) Turn handle to position 2 to divert to function 2 (FIGURE 13.2).
- 3) Turn handle to position 3 to share functions 1 and 2 (FIGURE 13.3).

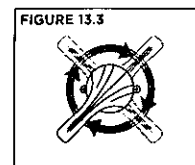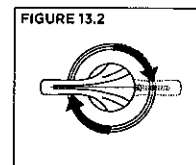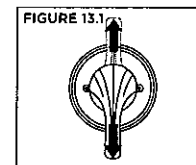


14. Operation (Triple Outlet Diverter Control)

- 1) Cartridge is factory set to divert to function 1 (FIGURE 14.1).
- 2) Turn handle to position 2 to divert to function 2 (FIGURE 14.2).
- 3) Turn handle to position 3 to divert to function 3 (FIGURE 14.3).
- 4) Turn handle to position 4 to share functions 2 and 3 (FIGURE 14.4).
- 5) Turn handle to position 5 to share functions 1 and 3 (FIGURE 14.5).
- 6) Turn handle to position 6 to share functions 1 and 2 (FIGURE 14.6).

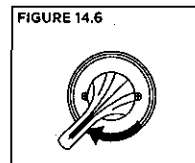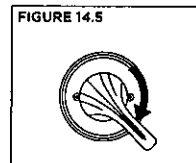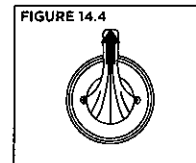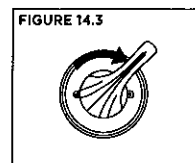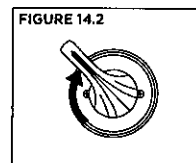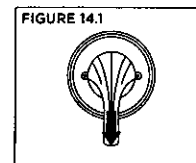





262BODY
4 PORT

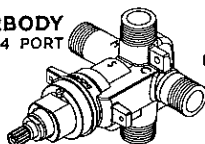

262XBODY
4 PORT
EASYSERVICE™
STOPS

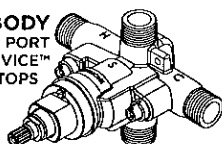

261XBODY
3 PORT
EASYSERVICE™
STOPS

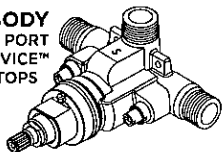

Temptrol® Pressure Balancing Valve 262BODY, 262XBODY, 261XBODY Installation Instructions

COMPLIANCE

- ASME A112.18.1/CSA B125.1
- ASSE 1016
- Buy American Act Compliant



IMPORTANT / FOR INSTALLER

▲ WARNING:

As the installer of this valve, you must first carefully read and understand the material covered in this manual before installing and adjusting this valve per instructions. Failure to do so may compromise the installation, operation and/or serviceability of this valve.

DO NOT install positive shut-off devices on the outlet of this valve, or devices that do not allow the valve to flow at least 1.5 GPM at 45 psi inlet pressure. Exception: If a self-closing or slow-closing valve is installed on the outlet, the supplies of the valve must be equipped with checks to eliminate hot to cold bypass in the event the valve's handle is not turned off after use.

When installing this valve, failure to adjust limit stop screw properly may result in serious scalding.

LIFETIME LIMITED WARRANTY

All warranty claims **MUST** be pre-approved by Symmons.

All parts and finishes of the Symmons products are warranted to the original consumer purchaser to be free from manufacturing defects in material and workmanship for 5 years Non-Residential or Commercial Applications. Symmons warrants to the original consumer purchaser/end-user that any Symmons product will be free of defects in material and workmanship during normal domestic use for the life of your home.

Symmons recommends using a professional plumber for all installation and repair. During the warranty period, Symmons at its sole option, will provide replacement part(s) or product (or, if no longer available, a comparable product) to replace those which have proven defective in materials or workmanship under normal installation, use and service, **FREE OF CHARGE** for the time period of 5 years from the date of purchase. (BATTERIES NOT INCLUDED)

This warranty is extensive in that it covers replacement of all defective parts and even finish, but these are the only two things that are covered. Damage due to installation error, product abuse, product misuse, or use of cleaners containing abrasives, alcohols, or other organic solvents, whether performed by a contractor, Service Company or yourself are excluded from this warranty. Symmons will not be responsible for labor charges and/or damage incurred in installation or repair or replacement, nor for any indirect, incidental or consequential damages, losses, injury or costs of any nature relating to the bathing products. Except provided by law, this warranty is in

lieu of and excluded all other warranties, conditions and guarantees, whether expressed or otherwise, including without restriction those of merchantability or of fitness for use.


Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation of exclusion may not apply to you. This warranty gives you specific legal rights, and you also may have other rights which vary from state to state. This warranty is not transferable. This warranty does not cover damage or defects relating to misuse, abuse, negligence, normal wear and tear, accident, acts of God, repairs or alterations not authorized in writing by Symmons, or improper installation, storage or handling.

The above mentioned warranty information includes each product that falls under the following: Symmons Bathing Products Warranty- Non-Residential or Commercial Applications; Symmons Non-Electronic Lifetime Faucet and Finish Limited Warranty Non-Residential or Commercial Applications; Symmons Electronic Faucet Limited Warranty - Non-Residential, Commercial and Residential Applications; Symmons Bathing Products Warranty- Residential Application Symmons Non-Electronic Lifetime Faucet and Finish Limited Warranty Residential Application

If you have any questions regarding technical support, installation or concerns regarding our warranty plan, please email us at GetHelp@symmons.com or call us at: 1-800-796-6667.


1. RECOMMENDED TOOLS

Copper, IPS, CPVC, PEX (Crimp) & PEX (Cold Expansion), ProPress

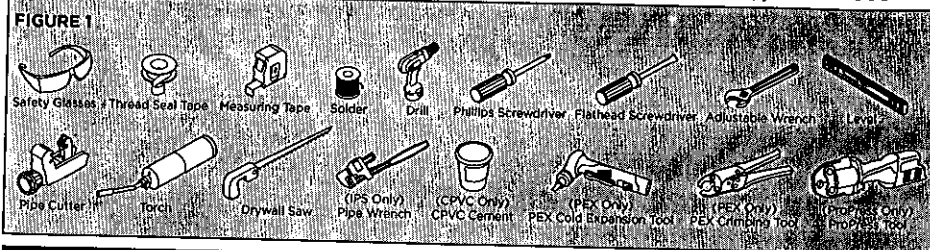

2. BRACKET INSTALLATION (P/N: 262BRBODY, 262XBRBODY)

2.1 Metal Straps

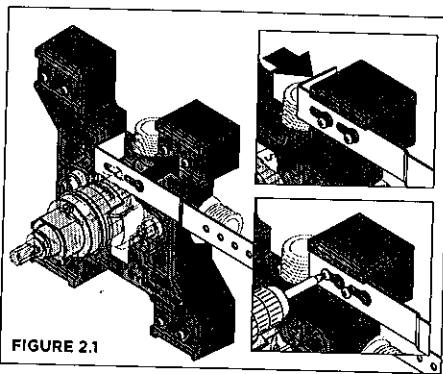


Rapid Install™ Bracket is used to secure valve between wall studs up to **24 inches**, center to center. Bracket will fit in minimum **2x3 wall cavity**. Bracket will rough valve at **2-7/8"** from centerline of valve ports to front of finished wall.

1. Place metal straps (x4) over screws. Screws will come preassembled to bracket.
2. Pull metal straps tight against bracket ears. Screws will protrude through small screw hole in metal straps.
3. Drive screws into bracket to secure straps.

⚠ Use caution not to strip screws.

NOTE: Valve will come preassembled to mounting bracket unless otherwise specified.

2.2 Install Bracket

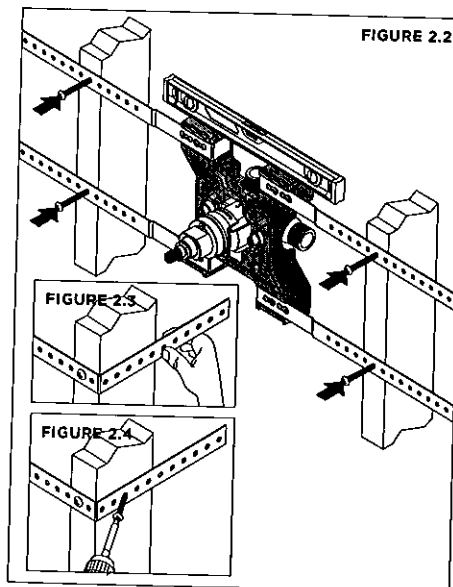


Rapid Install™ Bracket will locate valve body in wall cavity at appropriate depth (valve body rough-in is not required).

1. Confirm valve body and mounting bracket are level. Drive (x4) wood screws through metal straps into wood studs (see FIGURE 2.2)
2. Bend excess strap around wood studs. (see FIGURE 2.3)
3. Drive (4x) wood screws, at inward angle, through metal straps into sides of wood studs (see FIGURE 2.4). Installing wood screws at inward angle will pull metal straps tight against wood studs.

NOTE: If not using mounting bracket, see STEP 5.1 for stringer mounts installation.


3. DIMENSIONS AND MEASUREMENTS

3.1 Tub/Shower Systems

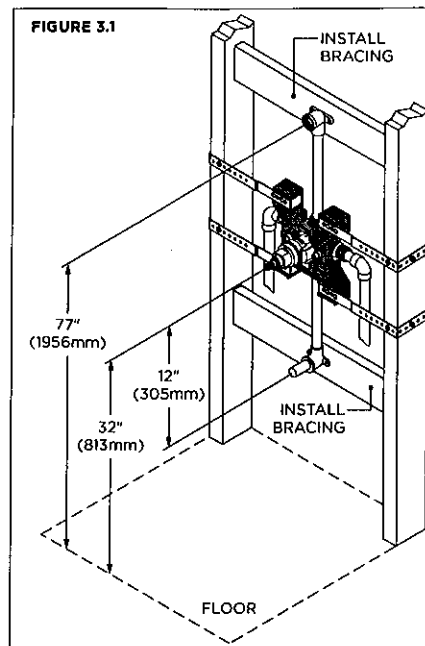


Valve should be positioned 32 inches above the tub basin floor. Shower arm should be 77 inches above the tub basin floor. Tub spout should be positioned approximately 12 inches below the valve.

When valve is used in shower only or tub spout only installation, apply plumber tape to outlet that will not be used and install the enclosed cap (TO5537KIT) to that outlet (see FIGURE 3.2).

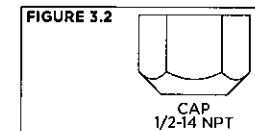

3.2 Shower Systems

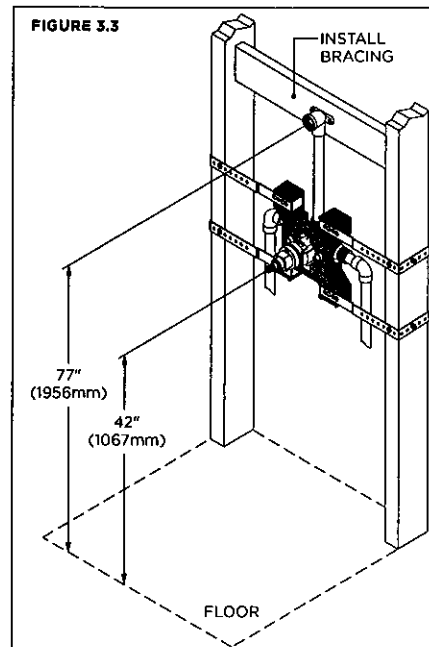


Valve should be positioned 42 inches above the tub basin floor. Shower arm should be 77 inches above the tub basin floor.


NOTE: For ADA compliance (Americans with Disabilities Act) consult your local municipality for proper product choice and mounting locations.

4. DETERMINE WALL TYPE


4.1 Protective Shield

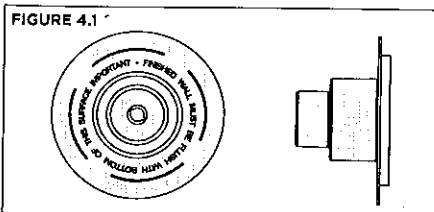


4.3 Drywall or Other Type Wall

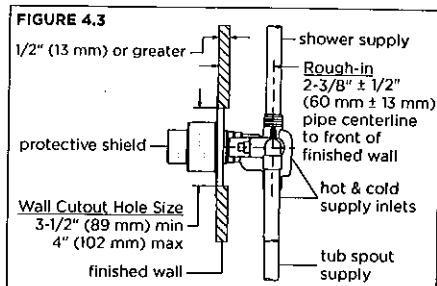


4.4 Thin Wall Installation

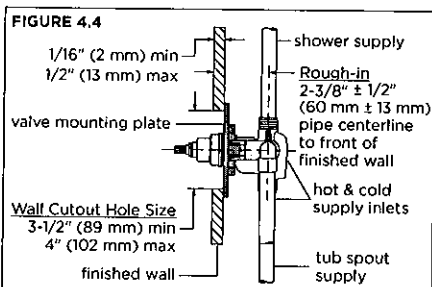

4.5 Alternative Rough-ins

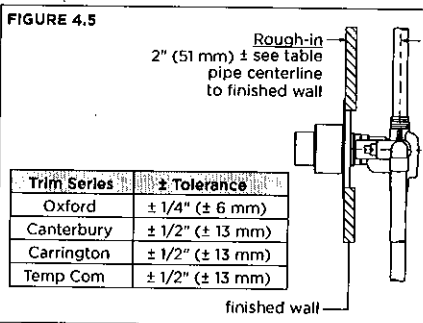

4.2 Valve Mounting Plate

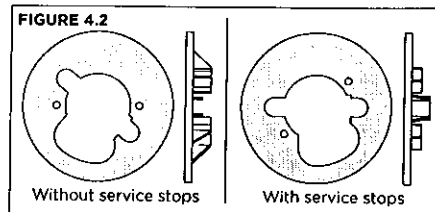

Protective shield is required for drywall, plaster or other type walls with:

- 1/2 inch (13 mm) or greater wall thickness


1. Attach protective shield by snap fitting over end of valve spindle to protect valve during wall construction.
2. Finished wall must be flush with back side of protective shield surface.

Valve mounting plate is required for fiberglass or acrylic walls, and optional for plaster or other type walls with:

- Minimum 1/16 inch (2 mm) wall thickness
- Maximum 1/2 inch (13 mm) wall thickness


1. Seat mounting plate against valve (see FIGURE 4.2 for orientation).
2. Valve mounting plate must be flush with inner wall.

When installing valve used with any of the shower or tub/shower trims shown below, reference rough-in dimensions as shown in FIGURE 4.5 instead of standard valve rough-in:

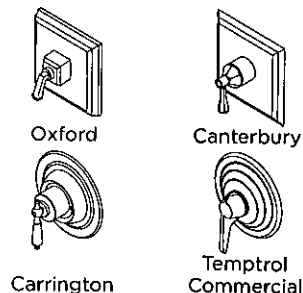

5. VALVE BODY INSTALLATION


5.1 Stringer Mounts

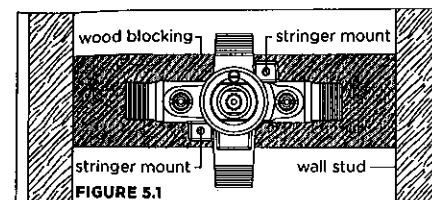

Stringer mounts are used to secure valve body to wood blocking for valve bodies without Rapid Install™ Bracket (see FIGURE 5.1).


For installation with Rapid Install™ Bracket see STEPS 2.1 & 2.2.

5.2 Install Piping/Fittings (Bracket Removed for Clarity)

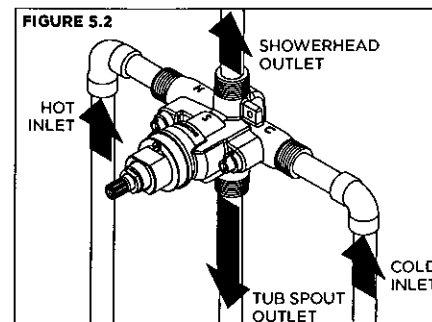

1. Install valve as specified in FIGURES 4.3 - 4.5, per application.
2. Pipe from outlet port on the valve marked S to showerhead mounting arm location.
3. Connect hot water supply to valve inlet marked H and cold water supply to valve inlet marked C.
4. Pipe from outlet port on valve marked T to tub spout (262BODY & 262XBODY only).
5. Remove protective shield snap fitted over the end of valve flow control spindle once valve is securely installed and wall finish work has been completed.

5.3 Adjust Valve Packing Nut

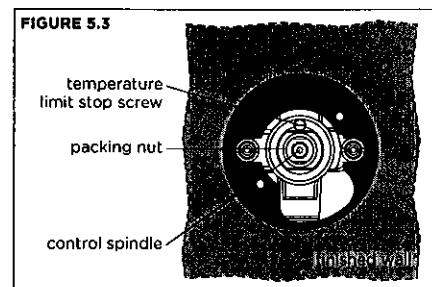

1. Turn hot and cold supplies on. Valve will not operate unless both hot and cold water supply pressures are on.
2. Place handle over flow control spindle.
3. Tighten packing nut for positive frictional resistance as handle is rotated from shut-off position across adjustment range.

5.4 Flush System

1. Turn valve to the warm position and run for a few minutes.
2. If system is dirty, remove TA-10 flow control spindle in center of valve to ensure proper flushing (see STEP 9.1).
3. Check for leaks around valve assembly and all pipe fittings.

5.5 Set Temperature Limit Stop Screw


The temperature limit stop screw limits valve handle from being turned to maximum position, resulting in excessive hot water discharge temperatures.

WARNING: Failure to adjust temperature limit stop screw properly may result in serious scalding.

1. Place handle on flow control spindle and open valve to maximum desired temperature.
2. Turn limit stop screw clockwise until it seats (see FIGURE 5.3).

6. BACK TO BACK INSTALLATION


6.1 Back to Back Wall Type

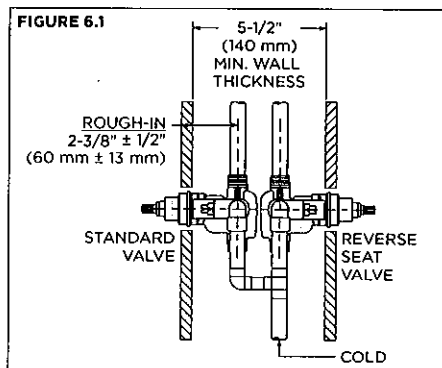

- To simplify piping on back to back installations, use one **standard valve** (hot on left, cold on right) and one SureGrip™ **reverse seat valve** (hot on right, cold on left) as shown in FIGURE 6.1.

NOTE: Back to back installations require 5-1/2" (140 mm) minimum wall thickness for proper installation, with or without bracket.

6.2 Identify Reverse Seat Valve

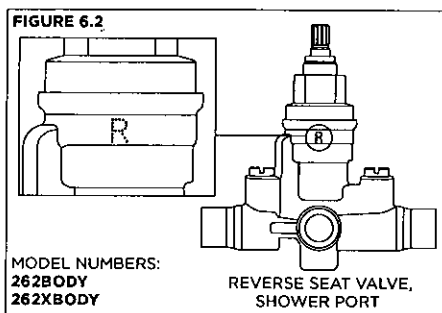


- Locate the "R" stamp on shower port side of the valve body to identify SureGrip™ reverse seat valve as shown in FIGURE 6.2.

NOTES:

- For **261XBODY**, locate "R" stamp on tub port side of valve body.
- Standard valve body will feature an "S" stamp.


6.3 Install Piping/Fittings (Bracket Removed for Clarity)

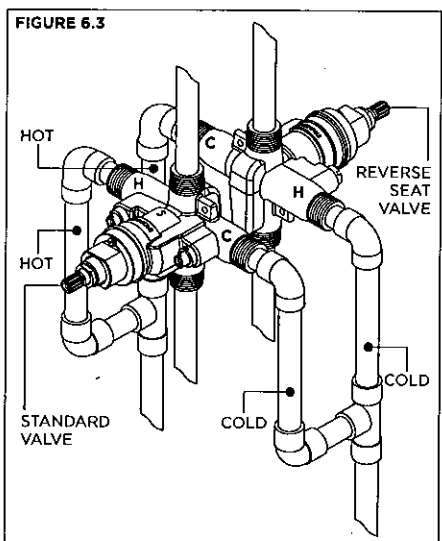

- Inlet marked **H** on standard valve should be plumbed to inlet marked **C** on SureGrip™ reverse seat valve.
- Inlet marked **C** on standard valve should be plumbed to inlet marked **H** on SureGrip™ reverse seat valve (see FIGURE 6.3).
- Follow STEPS 5.3 - 5.5 to complete installation of valve bodies.

7. PROSAFE™ TEST CAP (162BODY, 162XBODY, 161XBODY)

7.1 Install Valve Body with ProSafe™ Test Cap

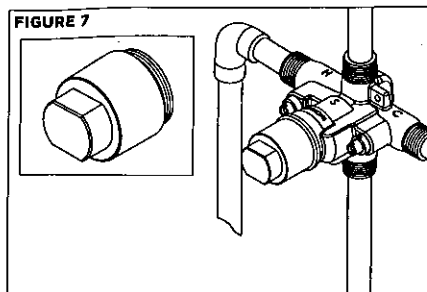

Test cap will come installed to valve to allow pressurization of system. **DO NOT** remove test cap from valve during wall construction, installation of valve or pressurization of system.

⚠ WARNINGS:

- Test cap rated for pressure testing up to 200 psi maximum. **DO NOT** exceed 200 psi while pressure testing valve body.
- Do not expose valve with test cap to heat for longer than 2 minutes when soldering copper tubing. Doing so may damage the internal components of the valve and will void the product warranty.
- Ensure test cap is re-torqued to **30 lb-ft** after soldering valve body.

To install valve body with test cap, follow instructions outlined in STEP 5.2.


7.2 Preparing Valve Body with ProSafe™ Test Cap for Trim

TA-10 flow control spindle will be included with shower and tub/shower trim. When ready to install trim to valve:

- Check for leaks around the valve assembly and all pipe fittings.
- Remove test cap from valve.
- If system is dirty, flush valve.
- Install flow control spindle and cap assembly to valve (see STEP 9.5).
- Adjust packing nut and set temperature limit stop screw (see STEPS 5.3 & 5.5).

8. VALVE BODY OPERATION

8.1 Operate Temperature

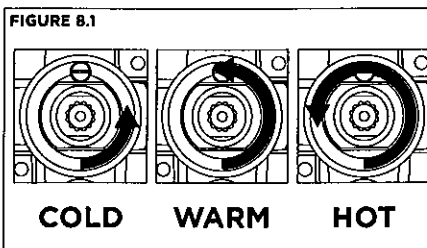

(Reference FIGURE 8.1)

Turn valve stem counter-clockwise approximately 1/4 turn to put valve in **cold** position.

Turn valve stem counter-clockwise approximately 1/2 turn to put valve in **warm** position.

Turn valve stem counter-clockwise approximately 3/4 turn to put valve in **hot** position.

9. SERVICE INSTRUCTIONS

9.1 Removing Flow Control Spindle

Reference parts breakdown (see FIGURE 10.1). See trim manual for trim removal instructions.

1. Shut off water supply to valve. Turn TA-10 flow control spindle to open position using trim handle.
2. Remove trim handle and dome cover.
3. Remove escutcheon plate by first removing escutcheon screws.
4. Unscrew both T-12A cap assembly and flow control spindle together.

9.2 Hot/Cold Seat Repair Kit

Service requires TA-4 hot and cold seat kit and T35C removal tool kit.

1. Remove flow control spindle (see STEP 9.1).
2. Remove both seats with removal tools, turning counterclockwise.
3. Replace both seats even if only one appears worn.
4. Install and tighten both seats to 15 foot pounds of torque, turning clockwise.

9.3 Flow Control Spindle Washer Repair Kit

Service requires TA-9 washer repair kit.

1. Remove flow control spindle (see STEP 9.1).
2. Remove cold washer by holding flow control spindle using trim handle and unscrew cold washer retainer using channel lock pliers, turning counterclockwise.
3. Remove hot washer by removing hot washer screw.

9.4 Checking Water Pressure Balancing Piston

The perforated end of the flow control spindle houses the water pressure-balancing piston.

1. Remove flow control spindle (see STEP 9.1).
2. Shake flow control spindle and listen for clicking noise. Piston should be free to slide back and forth the full length of its travel.
3. If piston appears restricted then do the following: a) tap the handle, or the stem end of flow control spindle, against a solid object to free the piston, or b) try soaking in household vinegar and repeat tapping handle or stem of flow control spindle.
4. If unable to free piston, replace flow control spindle.

9.5 Valve Reassembly

Reassemble valve, reversing the procedure in STEP 9.1. Be sure flow control spindle is drawn close to the cap before screwing cap assembly back into valve.

10. PARTS BREAKDOWN

FIGURE 10.1

COMMON PLANE
VALVE BODY
262XBODY (PICTURED)
262BODY
261XBODY



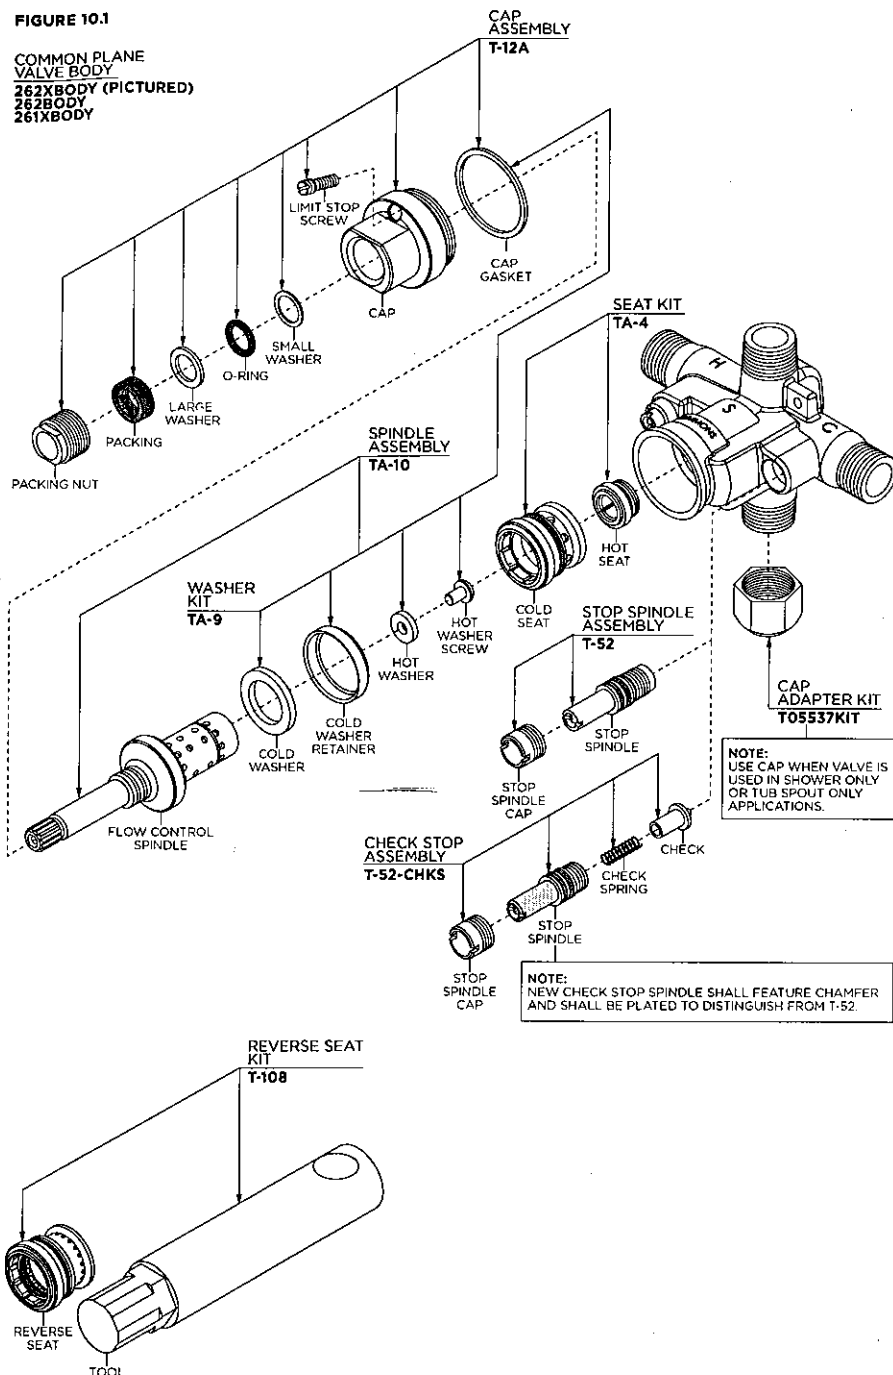


FIGURE 10.2

VALVE BODY
FITTING MODIFICATIONS

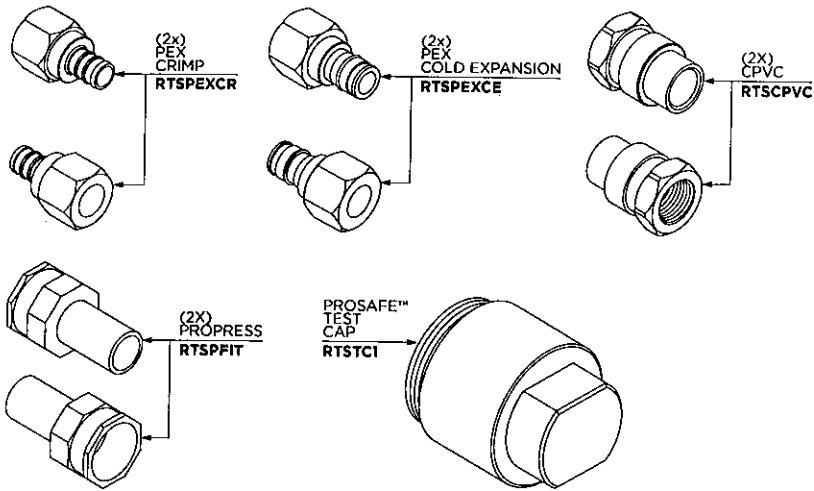


MOUNTING BRACKET
COMPONENTS

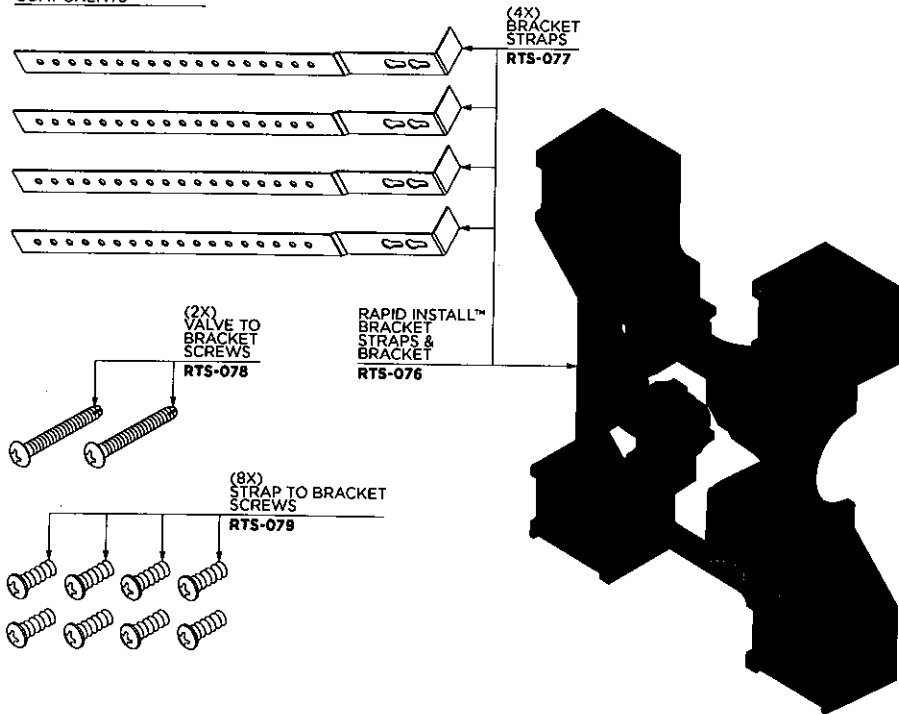

11.1 T35C REPAIR TOOL ASSEMBLY

Repair tool assembly can be used to service the following:

- Temptrol stop spindle cap (T-52-CHKS)
- Temptrol diverter retainer (RTS125)
- Temptrol cold seat (TA-4)
- Temptrol hot seat (TA-4)
- Temptrol legacy cold seat
- Temptrol legacy hot seat

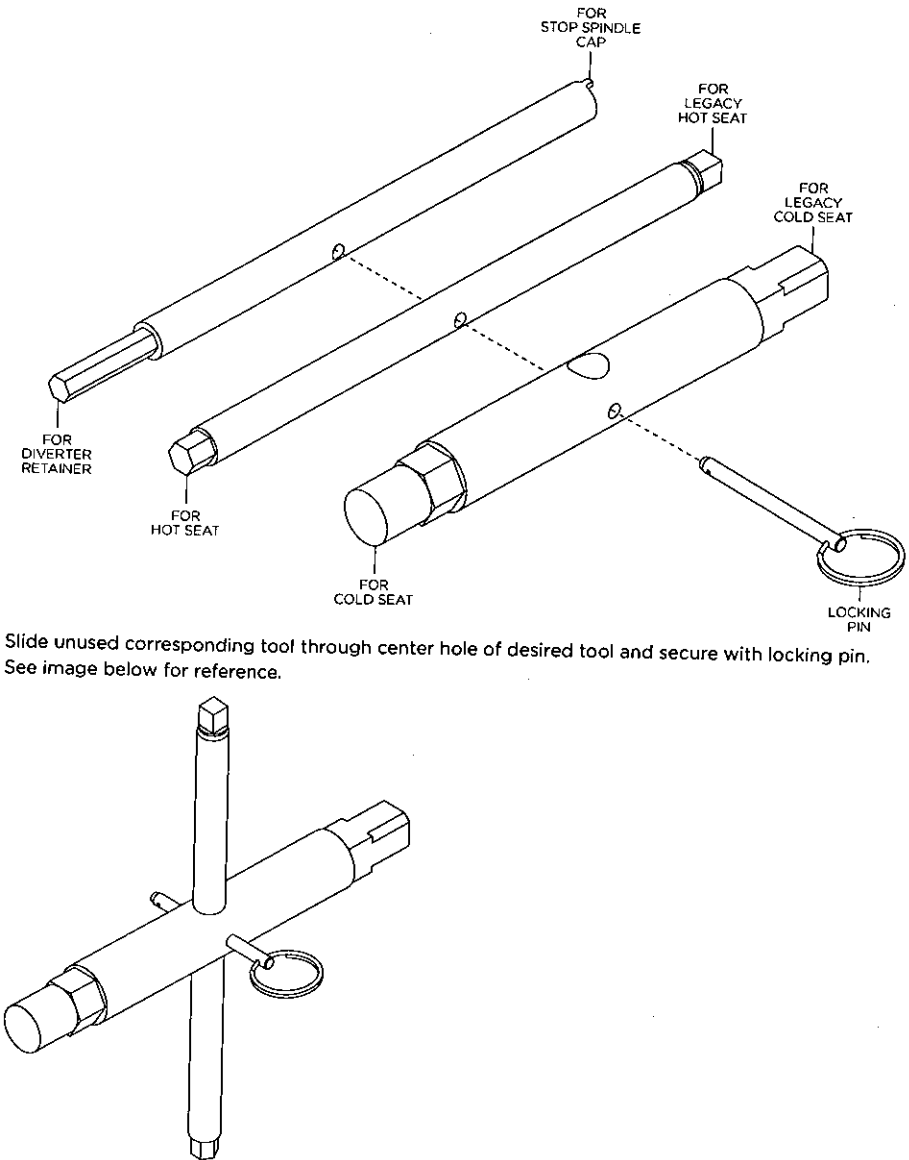

Slide unused corresponding tool through center hole of desired tool and secure with locking pin. See image below for reference.

12. TROUBLESHOOTING CHART

| PROBLEM | CAUSE | SOLUTION |
|--|--|--|
| Valve will not pass water. | Both hot and cold water supplies are not turned on. | Turn on both supplies. Valve will not operate unless both hot and cold water pressure is on. |
| Valve leaks when shut off. | Hot and cold washers are worn or foreign matter (dirt, chips) is lodged between washers and seat surfaces. | Replace washers using TA-9 washer repair kit. Replace hot & cold seats using TA-4 hot/cold seat repair kit. |
| Temperature control handle is turned from cold to hot (or hot back to cold) and volume from spout or head is not constant. | Pressure-balancing piston housed in spindle assembly is restricted from free movement by foreign matter. | Open valve halfway, remove handle and tap spindle with plastic hammer. Check water pressure balancing piston in control spindle. See service instructions. Replace TA-10 flow control spindle. |
| Valve delivers sufficient quantity of cold, but little hot, or the reverse. | Same as above. | Same as above. |
| Temperature varies without moving handle. | Same as above. | Same as above. |
| Valve delivery temperature reduces gradually during use; handle must be turned to hotter positions to maintain constant temperature. | Overdraw on hot water supply (i.e. running out of hot water). | Reduce maximum flow by using volume control adjustment on valve or showerhead. This will allow longer period of use before overdrawing hot water supply. |
| Valve delivers hot water when initially opened. Water turns colder as handle is rotated in a counterclockwise direction toward the hot position. | Valve is piped incorrectly (i.e. the hot supply is piped to the valve's cold inlet and the cold supply is piped to the hot inlet.) | If piping is accessible, correct connections to the valve. If piping is not accessible, order T-108 reverse seat and tool kit. Older installations may also require replacing the TA-4 hot/cold seat repair kit. |

⚠ WARNING: This product can expose you to chemicals including lead, which is known to the state of California to cause cancer, birth defects, or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

Symmons Industries, Inc. ■ 31 Brooks Drive ■ Braintree, MA 02184
 Phone: (800) 796-6667 ■ Fax: (800) 961-9621
symmons.com ■ gethelp@symmons.com
 Copyright © 2020 Symmons Industries, Inc. ■ 030220