




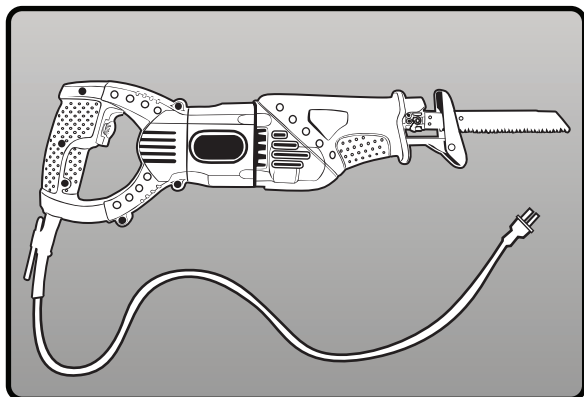

1. Unplug the saw.

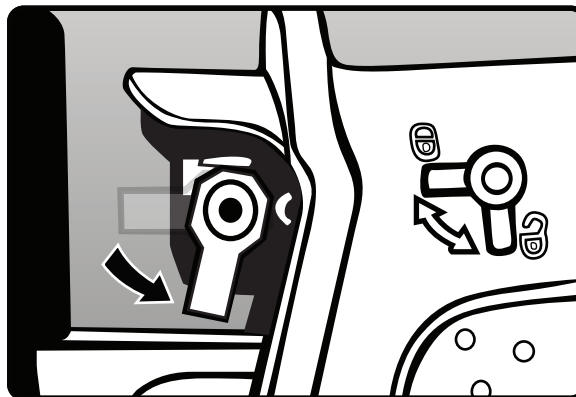


2. Unlock the blade levers by rotating both levers to the down position

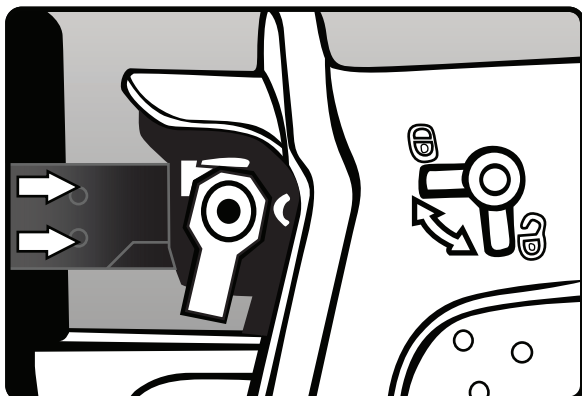


3. Insert the DualSaw blades until fully seated.

Note: Inserting the blades is easiest when the reciprocating arms are even.

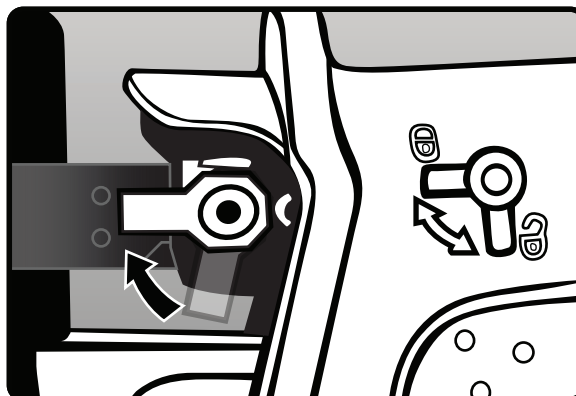

4. Lock the blades in place by rotating both lock levers to the up/forward position.

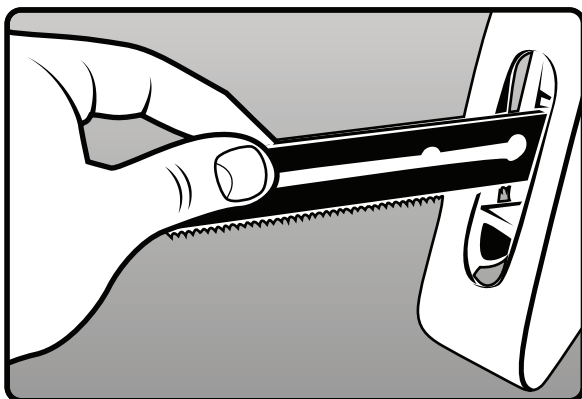

5. Pull on the ends of the DualSaw blades to ensure they are properly locked in place.

**Note: You may hear a clicking sound which indicates the blades are locked in place.*