



HEM-3083-BL

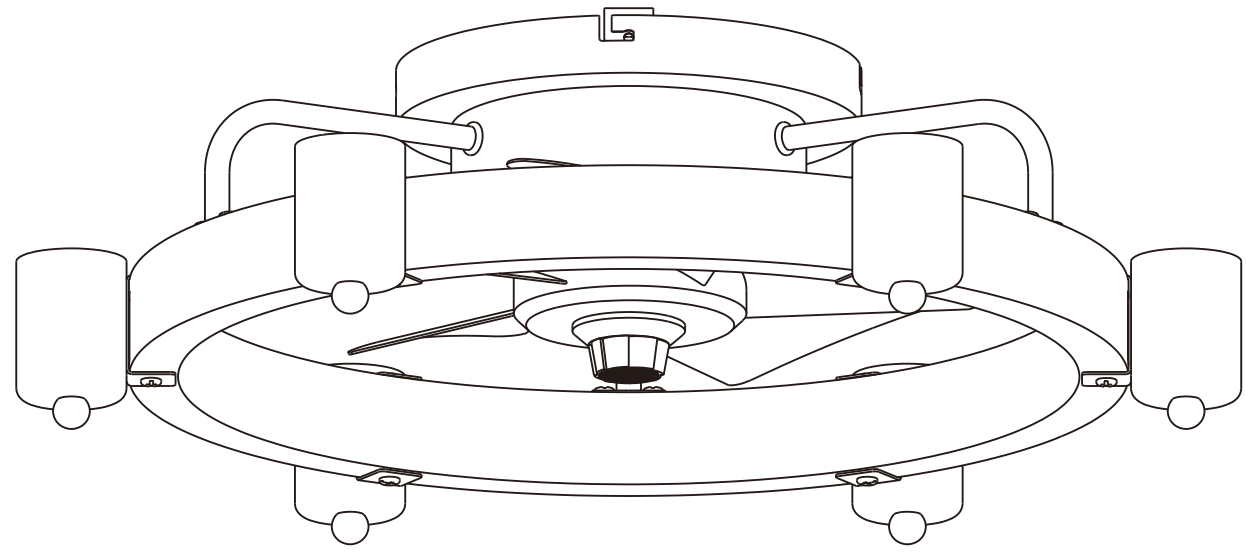


20-INCH DEROCATE CEILING FAN
USE AND CARE GUIDE


Pre-Installation

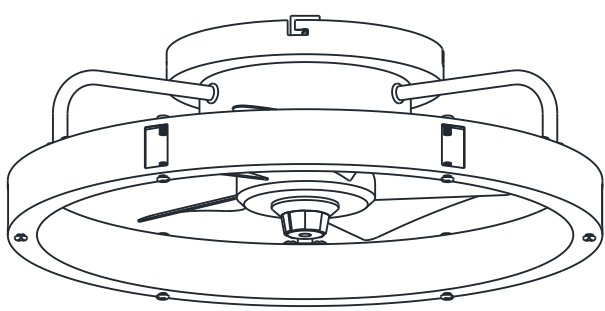

Fan-Motor assembly × 1PCS

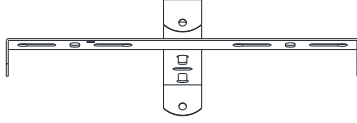

Slide - on mounting bracket (inside canopy) X 1PCS

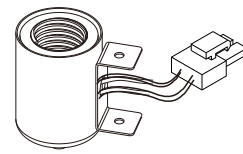

Light assembly X 6PCS

 


1S-hook(auxiliary mounting tool) x 1PCS

Parts Kit




AA
Mounting screws
× 4




BB
Expansion bolts
× 4



 CC
Plastic wire nut (not to scale)
× 3



DD
rubber plug (not to scale)
× 4

 


Remote control X 1PCS


NOTE

Hardware not shown to actual size.


Fastening the blade arms to the motor

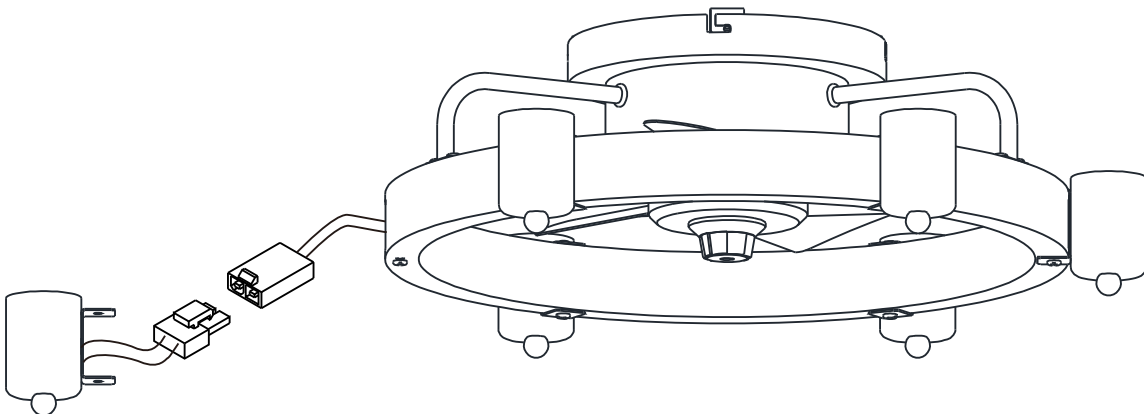


a.Insert the terminal line of the lamp holder assembly into the terminal line of the motor assembly

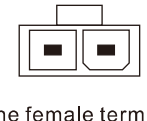


The female terminal

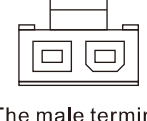

The male terminal

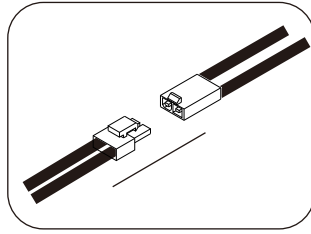

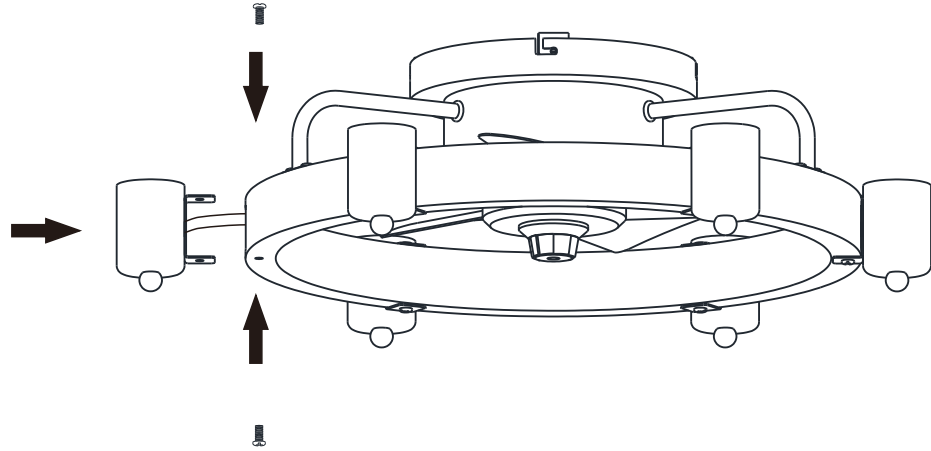


b.Put the inserted terminal line into the motor assembly, and then align the screw hole, and connect the lamp holder assembly with the motor assembly.

Use of remote control

Warm Tips

Please follow the steps below to undo the fault if your remote control does not control the fan and lights.

Step 1: Replace the battery of the remote control. Then the indicator light of the remote control will light up. Step 2: Try to program the remote control. Please turn off the main power supply that controls the ceiling fan and turn it on again. When turning on the light, press and hold the "Button" in the middle of the remote control within 5 seconds. If you hear the beep, the code matching is successful. Then try to see if the remote control can control the fan and light.

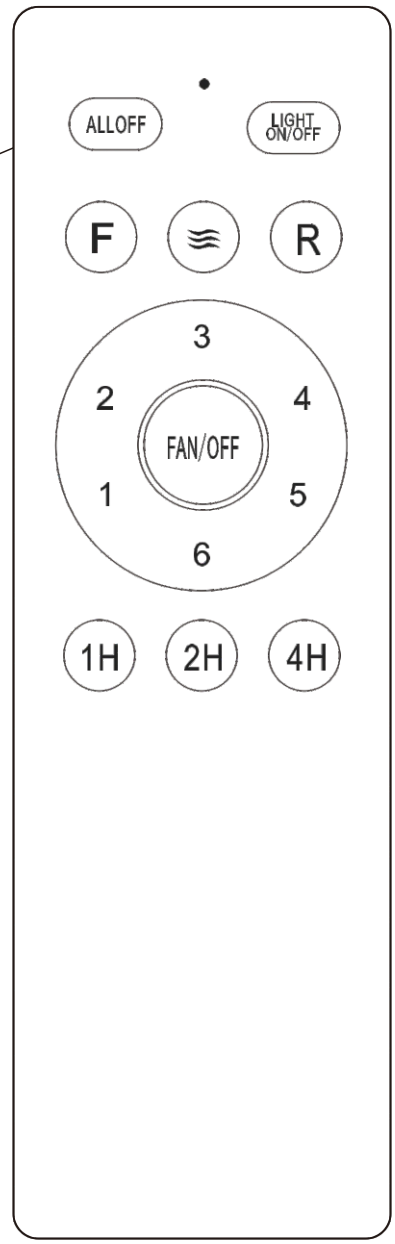


Installation of the hanging bracket

Mounting options


a : Wooden ceiling

If you have a wooden ceiling, use wood screws with a plastic expansion anchor.(fig.2)

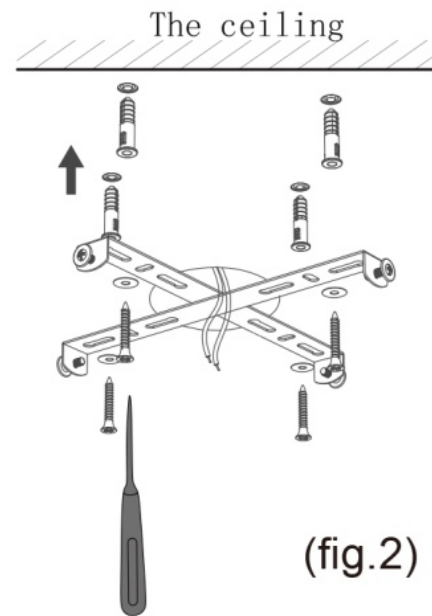

b : Concrete ceiling


If you have a concrete ceiling, use screws with lock washers.(fig.3)

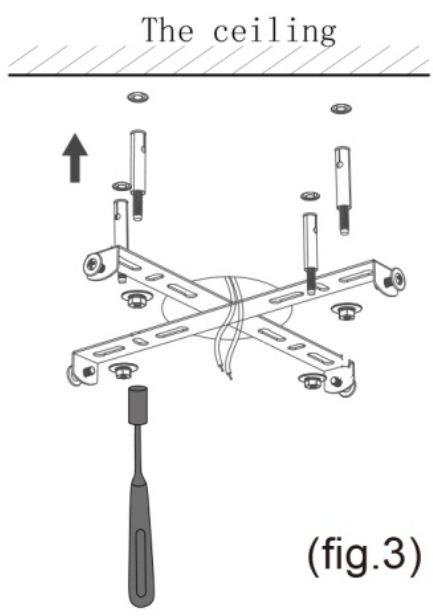

Install downrod assembly


Installation

Step 1: Use the auxiliary mounting tool S.hook to hang the ceilingfan with light under the ceiling.(fig.4)

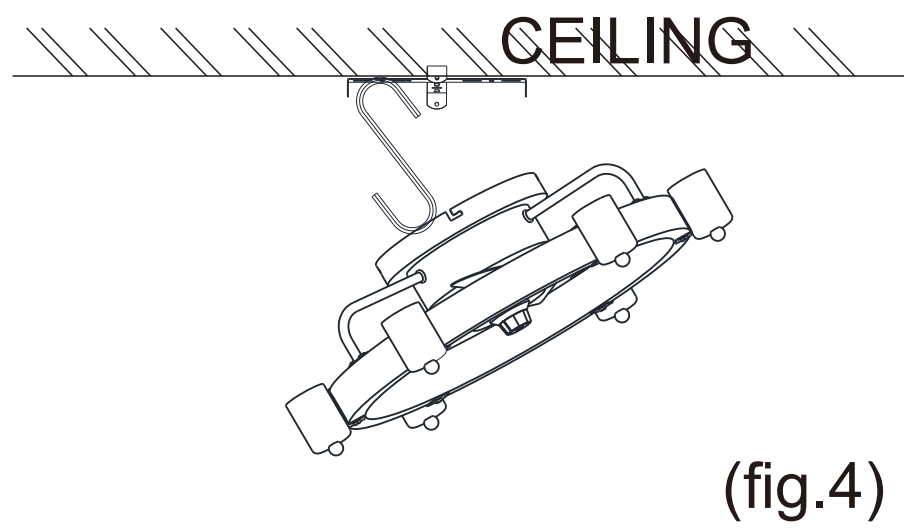


Step 2: Wiring(fig.5)

- a.Connect the black live wire marked ""L" on the receiver to the live wire (typically black) on the outlet box.
- b.Connect the white neutral wire marked "N" on the receiver to the neutral wire (typically white) on the outlet box.
- c.Connect the ground wire (bare wire) from the base of the ceiling fan base with the ground wire /bare wire) of the outlet box

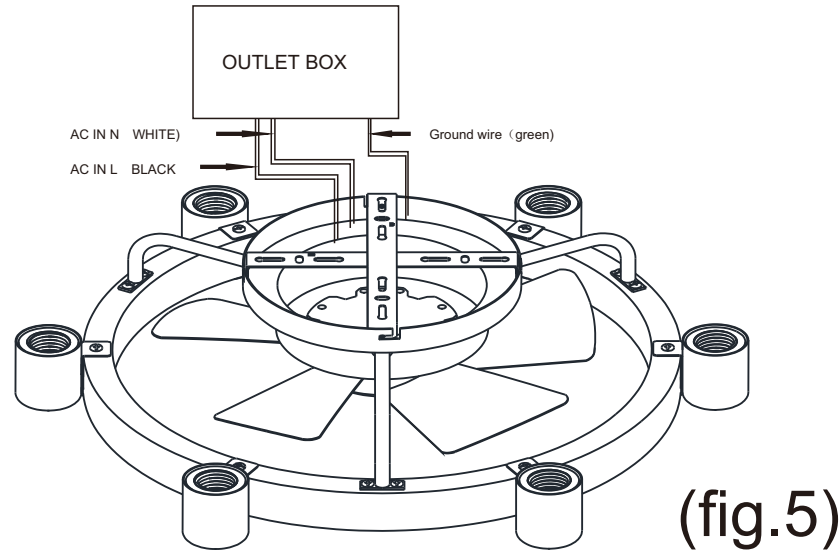


Making the electrical connections


Step 3: Remove the S-shaped hook and snap the 7-shaped hole of the ceiling fan light holder onto the cross-hanging plate .(fig 6)

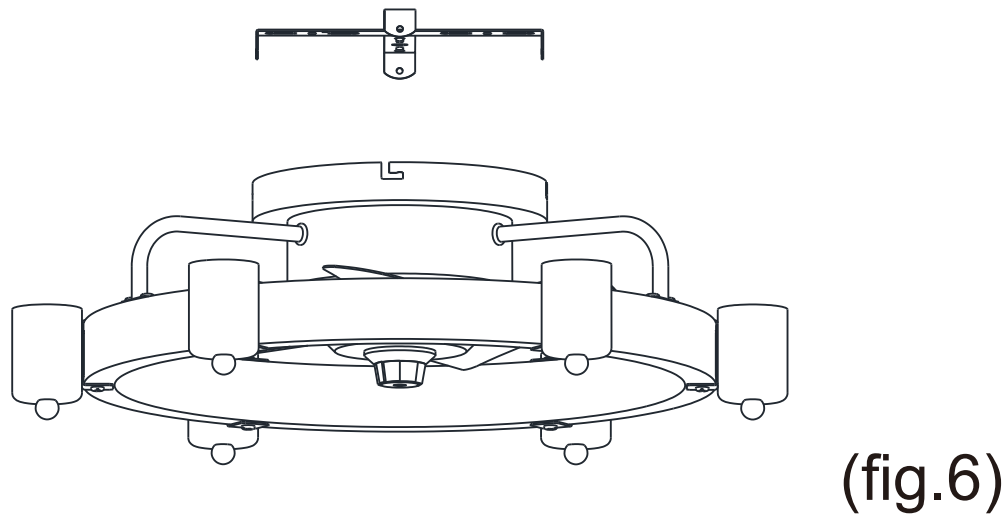

Step 4: Rotate the ceiling fan and snap the screws into the 7-shaped holes.(fig.7)

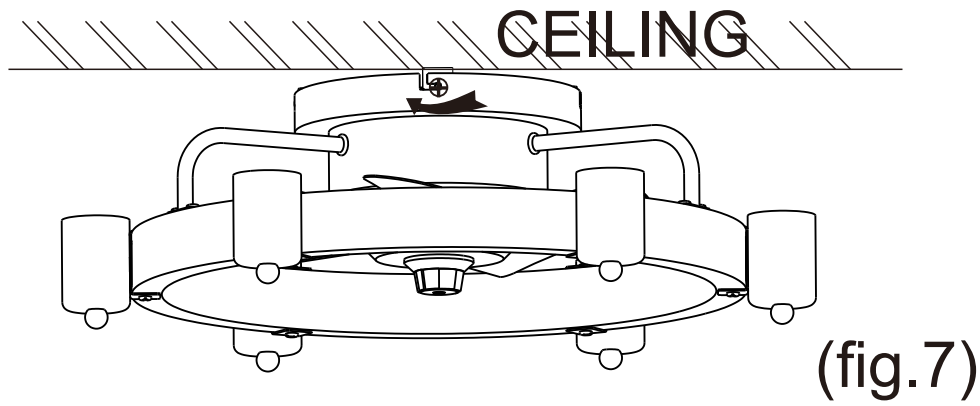

Step 5:Tighten the 4 screws to complete the installation.(fig.8)

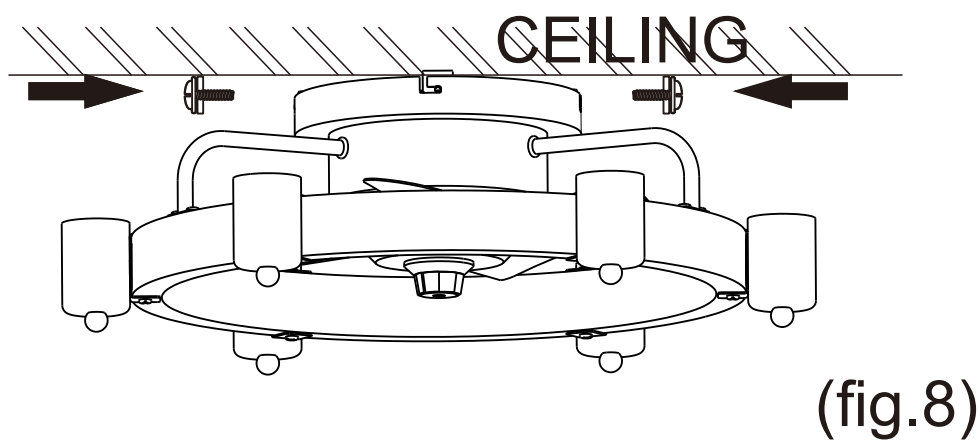

Use of remote control

Remote control operation

Install the AAA battery. Please take out the battery If not used for a long time to prevent damage to the transmitter.(fig.9)

