 


MANUAL INSTRUCTION

TV Stand H21018

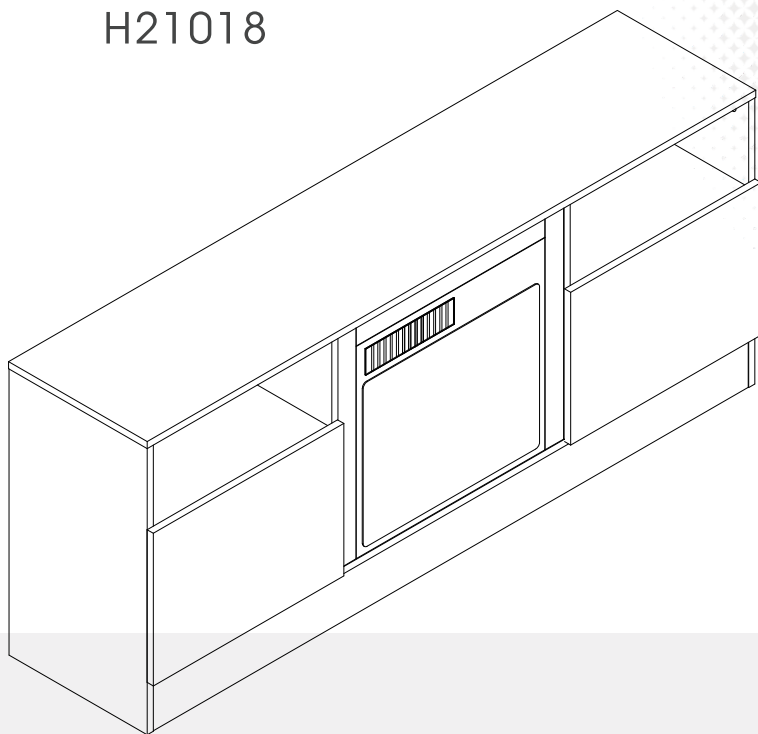

Indoor Furniture

We are a professional furniture provider with top-notch factories and outstanding designs, Our mission is to provide consumers with new lifestyles. By collecting consumer feedback, we constantly improve our products and create more choices for consumers. If you want to create your space, We are an ideal choice.

Always.



WARNING

All the TV Stands have passed strict quality inspections before delivery . Read this manual carefully to ensure proper usage

Ensure that all parts and hardware are available before beginning assembly

NOTICE

1. Children are not allowed to operate.
2. Faster installation is possible with power tools.
3. Do not pull the door vigorously to prevent the storage cabinet from tipping over.
4. Please attach the storage cabinet to the wall with an anti-tip device after installation is complete.
5. When using the storage cabinet for the first time, please keep it in a ventilated environment to allow the smell to fully evaporate.
6. When placing the partitions, please make sure the nails are firmly installed to prevent the partitions from falling off.
7. If any parts are missing, broken, damaged or worn, discontinue use of the product until repairs are made and/or factory replacement parts are installed.
8. Do not use this product in a manner inconsistent with the manufacturer's instructions, as this may void the product warranty.
9. If accessories are missing, please contact customer service for communication in time, we provide 7x24 hours customer care.
10. Do not use any attachments or accessories other than the original factory attachments and accessories.
11. Do not alter this equipment. Any alteration will create a safety hazard.

WARNING

The product must be assembled by adult before use. Serious or fatal injury may occur from unexpected assembly or use.

1. During the assembly process, keep all parts away from babies or children.
2. Always securely fix this product to the wall. Make sure the wall area to be drilled is free from hidden electrical wires, water and gas pipes.
3. Use of tip-over restraints may only reduce, but not eliminate the risk of tip-over.
4. Unless specially designed to accommodate, do not set heavy objects on top of this product.
5. Place the heaviest items on the lowest shelf.
6. Never allow children to climb or bang on drawers, doors or shelves.

TOOLS REQUIRED



Phillips Screwdriver



 
2 Persons Assembly



Up to 30 Minutes For Assembly

PARTS

1

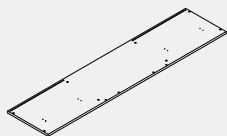

1 PCS

2



 
1 PCS

3




1 PCS

4



1 PCS

 5




1 PCS

6




1 PCS

 7




1 PCS

 8



1 PCS

 9

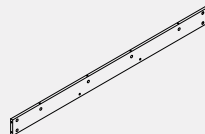

1 PCS

TOOLS REQUIRED



Phillips Screwdriver



2 Persons Assembly



Up to 30 Minutes For Assembly

PARTS

10



 
2 PCS

11




2 PCS

12




1 PCS

 13




2 PCS

 14



1 PCS

 15



1 PCS

HARDWARE

A


M8 X 30MM



10 PCS

B

M15 X 12MM



40+2 PCS

 
C

M6 X 43MM



40+2 PCS

D

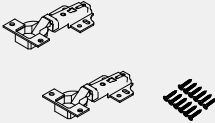

2 PCS

 
E

K3 X 14MM



8+1 PCS


F




2 PC

PRODUCT ASSEMBLY Method A

 - 1** NOTE: Dear customer, if you purchase a TV stand & fireplace set, the package for the fireplace and the package for the TV stand will be delivered separately. If you purchase only the TV stand, the fireplace is not included. Install 2 cam bolt "C" on the corresponding holes of the part **9** as per diagram.

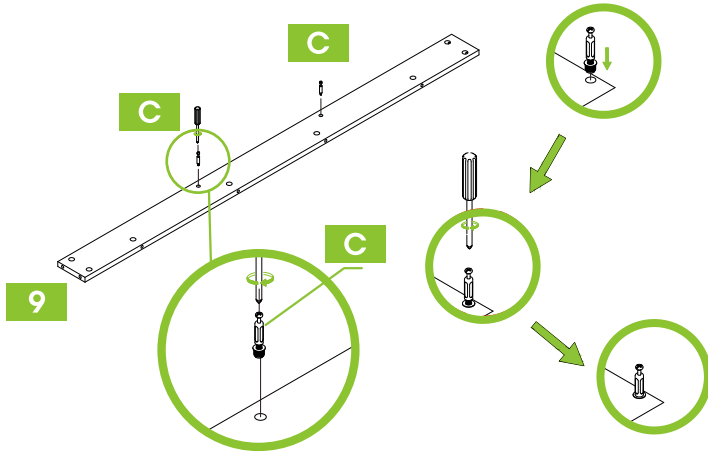


PART	NO.	QTY.
	C	2

NOTE: If the white plastic is not pressed into the available tools can be gently knocked down

- 2** NOTE: Use 2 cam lock "B" to connect the 2 part **10** and **9** part, and turn the screws clockwise.


PART	NO.	QTY.
	B	2

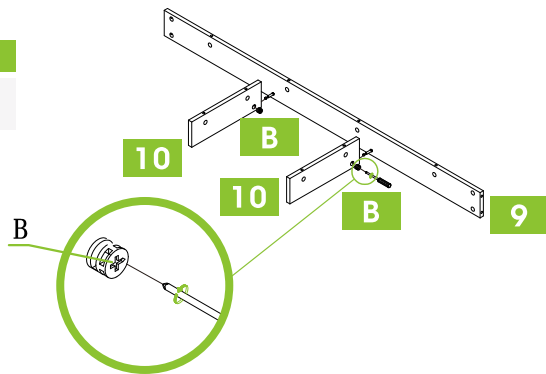 

PRODUCT ASSEMBLY Method A

3

 
NOTE: Secure 12 cam bolt "C" into part with Philips head screwdriver as per diagram(8 on one side,4 on the other side)

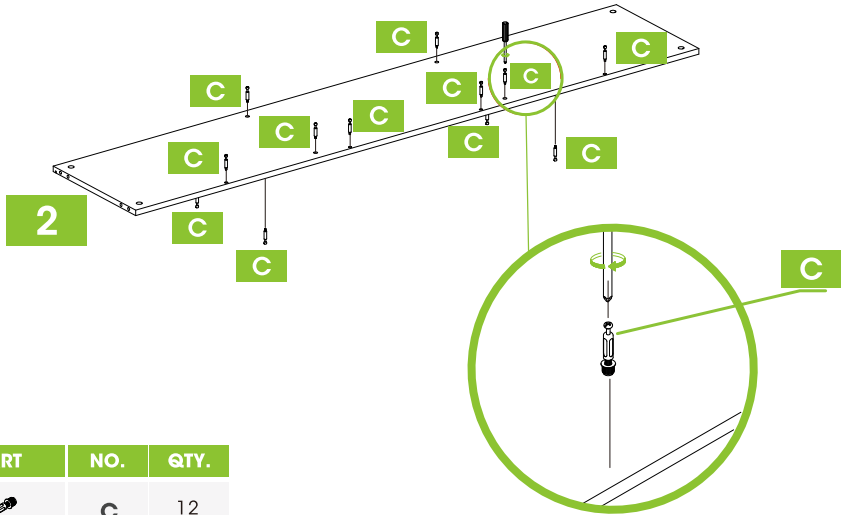

PART	NO.	QTY.
	C	12

4

 
NOTE: 1.Put the side with the 8 cam bolt "C" (installed in the part **2**) facing up;
2.Connect part **9** and part **2** with 4 cam lock "B";
3.Use 4 cam lock "B" to connect 2 of part **10** and part **2** respectively, turn the screw clockwise.

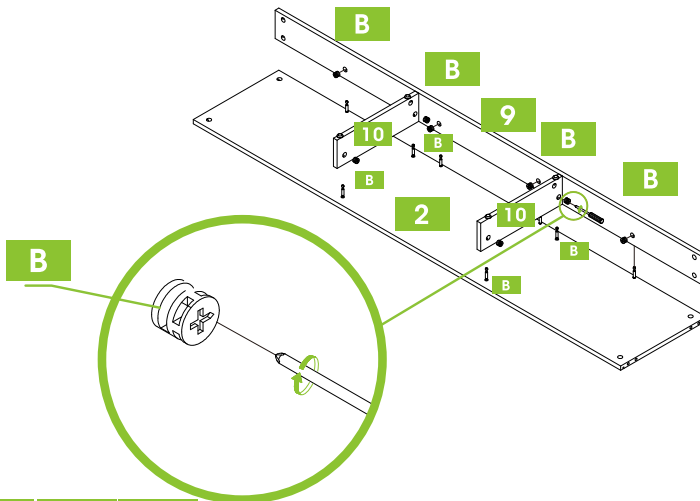



PART	NO.	QTY.
	B	8

 
PRODUCT ASSEMBLY Method A

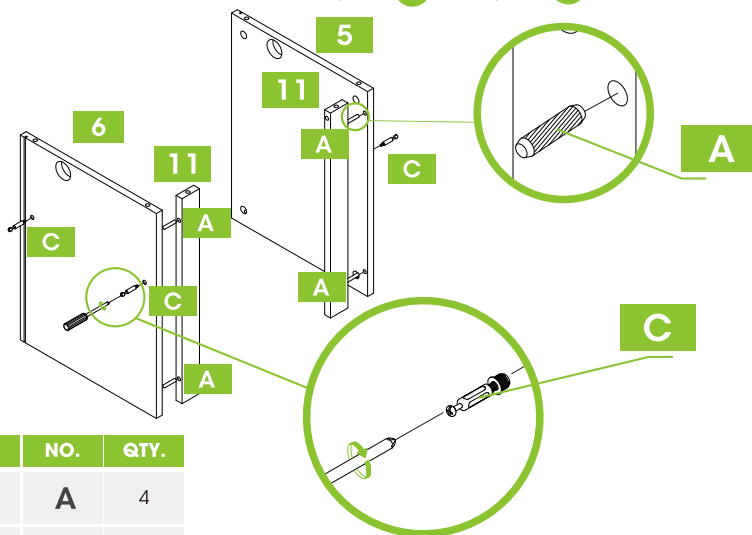

- 5** NOTE: 1. Install 2 cam bolt "C" on the corresponding holes of part **5**, and also install 2 cam bolt "C" on the corresponding holes of part **6**;
2. Use 2 wooden dowel "A" connect part **6** and part **11**, and Use 2 wooden dowel "A" connect part **5** and part **11**.



PART	NO.	QTY.
	A	4
	C	4

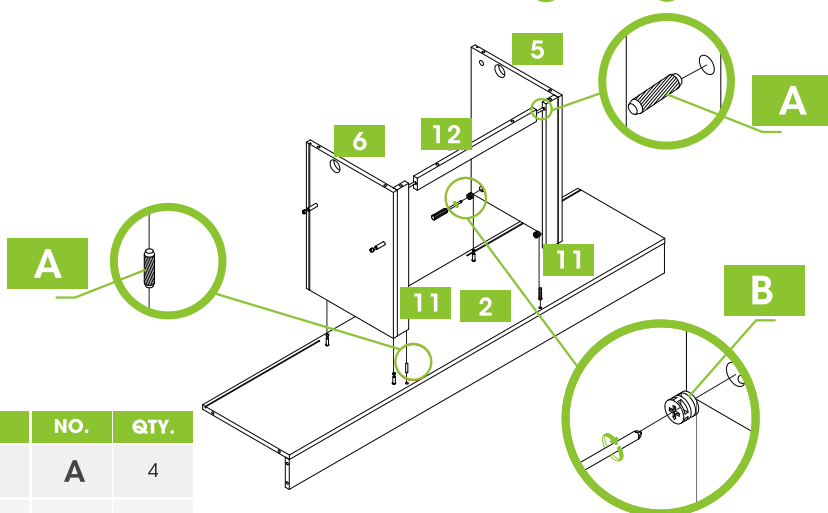 
- 6** NOTE: 1. First connect part 12 to part 11 with 2 A's for the part assembled in step 5.
2. Use 4 cam lock "B" to connect part **5** & part **6** to part **2**, and turn the screw clockwise.
3. Use 2 wooden dowel "A" to connect 2 of at **11** and at **2**.




PART	NO.	QTY.
	A	4
	B	4

 
PRODUCT ASSEMBLY Method A

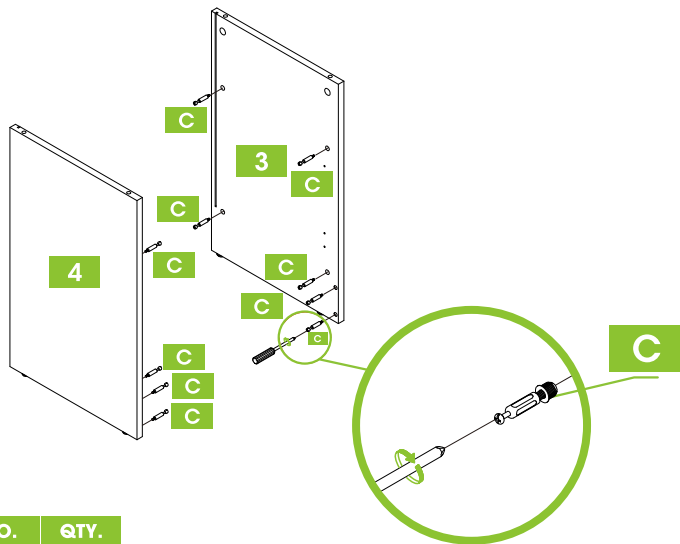

7 NOTE: 1. Attach 6 cam bolt "C" to part **3**, repeat the same action to attach 6 cam bolt "C" to part **4**.



PART	NO.	QTY.
	C	12

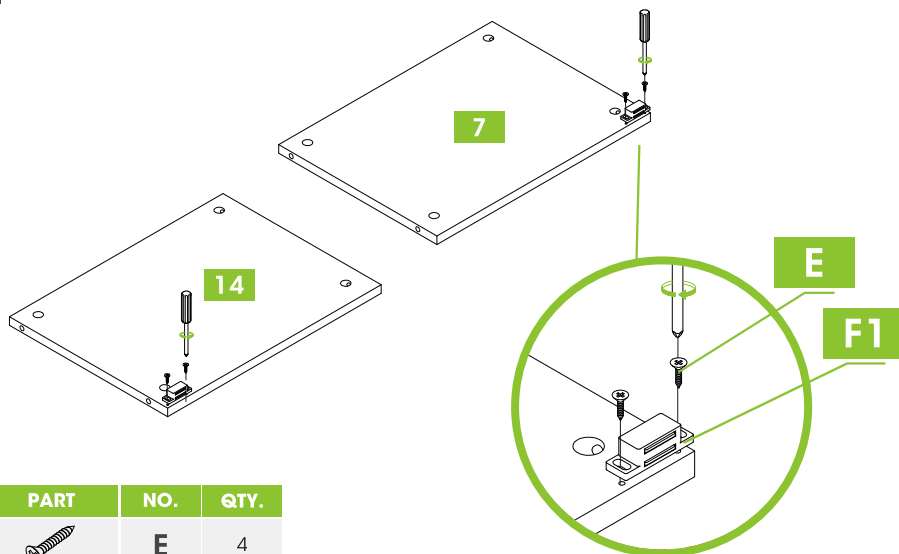 
8 NOTE: 1. Fasten part F1 to part **7** and part **14** respectively with screw E.




PART	NO.	QTY.
	E	4
	F1	2

PRODUCT ASSEMBLY Method A

 
- 9** NOTE: 1. First connect part **7** and part **5** ;
 2. Then connect part **3** with part **7** & Part **2** & Part **9** ;
 3. Use 4 cam lock "B" to lock the screw on part **7** , use 2 cam lock "B" to lock the screw on part **2** , and then use 2 cam lock "B" to lock the screw on part **9** ;
 4. Use the same method to connect part **14** with part **6** ;
 5. Use the same method to connect part **4** with part **14** & Part **2** & Part **9** .

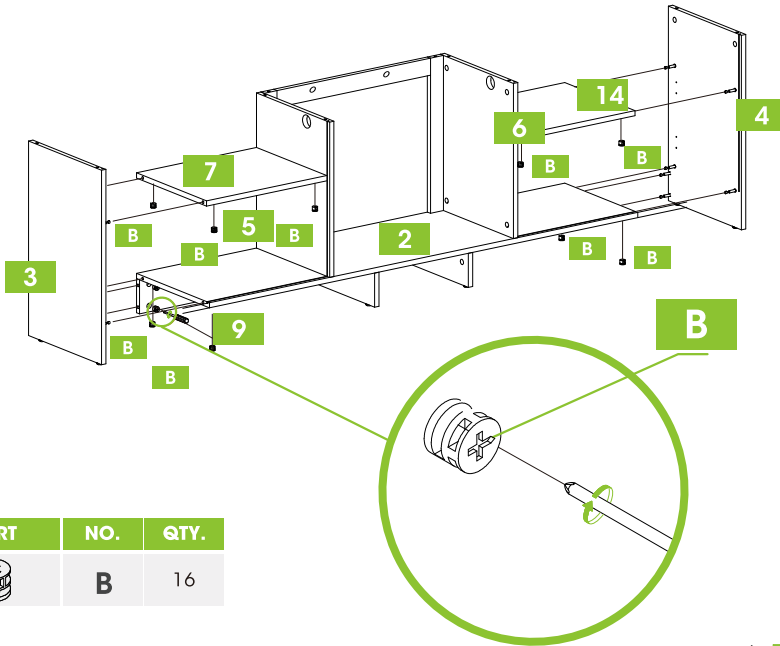

PART	NO.	QTY.
	B	16


- 10** Push part **13** along the slot to the end

 
- NOTE: 1. when it reaches the end,
 it also needs to be stuck in
 the slot of part **2** .
 2. The side with the round
 hole (of part **13**) is on
 the top.

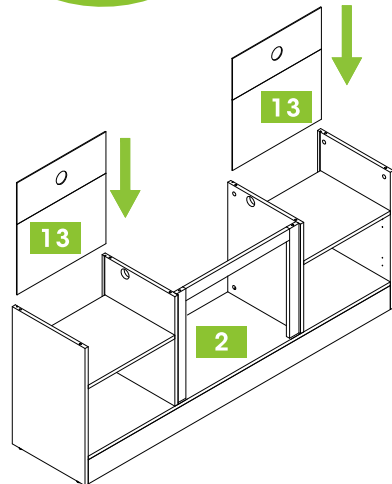

PRODUCT ASSEMBLY Method A

 11 NOTE: 1. Install 8 cam bolt "C" into part **1**.

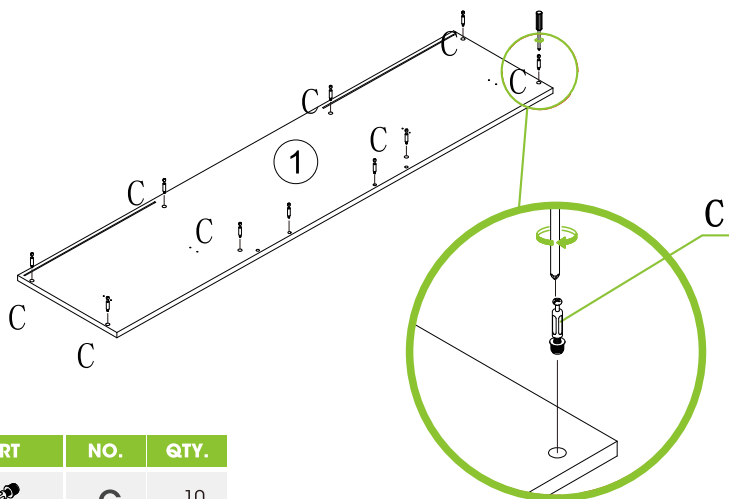




PART	NO.	QTY.
	C	10

12 Use 4 wooden dowel "A" and 8 cam lock "B" to connect part **1** to part **3 4 5 6 11 12** respectively, and turn the screws clockwise.

 NOTE: 1. Pay attention to lightly put, do not violently press.

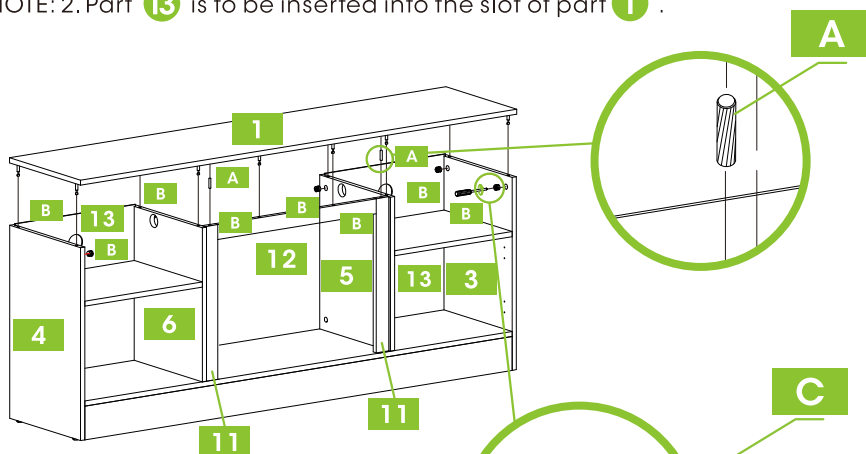
NOTE: 2. Part **13** is to be inserted into the slot of part **1**.



PART	NO.	QTY.
	A	2
	B	10

PRODUCT ASSEMBLY Method A

 - 13** NOTE: 1. Fasten part F2 to part **8** and part **15** respectively with screw E.
2. Install a pair of hinge "D" on part **8** first, and then install the part **8** on the part **3**.
3. When installing part **8** to part **3**, first install the 4 screws in the oval hole of hinge "D" (corresponding to the four small holes of part **3**).
4. Close part **8** to see if the position of part **8** is suitable, If not, you can adjust the screws of oval hole of hinge "D".
5. After adjusting, Lock the 4 round holes of hinge "D" with screws.
6. In the same way, install part **15** on part **4**.

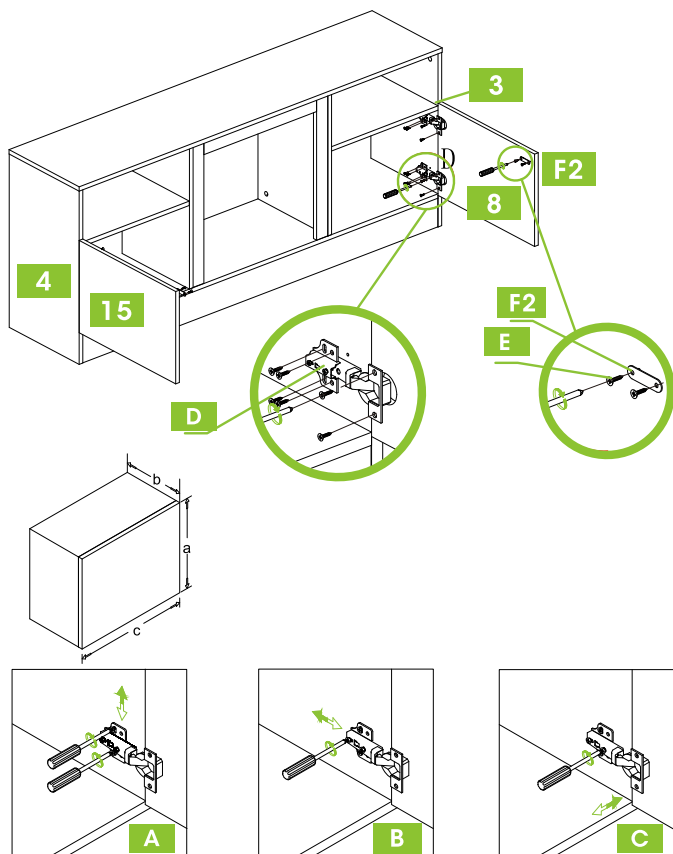


PART	NO.	QTY.
	D	2
	E	4
	F2	2

NOTE: 1. When the position of part **8** and part **15** is found to be inappropriate after installation (for example, one side of the door is too large or part **8** and part **15** and is scratched with other parts, etc.), you can adjust the position of the cabinet door (up, down, before, after left and right). by screwing.


PRODUCT ASSEMBLY Method A

14 NOTE: Dear customer, if you purchase a TV stand & fireplace set, the package for the fireplace and the package for the TV stand will be delivered separately. If you purchase only the TV stand, the fireplace is not included.

 1. Align and attach two side trims (Y) to both sides of the fireplace. Align and attach back (Y) to back of the fireplace insert (W) respectively with the right angle side facing the front of the unit, using two screws (12) per trim.




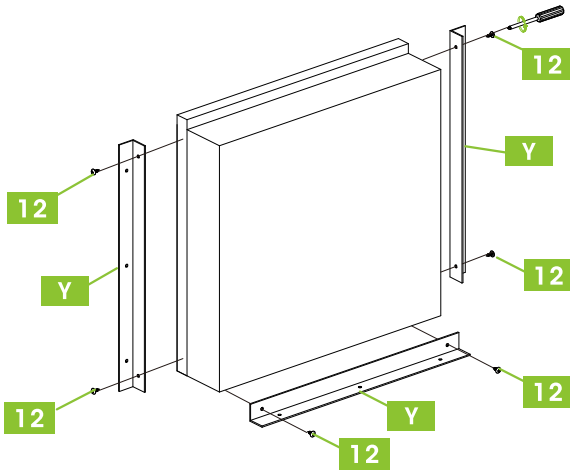


 2. Put the fireplace into the cabinet from the back until the front is against the board. Secure with screw 12 as shown.

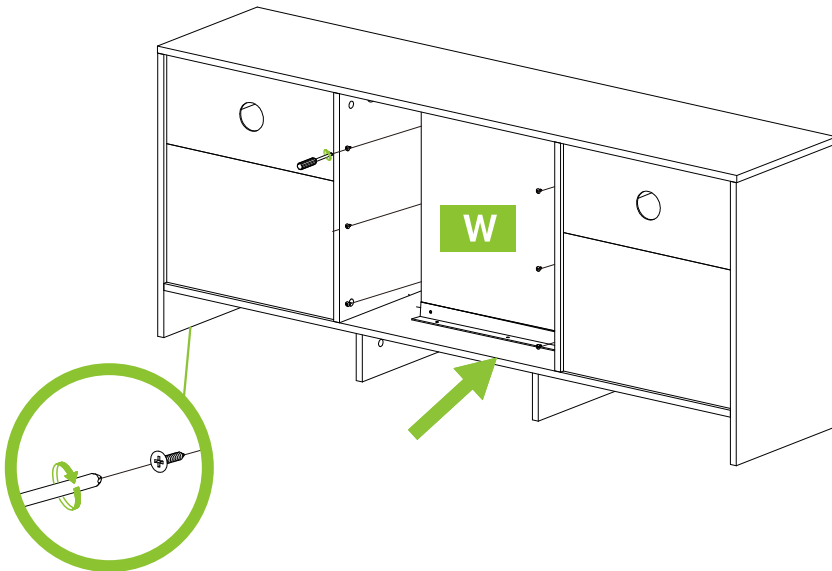


PRODUCT ASSEMBLY Method A

    1. Put the light strip wire through the hole (one long wire and one short wire) :
2. Put the long one on the side farther from the fireplace wire: the short one on the side closer to the fireplace wire ;
3. Tear off the double-sided tape of the light strip and stick it on the board :
4. Hold the light strip with the clip and lock the screw.

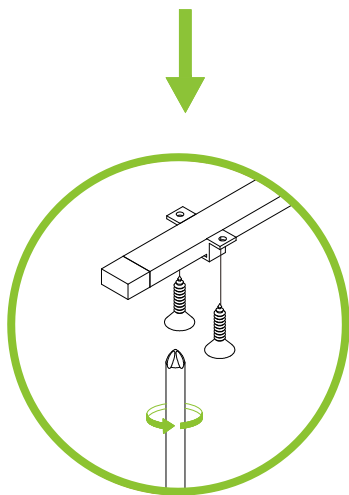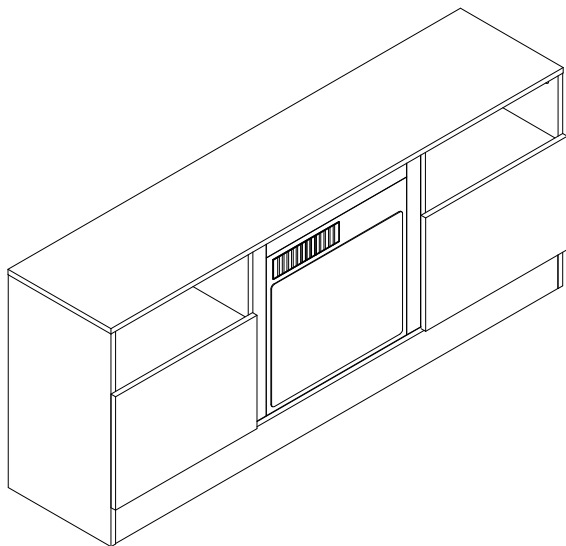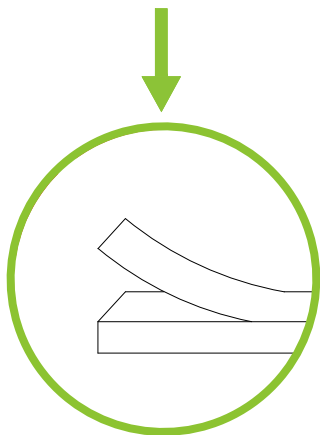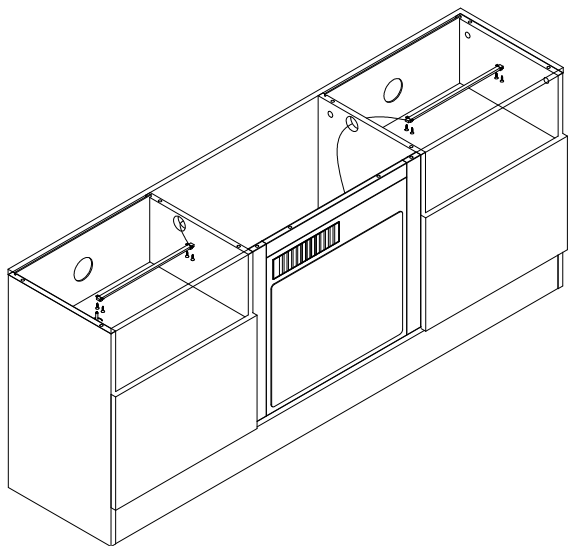


HELP CENTER

 
Question about your product? We're here to help. Visit us at:



Chat Support

 

Product Inquiry

 

Orders FAQ



Product Assembly



Returns & Refunds

We Stand Behind the Quality of Their Furniture

If you have any issues with your item please let us know! We will always do our best to come up with a solution that you will be happy with.

Please get in touch with our customer service team before returning the product.

And pls do not throw the original box(es) if you have not finished assembling or confirmed no quality issues.

Length of return period:

Items can be returned within 30 days of purchase.

In the meanwhile, everything you purchased from us comes with a one-year warranty.

Who is responsible for the return shipping fee:

We will cover the return shipping fees if:

1. Your item has a manufacturing defect in its materials or workmanship. For example, torn wicker or misaligned screw holes. We will send you a prepaid shipping label after photos are sent.
2. Your item has been damaged in transit. For example, glass is broken or wicker is damaged. We will send you a prepaid shipping label after photos are sent.
3. You receive the wrong box(es) due to a warehouse error. We will send you a prepaid shipping label after photos are sent of the wrong SKU numbers on the outer box(es).
4. One or more boxes are lost in transit. We will send you a prepaid shipping label if you no longer want the item.

* However, we still hope to work with you for a better solution instead of a return. Please don't hesitate to contact our customer service team.

Customer will cover the return shipping fees if:

1. You don't like the product(s) after receiving the box(es).
2. You no longer need the product(s) but you have received the box(es).
3. You buy the product(s) by mistake but you have received the box(es).
4. Order/Shipment cancellation failed and you have received the box(es).

Return Request

In order to get a full refund as described in this return policy, all items must be: (1) In a brand new/unused condition, please provide photos before and after packaging. (2) When returning, all accessories and parts are firmly packed in all original packaging.

If your return does not meet the requirements, you may not get a full refund.

When will I be refunded?

The refund is released once the goods have been returned to our warehouse.

What if the product is damaged/defective outside of the valid return period?

We want you to be a happy customer. Please reach out to us by email and we will come up with a solution to make sure you are satisfied.