 
 


ASSEMBLY INSTRUCTIONS

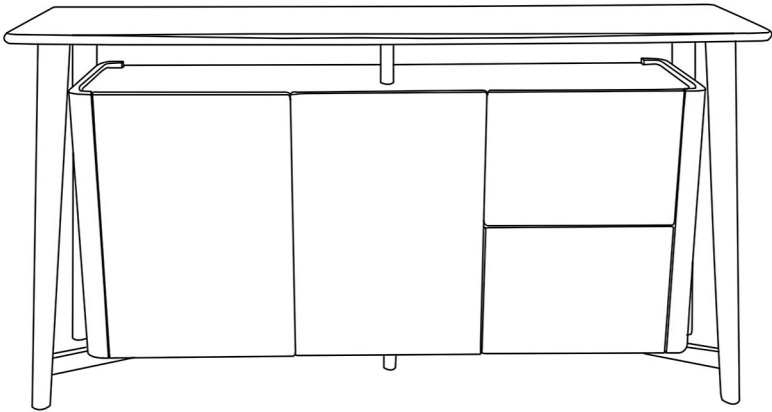

TOOLS REQUIRED



(Included)

Allen Wrench



2 - People

ASSEMBLY RATING



EASY ————— DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.



CHECK BEFORE STARTING

☐

Are you missing anything?

Double-check all parts, hardware and accessories listed are all accounted for.

☐

Check out our Quick Tips!

We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!

☐

Should we send any replacements?

Are there any irregularities or flaws in the parts? We can send replacements!

 
☐

Prep Time!

Please review the assembly instructions and all diagrams prior to assembling.

PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.

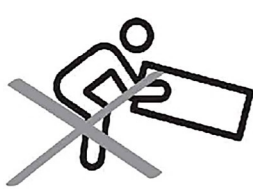

Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.



Suitable Location

Assembling near the area of the intended location is highly recommended.





Sufficient Space

Make sure you have enough space to move around during the assembly.



Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent to prevent scratches and damages.

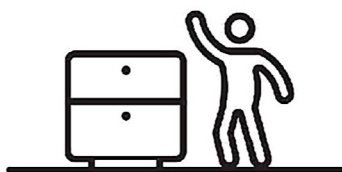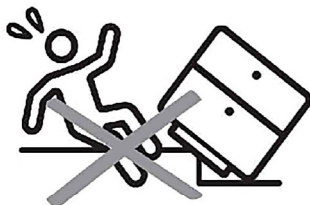

Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE



 
**FAILURE TO FOLLOW THE GUIDELINES BELOW MAY
RESULT IN INJURY AND/OR PROPERTY DAMAGE.**



Position each part correctly
and insert screws or bolts into
their respective holes.




Use the appropriate hand tools
or power tools for assembly.
Select steps, such as tightening
screws and/or bolts, may require
hand tools to avoid causing
damage during assembly.

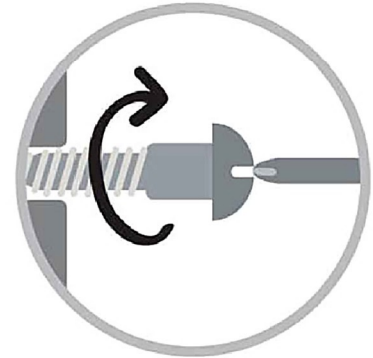

Turn clockwise to tighten and
only tighten when step is
completed or when instructed
to do so.



 Save the instructions and store
any supplied tools for later
maintenance.

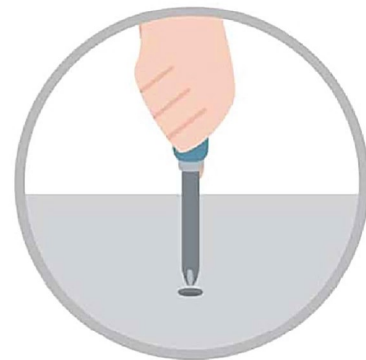

After two weeks, check and
tighten any loose hardware and
repeat again every six months
thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

DINING TABLE



- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

 
PARTS

1 1pc



TOP

2 1pc

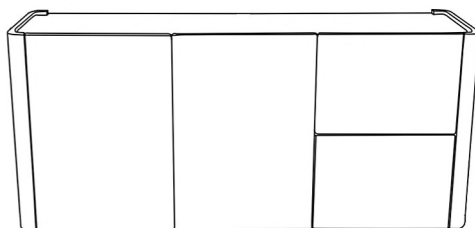


BODY

3 1pc




BASE

 4 4pcs




LEG

 5 1pc




TOP PILLAR

 6 1pc



BOTTOM PILLAR

 
7 2pcs



TIMBER BLOCK


HARDWARE

 A 24pcs




JCBC BOLT
M6 x 20MM

 B 11pcs



JCBC BOLT
M6 x 50MM

 C 35pcs



LOCK WASHER
M6

D 11pcs



 
FLAT WASHER
M6

E 1pc



 




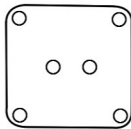



 
 

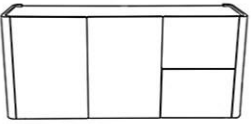 
ALLEN KEY
M4

F 4pcs



METAL PLATE

packed in 2 cartons

Carton	Designation			Hardware	
	Top	1		 A x 24pcs	
	Base	1		 B x 11pcs	
	Leg	4		 C x 35pcs	
				 D x 11pcs	
	Top Pillar	1		 E x 1pc	
	Bottom Pillar	1		 F x 4pcs	
	Timber Block	2			
	Body	1			

ASSEMBLY INSTRUCTIONS

1

Attach the metal plate (#F) to the leg (#4) secure using allen key (#E) with bolt (#A) and lock washer (#C).

 
 
Part (4) x 4pcs

Hardware (A) x 8pcs

Hardware (C) x 8pcs

Hardware (E) x 1pc

Hardware (F) x 4pcs

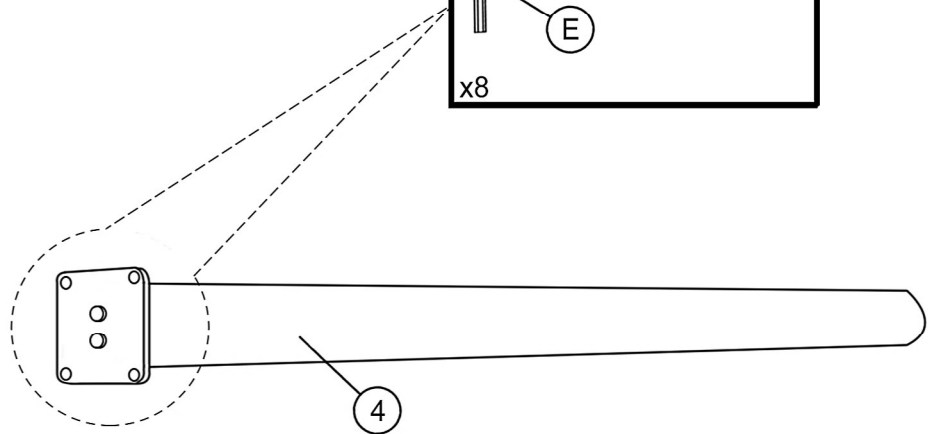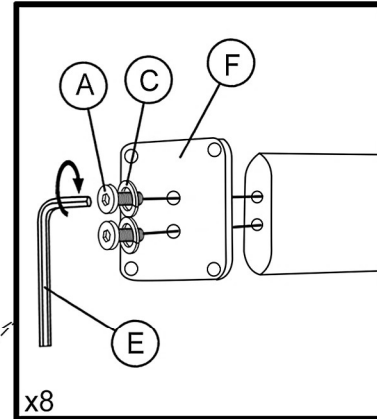

2

Part (1) x 1pc

 
 
 
Part (5) x 1pc

Hardware (A) x 16pcs

Hardware (C) x 16pcs

Hardware (E) x 1pc

Align the metal plate (#F) to the top (#1) and secure using allen key (#E) to insert bolt (#A) and lock washer (#C). Attach the top pillar (#5) to the center of the top (#1).

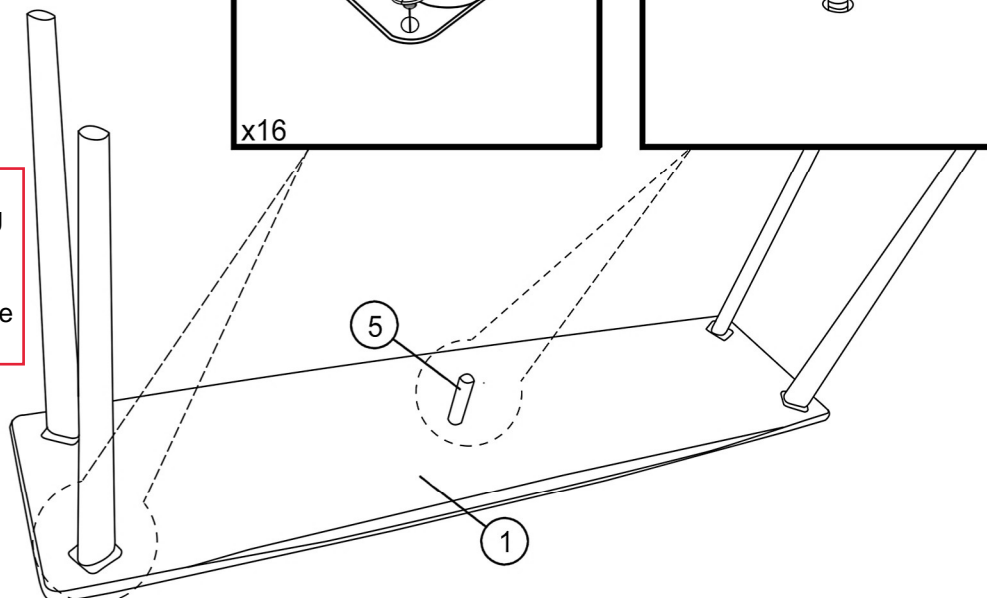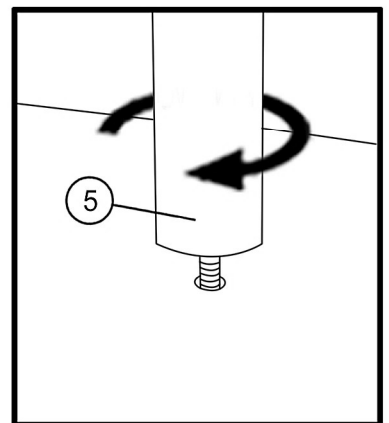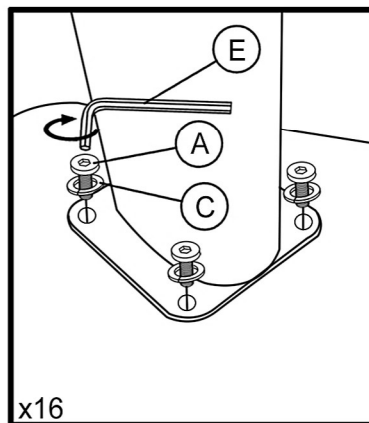

Do not tighten these JCBC Bolt

ASSEMBLY INSTRUCTIONS

3

Part ② x 1pc

Part ③ x 1pc

Part ⑥ x 1pc

 
 
 
Hardware ① x 6pcs

Hardware ② x 6pcs

Hardware ③ x 6pcs

Hardware ④ x 1pc

Flip body (#2) bottom side up. Attach the base (#3) to the bottom side of the body (#2) with bolt (#B), lock washer (#C), and flat washer (#D). Attach the bottom pillar (#6) to the center of the base (#3).

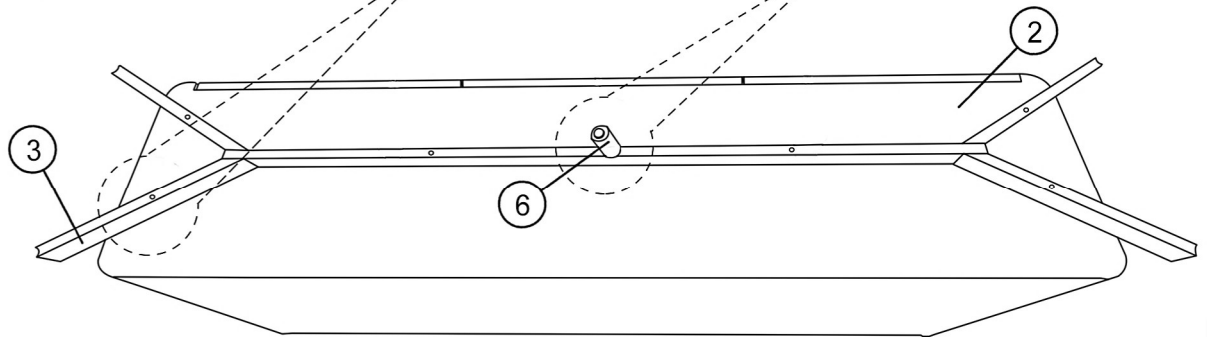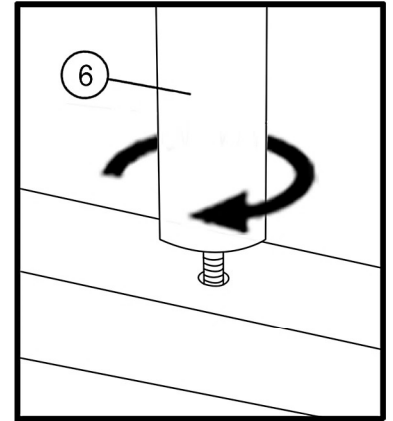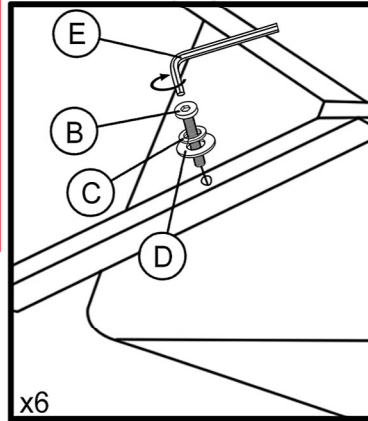

4

Part ⑦ x 2pcs

Hardware ① x 16pcs

 
 
 
 
 
Hardware ② x 5pcs

Hardware ③ x 21pcs

Hardware ④ x 5pcs

Hardware ⑤ x 1pc


Use timber block (#7) to support the body (#2) and flip the top side up. Align the top (#1) to the body (#2). Secure the base (#3) to the leg (#4) by using allen key (#E) to insert bolt (#B) with lock washer (#C) and flat washer (#D). Secure the top pillar by using bolt (#B) with lock washer (#C) and flat washer (#D). Tighten all bolts through.

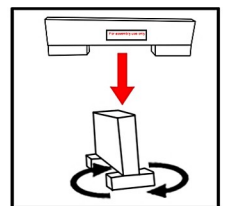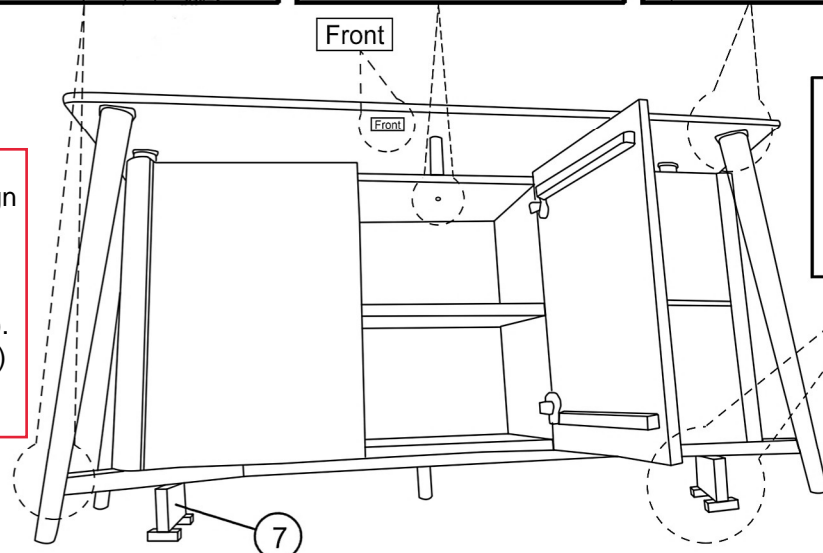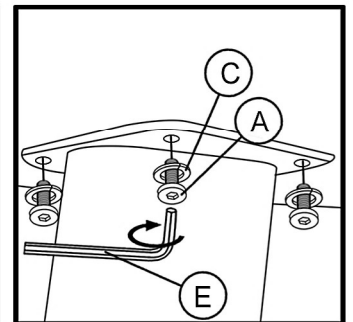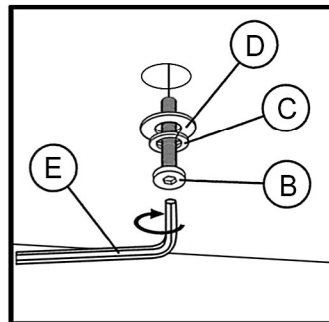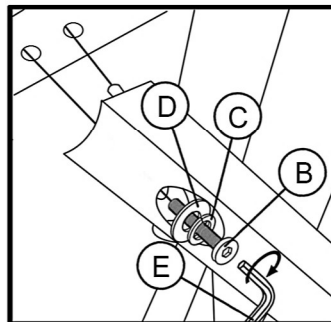

Tighten all JCBC Bolt
Part ⑦ dispose after assembly done

ASSEMBLY INSTRUCTIONS

 5

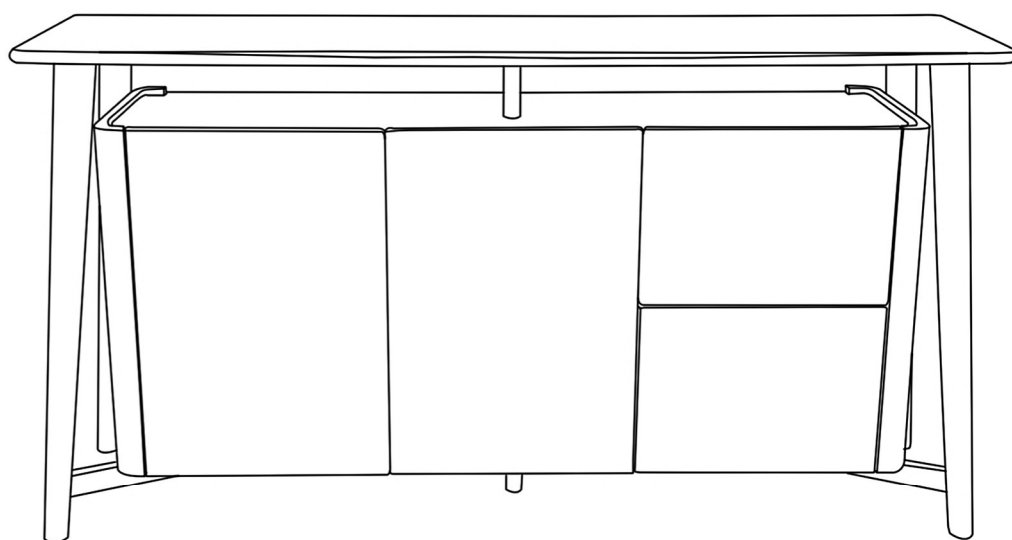

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.



Keep this handy!

Please retain this instruction manual and any order-related information for future reference.



Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting or adjusting the placement.

This product is intended for RESIDENTIAL USE ONLY and not for commercial use.