

styleselections®

Style Selections® is a registered trademark of LF, LLC. All rights reserved.

 
ITEM #0290970, 0298971

SPACESAVER

MODEL #9819WWMV, 9820CHMV

Français p. 13

Español p. 25

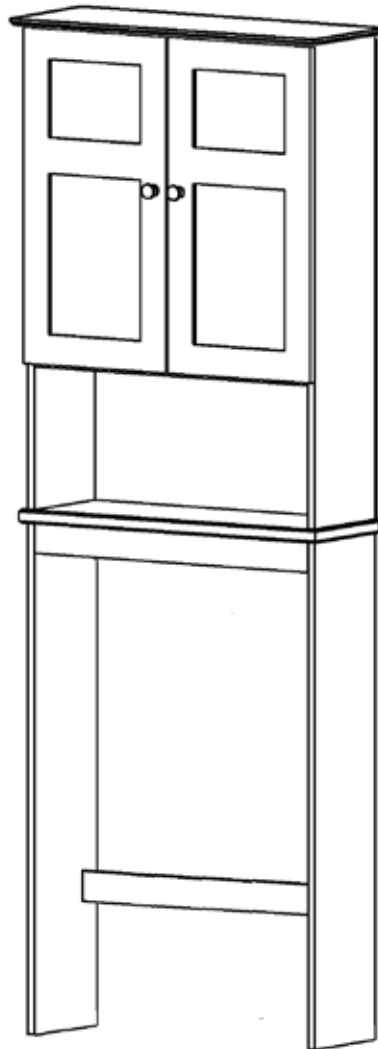


ATTACH YOUR RECEIPT HERE

Serial Number _____ Purchase Date _____



Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 1-877-888-8225, 8 a.m. - 8 p.m., EST, Monday - Friday.

 
PACKAGE CONTENTS

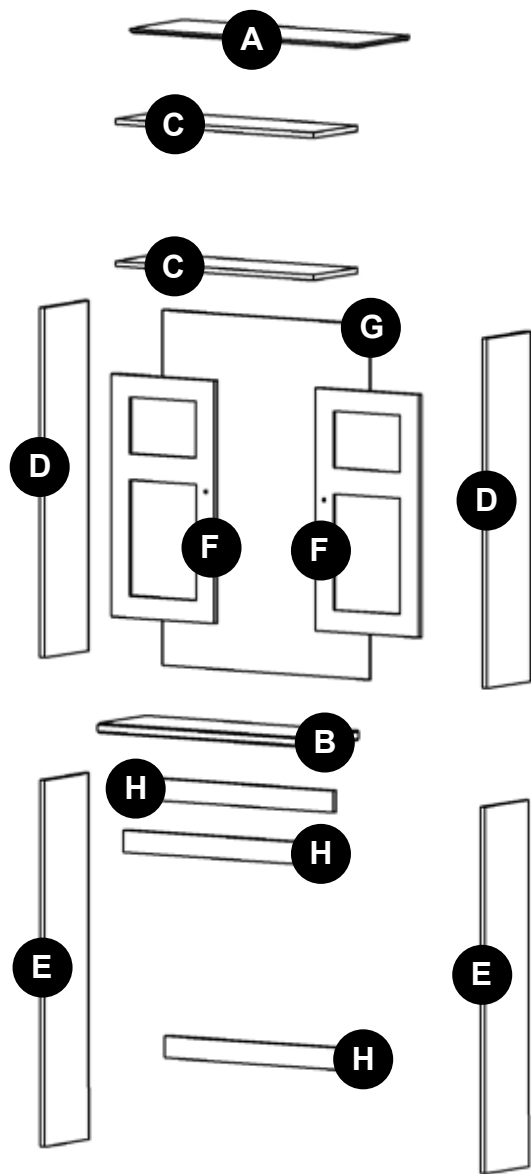

PART	DESCRIPTION	QUANTITY
A	Top Panel	1
B	Bottom Shelf	1
C	Middle Shelf	2
D	Top Side Panel	2
E	Bottom Side Panel	2
F	Door (1 right and 1 left)	2
G	Back Panel	1
H	Support Rail	3

HARDWARE CONTENTS (shown actual size)

 AA



Large Screw

Qty. 28

BB



Washer

Qty. 2


CC



Knob Screw

Qty. 2

 DD



Anti-topple
Screw

Qty. 1

EE



Magnet
Screw

Qty. 2

FF



Hinge Screw

Qty. 16

GG



Cam Bolt

Qty. 2


HH



Snap Cam

Qty. 2

 II

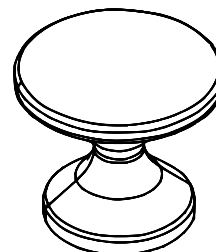

Door Knob

Qty. 2

HARDWARE CONTENTS (shown actual size)

JJ



Screw Cap

Qty. 24

KK



Nail

Qty. 24


LL



Bumper

Qty. 1

 
MM

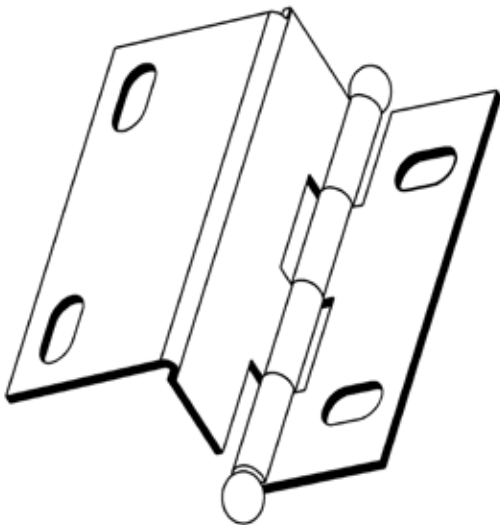

Hinge

Qty. 4

 
NN

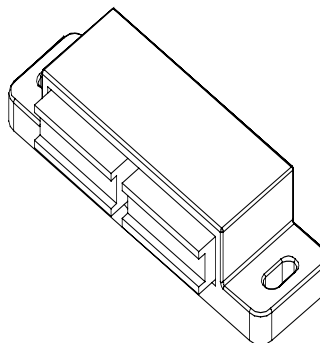

Magnet

Qty. 1

 OO

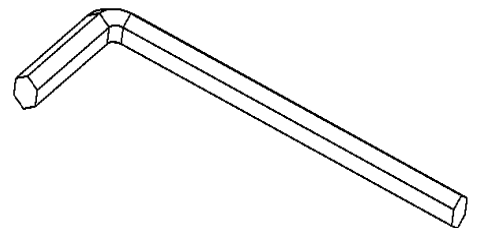


Allen Wrench

Qty. 1

HARDWARE CONTENTS (shown actual size)

 
PP

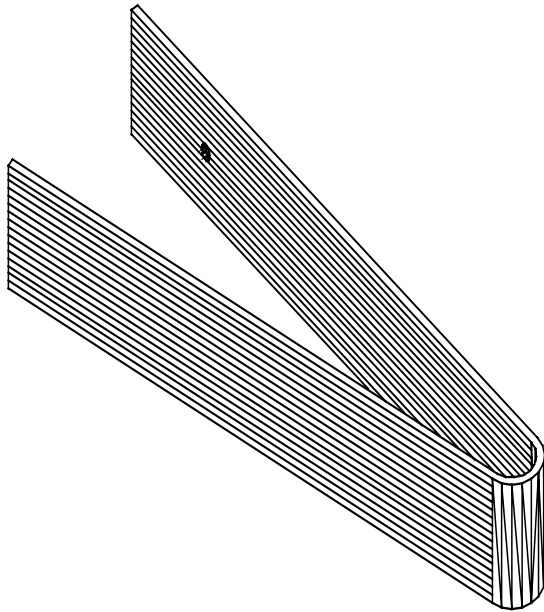

Nylon Strap

Qty. 1

 QQ

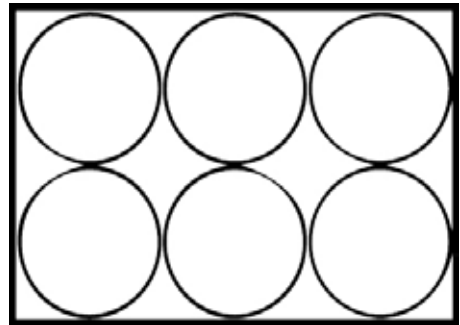

Stickers

Qty. 1



SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

- Before cutting, drilling or hammering into any wall surface, verify the location of electrical, plumbing and gas lines. Cutting any of these may cause serious injury. If needed, contact your electrician, plumber or service person.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

 
Estimated Assembly Time: 45 minutes *(with the assistance of another person)*

Tools Required for Assembly (not included): Phillips Screwdriver, Hammer and Flathead Screwdriver

ASSEMBLY INSTRUCTIONS

1. Fasten 2 support rails (H) to the top of the bottom side panels (E) using large screws (AA).

Hardware Used

- | | | | |
|-----------|--------------|---|-----|
| AA | Large Screw |  | x 8 |
| OO | Allen Wrench |  | x 1 |

2. Place the bottom assembly in desired location, then install a support rail (H) with the finished edge facing up using large screws (AA).


NOTE: The support rail (H) may be adjusted by using different holes in the bottom side panels (E).




Hardware Used

- | | | | |
|-----------|--------------|---|-----|
| AA | Large Screw |  | x 4 |
| OO | Allen Wrench |  | x 1 |

3. Fasten the magnet (NN) to top panel (A) using the magnet screws (EE).

Hardware Used

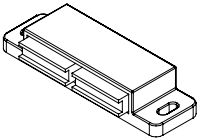- | | | | |
|-----------|--------------|---|-----|
| EE | Magnet Screw |  | x 2 |
| NN | Magnet |  | x 1 |

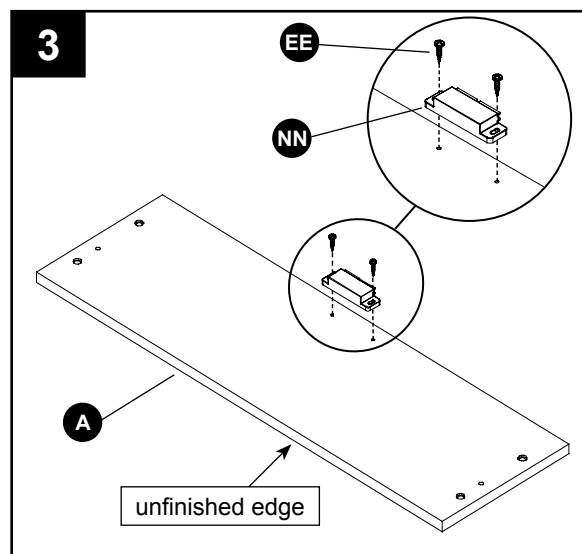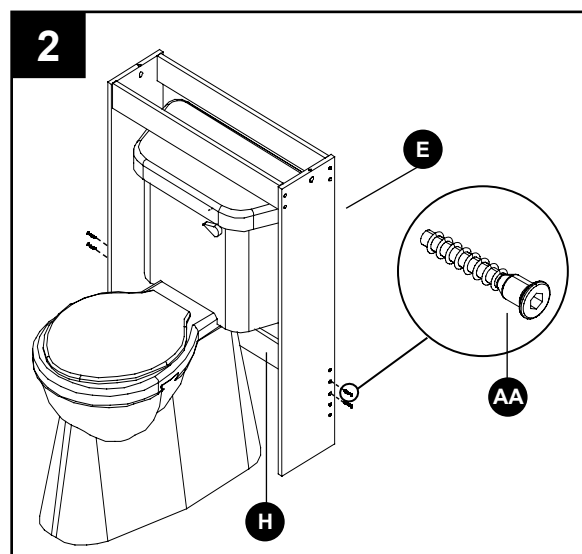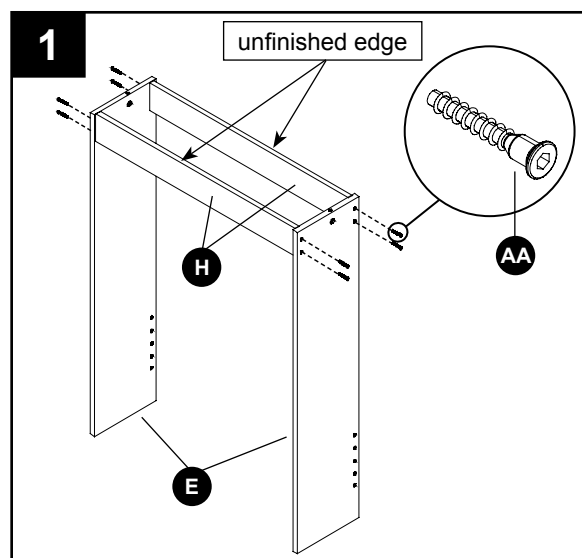



ASSEMBLY INSTRUCTIONS

4. Fasten top side panels (D) to top panel (A) using the large screws (AA).

NOTE: Make sure the side of the top panel (A) with the most holes is facing toward the top side panel (D).

 
Hardware Used

 
- AA** Large Screw  x 4
- OO** Allen Wrench  x 1

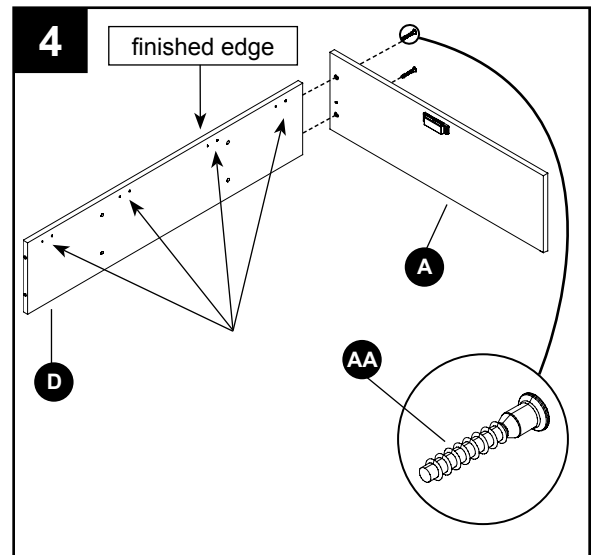

5. Attach 2 middle shelves (C) to the top side panels (D) using the large screws (AA).

 Hardware Used

 
- AA** Large Screw  x 8
- OO** Allen Wrench  x 1

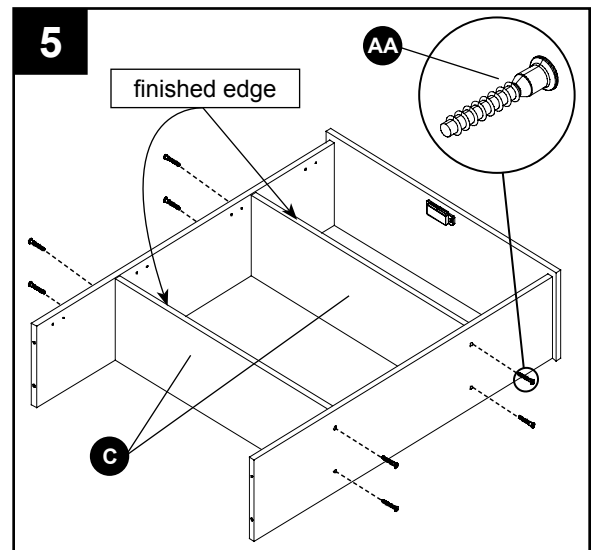


6. Attach the bottom shelf (B) to the top side panels (D) using the large screws (AA).

NOTE: Make sure the side of the bottom shelf (B) with the most holes is facing away from the top side panels (D).

 Hardware Used

 - AA** Large Screw  x 4
- OO** Allen Wrench  x 1

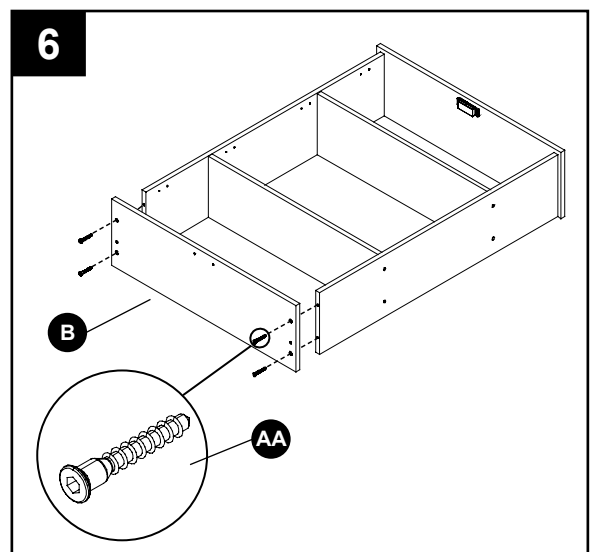


ASSEMBLY INSTRUCTIONS

7. Lay unit face down on floor. Fasten back panel (G) to back using nails (KK).

NOTE: Make sure finished side of cabinet back panel (G) is facing down.

Hardware Used

 
KK Nail  x 24

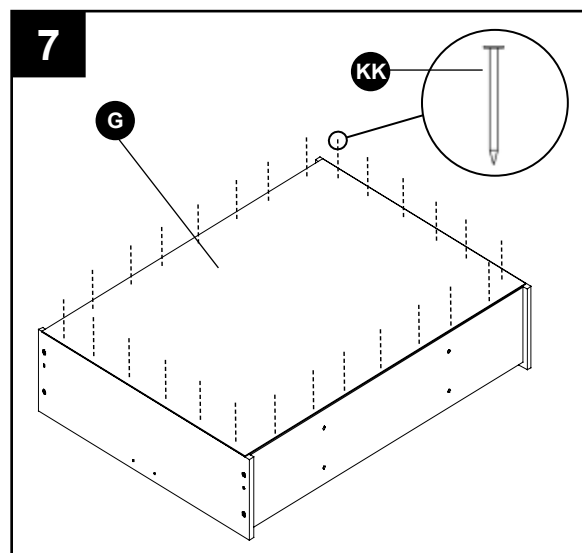


8. Screw in the cam bolts (GG) into the center holes of the bottom shelf (B).

Hardware Used

 GG Cam Bolt  x 2

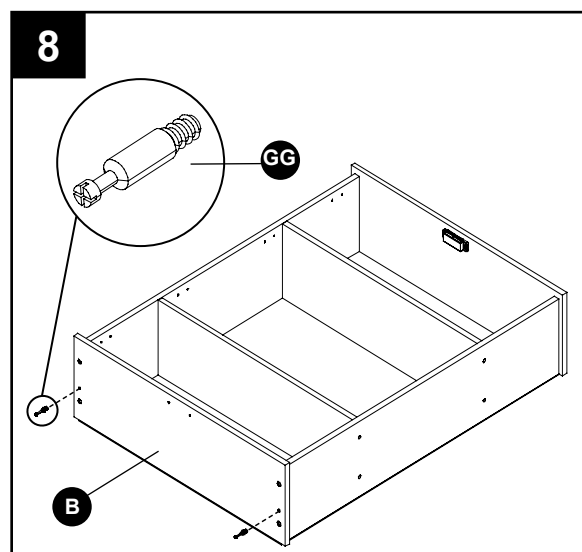

 9. Carefully place top assembly onto bottom assembly, aligning cam bolts (GG) with the holes on bottom side panels (E).

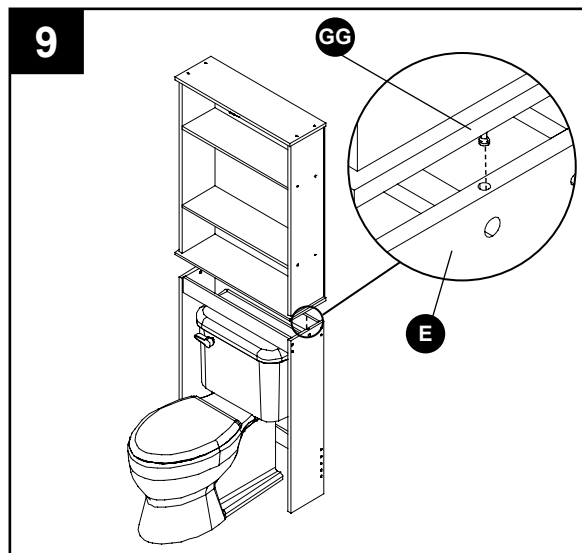


ASSEMBLY INSTRUCTIONS

10. Insert snap cams (HH) into the holes in the bottom side panels (E).

NOTE: If necessary, tap the snap cams (HH) with a hammer (not included) to secure the top assembly to the bottom assembly.

Hardware Used

 
- HH** Snap Cam  x 2

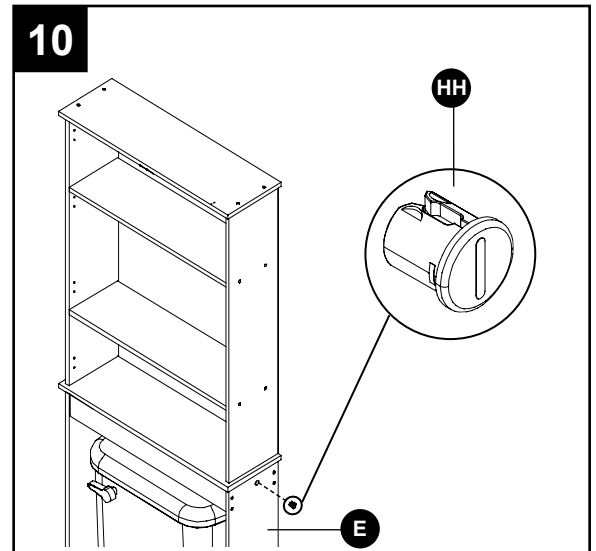


11. Fasten hinges (MM) to doors (F) using hinge screws (FF).

Hardware Used

 - FF** Hinge Screw  x 8

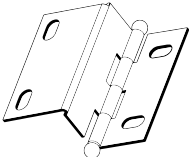- MM** Hinge  x 4

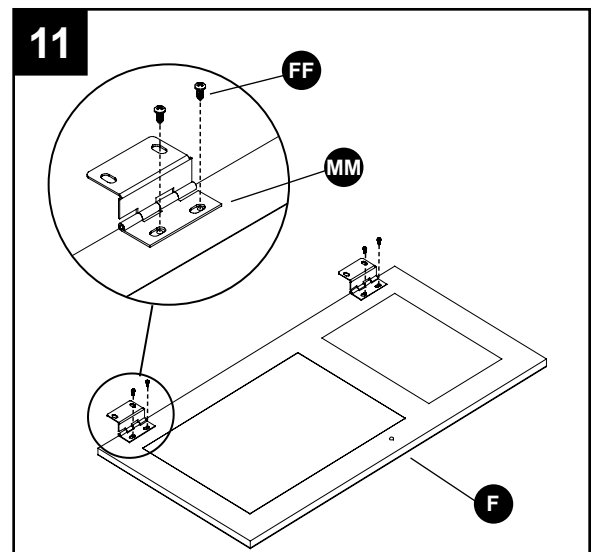 


12. Fasten hinges (MM) to top side panels (D) using hinge screws (FF).

NOTE: Do not fully tighten hinge screws (FF) until doors (F) are properly aligned.

Hardware Used


 
- FF** Hinge Screw  x 8

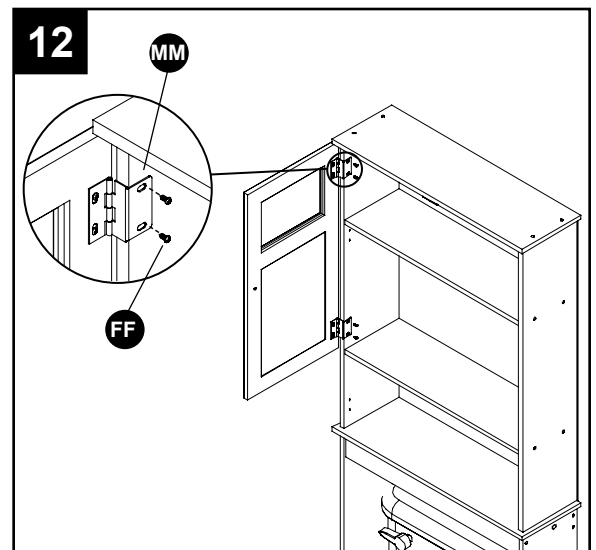

ASSEMBLY INSTRUCTIONS



13. Attach door knobs (II) to doors (F) using knob screws (CC).

  Hardware Used

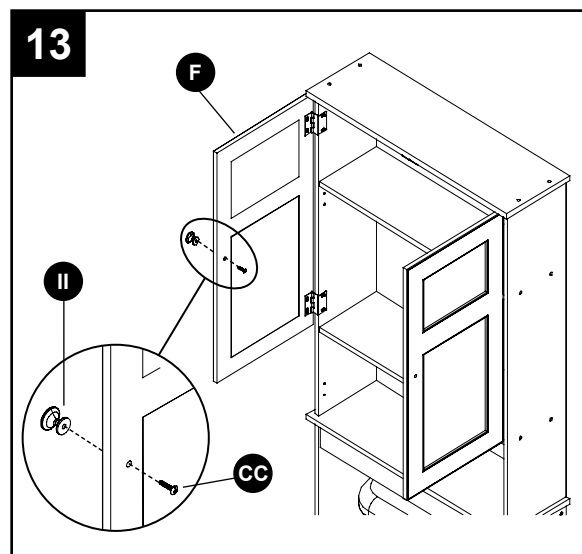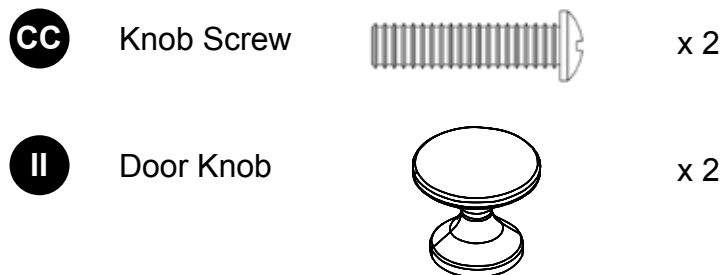


14. Use screw caps (JJ) to cover large screws (AA) and stickers (QQ) to cover unused holes.

  Hardware Used

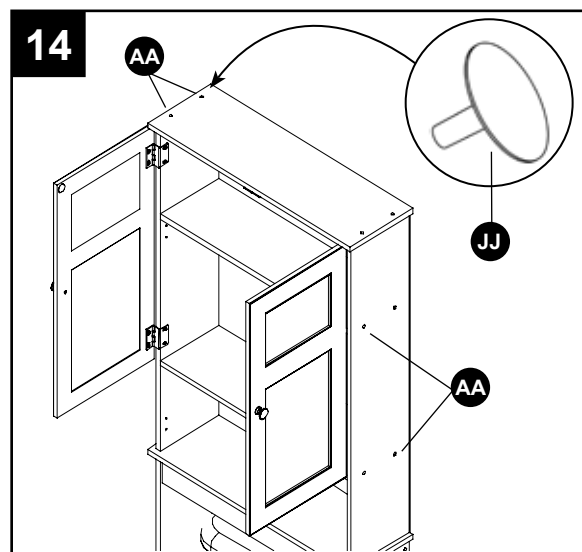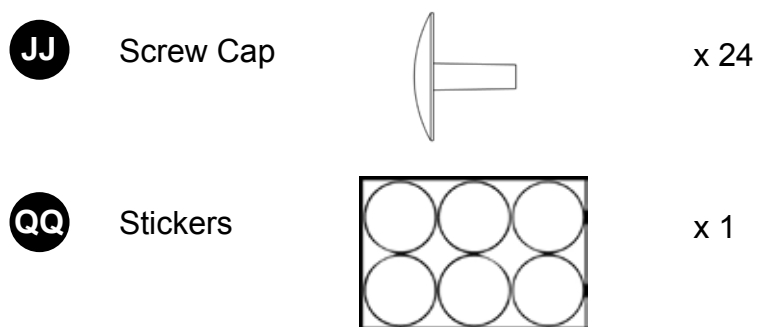

15. Apply bumpers (LL) to back of doors (F).

 Hardware Used

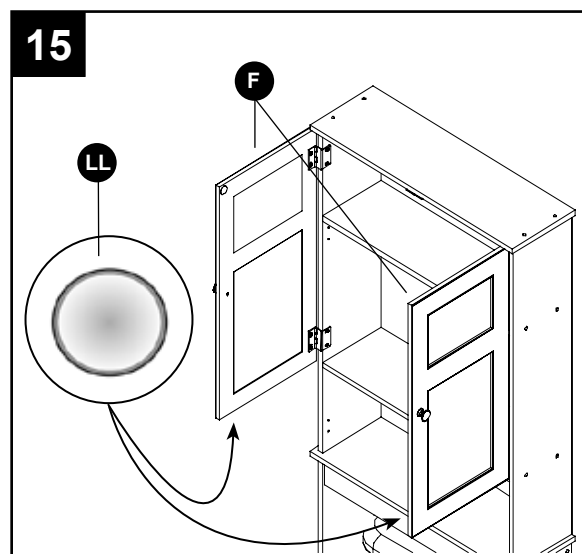


ASSEMBLY INSTRUCTIONS

16. It is important that unit be fastened to the wall for safety reasons.


Warning: Before cutting or drilling into any wall surface, verify the location of electrical, plumbing, and gas lines. Cutting any of these may cause serious injury.

Fasten the nylon strap (PP) to the top of the unit using one washer (BB) and the anti-topple screw (DD) as shown.

 Fasten nylon strap to wall using appropriate mounting hardware (not included). It is recommended you use a mounting screw of at least two inches in length. If you do not screw directly into wall studs, appropriate wall anchors (not included) should be used.

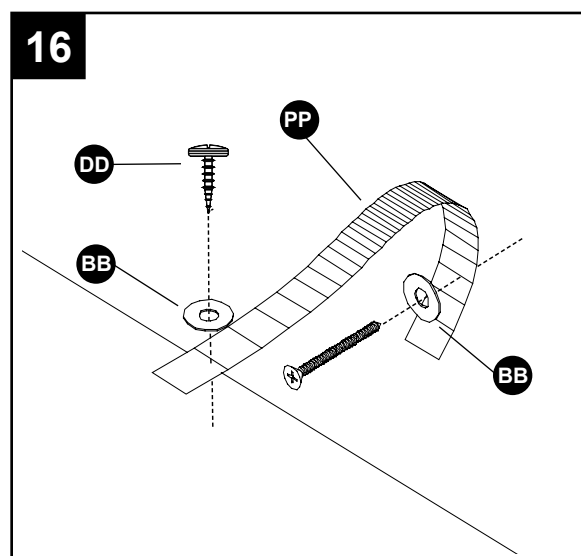

Hardware Used

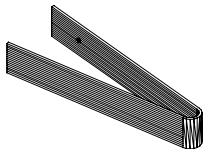 BB	Washer		x 2
DD	Anti-topple Screw		x 1
PP	Nylon Strap		x 1



CARE AND MAINTENANCE

Cleaning with a dry cloth may be sufficient, but for other stains or marks wipe gently with a damp cloth. DO NOT use strong detergents or abrasive cleaners; they may damage the surface of the product.

REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at 1-877-888-8225, 8 a.m. - 8 p.m., EST, Monday - Friday.

PART	DESCRIPTION	PART #
F	Door Set	LGB3827C (White) LGB3828C (Espresso)
AA	Large Screw	LYPN531 (White) LYPN541 (Espresso)
BB	Washer	
CC	Knob Screw	
DD	Anti-topple Screw	
EE	Magnet Screw	
FF	Hinge Screw	
GG	Cam Bolt	
HH	Snap Cam	
II	Door Knob	
JJ	Screw Cap	
KK	Nails	
LL	Bumpers	
MM	Hinges	
NN	Magnet	
OO	Allen Wrench	
PP	Nylon Strap	
QQ	Stickers	LJWJF0444E (White) LJWJF0447E (Espresso)

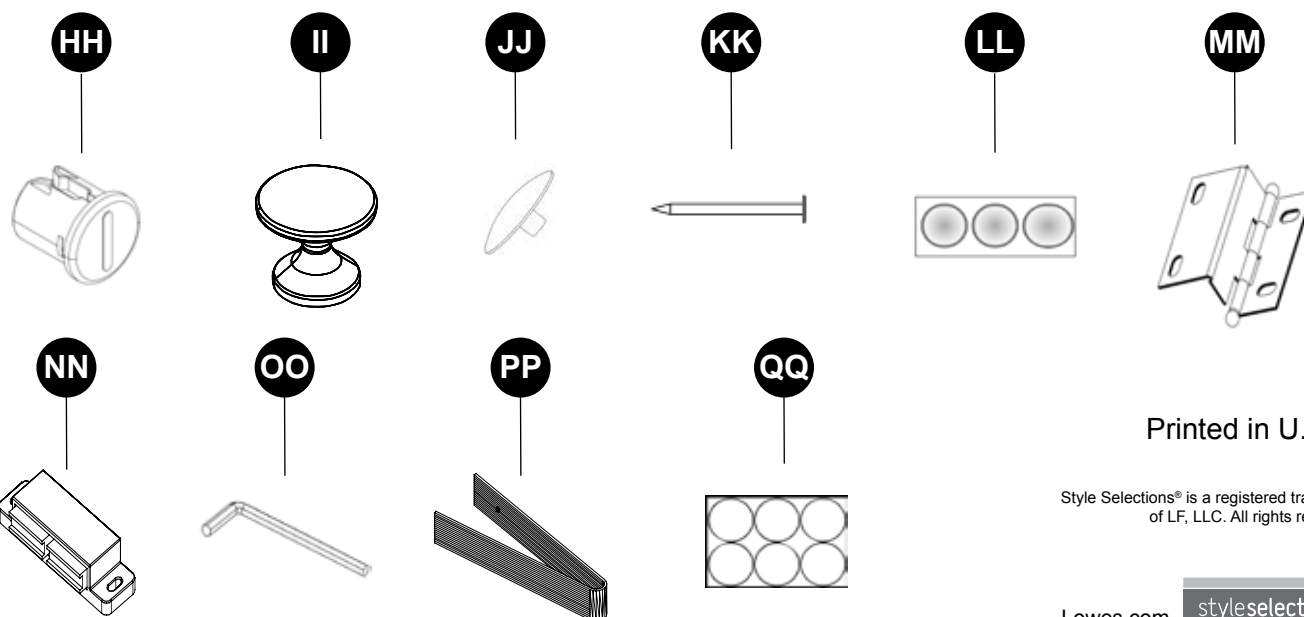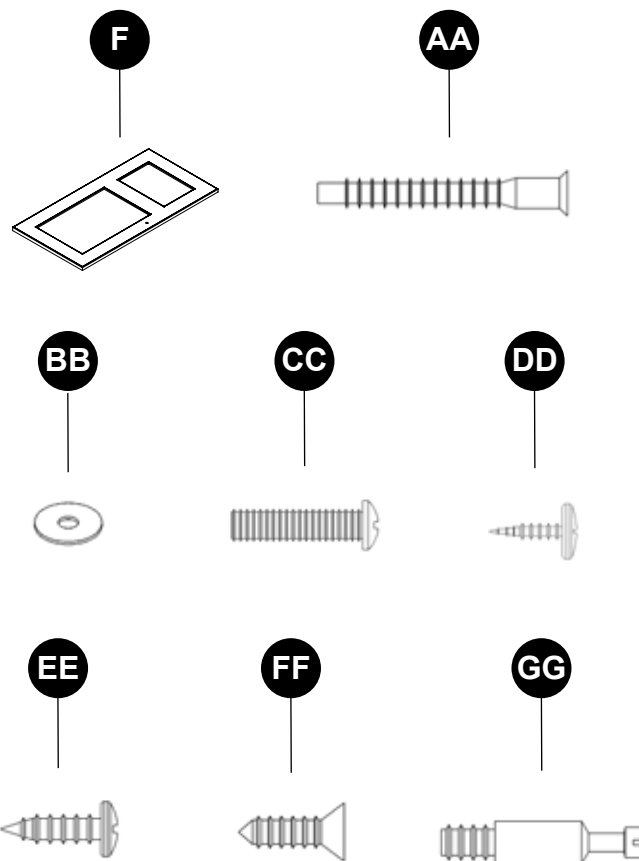  

Printed in U.S.A.

Style Selections® is a registered trademark of LF, LLC. All rights reserved.