

## LIFETIME AFTER FIRE REPLACEMENT GUARANTEE

If your First Alert® Waterproof, Fire Resistant with Ready-Seal Safe™ is ever damaged by a fire, BRK will replace it with a comparable model at no charge to the consumer. Freight on the replacement unit is not included in the guarantee and must be paid by the consumer.

For claims, submit your name and address, a photo of the damaged safe along with its Model Number, and a copy of the Fire Department report to BRK Consumer Affairs as proof of loss. Once the information is received, Consumer Affairs will contact you with further instructions.

## LIMITED WARRANTY

BRK Brands, Inc., (BRK) warrants that for a period of five (5) years from the date of purchase, this product will be free from defects in material and workmanship. BRK, at its sole option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement or repair will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty.

This warranty is only valid for the original retail purchaser from the date of initial retail purchase and is not transferable. You must keep the original sales receipt. Proof of purchase is required to obtain warranty performance. BRK dealers, service centers, or retail stores selling this product do not have the right to alter, modify or in any way change the terms and conditions of this warranty.

This warranty does not apply to the finish on the product. This warranty does not cover normal wear and tear of parts or damage resulting from any of the following: negligent use or misuse of the product, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than BRK or an authorized service center, improper installation, or exposure to extremes of heat or humidity. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes.

BRK shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. BRK is also not responsible for: costs associated with removing or installing the product; damage or loss of the contents of the product; nor for the unauthorized removal of the contents; or damages incurred during shipment.

Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above Warranty Period. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state, or province to province or jurisdiction to jurisdiction.

If you have any questions that cannot be answered by reading this manual, call Consumer Affairs at 1-800-323-9005

© 2010 BRK Brands, Inc., a Jarden Corporation company (NYSE: JAH)  
3901 Liberty Street Road, Aurora, IL 60504-8122  
All rights reserved.

[www.FirstAlert.com](http://www.FirstAlert.com)

# First Alert®



Model # = **2087F-BD / 2092F-BD**

# WATERPROOF FIRE RESISTANT SAFE™ with Ready-Seal™

## Read These Instructions Very Carefully!

**Overview of Your Safe** ..... Page **1**

**Opening Safe For The First Time**..... Page **2**

**Emergency Override Key** ..... Page **3**

**Use, Care and Maintenance** ..... Page **4**

**Consumer Affairs** ..... Page **5-6**

**Notes** ..... Page **7-8**

**Safe Identification Record**..... Page **9**

**Limited Warranty**..... Page **10**

Model Number \_\_\_\_\_

Serial Number \_\_\_\_\_

Key Number \_\_\_\_\_

4-Number Combination

LEFT FOUR (4) turns and continue to: \_\_\_\_\_

RIGHT TWO (2) turns and continue to: \_\_\_\_\_

LEFT ONE (1) turn and continue to: \_\_\_\_\_

RIGHT to: \_\_\_\_\_

 
**For Your Protection**

- Do not remove the Serial Number tag from the safe.
- Store Emergency Override Keys away from (NEVER INSIDE) safe.
- Record all Safe Identification Numbers on Safe Identification Record.
- Save this manual and NEVER keep it inside the safe.

Your new First Alert® Waterproof, Fire Resistant with Ready-Seal™ Safe will provide years of safe and secure protection for your valuables, important documents and other personal items. All First Alert® safes are designed and built using the highest manufacturing standards to ensure maximum user satisfaction under a variety of conditions. With proper care, your First Alert® safe will provide peace of mind for many years to come.

The following list outlines the items and quantities of each included with your new safe. Please carefully check the list to confirm all items have been received. If any item is missing, then please contact Consumer Affairs at 1-800-323-9005.

Flathead Cover Screws	6 ea.
Bolt Cover	1 ea.
Interior Fire/Water Gasket	1 ea.
Mounting Bolt with Flat Washer*	1 ea.
Upper Water Seal*	1 ea.
Exterior Fire/Water Gasket	1 ea.
Plastic Bottom Cover*	1 ea.
Flathead Button Cover Screws	6 ea.
Buttonhead Floor Mounting Bracket Screws*	6 ea.
Floor Mounting Bracket	1 ea.
Ready-Seal™ Mounting Template*	1 ea.
Bolt Handle Tool*	1 ea.
Ready-Seal™ Mounting Instructions*	1 ea.



\*Component packed separately  
in bag. All other components  
shipped attached to safe.

If you are missing parts, have difficulty programming your safe or have any other questions pertaining to its proper use and care, DO NOT RETURN your safe to the store. Please contact Consumer Affairs at 1-800-323-9005, 7:30 a.m. – 5 p.m. Central Standard Time, Monday through Friday. To assist us in serving you, please have the model number and date of purchase available when calling.

## **Your Combination**

The combination for your safe can be found imprinted on the inside back cover of this Operation and Installation Guide. It is a pre-set 4 number sequence that is unique to your safe and cannot be changed. It is recommended that you keep this Operation and Installation Guide in a secure place. NEVER store this guide inside the safe.

## Opening Safe with Combination Dial

1. Turn the dial LEFT (counter clockwise) three times to clear prior settings.
2. Begin by placing dial on 0 (zero).
3. Turn the dial LEFT, passing the first combination number FOUR (4) times and stop at the number on the fifth time around.
4. Turn the dial RIGHT, passing the second combination number TWO (2) times and stop at the number on the third time around.
5. Turn the dial LEFT, passing the third combination number ONE (1) time and stop at the number on the second time around.
6. Turn the dial RIGHT and STOP on the fourth combination number.
7. Turn the handle upward to the RIGHT to open the safe.

This image shows a single sheet of white paper with horizontal blue or grey ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

## **How to Obtain Warranty Service**

If service is required, do not return the product to your retailer. In order to obtain warranty service, contact the Consumer Affairs Division at 1-800-323-9005, 7:30 a.m. – 5 p.m. Central Standard Time, Monday through Friday. To assist us in serving you, please have the model number and date of purchase available when calling.

### **For Warranty Service return to:**

**First Alert, Inc.**

**Attn: Warranty Safe Returns**

**23610 So. Banning Blvd.**

**Carson, CA 90745**

**Please call us at 1-800-323-9005 to establish a warranty return set-up.**

## **Misplaced Combination or Keys**

If you lose or forget the combination or lose the safe key(s), you can obtain a copy of the combination or a replacement key from BRK Brands, Inc. You must supply the following information to assure accurate processing:

- Name / Address / Telephone
- Safe Model Number / Serial Number
- Key Number (located on the key and on the Emergency Override Key lock)
- Notarized statement of ownership
- For replacement keys, indicate number of keys requested. Please ignore if recovering a lost combination
- Method for how you would like to receive the combination or keys

Please send all the information via fax at 630-851-7995  
or mail BRK Brands, Inc., 3901 Liberty Street Road, Aurora, IL 60504-8122.

Checks or Money Orders are required for orders received by mail and should be made payable to First Alert. Contact our Consumer Affairs Department for costing information prior to ordering.

### **Mail to: First Alert**


Consumer Affairs  
3901 Liberty St. Rd.  
Aurora, IL 60504

## **Opening Safe with Emergency Override Key**

Your safe is equipped with an Emergency Override Key which allows immediate access to the safe without the use of the combination.

1. Locate the combination lock on the front of the safe.
2. Note the gray lock cover immediately below the combination dial. With your fingernail or the edge of a flathead screwdriver, gently pry this circular plate upwards and remove. Do not discard; you will need it to cover the lock when you are through.
3. Insert the Emergency Override Key into the lock and turn clockwise to the right.
4. Turn the handle upwards to the right to open the safe.
5. Remove the Emergency Override Key.
6. Replace the gray lock cover by inserting the top and snapping it into place.
7. Close and lock the safe door, spinning the combination dial several times.

If you have lost or forgotten your combination, please contact BRK Consumer Affairs.

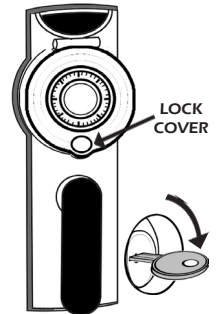

## Appropriate Use of Your Safe

This First Alert® Waterproof, Fire Resistant with Ready-Seal Safe™ protects important documents and many other valuables.

Verified fire protection for: Memory sticks, CD's & DVD's, USB Drives.

This product is NOT INTENDED to protect audio or video cassettes, floppy discs, data cartridges, film and photos or photo negatives

Testing shows that the interior temperature of the safe remains below 350°F (177°C) for one hour during a fire up to 1700°F (927°C) when used properly. Your safe must be closed and latched in order to properly protect the contents from fire.

### **Moisture Warning**

We recommend that you place delicate items such as pictures or intricate jewelry into an air-tight container **before** storing them in your safe. Avoid placing your safe in areas of high humidity. For optimum performance, the safe should be opened and aired out for at least 20 minutes every two weeks.

### **Firearms Warning**

This safe is **not** designed to store medication, items with combustible content, guns or other weapons. Please contact BRK at 800-223-8566 or shop [www.FirstAlert.com](http://www.FirstAlert.com) for information about safes that can securely store your firearms or medication.

### **Pearls**

Because pearls sustain heat damage at temperatures below 350° F, we advise that you **DO NOT** store pearls in this fire safe.

## Safe Care and Maintenance

When properly maintained, your safe will continue to provide protection for many years. In order to ensure optimum performance of your safe, please follow these simple precautions:

**Clean Hands** - Do not attempt to operate combination dial if your hands have excessive dirt, debris, or liquids on them. Under normal circumstances, it is not necessary to wash your hands before using the safe.

**Clean Safe** – To clean the outside surface of your safe, it is recommended that you use a mild cleaner (e.g., window cleaner) to avoid scratching or discoloring the surface. Do not use abrasive cleansers.

For future reference, store this Operation and Installation Guide in a secure area away from the safe. DO NOT DISCARD!

## Your Safe's Unique Identification Numbers

When contacting Consumer Affairs, you should be prepared to supply some important information that specifically identifies your safe. This information is extremely important to assuring prompt and accurate customer assistance.

It is strongly recommended that you identify and record the following information in the Safe Identification Record form located on the inside back cover of this manual:

### **Model Number**

### **Serial Number**

### **Key Number**

## Locating Model and Serial Numbers

Most First Alert® safes include a small metallic silver or gray tag usually located on the front or right side of the safe. This tag contains the serial number, and on selected models a similar tag is attached containing the model number. If a model number tag is not attached to the safe, then it can be located on the front or side panel of the box that the safe was packaged in. Write this number down for future reference.

## Key Number

The Key Number is located on the key. If you do not have the key, the number is also imprinted on the Emergency Override Key lock.

### **Important: DO NOT REMOVE TAGS!**

**In case your safe becomes inoperable or you lose your keys, these identification numbers will be needed to correct the problem. It is recommended that the number tags remain in place on the safe. If removal is necessary, then they should be attached to the inside back cover of the Operation and Installation Guide. Store in a safe and secure place for future reference.**