

How To Operate

Unlock

- Input factory default user password "1234+OK" or factory default management password "4321+OK".
- Buzzer gives out a long beep sound and the green indicator light turns on.
- Rotate the knob 90 degrees within 3 seconds to open the lock.
- **Notes:** When the password is wrong, the buzzer beeps 3 times. When the management password is used to unlock the lock, the user password reverts back to default.

Lock

- Rotate the knob back 90 degrees to the lock position.

Change Management Password

- Input factory default management password "4321+OK". Press and hold "OK" for 2 seconds until the green indicator light blinks.
- Input new management password + press "OK". When you hear a long beep sound it means the password has been changed.
- **Note:** The password can consist of 4-15 digits.

Change User Password

- Input factory default user password "1234+OK". Press and hold "OK" for 2 seconds until the green indicator light blinks.
- Input new user password + press "OK". When you hear a long beep sound it means the password has been changed.
- **Note:** The password can consist of 4-15 digits. Management password and user password can not be the same.

Turn On Shared Use Mode

- Input current management password + press “OK” button. Buzzer gives out a long beep sound. The green indicator light will turn on.
- Press and hold the “OK” button for at least 2 seconds. The green indicator light will blink. Press the key symbol button again.
- Input “44 + OK”. Buzzer gives out a long beep when shared use mode has been turned on.
- **Note:** Factory Default is Permanent Use Mode.

Setting Temporary Password

- Press the “OK” button. The green indicator light will blink. Input a temporary password consisting of 4-15 digits. Press “OK” again. The temporary password has now been set.
- **Note:** Temporary password can be used 1 time.

Turn On/Off Shared Use Mode

- Input current management password + press “OK” button. Buzzer gives out a long beep sound. The green indicator light will turn on.
- Press and hold the “OK” button for at least 2 seconds. The green indicator light will blink. Press “OK” again.
- Input “44 + OK”. Buzzer gives out a long beep when shared use mode has been turned on.
- Input “43 + OK”. Buzzer gives out a long beep when shared use mode has been turned off.

Turn On/Off Fake Pin Code Function

- Input current management password + press “OK” button. Buzzer gives out a long beep sound. The green indicator light will turn on.
- Press and hold the “OK” button for at least 2 seconds. The green indicator light will blink. Press “OK” again.
- Input “42 + OK”. Buzzer gives out a long beep when fake pin code function has been turned on.
- Input “41 + OK”. Buzzer gives out a long beep when fake pin code function has been turned off.

Features

- Decode: When the password has been forgotten, you can get the decode number by providing the code on the lock body to the lock supplier. The user and management passwords will revert back to the default. The mode will be unchanged.
- Anti-Theft Technology and Fake PIN Password Function: You can input any code(s) before or after the real password to prevent the real password being peeped. Maximum 16 digits.
- Auto-alarm will be activated when the wrong password has been input 4 times. The lock will also deactivate for 60 seconds.
- When the red indicator light is on, the battery has low voltage and should be replaced. The lock may not work properly otherwise.
- Equipped with one 3V CR2032 battery to prevent last password from being lost after changing the battery.