


DECK SHIELD™ OUTDOOR SAFETY NETTING

INSTRUCTIONS

Deck Shield is a durable, weather-resistant plastic netting. It is intended to be used on decks and balconies to reduce the risk of young children and/or pets from squeezing through the railing.

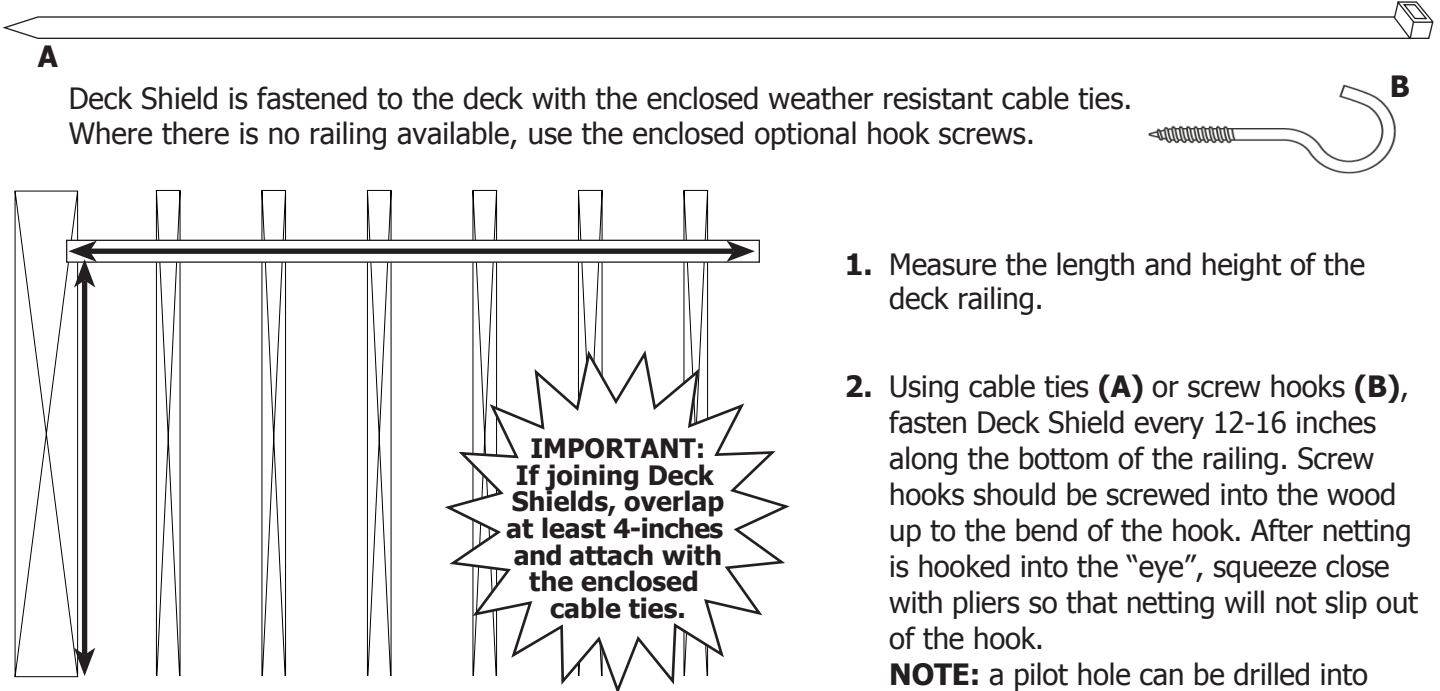

1. Measure the length and height of the deck railing.
2. Using cable ties **(A)** or screw hooks **(B)**, fasten Deck Shield every 12-16 inches along the bottom of the railing. Screw hooks should be screwed into the wood up to the bend of the hook. After netting is hooked into the "eye", squeeze close with pliers so that netting will not slip out of the hook.

NOTE: a pilot hole can be drilled into the deck with a 1/16 inch bit.

3. Fasten Deck Shield every 8-12 inches along the top of the railing with the enclosed cable ties. Deck Shield can be trimmed or rolled to fit.
4. Fasten Deck Shield vertically every 8-12 inches along the ends of the deck with cable ties or the hook screws. Cable ties may be joined together for larger end posts. Deck Shield can be trimmed or rolled to fit.

Cable Ties: Although these are UV-protected cable ties, weather **will** deteriorate and weaken them over time. **Replace cable ties after 1 year.** Call for shipment of replacement or extra cable ties at a discounted cost or purchase at a local hardware store.

IMPORTANT: Deck Shield is designed to reduce the possibility of a child slipping between deck railings and falling. **Deck Shield is not a replacement for adult supervision.** Never leave children or small animals alone on a deck. Check net for rigidity and security on a regular basis. If netting becomes brittle, discontinue use. Discourage children from pulling or attempting to climb netting. Do not place open flame or heated grills against netting.

CARDINAL GATES
SAFETY PRODUCTS FOR CHILDREN, PETS & HOMES

79 Amlajack Way
Newnan, GA 30265
800-318-3380
www.cardinalgates.com