


Item Number: 24-inch Accessory Chain

WARNING (To reduce the risk of fire, electric shock, or injury to persons):

1. We suggest installation by a **licensed electrician**.
2. The Max weight of hanging light fixture should be **50 Pounds**.
3. Please read the instruction carefully and save it as you may need it at later time.
4. Before you start, **NEVER** attempt any work without shutting off the electricity until the work is done. A). Go to the main fuse, or circuit breaker, box in your home. Place the main power switch in the “**OFF**” position. B). Place the wall switch in the “**OFF**” position.
5. The safety instructions appearing in this manual are not meant to cover all possible conditions that may occur. It must be understood that common sense, caution and care must be used with any electrical products.

Image for product finish:

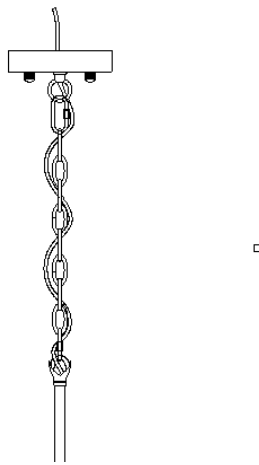

Installation procedures for fixture lighting

Carefully remove the chain from the carton and check that all parts and accessories are included as shown in the above illustration.

1. By measuring, determine the correct number of links needed for proper hanging height. Using the chain pliers, disconnect and discard the remaining chain.
2. Open the quick link, attach the quick link to the loop on the top of fixture and to connect the end of chain. Close the quick link.
Open the quick link, attach the quick link to the loop on the bottom of canopy and to connect the end of chain. Close the quick link.
3. Carefully lace the fixturer wires through the chain and stop just before you reach the top of chain. Gently pull the wires till snug.
4. Check everything installed correctly.

